

CORTEX[®]

PR-2 HALF RACK

USER MANUAL



Product may vary slightly from the item pictured due to model upgrades.



**Read all instructions carefully before using this product.
Retain this owner's manual for future reference.**

NOTE:

This manual may be subject to updates or changes. Up to date manuals are available through our website at www.lifespanfitness.com.au



TABLE OF CONTENTS

I. Important Safety Instructions	04
II. Care Instructions	05
III. Parts List	06
IV. Assembly Instructions	08
V. Warranty	14

I. IMPORTANT SAFETY INSTRUCTIONS

 **WARNING: Read all instructions before using this machine.**

- Install the product on a flat level surface
- Place your unit on a solid, level surface when in use.
- Never allow children on or near the machine.
- Keep hands away from all moving parts.
- Never drop or insert any object into any openings.
- Care must be taken when lifting or moving the equipment so as not to injure your back. Always use proper lifting techniques and/or seek assistance if necessary.
- Keep children and pets away from the machine at all times. DO NOT leave children unattended in the same room with the machine.
- Only 1 person at a time should use the machine.
- If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- Do not use the machine near water or outdoors.
- Keep hands away from all moving parts.
- Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the machine. Running or aerobic shoes are also required when using the machine.
- Use the machine only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
- Do not place any sharp objects around the machine.
- Disabled person should not use the machine without a qualified person or physician in attendance.
- Never operate the machine if the machine is not functioning properly.
- A spotter is recommended during exercise.

II. CARE INSTRUCTIONS

 

 








 









IMPORTANT


- Where necessary, lubricate any moving joints with silicon spray after periods of usage.
- Be careful not to damage plastic or metal parts of the machine with heavy or sharp objects.
- The machine can be kept clean by wiping it down using dry cloth.
- Regularly check all moving parts and make sure there are signs of wear and damage, if any the use of the device must be stopped immediately and contact our after-sales department.
- During inspection, it is necessary to make sure that all bolts and nuts are completely fixed. If any bolt or nut connection is loosened, please re-tighten.
- Check weld for cracks.
- Failure to perform daily maintenance may result in personal injury or equipment damage.

III. PARTS LIST


Part No.	Item No.	Name	Qty	N.W.
1	PR2-1	Main Base Frame	1	4.948
2	PR2-2	Right Base Frame	1	4.489
3	PR2-3	Left Base Frame	1	4.489
4	PR2-4	Tall Vertical Frame	2	6.611x2
5	PR2-5	Short Vertical Frame	2	2.827x2
6	PR2-6	Lat Support	1	4.033
7	PR2-7	Center Cross Support	2	1.498x2
8	PR2-8	Plate Support	2	2.967
9	PR2-9	Dip Frame	1	0.158x12
10	PR2-10	Strengthen Board	12	
11		60 Middle Sheet	2	
12		50 End Cap	4	
13		32 Handle Cover	2	
14		Washer Φ 10	28	
15		M10mm Aircraft Nut	24	
16		Carriage Bolt M10x70mm	24	
17		60x50 Middle Sheet	2	
19	PR2-11	Bar Support	2	2.193x2
20	PR2-12	Lat Handle A	1	0.837
21	PR2-13	Lat Handle B	1	0.837
22		Allen Bolt M10x20mm	4	
23		Handle Cover	2	
24		Plate Rest	4	
25		Ball Pin	1	

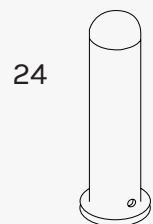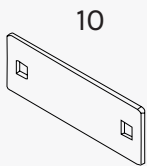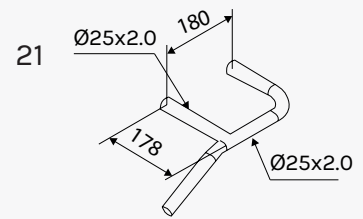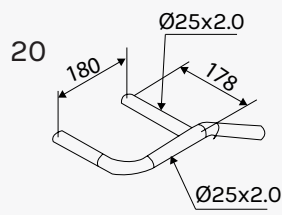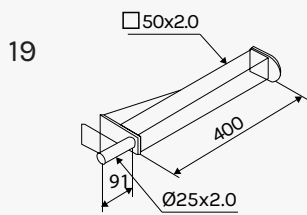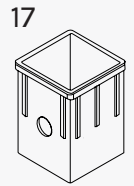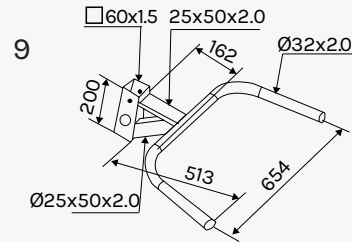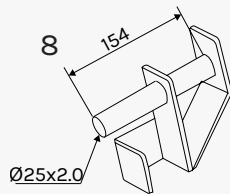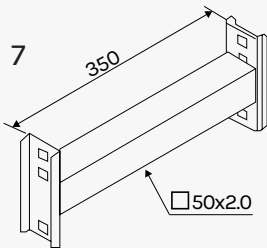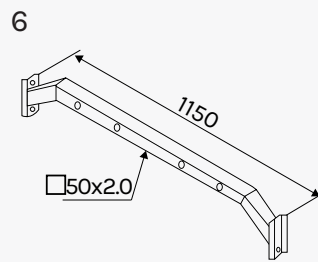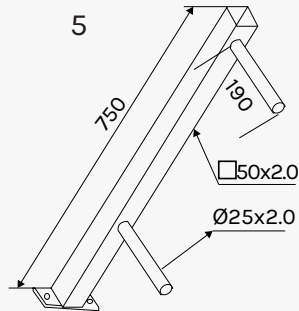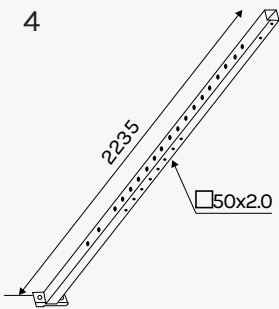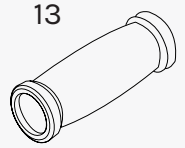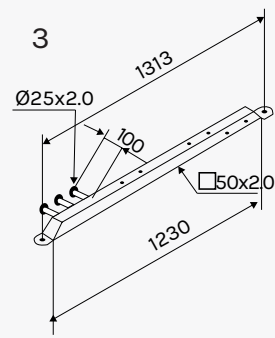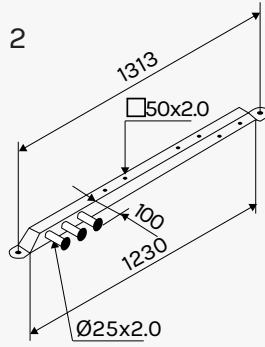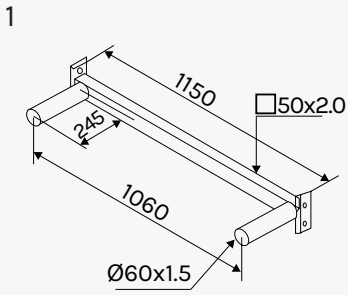

IV. ASSEMBLY INSTRUCTIONS

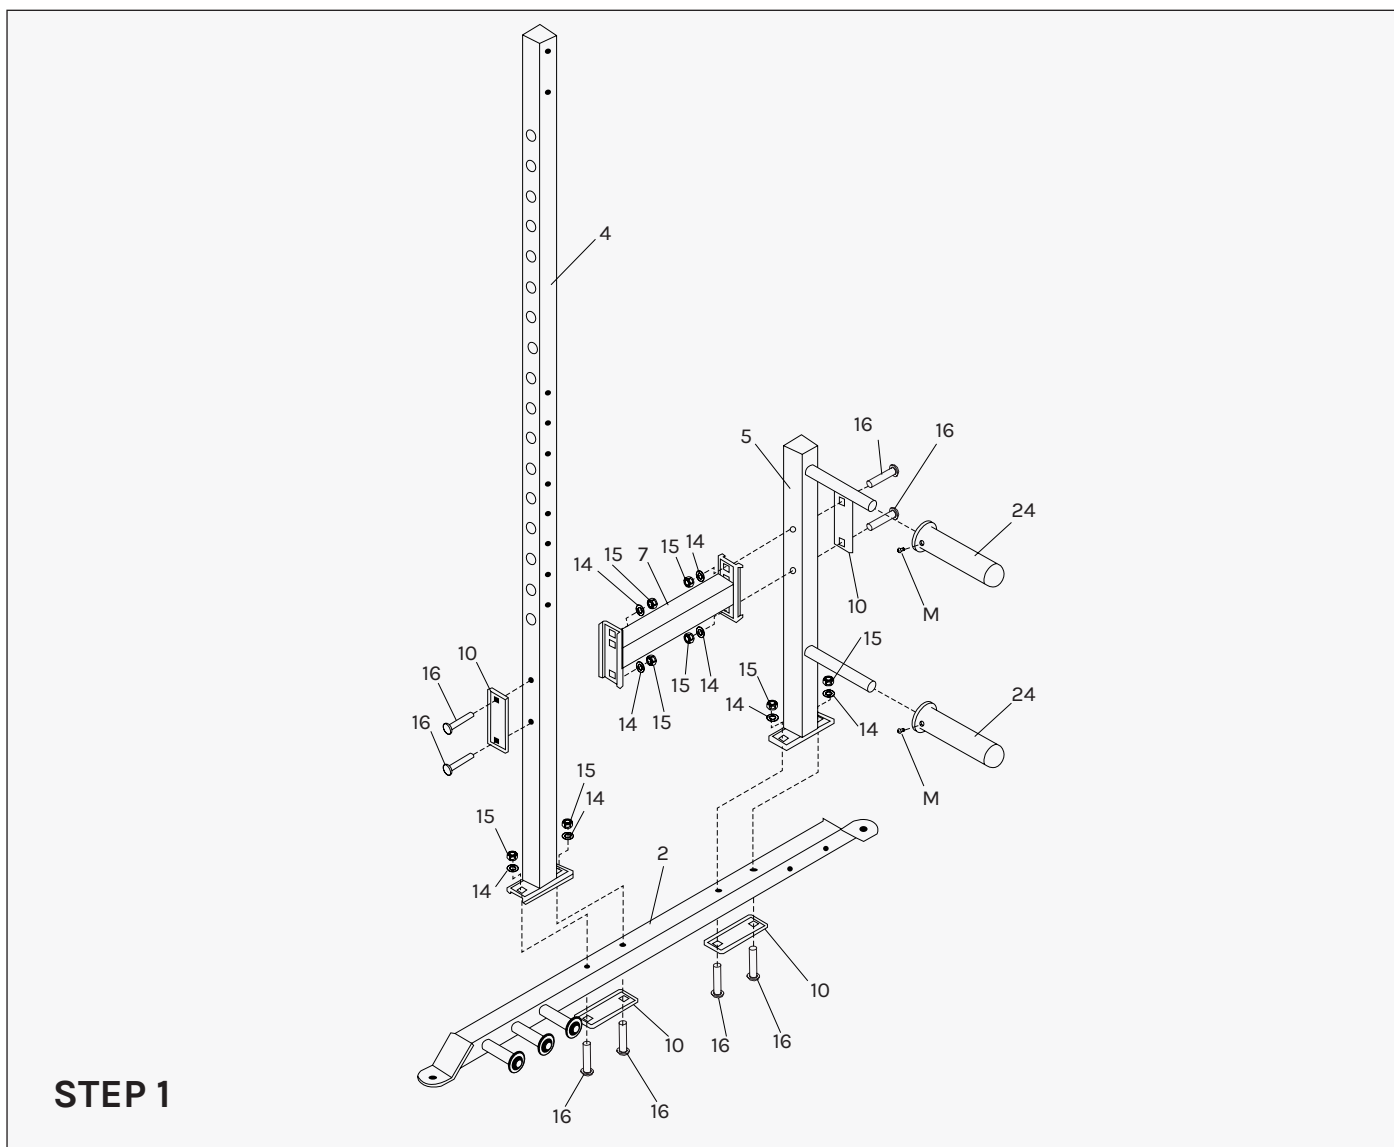


1. Attach the Tall Vertical Frame (4#) and Short Vertical Frame (5#) to the Right Base Frame (2#).
Secure it with:
 - 2x Strengthen Board (10#)
 - 4x Carriage Bolt M10*70mm (16#)
 - 4x Washer 10 (14#)
 - 4x M10mm Aircraft Nut (15#)
2. Attach the Tall Vertical Frame (4#) and Short Vertical Frame (5#) to the Center Cross Support (7#).
Secure it with:
 - 2x Strengthen Board (10#)
 - 4x Carriage Bolt M10*70mm (16#)
 - 4x Washer 10 (14#)
 - 4x M10mm Aircraft Nut (15#)
3. Tighten all the bolts and nuts.
4. Loosen the screw (M) on the Plate Rest (24#) and push them onto the $\varnothing 25$ Circular Steel Tube of the Short Vertical Frame (5#) then tighten the screw (M).

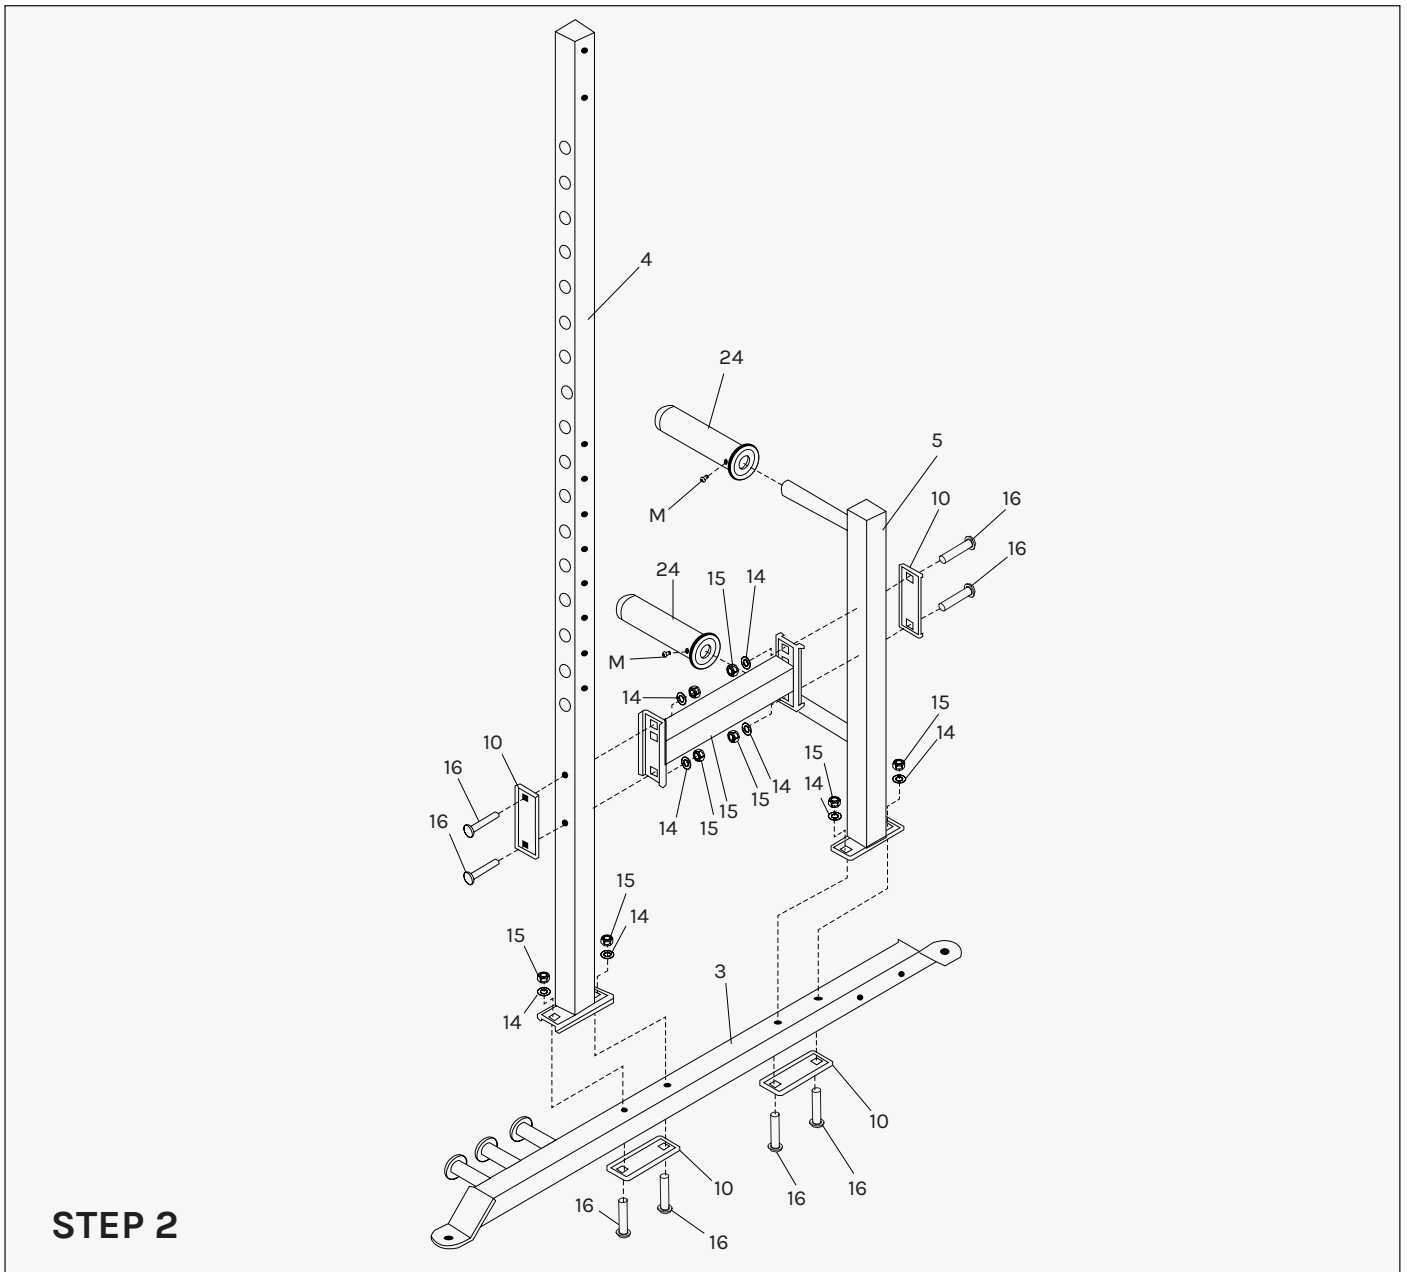

STEP 2

1. Attach the Tall Vertical Frame (4#) and Short Vertical Frame (5#) to the Left Base Frame (3#).
Secure it with:
 - 2x Strengthen Board (10#)
 - 4x Carriage Bolt M10*70mm (16#)
 - 4x Washer Ø10 (14#)
 - 4x M10mm Aircraft Nut (15#)
2. Attach the Tall Vertical Frame (4#) and Short Vertical Frame (5#) to the Center Cross Support (7#).
Secure it with:
 - 2x Strengthen Board (10#)
 - 4x Carriage Bolt M10*70mm (16#)
 - 4x Washer Ø10 (14#)
 - 4x M10mm Aircraft Nut (15#)
3. Tighten all the bolts and nuts.
4. Loosen the screw (M) on the Plate Rest (24#) and push them onto the Ø25 Circular Steel Tube of the Short Vertical Frame (5#) then tighten the screw (M).

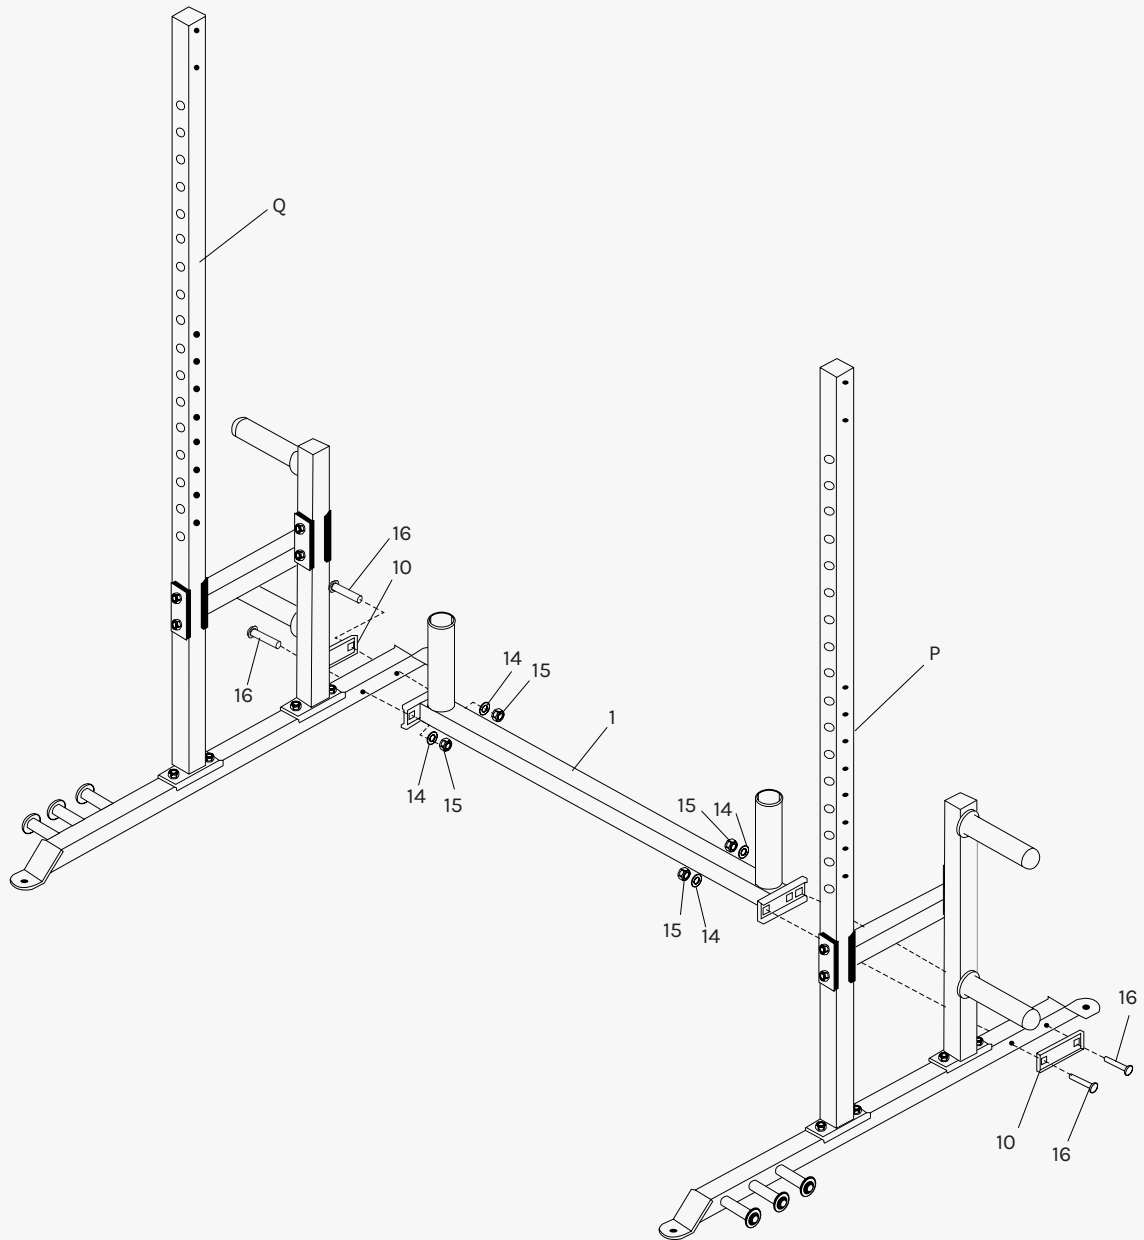


STEP 3

1. Attach P and Q to the Main Base Frame (1#).


Secure it with:

- 2x Strengthen Board (10#)
- 4x Carriage Bolt M10*70mm (16#) - 4x Washer Ø10 (14#)
- 4x M10mm Aircraft Nut (15#)

2. Tighten all the bolts and nuts.

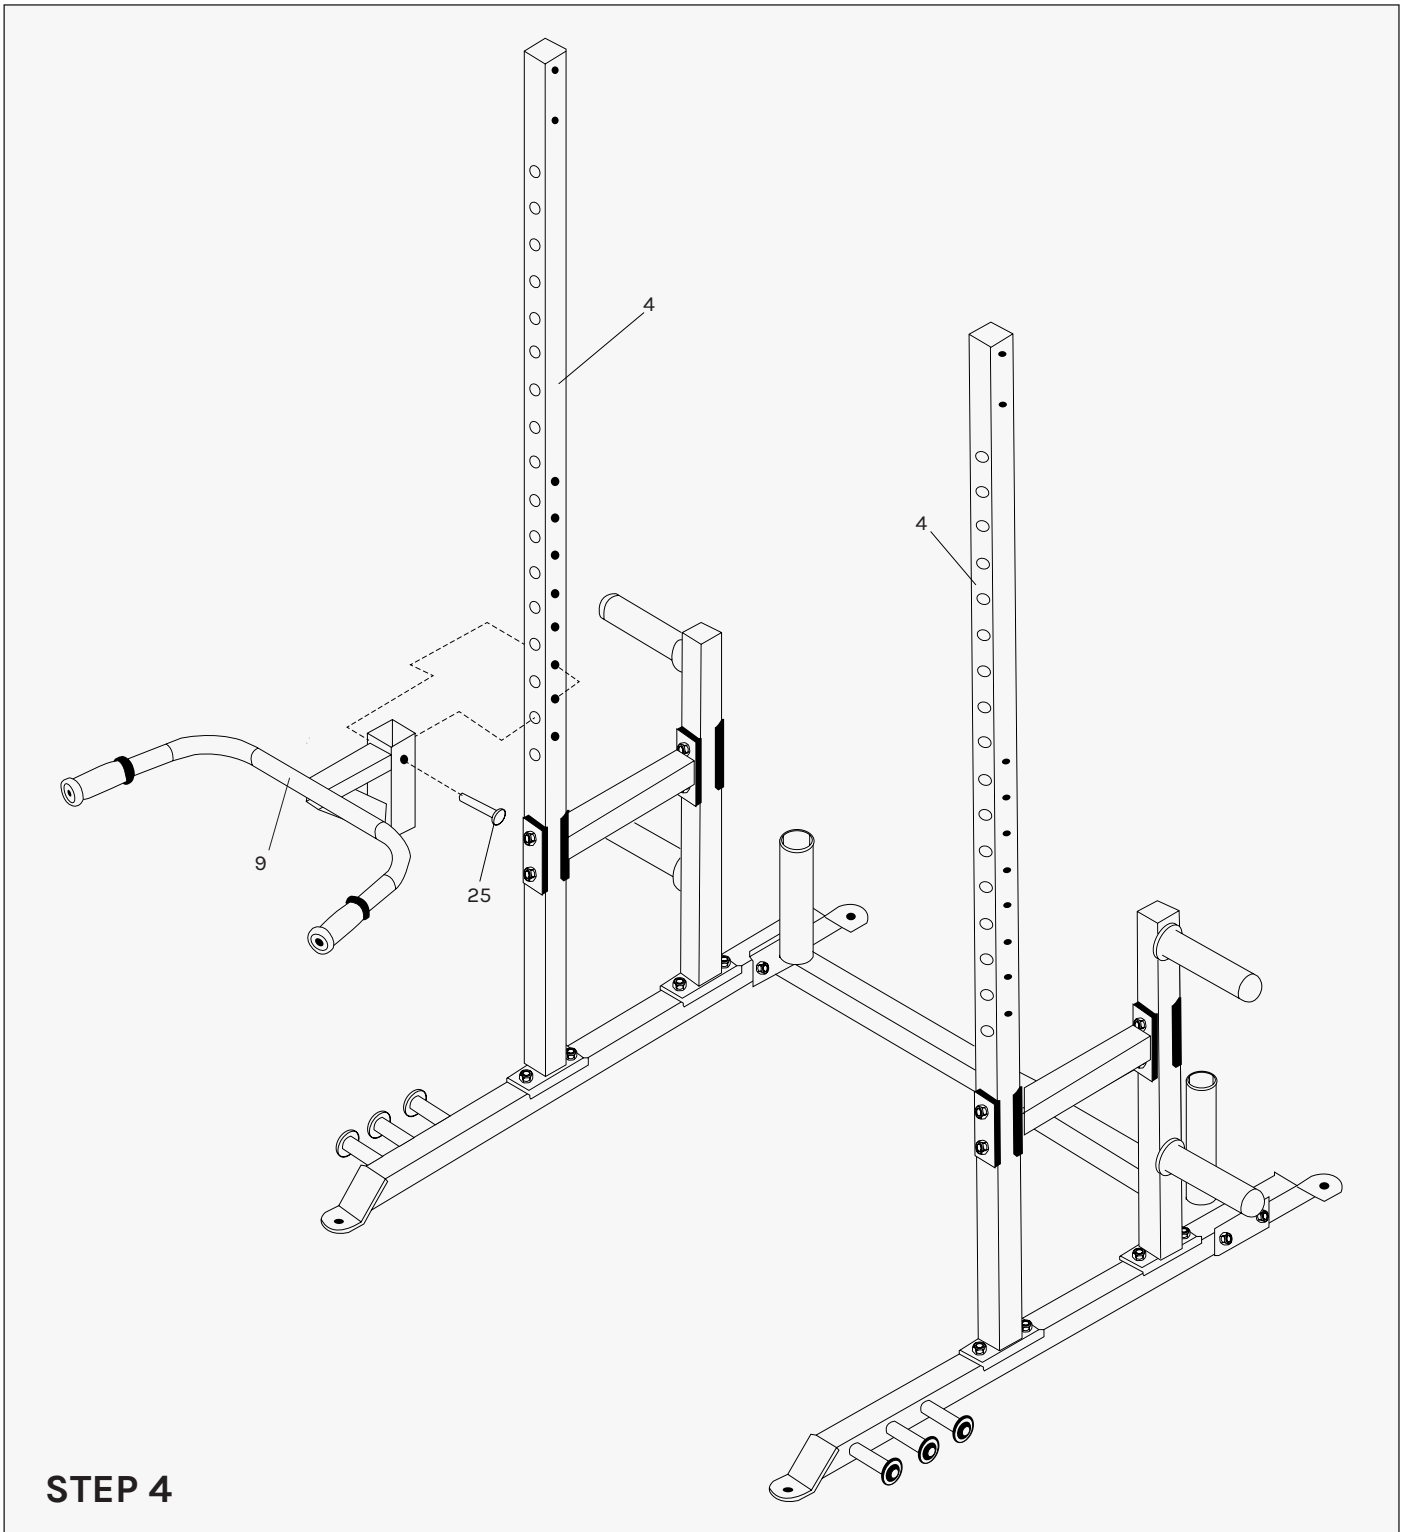

1. Plug the Dip Frame (9#) into the Tall Vertical Frame (4#). You can choose the left side or right side. Push the Ball Pin (25#) into the holes on Tall Vertical Frame (4#).

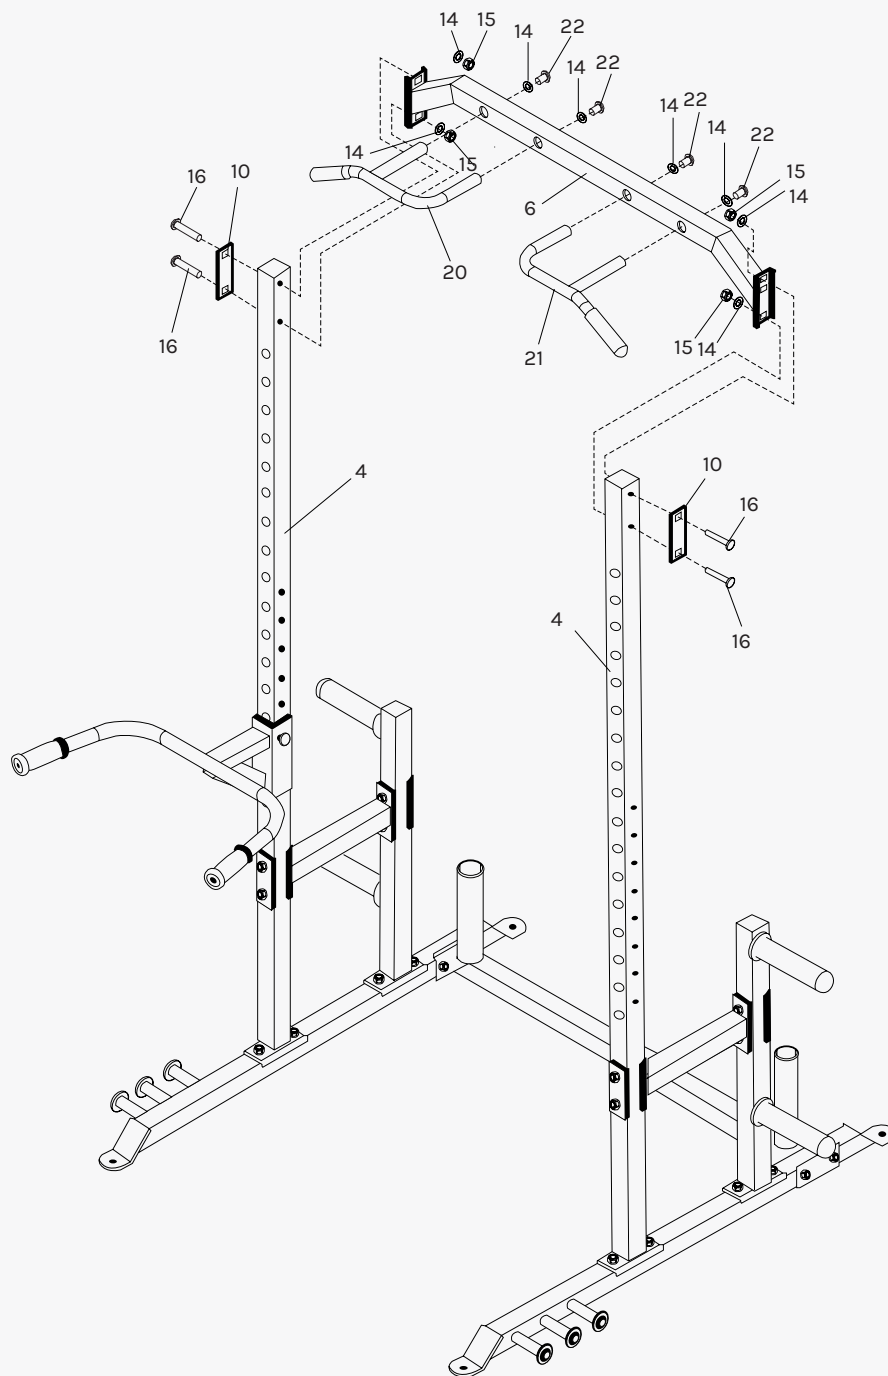

STEP 5

1. Attach the Lat Support (6#) to the left and right Tall Vertical Frame (4#).

Secure it with:


- 2x Strengthens Board (10#)
- 4x Carriage Bolt M10*70mm (16#)
- 4x Washer Ø10 (14#)
- 4x M10mm Aircraft Nut

2. Tighten all the bolts and nuts.

3. Attach the Lat Handle A, B (20#, 21#) to the Lat Support (6#).

Secure it with:

- 4x Allen Bolt M10*20mm (22#)
- 4x Washer Ø10 (14#)

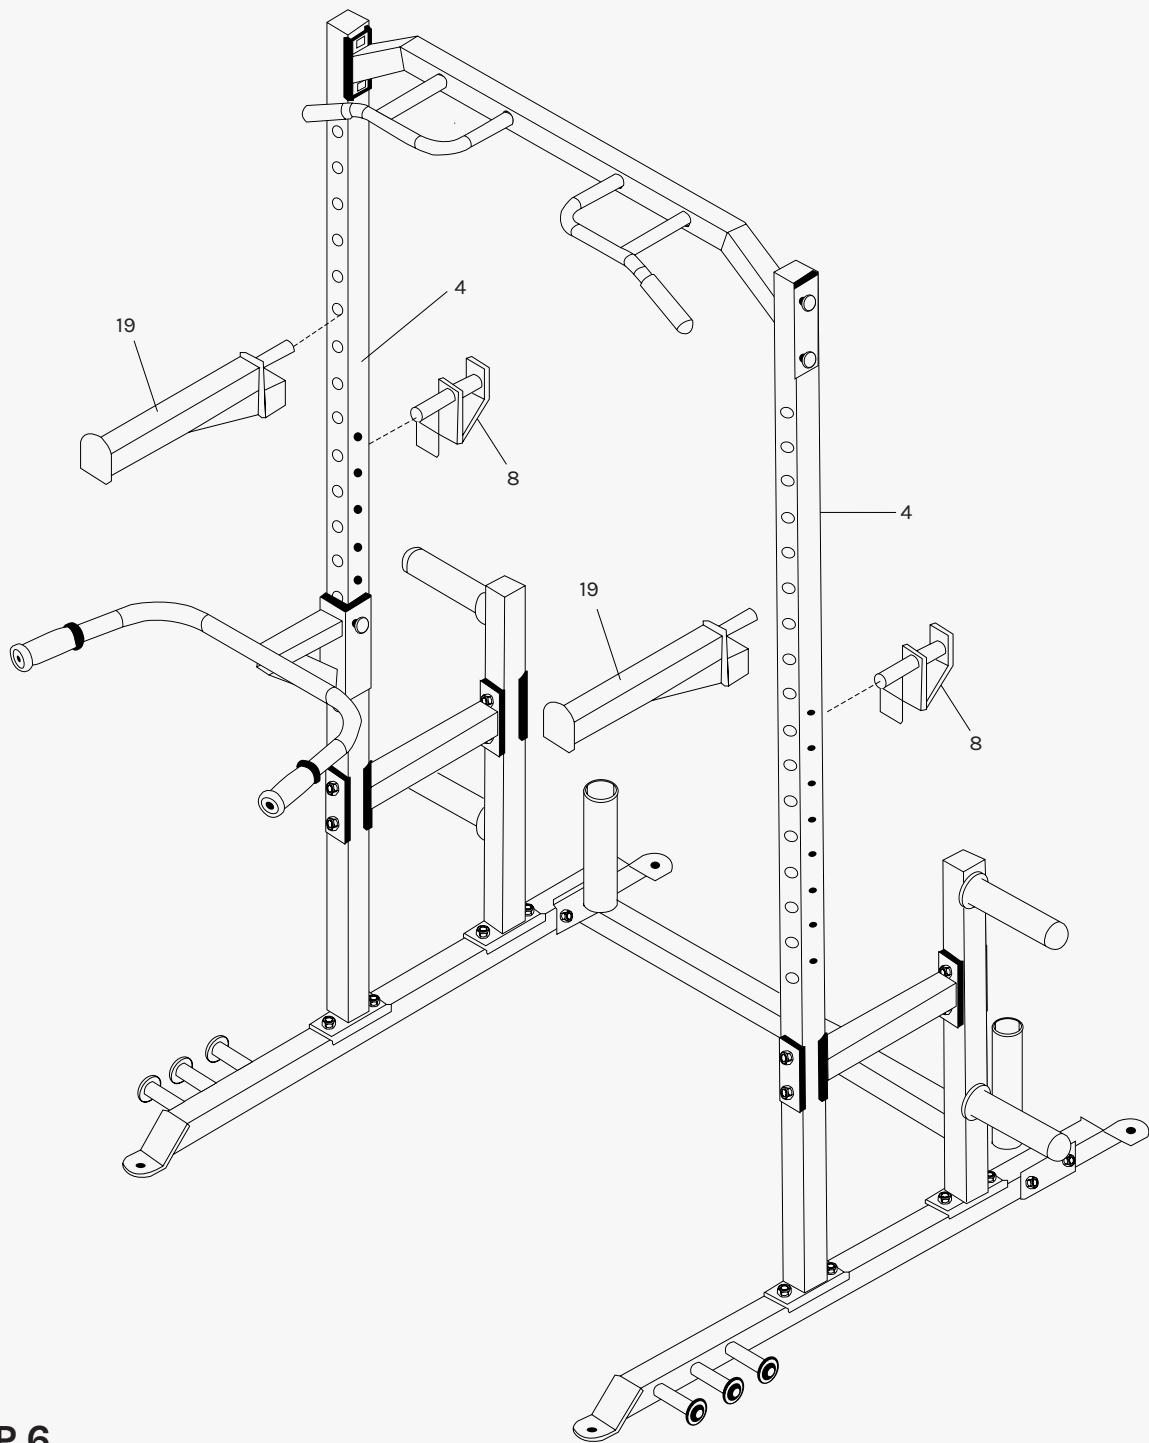

STEP 6

1. Plug the 2x Bar Support (8#) into the Left and Right Tall Vertical Frame (4#).
2. Plug the 2x Bar Rest (19#) into the Left and Right Tall Vertical Frame (4#).

V. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au.

Please visit our website to view our full warranty terms and conditions:
<http://www.lifespanfitness.com.au/warranty-repairs>

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed.

If you have purchased this product from the Official Lifespan Fitness website, please visit <https://lifespanfitness.com.au/warranty-form>

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit <https://lifespanfitness.com.au/warranty-form> and fill in our Repair/Service Request Form or Parts Purchase Form.

Scan this QR code with your device to go to lifespanfitness.com.au/warranty-form



CORTEX[®]

WWW.LIFESPANFITNESS.COM.AU