

# USER MANUAL

## Tower Bounce Slide & Splash

 
---



LIFESPAN KIDS



Find the Digital  
Manual Online

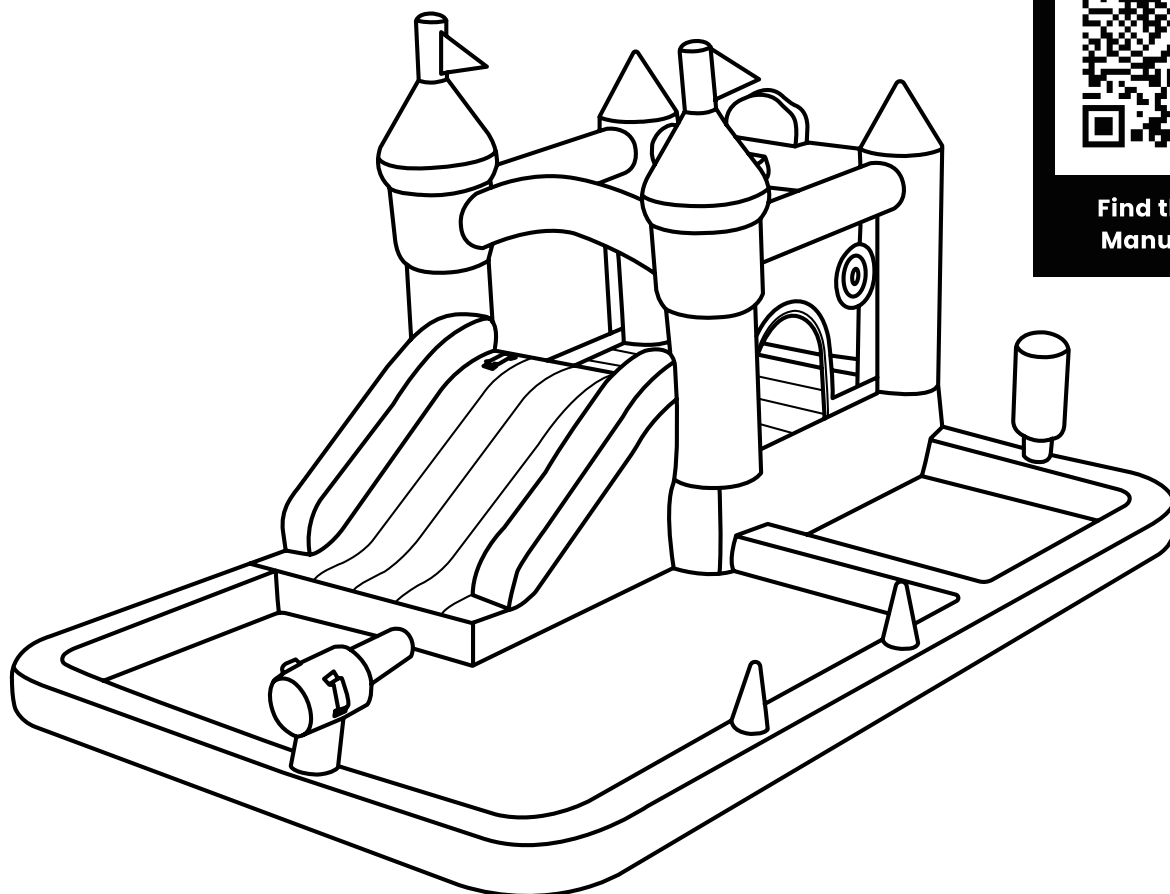

**WARNING:** Children have drowned in portable swimming pools. Ensure active adult supervision at all times. Do not leave children unsupervised in or around the pool — keep them within arm's reach. Empty and store safely after use.

### IMPORTANT:

The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use. Do not allow children to operate machine. Children to stay clear of air fan blower at all times. Please save these instruction for future use.

**Recommended for ages between 3–8. Only for domestic use. Indoor use or outdoor use.**

**Only a competent adult must set up this product following the instruction provided. Do not allow children to operate the air fan blower at any time. Please save these instructions for future use.**

### NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at [www.lifespankids.com.au](http://www.lifespankids.com.au).

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

---

## TABLE OF CONTENTS

|                                             |    |
|---------------------------------------------|----|
| <b>I. GENERAL SAFETY INSTRUCTIONS</b>       | 3  |
| <b>II. SET UP</b>                           | 7  |
| <b>III. MAINTENANCE INSTRUCTIONS</b>        | 11 |
| <b>IV. REPAIR AND DISPOSAL INSTRUCTIONS</b> | 11 |
| <b>V. COMMON QUESTIONS</b>                  | 12 |
| <b>VI. WARRANTY</b>                         | 14 |
| <b>VII. SECURITY SUPPORT INFORMATION</b>    | 14 |

---

 
## I. GENERAL SAFETY INSTRUCTIONS

Please read the following safety guidelines and warnings carefully.



### **WARNING!**

**Never leave your child unattended – drowning hazard  
Empty and store safely after use.**

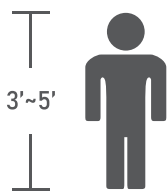

- **For safety concern, the weight limit should be strictly observed; maximum weight of 45kg (99lbs) for individual.**
- **The height of player shall not exceed 5 feet (150cm)**

### **USER RESTRICTIONS**

- Suitable for children aged 3 to 8 years only.
- Not suitable for children under 3 years or for adult use.
- Adult supervision is required at all times.
- Check and follow all assembly, operation, and safety instructions.
- The product must be used only under adult supervision.
- Indoor and outdoor use is permitted based on product specifications and area size.
- Minor size deviations are normal.
- The maximum fall height is 75cm.

## **WARNING**

**Following these warnings and instructions can reduce the risk of serious injury or death.**

- Warning - This toy is not safe if the anchorage system is not used as it may be lifted by light winds. Do not use in high winds.
- Warning- Use of this product may cause friction burns to exposed skin. Ensure that clothing fully covers arms and legs, as well as the torso.
- Warning- Children may be injured by falling onto inflation devices. Ensure that inflation devices are positioned at least 2,5 m from the toy.
- Do not face directly toward the sun.
- Children can drown in very small amounts of water. Empty the pool when not in use.
- Change the water of paddling pools frequently (particularly in hot weather) or when noticeably contaminated.
- 3 children maximum, 1 child at a time per section and maximum 45 kg per section.
- Adult supervision is required at all times.
- Instruct children to keep away from the front, rear, and sides of moving equipment. Do not walk between moving parts or in front of or behind the activity toy while it is in use.
- Instruct children to use this activity toy only as intended by the manufacturer.
- Do not allow children to wear inappropriate clothing while using the activity toy, including loose-fitting garments, clothing with hoods, drawstrings, scarves, capes, ponchos, or items with cords or straps attached. These items can become entangled and may result in strangulation, causing serious injury or death.
- Instruct children not to use or climb on the activity toy when it is wet or slippery.
- Instruct children to remove bicycle helmets and other sports helmets before using the activity toy.
- Instruct the children to remove their shoes while using this.

## SITE RESTRICTIONS FOR INSTALLATION AND USE



**Do not use outdoors** during rain or severe weather.



**Do not use in wind speeds over 32 km/h (20 mph).** Wind gusts can dislodge stakes and lift the inflatable.



**Do not set up** on slopes or uneven surfaces.



**Do not install** near pools, water sources, or puddles.



**Do not place on hard surfaces** (e.g. concrete or asphalt). Use an impact-absorbing pad or mat underneath for safety.

## PRECAUTIONS FOR STAKES

- Stakes are for securing the inflatable on lawn surfaces.
- Use sufficient stakes and drive them vertically and firmly into the ground.
- Ensure the ground is firm and suitable for installation (check for soil, weather, and environment conditions).
- Clear debris and obstacles before inserting stakes.
- Use straps and stakes together for stability in case of wind or impact.
- Do not drive stakes at an angle. Push into dry and hard soil for best hold.
- Stakes should be flush with or beneath the ground to prevent tripping.

## PRECAUTIONS FOR PLAY

- No head-first sliding. Always slide feet first to prevent injury.
- Strictly follow safety rules in all play zones (e.g. slides, climbing walls).
- Keep pets away from the inflatable and blower.
- Do not attach external items (e.g. jump ropes, pet leashes, cables) that can cause entanglement or suffocation.
- Ensure children remain within the designated play area under supervision.
- Keep entry and exit points clear at all times.
- Dress Code:
  - No headgear or loose clothing.
  - Remove all sharp or hard objects (e.g. jewellery, helmets, scarves).
  - No shoes.
- Separate children by age if there's a large gap to prevent injury.
- Do not climb or hang from support pillars or outer walls.
- Prohibited activities include pushing, wrestling, flips, roughhousing, etc.
- No food, drink, or chewing gum allowed while playing.

## PRECAUTIONS FOR BLOWER USE

- ⚠ **Electrocution Hazard:** Do not use an extension cord. Plug directly into a suitable outlet.
- Blower use is not recommended for children under 12.
- Follow all blower safety guidelines and manuals carefully.
- Keep all electronics and cords away from the inflatable.
- Do not set up near or under power lines or electrical wires.
- Never immerse blower in water or wipe with wet cloth.
- Avoid running cords under rugs, carpets, or through tight spaces.
- Place cords away from foot traffic to avoid tripping.
- Keep away from fire and heat sources.
- Do not disconnect blower during use.
- Do not use in adverse weather.
- Inspect cords and plugs before every use. Do not use damaged parts.
- If defective, stop use immediately and contact a professional.
- Always unplug blower when not in use or during servicing.
- Use a solid-state speed control device only if required by specifications.

---

 
## II. SET UP

### PRODUCT INCLUDES:


⚠ **NOTE:** The product with water playing design comes with water pipe accessories, the products without water splashing function does not have.




Inflatable  
Castle

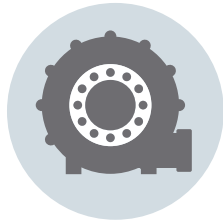

Blower

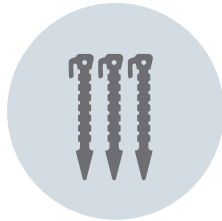 

Stakes

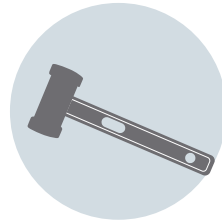 


Hammer



Storage  
Bag



 
Repair Kit

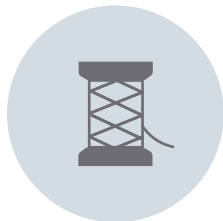

Coil







 User  
Manual

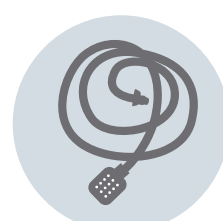

Water Pipe  
Fittings


### UNPACKING AND ADDITIONAL SETUP NOTES

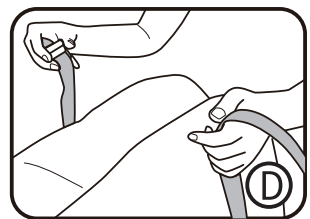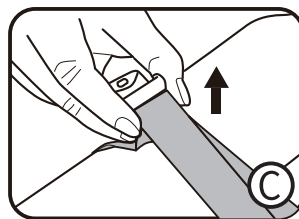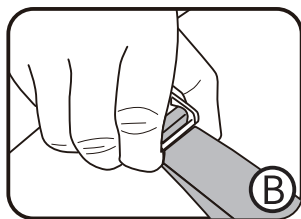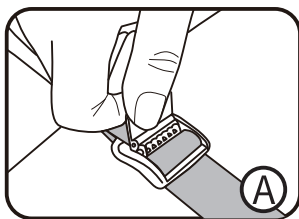    

- Open the packaging and remove all components. Lay them flat on a smooth, level area of grass or dirt.
- Release any adjustable buckle straps as instructed (e.g. lift buckle tab, pull the strap, and remove).
- To protect the underside of the inflatable, place a tarp or protective mat beneath it.
- Position impact-absorbing cushions or EVA foam pads next to climbing areas and slide exits to reduce injury risk from falls.

- Ensure the site has at least 3 meters (10 feet) clearance from any nearby objects or structures, including:
  - Houses, garages, fences, clotheslines, trees, large rocks, electrical wires, or playground equipment.
- A 2-meter safety clearance must be maintained around the entire unit during use.


## SETUP INSTRUCTIONS

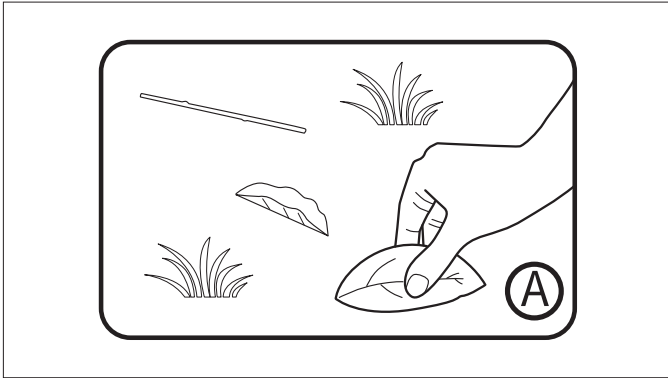

### STEP A – GROUND PREPARATION


- Inspect and clear the ground area of rocks, sticks, glass, debris, or any sharp or hard objects.
- Choose a flat, soft surface (e.g. grass or level dirt).
- Maintain a clearance of at least 2 meters around the setup area.

Unfold the inflatable structure carefully in the cleared space.

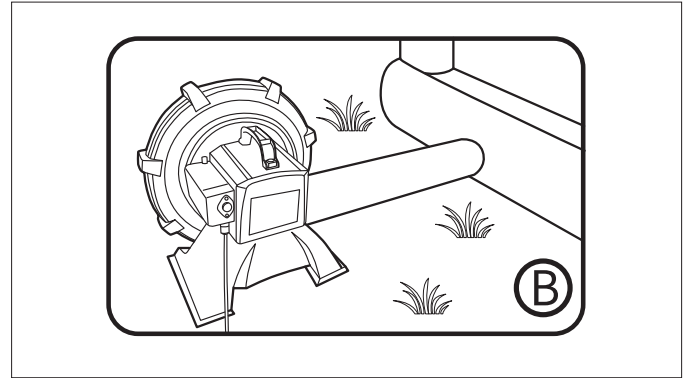

### STEP B – BLOWER SETUP


- Place the electrical blower in a dry location, away from water sources.
- Stretch and attach the inflation tube securely to the blower nozzle. Ensure the tube is untwisted and smooth.
- Plug the blower into a power source matching the indicated voltage.
- Turn on the power switch – the inflatable will begin to inflate and expand quickly.
- The blower must remain on continuously while the inflatable is in use.

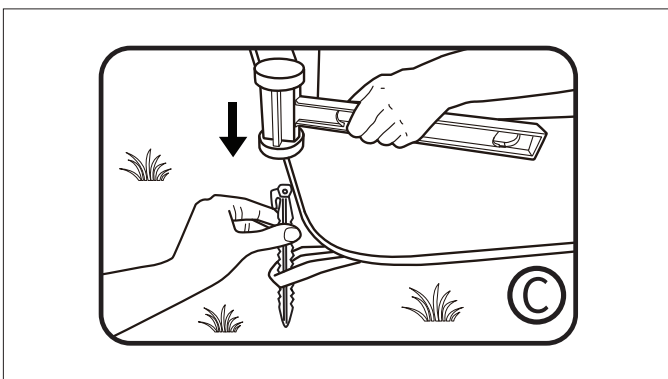

### STEP C – STAKE INSTALLATION


- Use a rubber mallet to drive all provided ground stakes into the ground.
- Stakes must be driven perpendicularly and firmly to ensure the structure remains stable.
- This will minimize displacement and tripping hazards.
- Secure both the inflatable and blower using all stakes provided for your model.

## DEFLATION INSTRUCTIONS

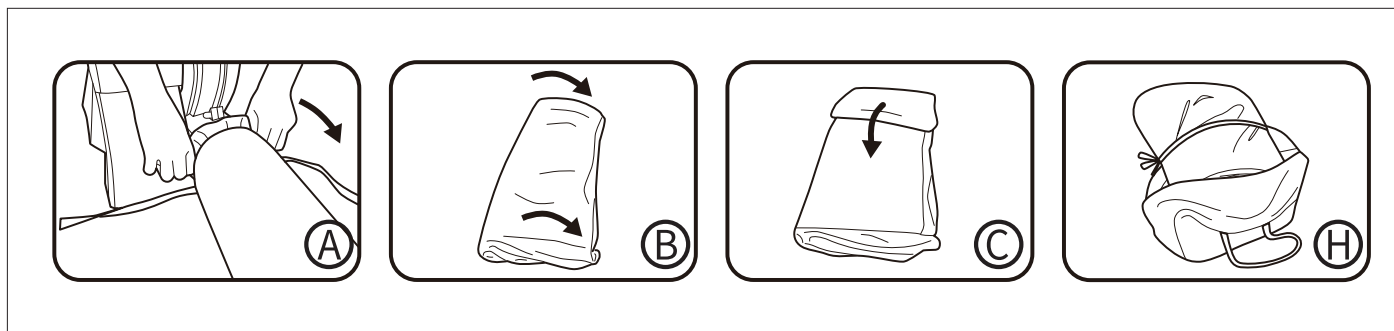

1. Ensure all children are out of the inflatable and the blower is turned off.
2. Turn off and unplug the blower. The inflatable will deflate rapidly.
3. Detach the inflation tube and lay it to the side (A).
4. Remove all ground stakes.

## FOLDING AND STORAGE

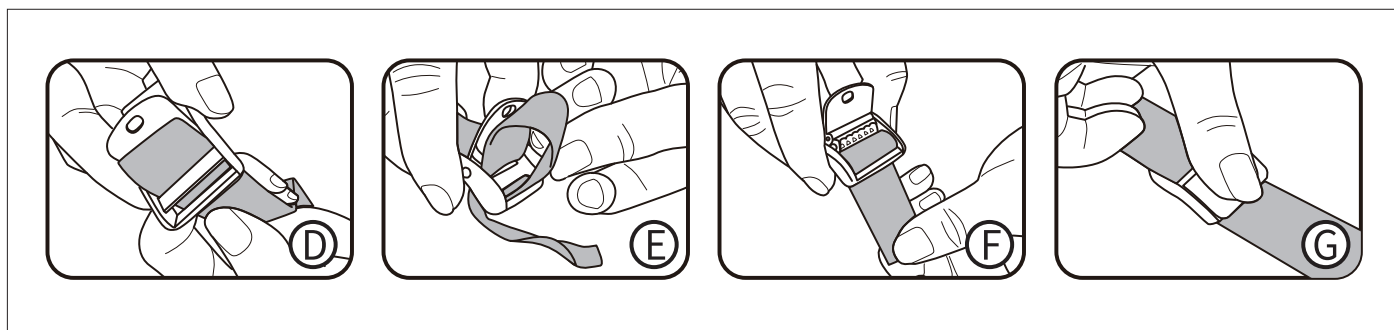


1. Fold the inflatable from the outer edges inward, pressing out as much air as possible to create a long rectangle (B).
2. Begin folding from the side opposite the inflation port, ensuring the surface is neatly folded (C).
3. Insert the adjustable buckle strap through the slot, pull tight, and secure the buckle (D-G).
4. Place the folded unit into the storage bag provided (H).


## WATER SPRINKLER AND CONNECTOR SETUP

 The water pipe components and accessories are shown below. (Quantity of the sprinklers are subject to different models, our installation example has 2 sprinklers)


**NOTE:** For inflatable castles without water play, please skip this installation step.

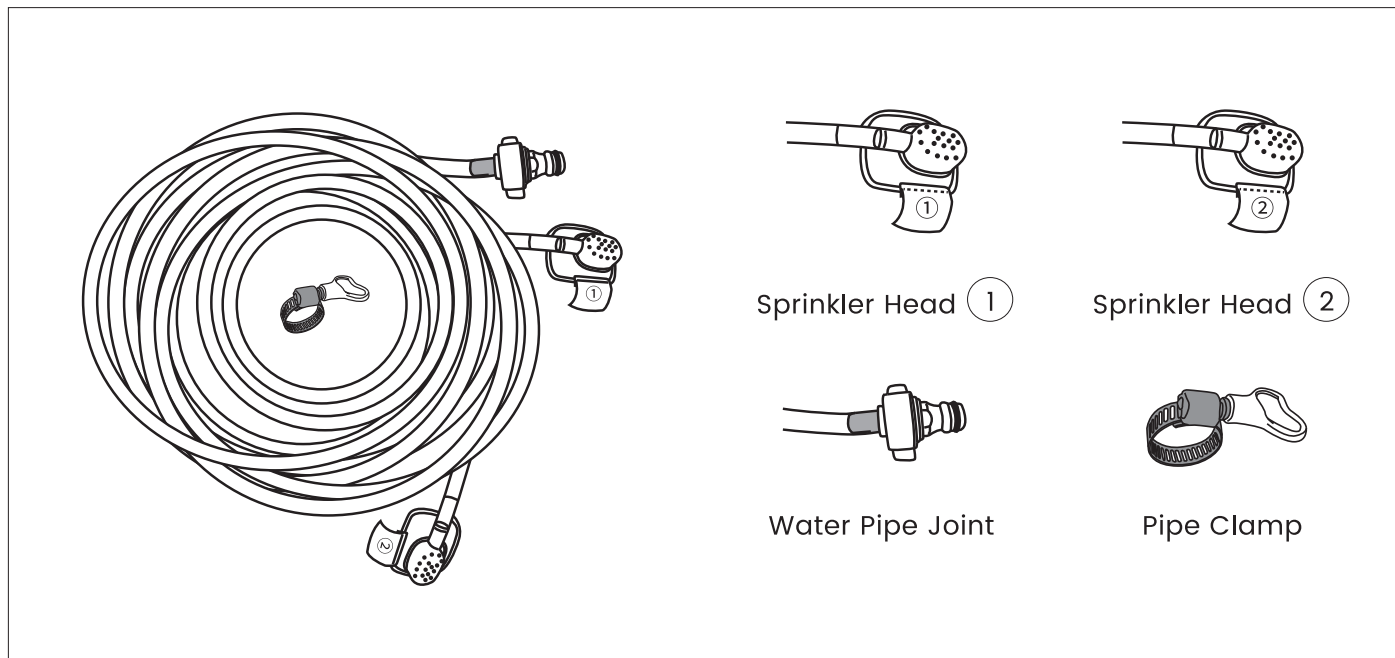

## WATER PIPE CONNECTOR INSTALLATION

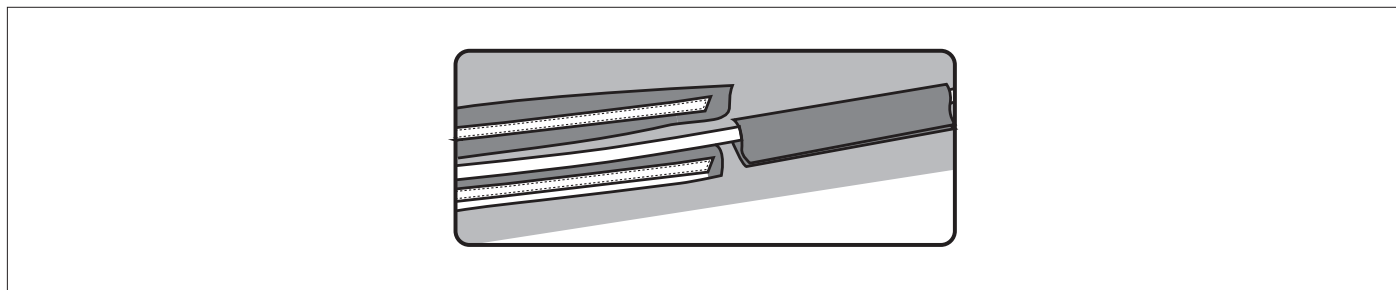 

 1. After confirming the right position for each sprinkler, bind the water pipe along with the fixed velcros in the structure.
2. Once you have fixed the water pipe to the structure, find the correct connector (joint).
3. Attach the hose connector to a standard home garden hose (see images H-J).

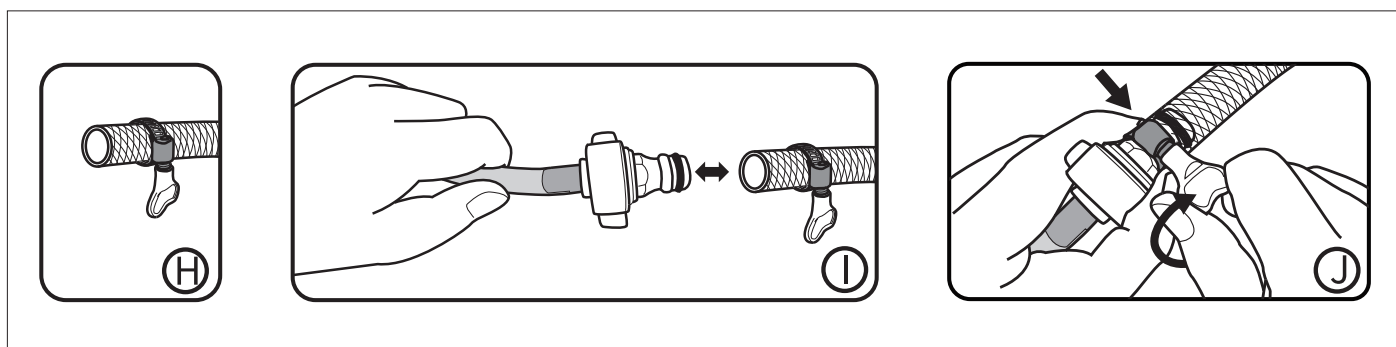

4. Use the pipe clamp to your own water pipe like (H). secure the connection and avoid leaks due to pressure.
5. Connect the water pipe connector to your own water pipe clamp. Make sure your water pipe completely covers the very front part of the pipe connector properly.
6. After binding the water pipe with the connector, then screw and lock the hose clamp to the pipe, refer to (J).
7. For proper installation, you need to pinch the clamp ring with one hand and tighten the handle clockwise until secure.

---

### III. MAINTENANCE INSTRUCTIONS

- Perform regular inspections to avoid damage-related accidents.
- Ensure the inflatable is completely dry before storing to avoid mould or material degradation.
- Store in a dry indoor area.
- Check for holes, wear, and damage before and after each use. Do not use damaged inflatables.
- Inspect ground stakes regularly to ensure safe anchoring.
- No food or drinks allowed on the inflatable or near the blower.
- Clean with a soft cloth and non-toxic, neutral cleaners. Avoid bleach, chlorine, and abrasive products, or just rinse it with water.
- Do not use chlorine based or bleach based cleaners as it may damage the surfaces. Do not apply any bathroom detergents. Do not use any cleaners that with a warning of "Do not use on soft vinyl". Do not use any abrasive cleaners to avoid the damages and deterioration on the surface.
- The most important thing is that since children are going to have close contact with the product, so make sure to use a cleaner that is safe and non-toxic.
- Clean and remove all accumulated debris before each use. Allow to dry completely before storage.

#### BLOWER MAINTENANCE

- Unplug the blower immediately after use.
- Inspect regularly for damage. Do not use if cords, plugs, or parts are compromised.
- Blower is equipped with overheat protection. If motor is overheated, the protector will trip to protect your safety. Turn off the blower and let it cool down.
- Blower does not require oil or internal maintenance.
- Do not operate outdoors in wet conditions.
- Do not immerse or wipe with a wet cloth. Clean only with a dry or wrung-out cloth.
- No chemical cleaners on the blower.
- Store blower indoors, away from children.
- Loosely coil the cord for storage.

---

 
## IV. REPAIR AND DISPOSAL INSTRUCTIONS

**⚠ ATTENTION:** It is not recommended to repair the same damaged area more than twice.

### METHOD 1: STITCHING

- For loosened stitches, sew carefully with a needle and thread. Use only on outer fabric – avoid piercing bottom or structural layers.
- Use your own sewing needle (3# sewing needle is suggested).
- Loosely coil the cord for storage.

### METHOD 2: PATCH REPAIR

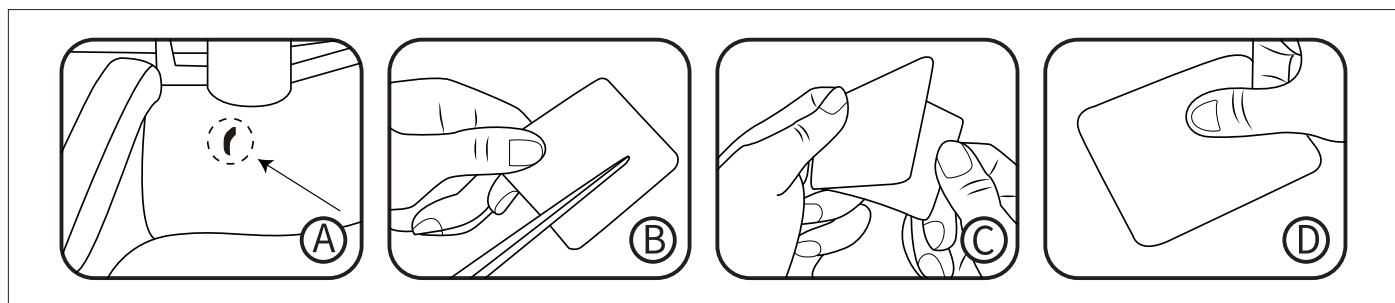

For small holes:

1. Clean and dry the damaged area (A).
2. Cut a patch to size (B).
3. Remove the adhesive backing and apply (C).
4. Press firmly and smooth out air bubbles (D).
5. Let cure for at least 30 minutes before reinflating.

**NOTE:** Repairs should only be attempted by adults. Do not repair the same spot more than twice.

### DISPOSAL

- Dispose of in accordance with local electronic and inflatable disposal laws.
- Blower and batteries must be taken to specialized disposal centres.

---

## V. COMMON QUESTIONS

### What if there's air leakage at the seams?

- Minor leakage at pinholes or seams is normal to maintain air pressure and avoid over-inflation.

### Are pinholes a defect?

- Pinholes (<6mm) may occur during manufacturing (for positioning the stitches) and do not affect function.

### Should I turn off the blower after inflation?

- No – the blower must remain on during use, or the inflatable will collapse.

### How do I store a water-play inflatable?

- Drain and dry completely at an angle to release trapped water.
- Store in a dry and ventilated space.

### Why are there bubbles when water is used?

- Bubbles from the bottom or seams are normal due to pinholes from stitching. Products are tested and safe to use.

## Annex B (informative)

### Consumer information sheet for playground surfacing materials

The US Consumer Product Safety Commission (CPSC) estimates that about 100 000 playground equipment-related injuries resulting from falls to the ground surface are treated annually in US hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall on to a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces, such as concrete or asphalt, and while grass may appear to be acceptable, it can quickly turn to hard-packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table B.1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall on to four different loose-fill surfacing materials if they are installed and maintained at depths of 150 mm, 225 mm and 300 mm.

**Table B.1 – Fall height from which a life-threatening head injury would not be expected**

Dimensions in millimetres

| Type of material           | Depth of surfacing material |       |       |
|----------------------------|-----------------------------|-------|-------|
|                            | 150                         | 225   | 300   |
| Double shredded bark mulch | 1 800                       | 3 000 | 3 300 |
| Wood chips                 | 1 800                       | 2 100 | 3 600 |
| Fine sand                  | 1 500                       | 1 500 | 2 700 |
| Fine gravel                | 1 800                       | 2 100 | 3 000 |

However, it should be recognized that it is not possible to prevent all injuries due to falls, regardless of the surfacing material is used.

It is recommended to extend a shock absorbing material a minimum of 1 800 mm in all directions from the perimeter of stationary equipment such as climbing frames and slides. However, because children can deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of twice the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for the equipment in question. The choice of a material depends on the type and height of the playground equipment, the availability of the material in a particular area and its cost.

---

## VI. WARRANTY

### AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **[www.consumerlaw.gov.au](http://www.consumerlaw.gov.au)**.

Please visit our website to view our full warranty terms and conditions:

**[www.lifespankids.com.au/Warranty-Policy-Kids](http://www.lifespankids.com.au/Warranty-Policy-Kids)**

### WARRANTY AND SUPPORT

Please email us at **[support@lifespankids.com.au](mailto:support@lifespankids.com.au)** for all warranty or support issues.

For all warranty or support related enquiries, please lodge a support ticket first by sending us an email. **[support@lifespankids.com.au](mailto:support@lifespankids.com.au)**.

## VII. SECURITY SUPPORT INFORMATION

### REPORTING

To report a cyber security issue, please email **[support@gflgroup.com.au](mailto:support@gflgroup.com.au)** with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

### DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.

### DISTRIBUTED BY

GLOBAL FITNESS AND LEISURE PTY LTD  
23-25 MAYGAR BLVD  
BROADMEADOWS, VIC 3047  
PH:03 9357 2166



[www.lifespankids.com.au](http://www.lifespankids.com.au)