


ACTIVEGO

TOPSHELF FOLD-UP AIR HOCKEY TABLE

USER MANUAL

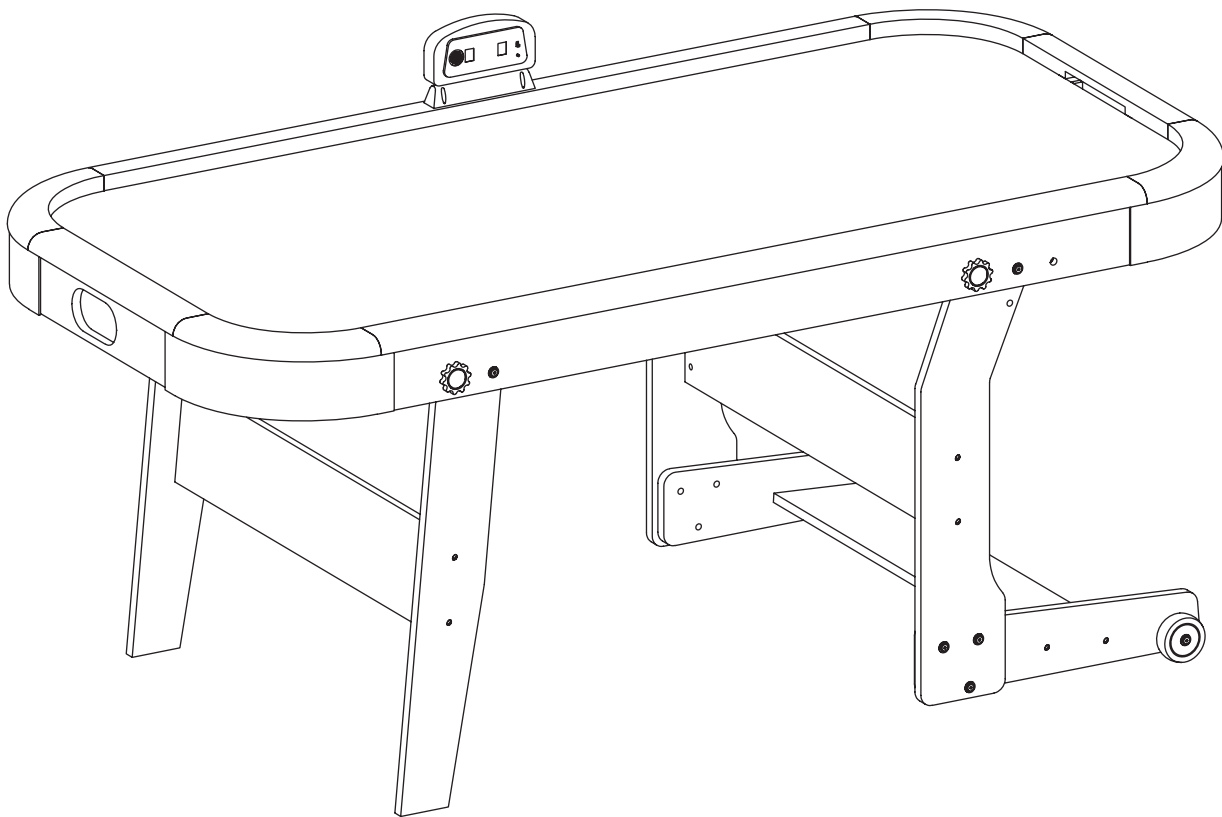

Find the
Digital Manual
Online



Product may vary slightly from the item pictured due to model upgrades.



**Read all instructions carefully before using this product.
Retain this owner's manual for future reference.**

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespanfitness.com.au



TABLE OF CONTENTS

- I. Care, Maintenance and Safety Information 03
- II. Parts List 05
- III. Assembly Instructions 06
- IV. Folding Instructions 11
- V. Warranty 12

I. CARE, MAINTENANCE, AND SAFETY INFORMATION

Important Safety Information & Warnings


- This product is intended for indoor use in a climate-controlled environment only. Excessive temperatures and humidity may have an influence on the play quality and durability of this table.
- This table should be used by adults or under the supervision of adults.
- Ensure the table is fully assembled and tightened before play.
- Do not sit, climb, or place heavy objects on the table.
- Keep packaging and hardware away from young children to avoid choking hazards.
- Always lift the table with two or more people to prevent back injuries or table damage.
- Always use on level ground to prevent tipping.
- Do not place any food or drinks on the table.
- Only use the table for its intended purpose.
- Use only the supplied adapter. Do not expose to moisture.
- Keep power cord out of pathways to avoid trip hazard.

Electrical Safety Warning

- Connect the power cord to a properly grounded outlet only.
- Do not plug into extension cords that exceed safe wattage ratings.
- Keep electrical cord away from heat sources, sharp edges, or pinch points.
- Never operate if the cord, plug, or motor housing is damaged.
- Do not use outdoors, near water, or in damp conditions.
- Disconnect from power when cleaning, moving, folding, or when not in use.

Battery Usage

- Batteries are to be installed or replaced by adult only.
- Do not use rechargeable batteries. Do not mix different battery types. Do not mix old and new batteries. Do not mix alkaline, standard (Carbon Zinc), or rechargeable (Nickel-Cadmium) batteries.
- Remove batteries when product is not in use.
- Remove exhausted batteries from product and dispose of in accordance with the manufacturer's recommendation.
- Do not attempt to recharge non-rechargeable batteries.

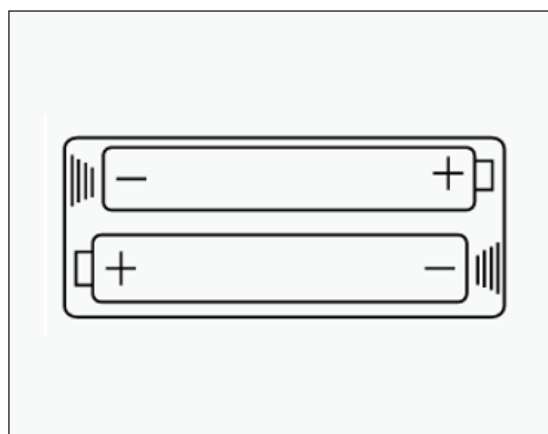

- Batteries are to be inserted with correct polarity.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire, batteries may explode or leak.

Maintenance

- Unplug from power when performing any maintenance or repair.
- Wipe playing surface with a dry microfiber cloth after each use.
- Clean with mild detergent if necessary—avoid abrasive cleaners.
- Periodically check and re-tighten bolts and screws.
- Lubricate folding joints lightly with silicone spray every 6 months.










Storage

- Store folded in a dry indoor area.
- Avoid direct sunlight or high humidity, which may warp the surface.
- Do not place heavy items on top of the folded table.

Troubleshooting

Problem	Possible Cause	Solution
Uneven Play	Table not level	Adjust leg levellers; reposition table
Wobbly Table	Loose screws or bolts	Re-tighten all fasteners
Folding Difficult	Hinges stiff or obstructed	Clean hinges, apply silicone spray
Puck Not Gliding	Surface dusty or sticky	• Clean playing surface with dry cloth • Check and clean any dust or debris stuck in the air holes
	Worn puck	Replace puck

    II. PARTS LIST

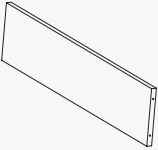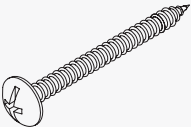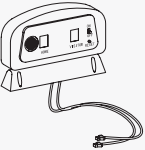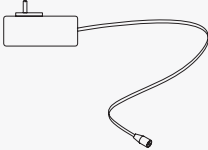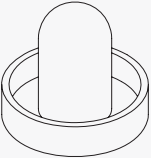
1  1pc.	2  2pcs.	3  2pcs.	4  2pcs.
5  2pcs.	6  1pc.	7  2pcs.	8  5/16" x 1-3/4" 4pcs.
9  5/16" x 2" 4pcs.	10  5/16" x 2 1/2" 2pcs.	11  5/16" x 1 1/2" 6pcs.	12  5/16" 12pcs.
13  3.5 x 45mm 12pcs.	14  1pc.	15  3.5 x 20mm 4pcs.	 1pc.
 2pcs.	 2pcs.	 1pc.	

III. ASSEMBLY INSTRUCTIONS

STEP 1. Installing Legs

1. Attach 2x Legs (4) to Support beam (5) using 4x screws 3.5x45mm (13). (Fig.1)
2. Attach 2x End Legs (5) to Support beam (5) using 4x screws 3.5x45mm (13). (Fig.2)
3. Attach 2x Base leg (3) to Cross beam (6) using 4x screws 3.5x45mm (13).
4. Secure tightly with a screwdriver. Ensure panels are flush. (Fig.3)

HARDWARE:

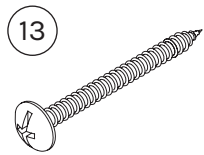

3.5 x 45mm
12pcs.

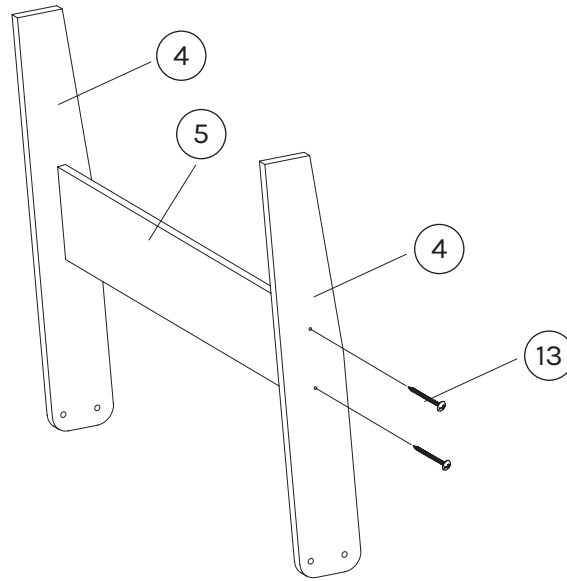


FIG 1

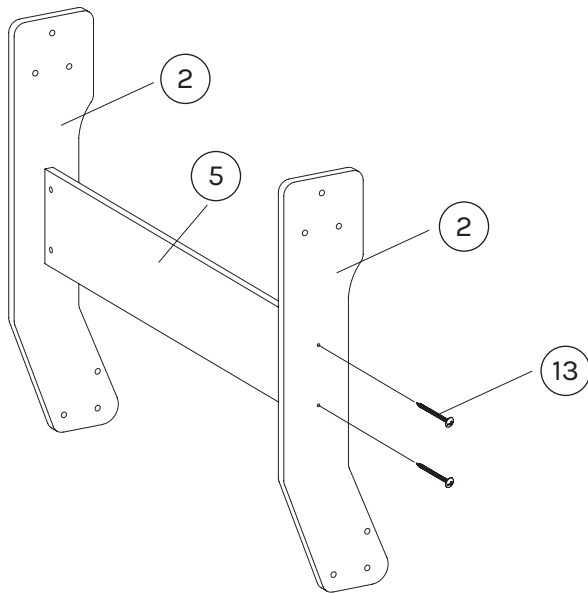


FIG 2

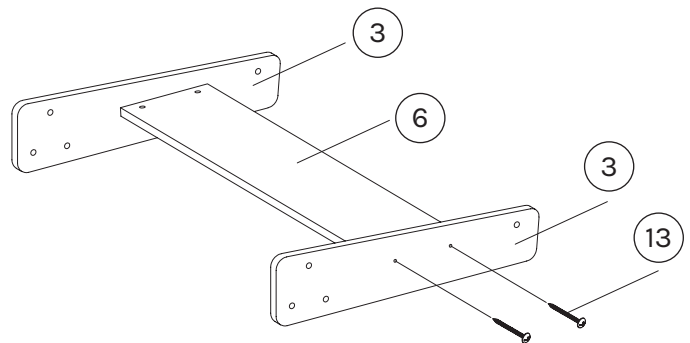


FIG 3

STEP 2. Installing Wheels

- 1. Secure 2x Wheels (7) to the base leg as pictured, using 2x Washer 5/16" (12) and 2x Bolt 5/16"x2-1/2"(10).

HARDWARE:

12




Washer 5/16"
2pcs.

10



Bolt 5/16" x 2 1/2"
2pcs.

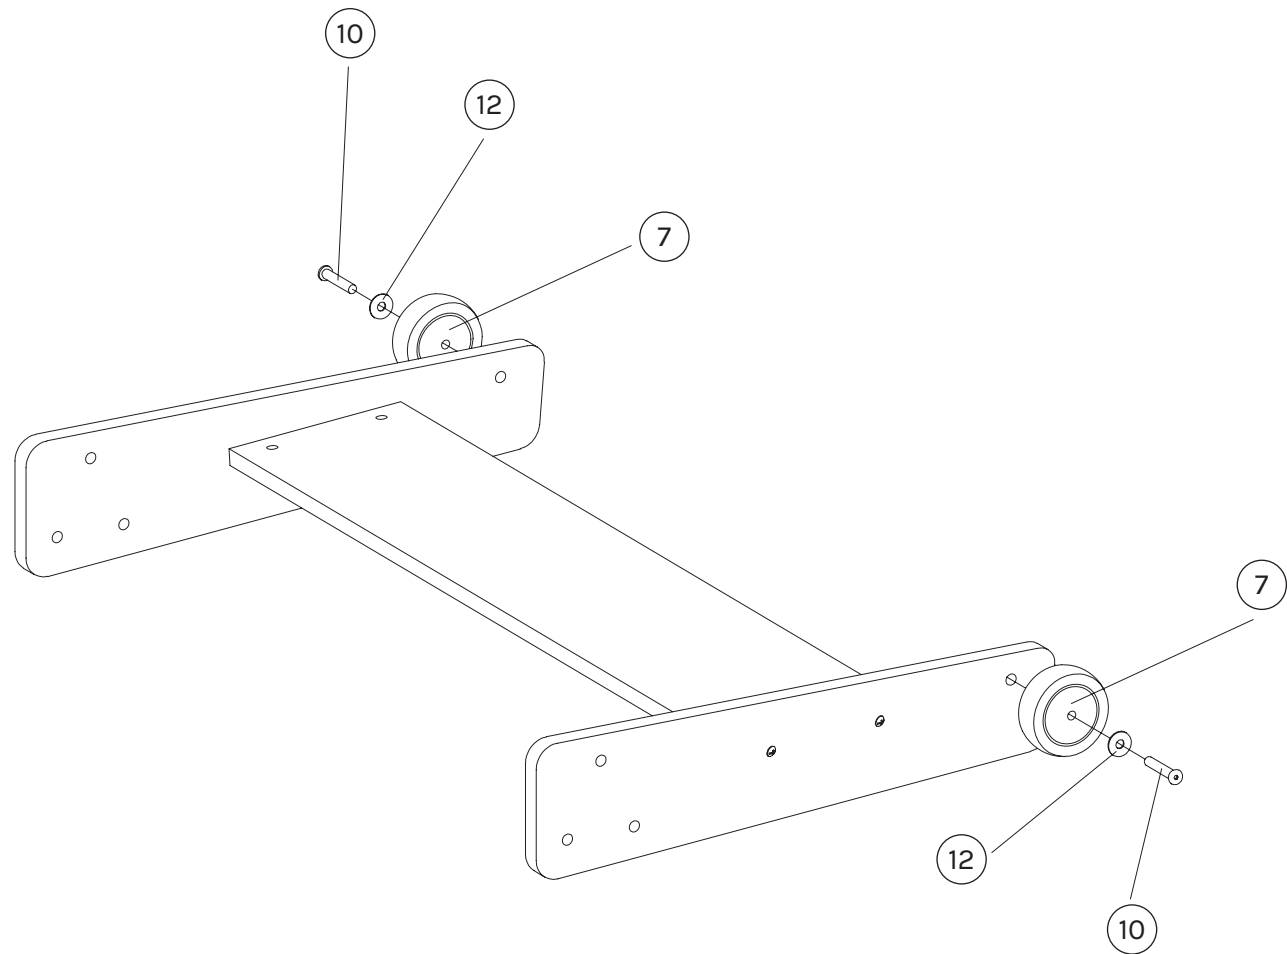

STEP 3. Installing Legs to Frame

- 1. Place the main Tabletop (1) upside down on a clean, flat, and soft surface to avoid scratches.
- 2. Secure the assembled legs from step 1 to the frame using 8x Washer 5/16" (12), 4x Bolt 5/16x1-3/4" (8) and 4x Knobs 5/16"x2" (4).

HARDWARE:

12



 
Washer 5/16"
8pcs.

8




Bolt 5/16" x 1-3/4"
4pcs.

9



Knobs 5/16" x 2"
4pcs.

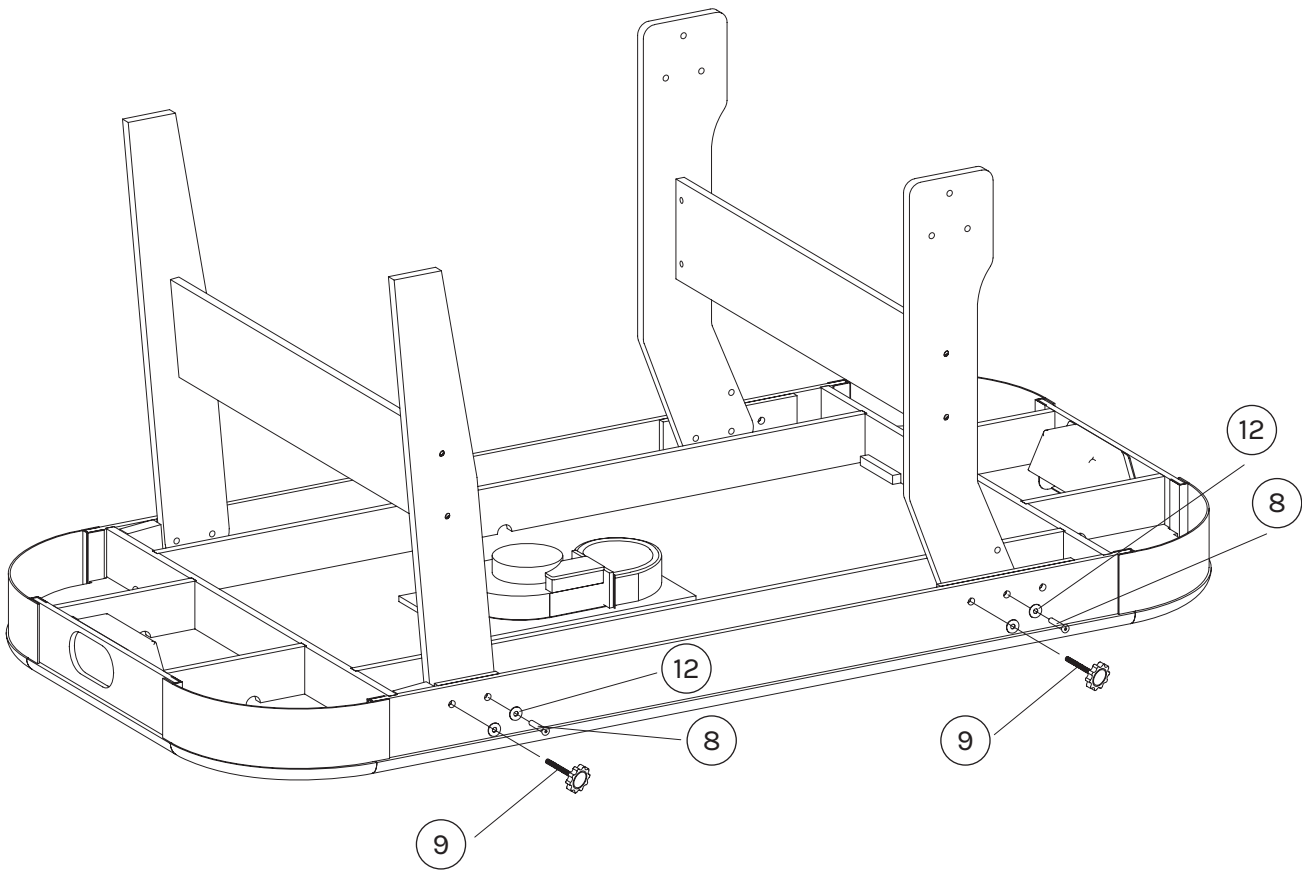

STEP 4. Installing Base Leg

- 1. Install the Base leg to the End leg using 6x Washer 5/16" (12) and 6x Bolt 5/16"x1-1/2" (11).

HARDWARE:

12




Washer 5/16"
6pcs.

11



Bolt 5/16" x 1 1/2"
6pcs.

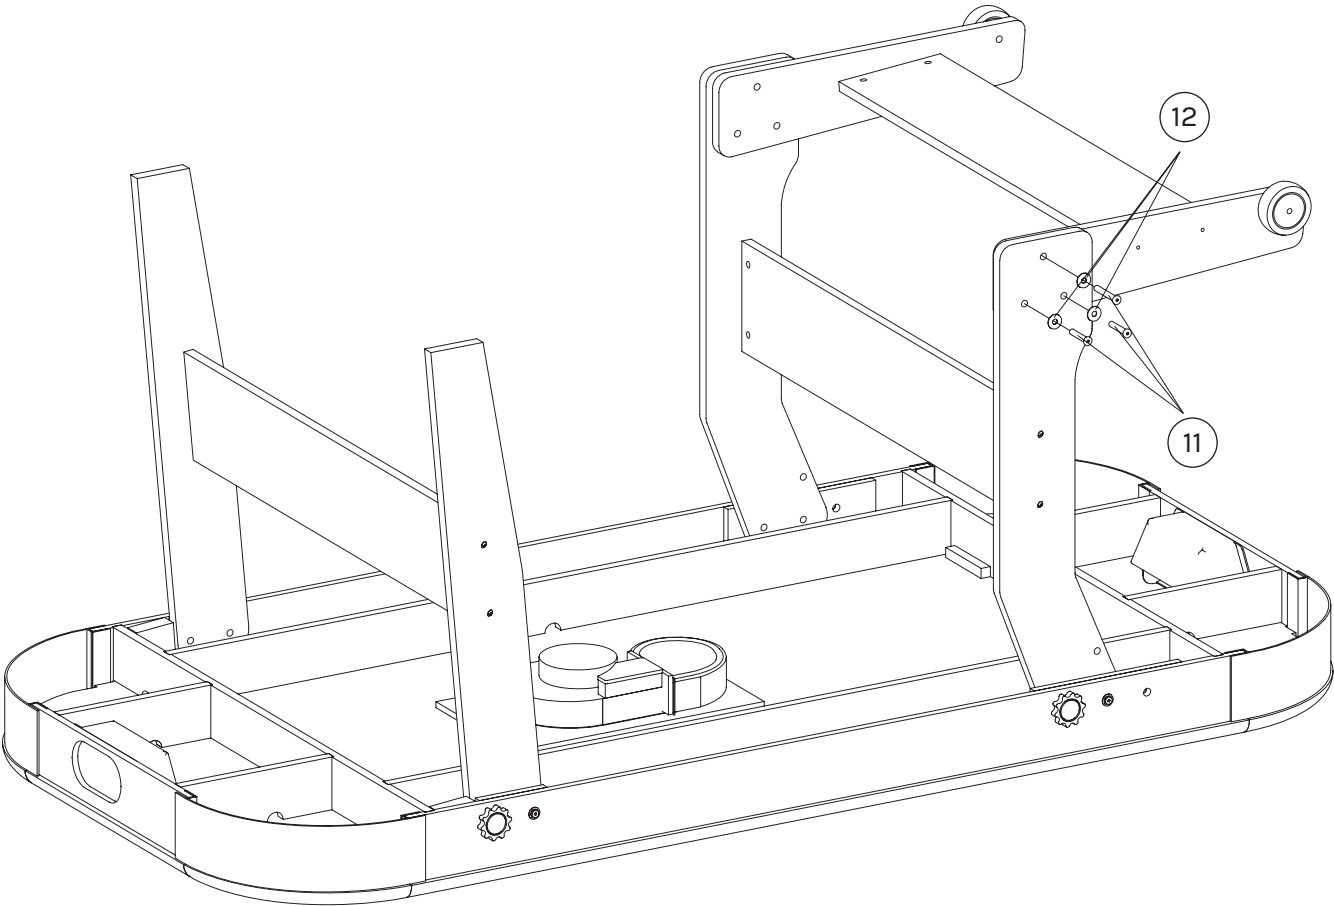

STEP 5. Install Score Panel

1. With assistance turn the table over.
2. Mount the Score panel (14) to the tabletop using 4x screws 3.5x20 (15).
3. Secure the cables from the score panels to both sides of the goal box cables. (Fig.4)
4. Plug the Power adapter to the hockey motor under the table and plug to a grounded wall socket.
Turn on the scoring panel from the on/off switch.



NOTE: Score panel is battery powered.

HARDWARE:

15



Screws 3.5 x 20mm
4pcs.

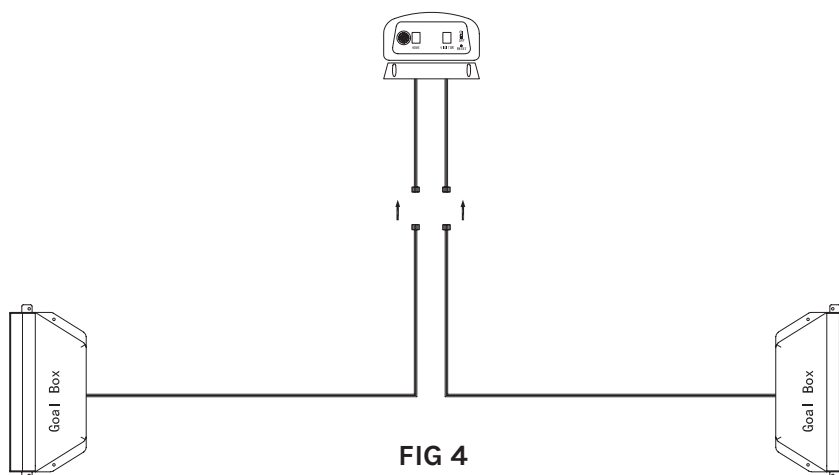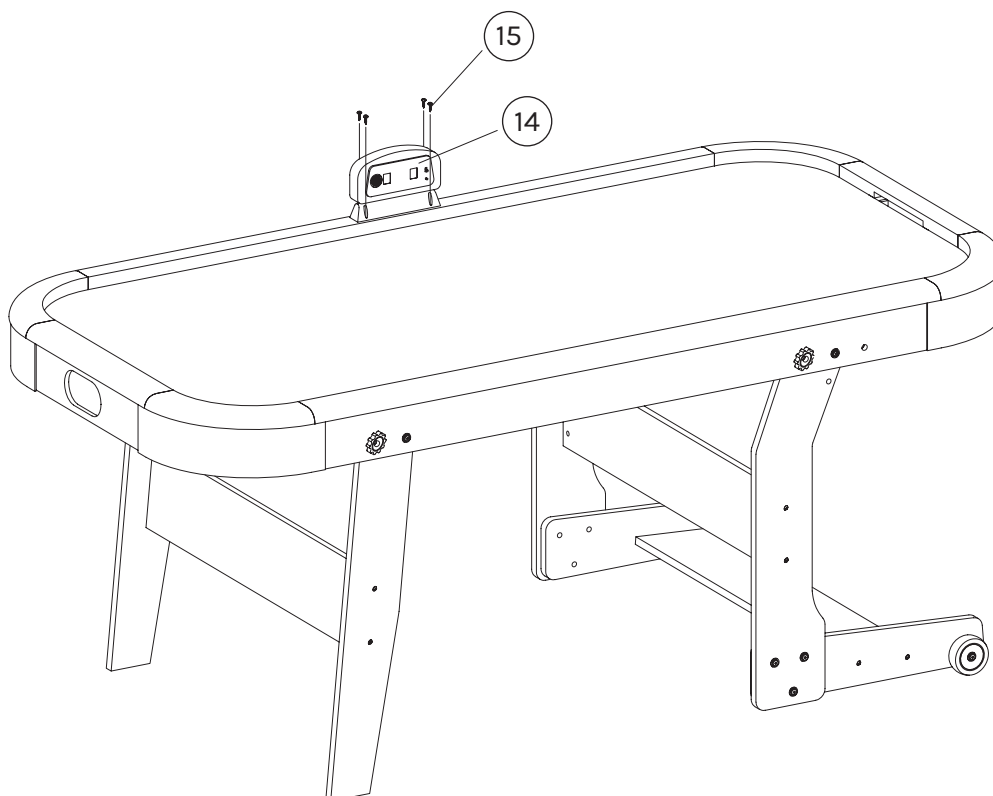

Score Panel Buttons

- **On/Off:** Turns on and off for the scoring panel.
- **Reset:** Press down and hold to reset the score.
- **Battery:** 4x AA Battery required (Not included with product)

IV. FOLDING INSTRUCTIONS


IMPORTANT: UNPLUG THE POWER CORD BEFORE FOLDING OR MOVING THE TABLE.

TO FOLD

1. To fold the table, remove the knob (9) from the leg and end leg
2. Fold the table and secure knob to the end leg as pictured. The other knob can be stored separately or placed back into the original slot on the leg.

TO UNFOLD

1. To unfold the table, remove the knob from end leg.
2. Lower the legs on the other end until it touches the ground, then re-attach the knob (9) to the original position (see step 3).

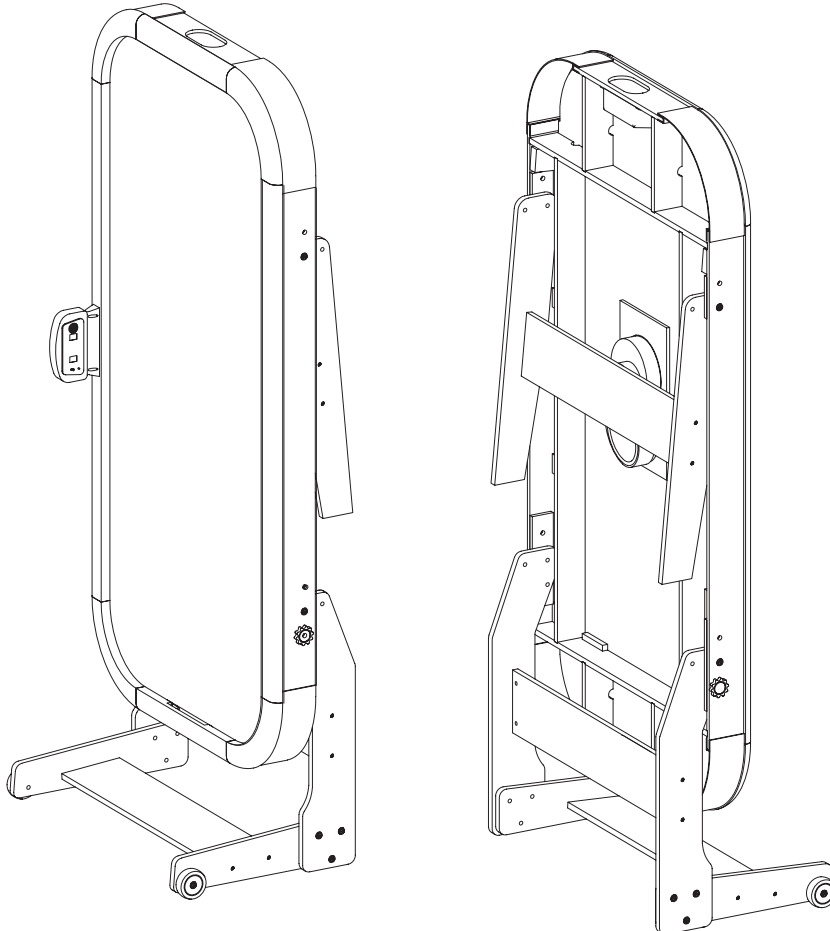

V. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au.

Please visit our website to view our full warranty terms and conditions:
<http://www.lifespanfitness.com.au/warranty-repairs>

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed.

If you have purchased this product from the Official Lifespan Fitness website, please visit <https://lifespanfitness.com.au/warranty-form>

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit <https://lifespanfitness.com.au/warranty-form> and fill in our Repair/Service Request Form or Parts Purchase Form.

Scan this QR code with your device to go to lifespanfitness.com.au/warranty-form



ACTIVEGO

WWW.ACTIVEGO.COM.AU