


USER MANUAL

LK384 Pippa Toy Box with Seating Bench

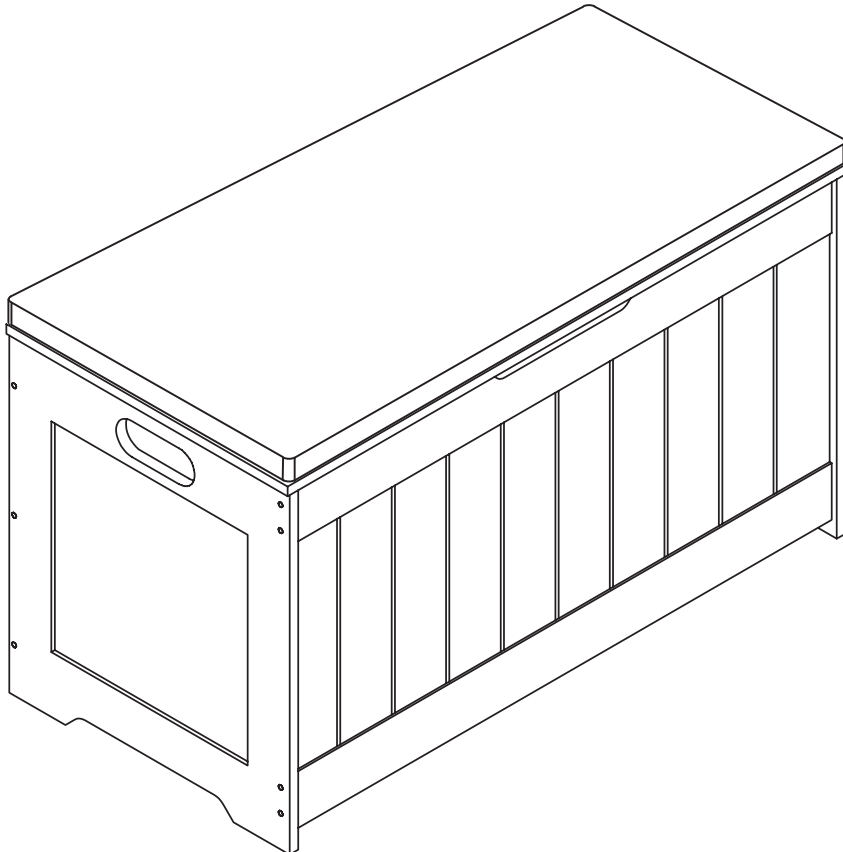

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. SAFETY INFORMATION	3
II. BEFORE ASSEMBLY	4
III. ASSEMBLY INSTRUCTIONS	5
IV. SAFE USE AND MAINTENANCE	10
V. WARRANTY	11
VI. SECURITY AND SUPPORT	12

I. SAFETY INFORMATION

This product is intended for the indoor storage of children's toys and lightweight household items. Correct assembly, adult supervision and regular maintenance are essential for safe use.



WARNING – Serious Injury Can Occur

Failure to follow these instructions may result in entrapment, crushing, pinching, tipping or other injury.

- Adult assembly is required. Keep children and pets away until assembly is complete and all packaging and small parts have been removed.
- Small hardware may present a choking hazard. Keep all fittings, tools and packaging out of reach of children.
- Never allow a child to climb into, hide inside or become enclosed in the toy box. Entrapment and suffocation can occur.
- Never allow children to climb, stand, jump or play on the lid, side panels or inside the storage compartment.
- Keep hands and fingers clear of the lid, hinges and closing edges. Close the lid slowly and under control.
- Do not use the toy box unless both hinges and the lid support are correctly installed, undamaged and operating smoothly.
- The lid support is a safety aid only. It does not replace responsible adult supervision.
- Place the toy box on a firm, flat and level indoor surface. Do not use it on stairs, uneven floors or elevated surfaces.
- Do not overload the toy box or store excessively heavy, sharp, hot, wet or hazardous items inside.
- Do not modify the product, remove safety hardware or substitute unsuitable fittings.
- Stop use immediately if any panel, hinge, screw, lid support or other component is loose, cracked, bent, missing or damaged.
- Keep the product away from open flames, heaters, direct heat sources and excessive moisture.



SUPERVISION

Young children must be supervised whenever the toy box is in use. Do not allow play with the lid or hinges.

II. BEFORE ASSEMBLY

Unpack the product carefully and compare all components with the parts and hardware diagram before beginning. Retain the packaging until assembly and the final safety check are complete.

Item	Requirement
Included tool	Allen key (G).
Additional tool required	Phillips-head screwdriver, not included.
Assembly surface	A clean, flat, soft surface such as carpet or flattened cardboard.
Power tools	Do not use power tools. They may overtighten fittings and damage the product.

Preparation Checklist


- Check that all panels and fittings are present and free from damage.
- Identify the finished faces and the orientation of grooves before fastening components.
- Insert dowels straight and avoid striking them with excessive force.
- Leave main bolts slightly loose until the panels are aligned, then tighten evenly.
- Tighten fittings securely by hand, but do not overtighten.
- Do not assemble or use the product if any part is missing or damaged.



Assembly Tip

Work on a soft surface to prevent scratches. Keep hardware grouped by letter and quantity for each step.

III. ASSEMBLY INSTRUCTIONS

PARTS LIST

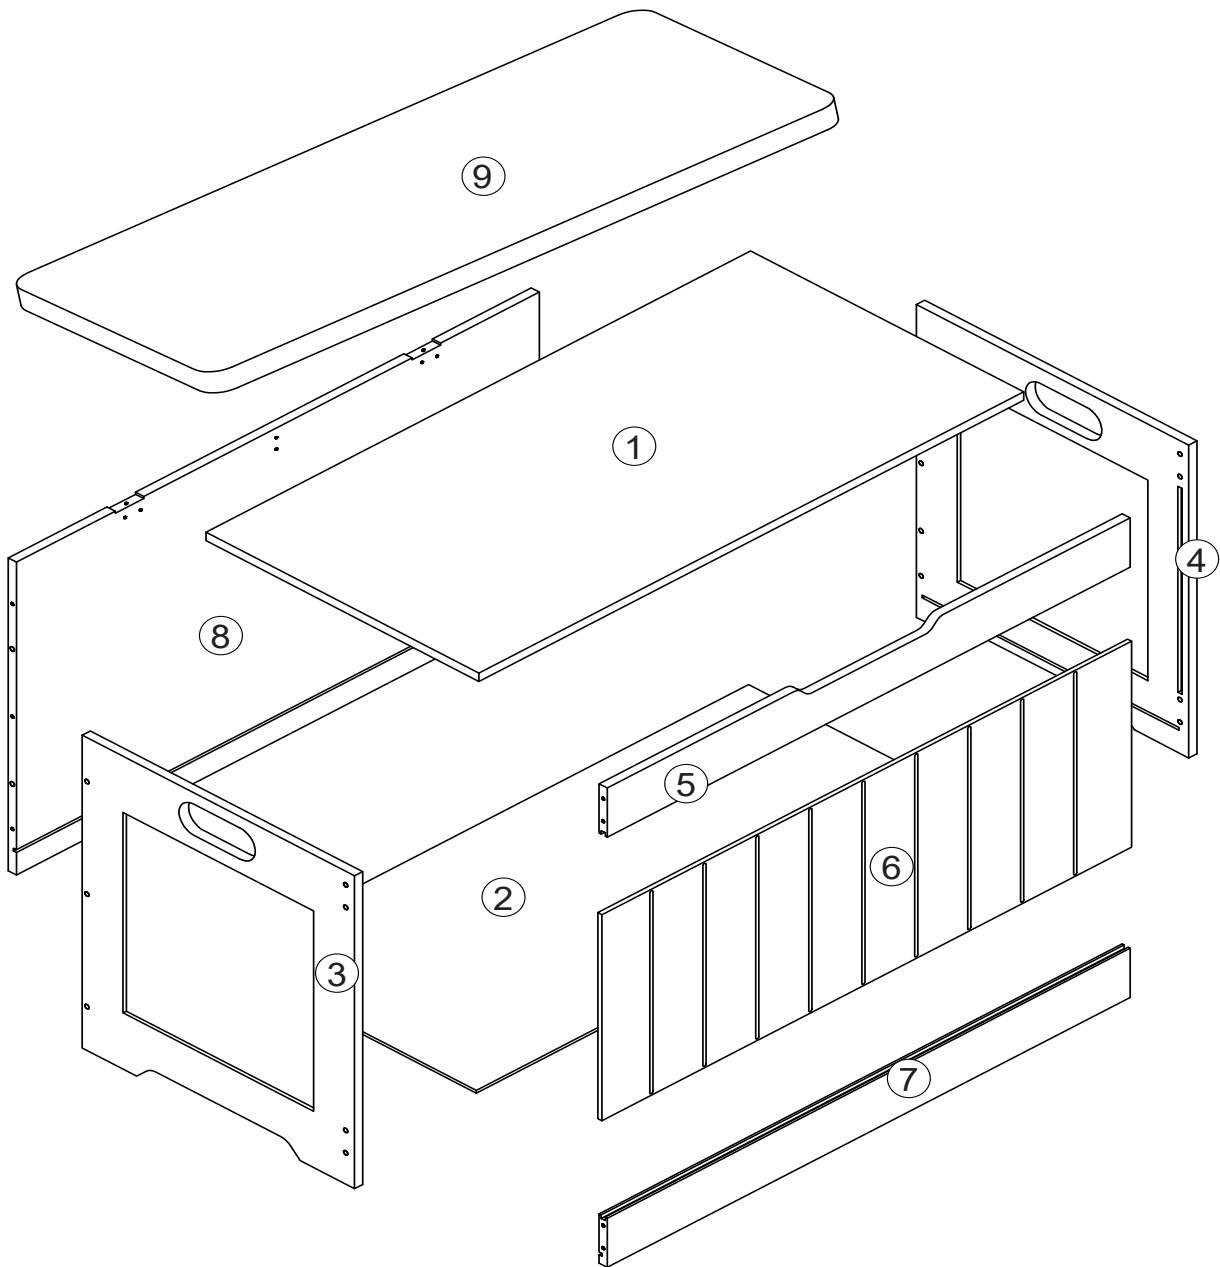


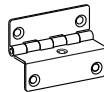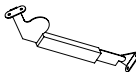A	x14	B	x4	C	x2	D	x1	E	x14
									
Screw Size: 5 x 40		Screw Size: 6 x 30						Screw Size: 3.5x 12	
G	x1								
									

1


Note:

- * Check that all grooves face inward so the base and front panel can slide into position.
- * Keep the bolts slightly loose until the base and front panel have been installed and aligned.

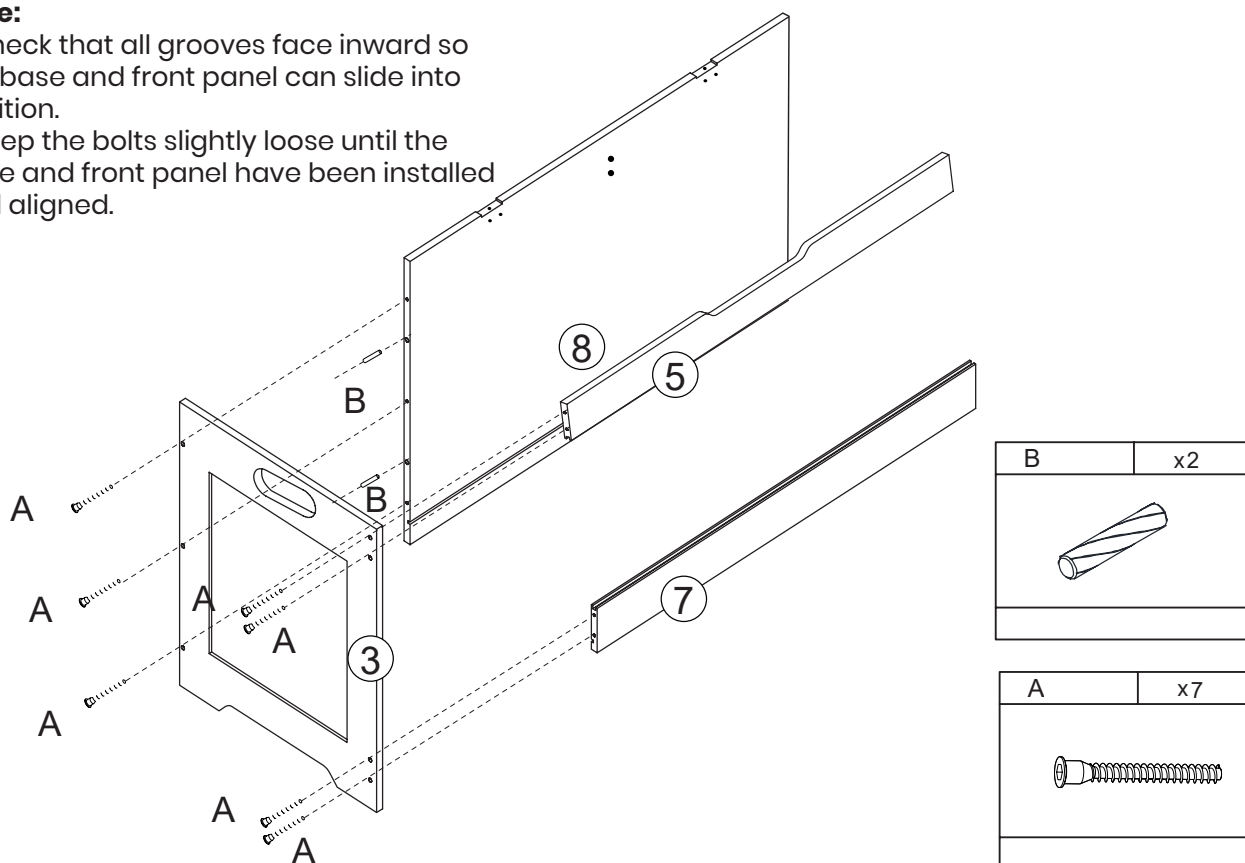


2

Tip: Support the frame while sliding the panel to prevent twisting or damage.

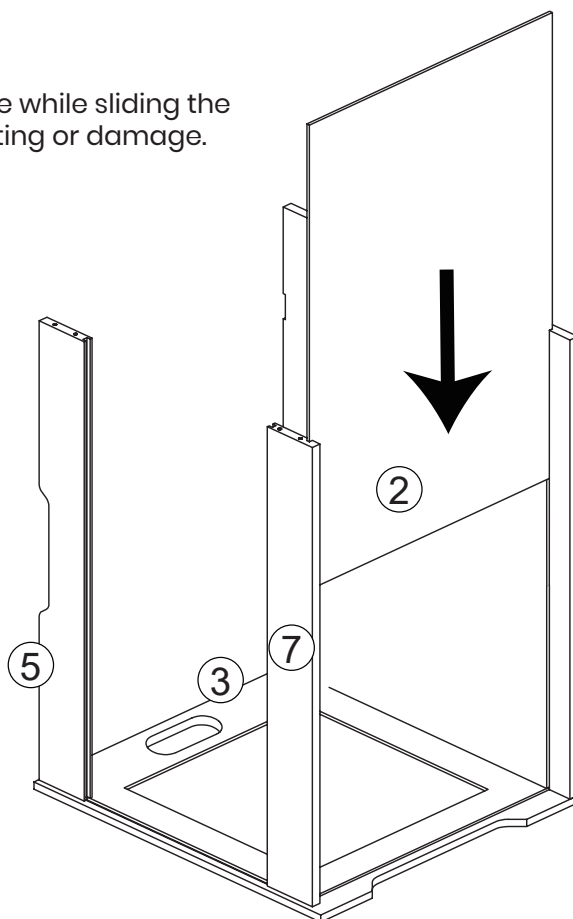


3

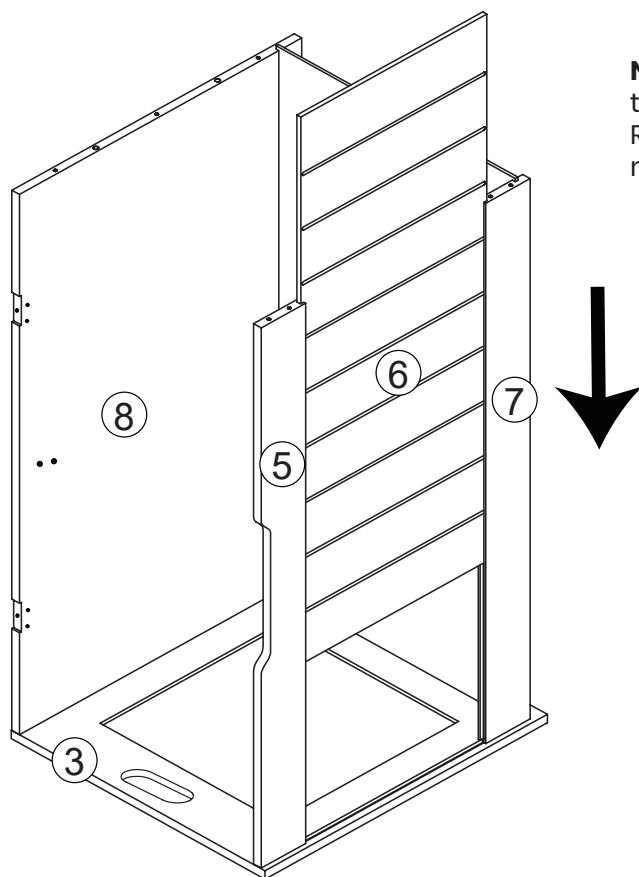

Note: Do not hammer the panel into place. Realign the frame if movement is restricted.

4

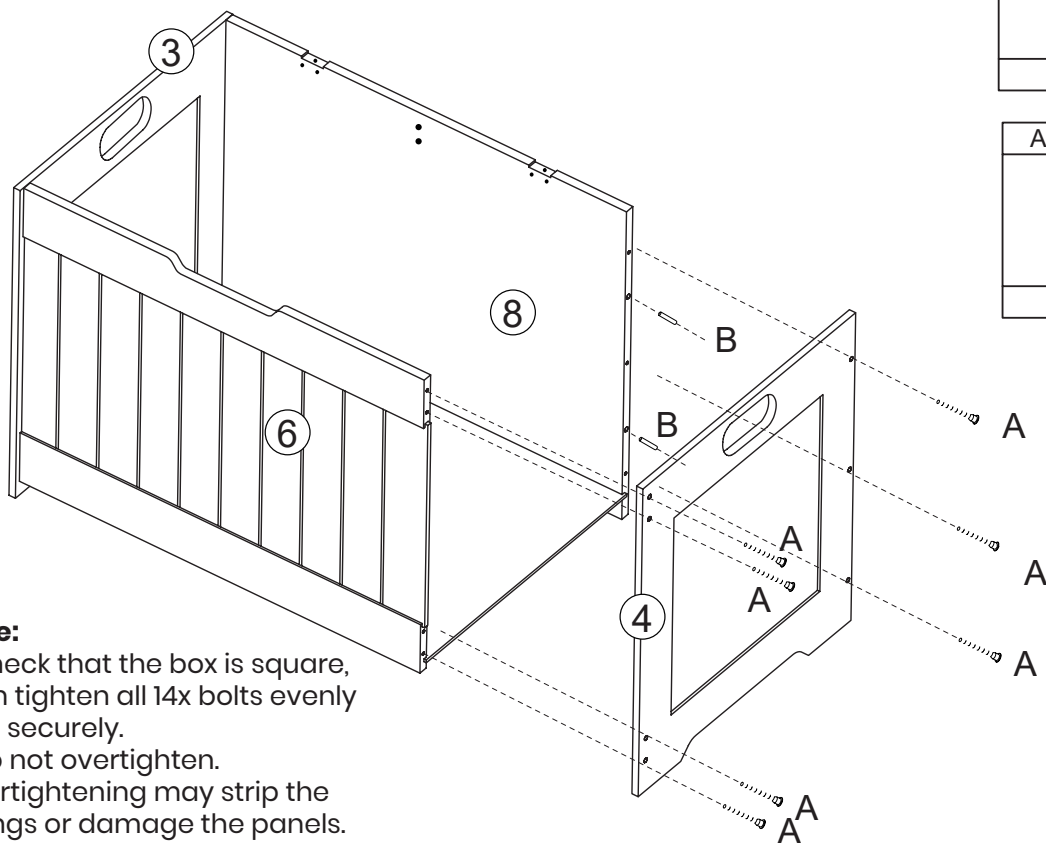

Note:

- * Check that the box is square, then tighten all 14x bolts evenly and securely.
- * Do not overtighten. Overtightening may strip the fittings or damage the panels.

B;	x2
	
	



A:	x7
	
	

5


Note:

* Incorrect hinge orientation may prevent the lid from opening and closing correctly.

* Fully tighten only when the other side of the hinge is attached to the lid and movement is smooth.

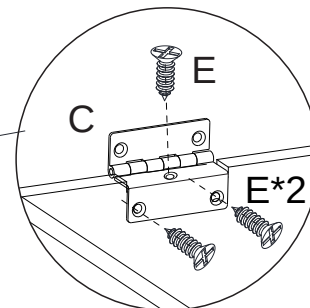
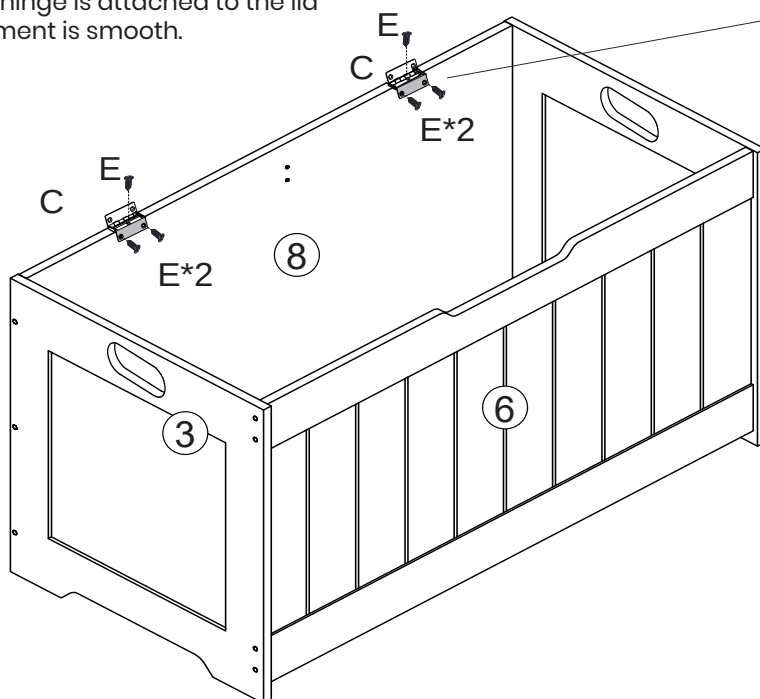



E	x6
	

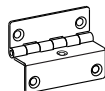C	x2
	

6

Note: Keep the lid supported until both hinges and the lid support are fully fastened. Never place fingers in the hinge area.

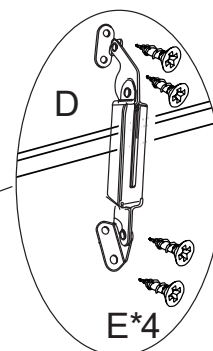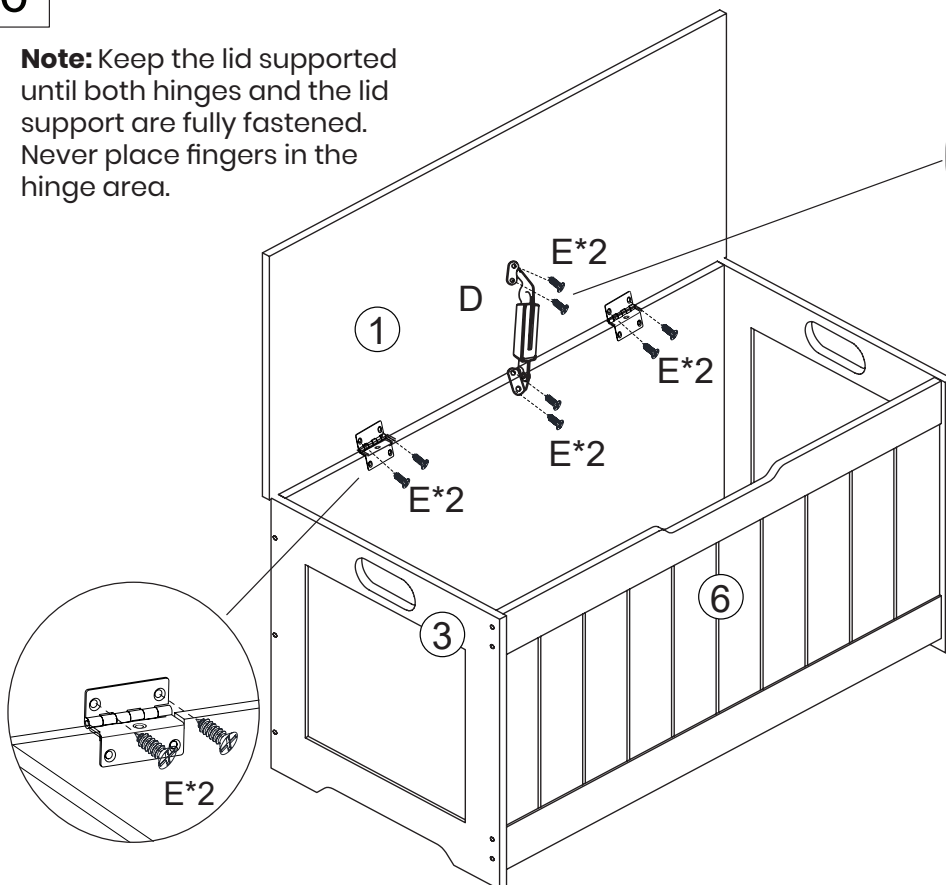


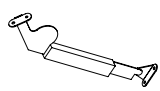D	x1
	

E	x8
	

Note:

- * Clean the surface of the lid before attaching the adhesive pad on cushion (9).
- * Check all screws are secured and hinges are moving smoothly.

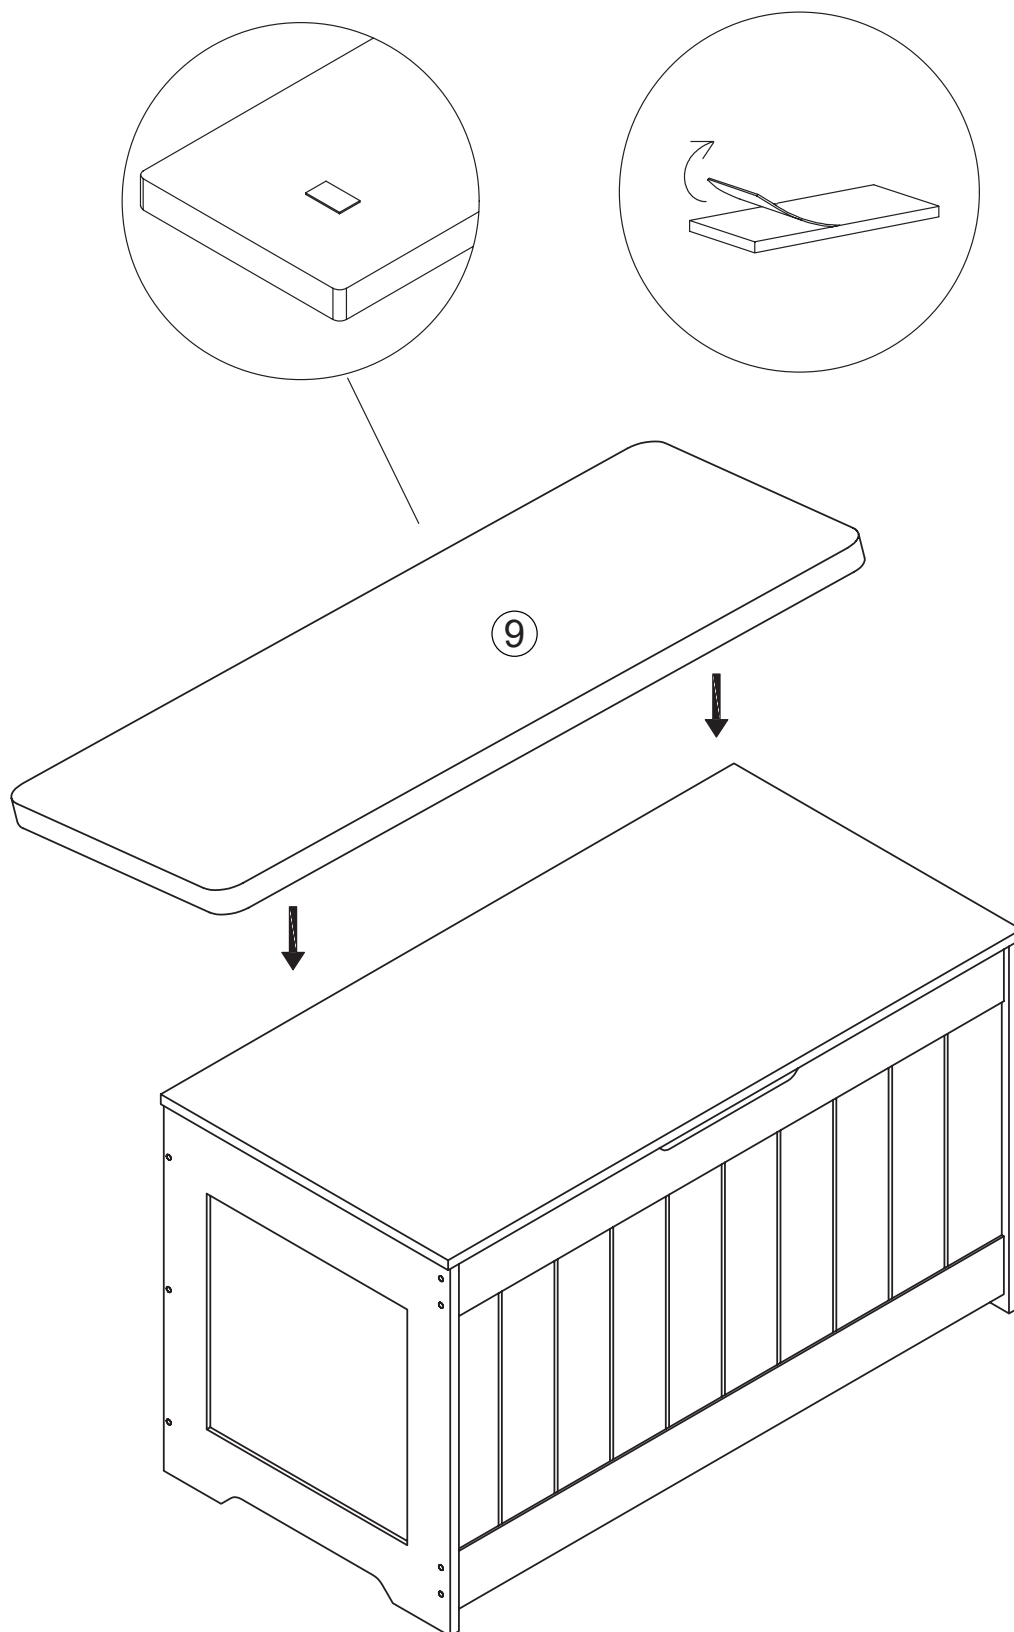

IV. SAFE USE AND MAINTENANCE

Storage

- Use the side hand openings only when moving the empty toy box. Use two adults and lift – do not drag.
- Store heavier items at the bottom and distribute contents evenly.
- Keep the lid fully open or fully closed during loading and unloading. Do not leave it partly open.
- Prevent children from playing with the lid, hinges or lid support, and never allow a child to enter the storage compartment.
- Do not use the lid or panels as a step, climbing surface or play platform.

Cleaning and Maintenance

- Check that the lid, hinges and lid support operate smoothly. Stop using it if movement is loose, sudden or uneven.
- Check all bolts and screws. Tighten loose fittings by hand without overtightening.
- Wipe timber and paint surfaces with soft, slightly damp cloth. Use mild soapy water only, then dry immediately.
- Cushion: Spot-clean with a damp cloth. Do not saturate the cushion or use bleach or solvents.



DO NOT USE

Abrasive cleaners, scouring pads, bleach, solvents, furniture polish containing silicone, or excessive water. These may damage the finish, hardware or cushion.

Troubleshooting

Issue	Action
Lid drops, will not stay controlled or feels loose	Stop use immediately. Check the lid support and hinge screws. Replace damaged hardware before further use.
Toy box rocks or panels are misaligned	Place it on a level floor and check all bolts. Loosen slightly, square the frame, then retighten evenly.
Lid rubs or binds	Check hinge alignment and confirm the frame is square. Do not force the lid.
Cracks, splinters or damaged fittings	Stop use and replace or repair the affected component before allowing access.
Long-term storage	Empty and clean the toy box, allow it to dry, and store indoors in a cool, dry location away from direct sunlight and moisture.

V. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Please email us at **support@lifespankids.com.au** for all warranty or support issues.

For all warranty or support related enquiries, please lodge a support ticket first by sending us an email.
support@lifespankids.com.au.

VI. SECURITY SUPPORT INFORMATION

Reporting

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

Device Support Period

This product will receive security updates for a minimum of 12 months from the date of purchase.

