


USER MANUAL

LK386 Bailey Rotating Bookshelf

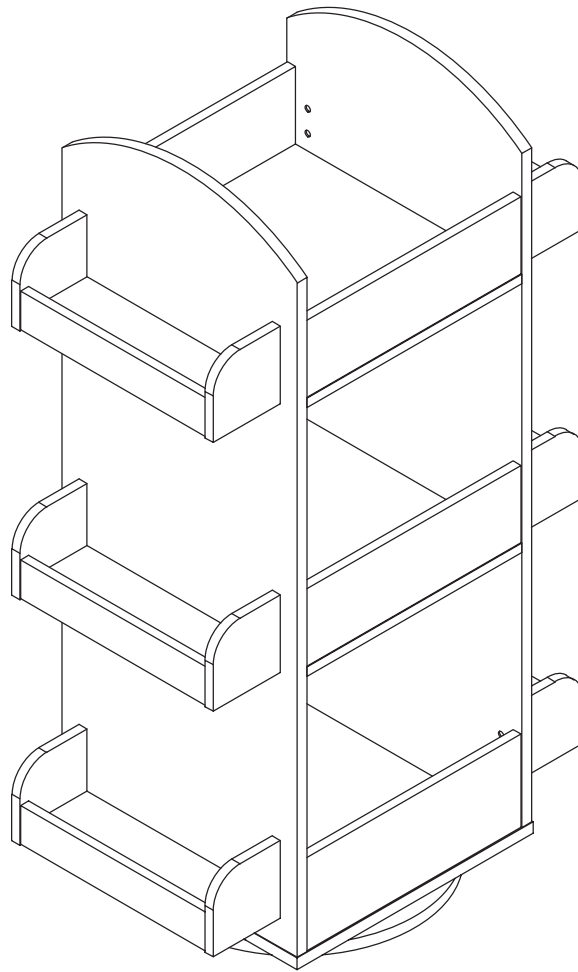

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. SAFETY INFORMATION	3
II. BEFORE ASSEMBLY	4
III. ASSEMBLY INSTRUCTIONS	5
IV. SAFE USE AND MAINTENANCE	13
V. STORAGE AND TROUBLESHOOTING	14
VI. WARRANTY	15
VII. SECURITY SUPPORT INFORMATION	16

I. SAFETY INFORMATION



WARNING – Serious Injury Can Occur

This rotating bookshelf must be assembled by an adult and placed on a firm, flat and level indoor floor. Never allow children to climb, sit, stand, hang, spin or ride on the unit. Keep hands and feet clear of the rotating base.

General Safety

- Adult assembly is required. Keep children and pets away from the assembly area, tools, hardware and packaging.
- Inspect all panels, shelf components, hardware and the swivel plate before assembly. Do not assemble or use the product if any part is missing, cracked, bent, loose or damaged.
- Place the completed bookshelf on a stable, dry and level indoor floor with enough clearance for the shelves to rotate without striking walls, furniture, doors or people.
- This product is furniture, not play equipment. Do not allow climbing, hanging, pulling, rough play or use as a seat, step, ride-on toy or spinning toy.
- Do not place televisions, appliances, glass objects or other heavy or unstable items on the bookshelf.
- Keep the product away from stairs, open windows, heaters, fireplaces, high humidity, water and prolonged direct sunlight.
- Do not modify the panels, swivel plate or structural hardware. Replace damaged components before further use.

Rotating Base and Pinch-Point Safety

- Rotate the bookshelf slowly by hand using the cabinet body. Do not push or spin it with force.
- Keep fingers, feet, loose clothing and nearby objects clear of the swivel plate and the gap beneath the cabinet.
- Do not rotate the unit while a child is leaning on it, climbing it or reaching beneath it.
- Stop use immediately if the base wobbles, scrapes, binds, tilts, becomes loose or no longer rotates smoothly.



SMALL PARTS

Unassembled screws, cam fittings, dowels and washers may present a choking hazard. Keep all hardware and packaging out of reach of children until assembly and the final safety check are complete.

Intended Use

The Bailey Bookshelf is intended for the indoor household storage and display of children's books and lightweight toys. It is not designed for outdoor, commercial or public use, or for supporting a person's body weight.

II. BEFORE ASSEMBLY

What You Will Need	Assembly Tips
- Two adults for safe assembly and positioning - Phillips-head screwdriver - Clean, flat and soft assembly surface - Enough clear floor space to sort all parts	- Identify every component before starting - Do not use power tools - Insert dowels straight and fully - Leave fittings slightly loose until panels align - Tighten securely without overtightening

How to Lock the Cam Fittings

- Step 1:** Screw cam bolt A into the indicated small pre-drilled hole until the shoulder is seated. Keep it straight and do not overtighten.
- Step 2:** Insert cam lock B into the large round hole. Point the arrow or opening toward the hole where cam bolt A will enter.
- Step 3:** Bring the panels fully together so the head of cam bolt A enters cam lock B.
- Step 4:** Turn cam lock B clockwise with a Phillips-head screwdriver until the joint is secure. Stop when resistance is felt.

CAM FITTING CHECK


If a cam lock will not turn, do not force it. Separate the panels and check that the cam opening faces the bolt, the bolt is installed to the correct depth and the panels are fully joined.


Parts and Hardware

Item	Description	Quantity	Item	Description	Quantity
1	Curved side panel	2	10	Lower support panel	2
2	Internal shelf panel	2	A	Cam bolt	12
3	Lower base panel	1	B	Cam lock	12
4	Round rotating base	1	C	Wooden dowel; 6x30mm	48
5	Internal divider panel	4	D	Screw; 4x40mm	36
6	Curved shelf end - right	6	E	Base mounting screw; 4x14mm	8
7	Curved shelf end - left	6	F	Washer	8
8	Shelf back rail	6	G	360-degree swivel plate	1
9	Shelf base panel	6			


III. ASSEMBLY INSTRUCTIONS

 
PARTS LIST

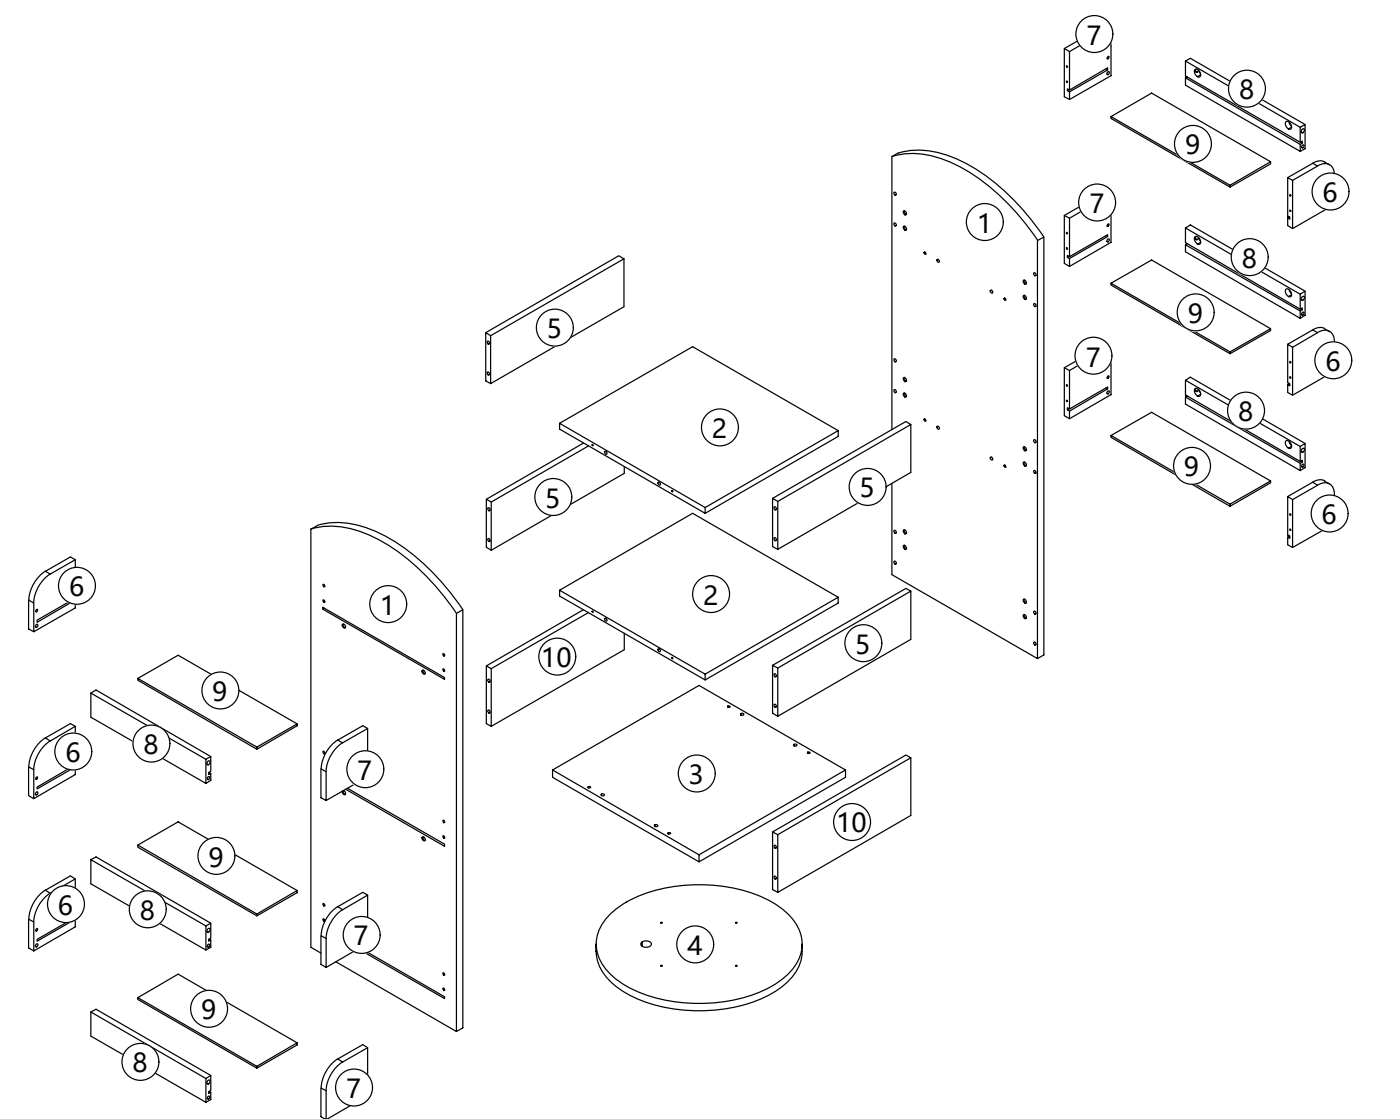

A	x12
	

B	x12
	

 C	x 48
	

 D	x36
	


E	x8
	

F	x8
	

G	x1
	


1

Tip: Keep the internal shelf panel ends flush and each panel square to the side panel before tightening.

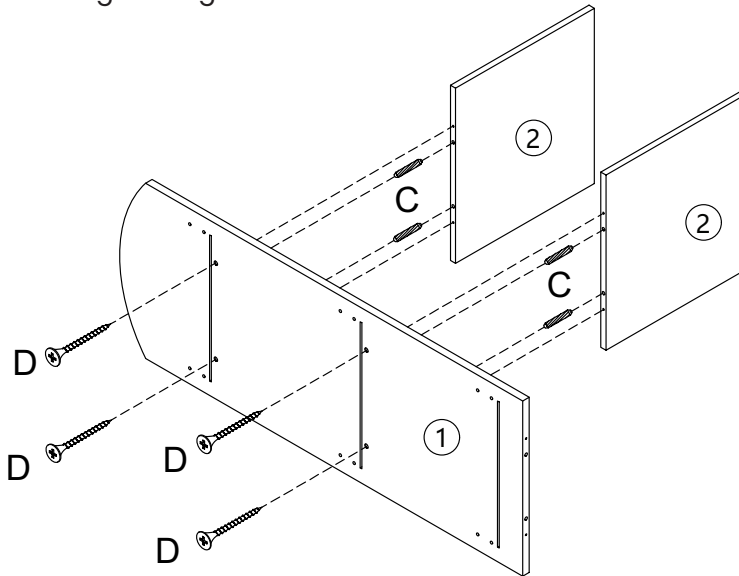

C	x 4
D	x 4


2

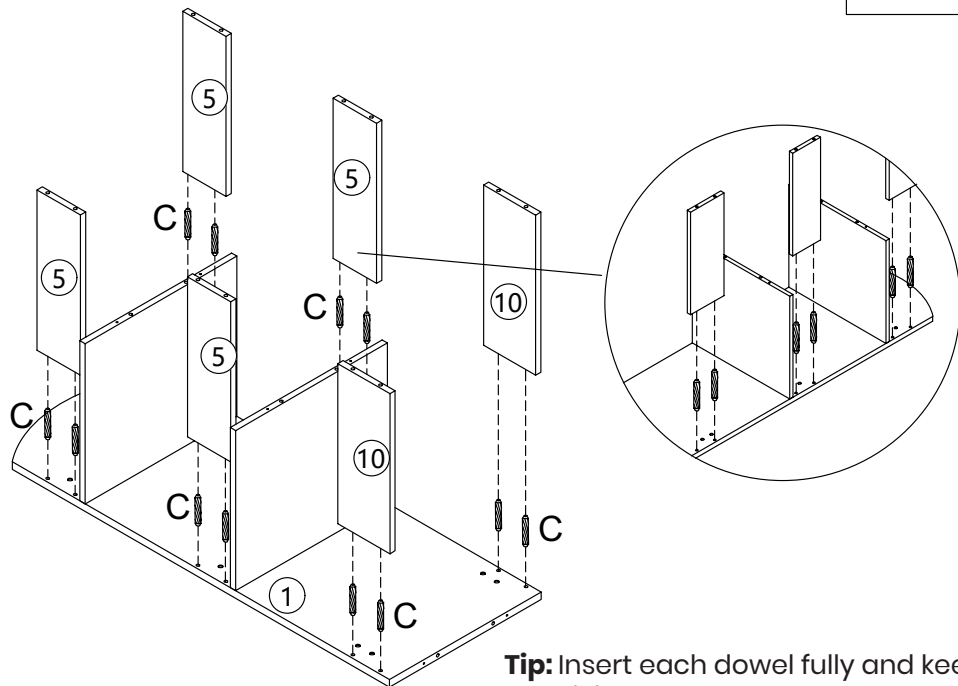

C	x 12

Tip: Insert each dowel fully and keep the divider and support panels upright. Do not force any joint if the holes do not align.


3

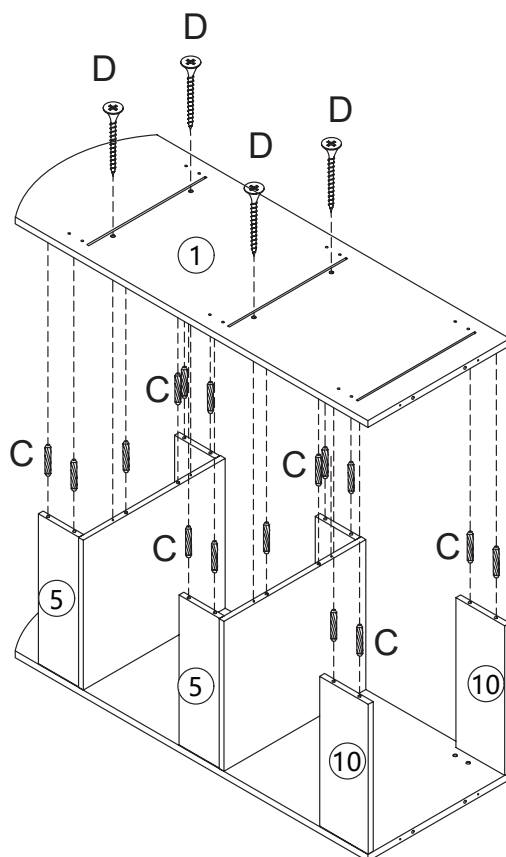

C	x 16
D	x 4

Tip: Support the assembly and align all dowels before lowering the second side panel into place. Do not strike the panel.

4


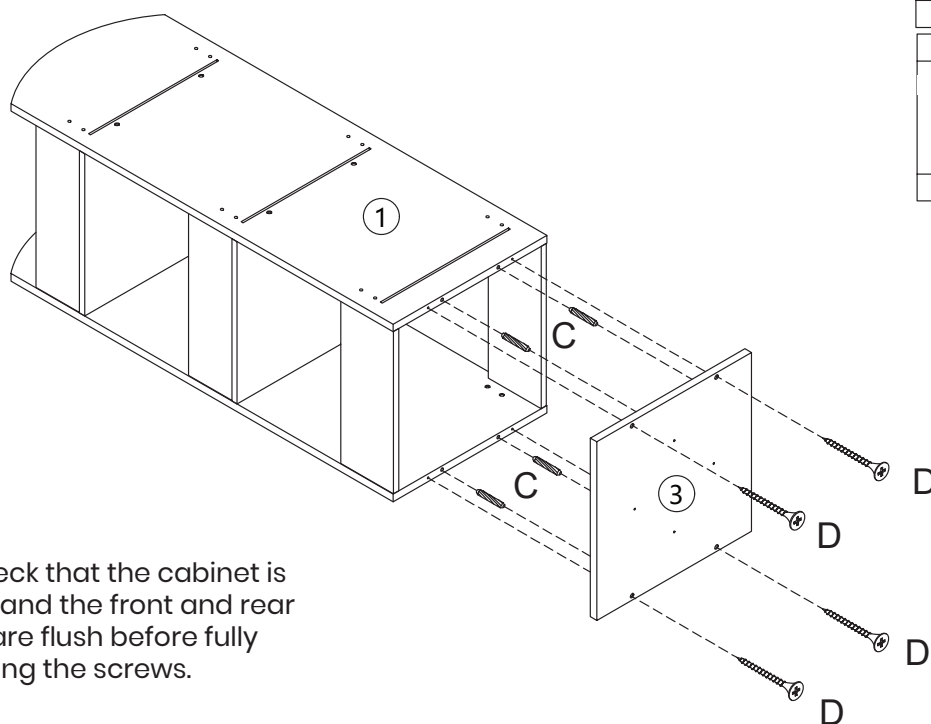


C	x 4
D	x 4

Tip: Check that the cabinet is square and the front and rear edges are flush before fully tightening the screws.

5




X6

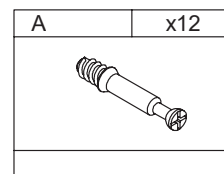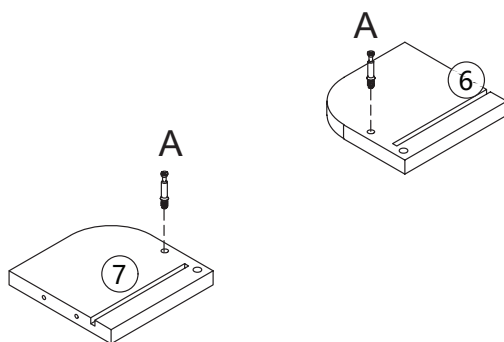

Tip: Repeat for all six left-and-right shelf-end pairs. Install each cam bolt straight until the shoulder is seated; do not overtighten.

6

X6

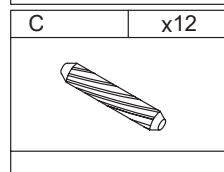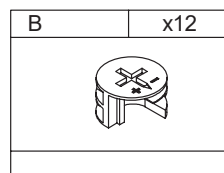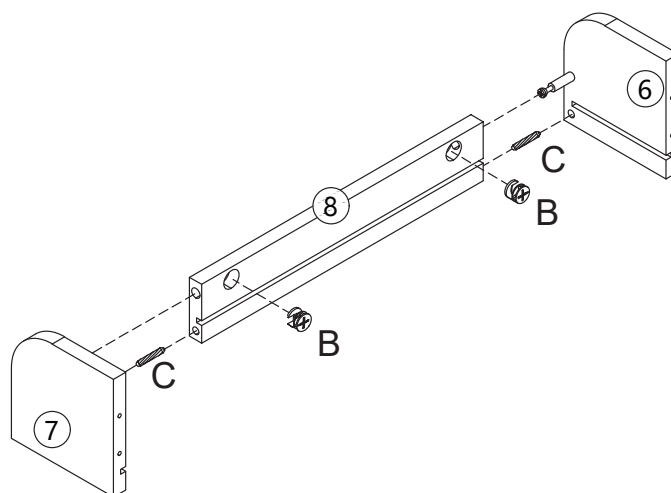


Tip: Point each cam-lock opening toward the cam bolt before joining the panels. Turn the cam clockwise only until the joint is secure.



7

X6

Tip: Keep the finished face of each shelf base facing upward. Do not force the panel; realign the frame if the grooves do not line up.

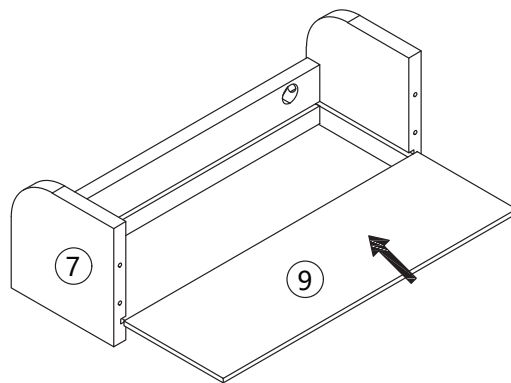


8

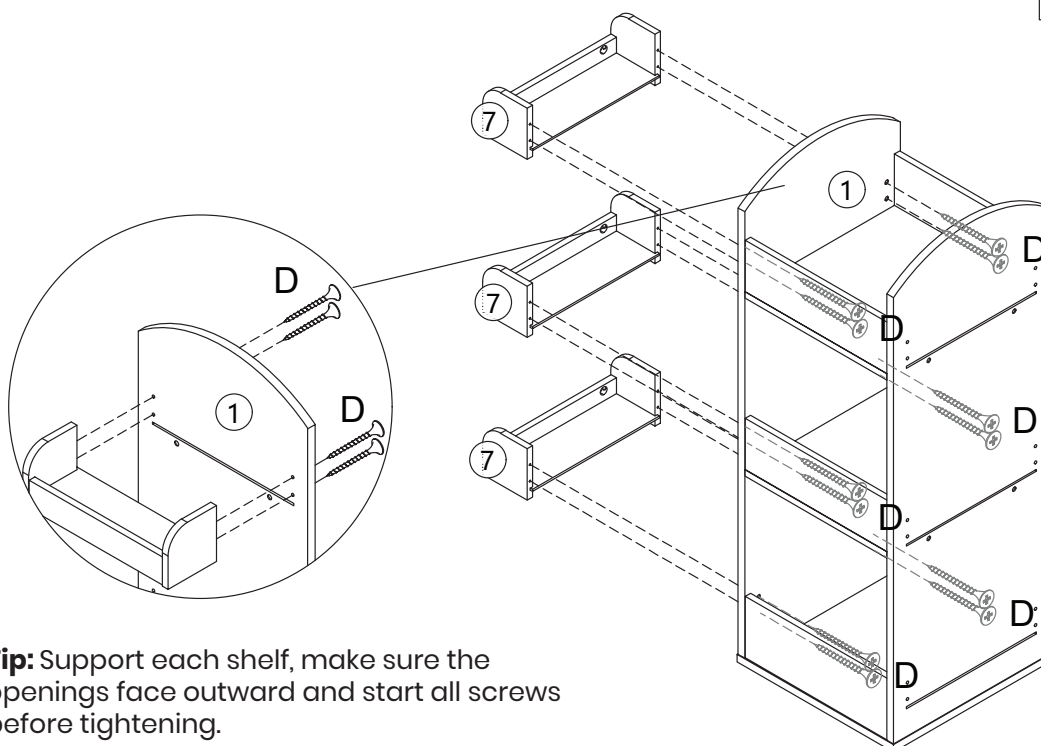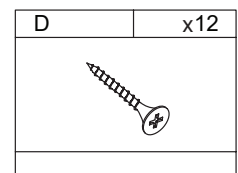

Tip: Support each shelf, make sure the openings face outward and start all screws before tightening.


9

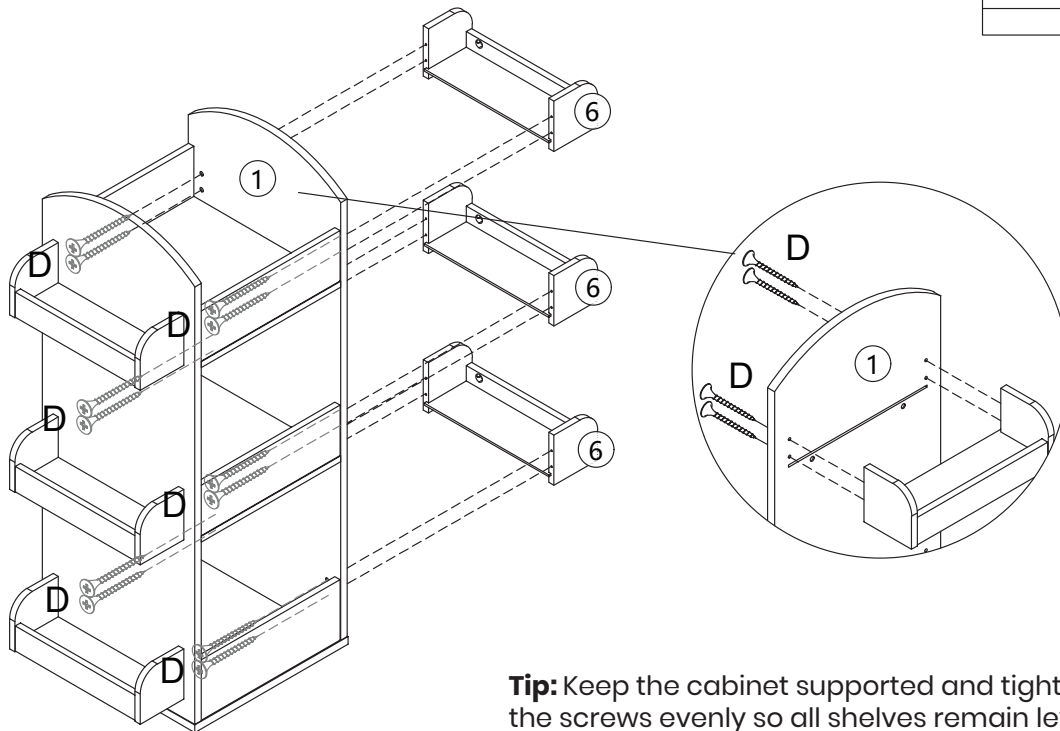

D	x12
	

Tip: Keep the cabinet supported and tighten the screws evenly so all shelves remain level.

10

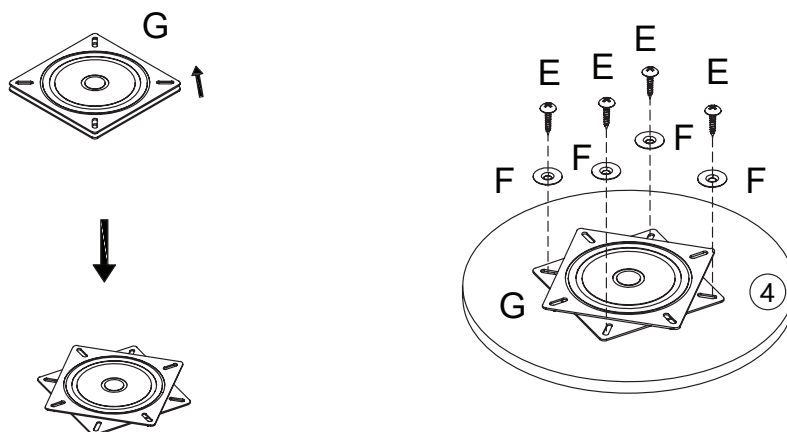


E	x4
	
F	x4
	
G	x1
	

Tip: Rotate the swivel plate to expose each mounting hole. Keep fingers clear and confirm the plate turns freely after tightening.

Tip: Centre the round base before tightening the screws evenly. Do not lift or turn the unit by the shelves.


E	x 4
	
F	x 4
	

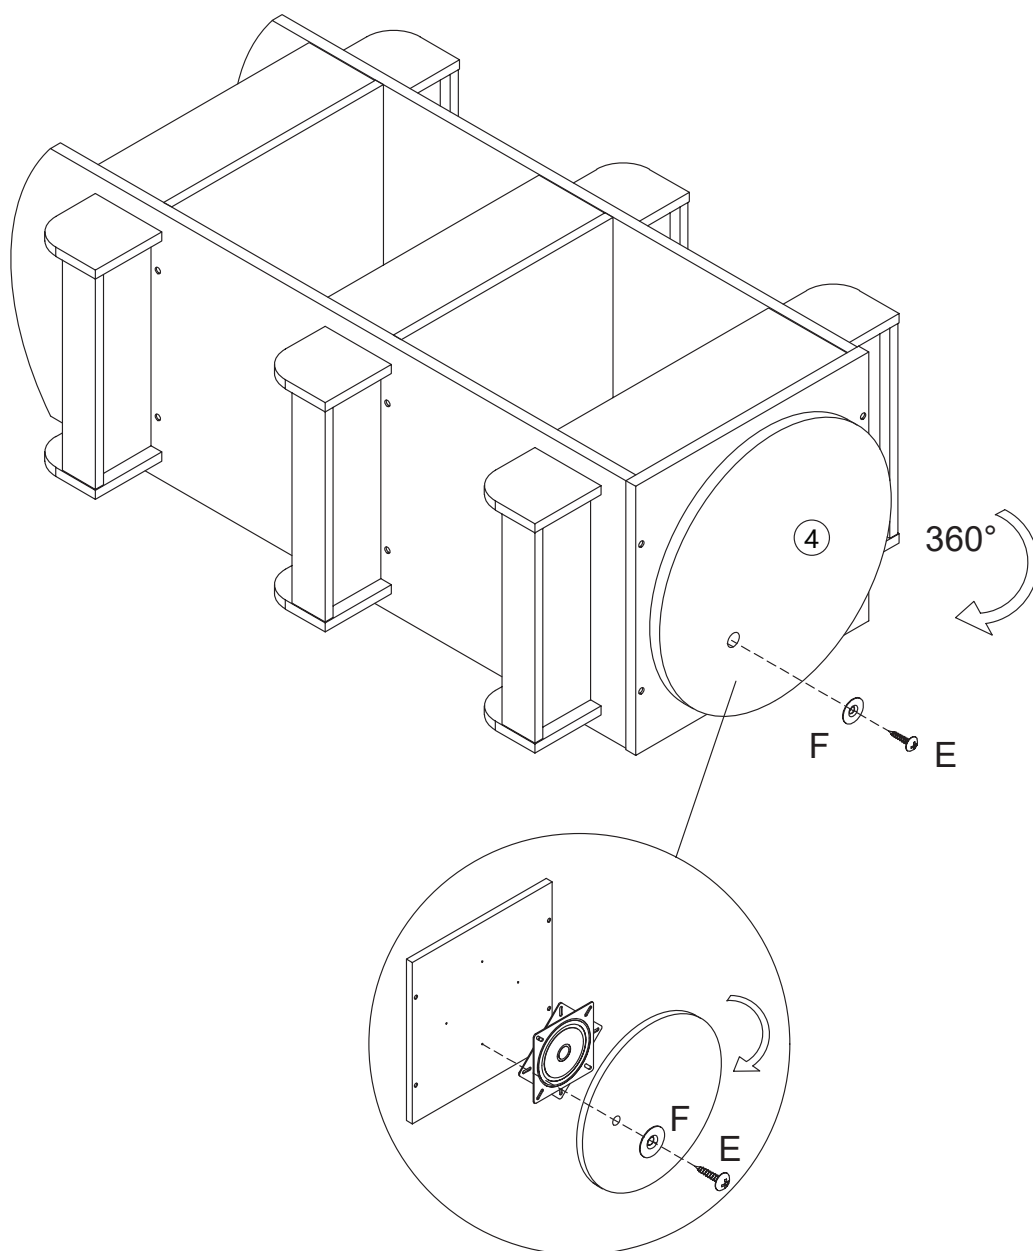

Warning: Rotate the unit slowly by hand only. Keep hands, feet and loose clothing clear of the base. Never allow children to spin, sit, stand, climb or ride on the bookshelf. Stop use if the base wobbles, scrapes, binds or becomes loose.

FINAL ASSEMBLY CHECK:

Do not load or use the bookshelf until all screws and cam locks are secure; all shelves are fully seated and level; the round base is centred; the unit is stable without rocking; no sharp edge or exposed hardware is present; and the bookshelf rotates smoothly without wobbling, scraping or binding.

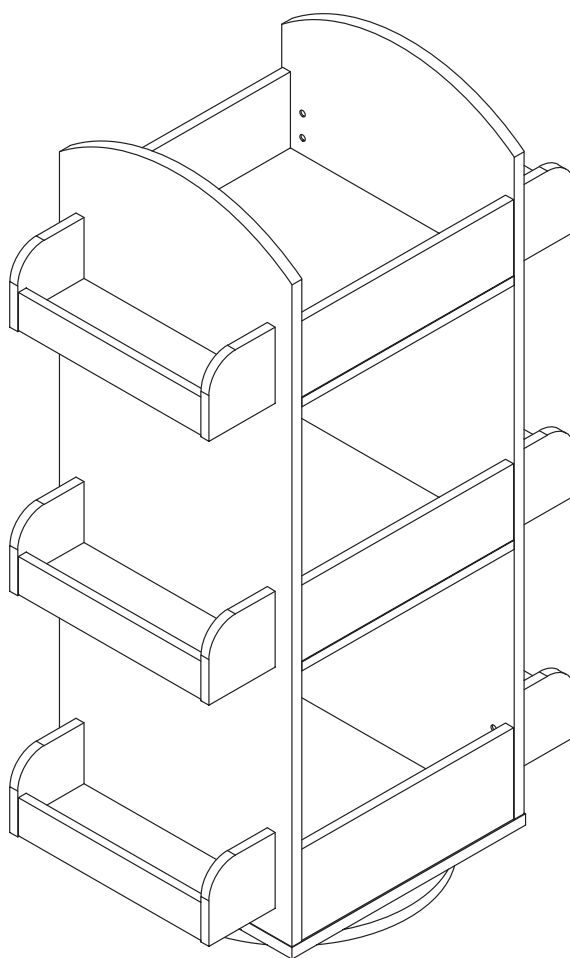

IV. SAFE USE, CARE AND MAINTENANCE

Safe Loading and Everyday Use

- Place larger and heavier books or toys in the lower and central compartments. Keep lighter items in the upper shelves.
- Distribute contents evenly around both sides of the unit. Do not overload one side or allow items to project beyond the shelf edges.
- Rotate the bookshelf slowly by hand only. Make sure the surrounding area is clear before turning it.
- Do not allow children to climb, sit, stand, hang, pull, push, spin or ride on the bookshelf.
- Keep hands, feet and loose clothing clear of the gap above the round base.
- Do not place drinks, plant pots, hot items, sharp objects or leaking containers on the shelves.

Cleaning

- Dust regularly with a soft, dry cloth.
- For marks, wipe with a soft cloth lightly dampened with water and mild detergent, then dry immediately.
- Do not soak the panels or allow liquid to enter joints, grooves, cam fittings or the swivel plate.
- Do not use abrasive pads, bleach, solvents, strong chemicals, steam cleaners or furniture polish containing silicone.
- Keep the swivel plate free from dust, threads, hair and other debris. Do not apply oil or lubricant unless approved for the fitted mechanism.

Inspection and Maintenance

- Inspect the bookshelf after initial use and periodically thereafter. Tighten any loose connector bolts carefully.
- Check panels, dowels, grooves and edges for cracking, swelling, splintering or other damage. Stop using the product if damage affects stability or safe use.
- Do not drag the bookshelf. Empty it first.
- Keep the product in a dry, ventilated indoor environment and away from direct heat and prolonged sunlight.

V. STORAGE AND TROUBLESHOOTING

Moving and Storage

- Remove all books and toys before moving the bookshelf.
- Use two adults and lift from the main side panels and lower cabinet body. Do not lift by the shelves or round base and do not drag the product.
- Store the product indoors in a cool, dry and ventilated location away from moisture, heat and direct sunlight.
- If dismantled, label the components and keep all hardware in a sealed, labelled container out of reach of children.
- Complete the final assembly check before returning the product to use.

Troubleshooting

Issue	Action
Panels or holes do not align	Check the part number and orientation. Loosen nearby fittings slightly, realign the panels and try again. Do not force the joint.
Cam lock will not turn	Confirm the cam opening faces the bolt, the bolt is straight and the panels are fully joined.
Shelf base will not slide into the grooves	Check that the shelf frame is square and both grooves face inward. Loosen the cam locks slightly, realign and refit.
Shelf feels loose	Remove the load and check the four side screws and the cam fittings in the shelf frame. Tighten carefully or replace damaged hardware.
Unit rocks on the floor	Move it to a firm, level surface and confirm the round base is centred and all base screws are evenly tightened.
Rotation is stiff, noisy or uneven	Unload the bookshelf. Check for debris beneath the unit, loose mounting screws, an off-centre base or damage to the swivel plate. Stop use if the issue remains.
Unit becomes unstable when loaded	Unload it immediately. Redistribute weight evenly with heavier items low and confirm the base and structural fittings are secure.



DO NOT MODIFY THE ROTATING BASE

Do not drill additional mounting holes, remove the swivel plate, add casters, substitute unsuitable screws or alter the round base. Modifications may cause instability, pinch hazards or failure of the rotating mechanism.

VI. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Please email us at **support@lifespankids.com.au** for all warranty or support issues.

For all warranty or support related enquiries, please lodge a support ticket first by sending us an email.
support@lifespankids.com.au.

VII. SECURITY SUPPORT INFORMATION

Reporting

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

Device Support Period

This product will receive security updates for a minimum of 12 months from the date of purchase.

