 


USER MANUAL

LK389 Harlow Indoor Fridge

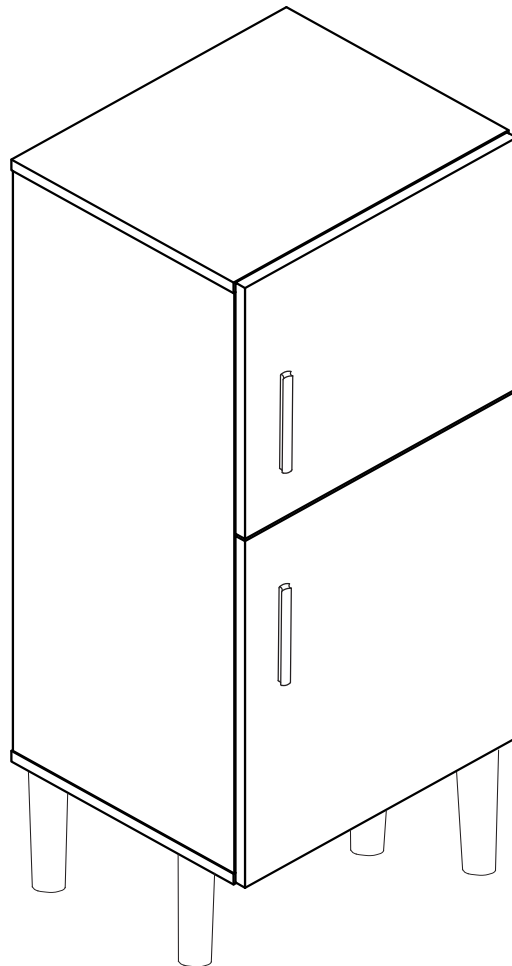

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. SAFETY INFORMATION	3
II. BEFORE ASSEMBLY	4
III. ASSEMBLY INSTRUCTIONS	5
IV. CARE, MAINTENANCE AND TROUBLESHOOTING	11
V. WARRANTY	13

I. SAFETY INFORMATION



WARNING: Adult assembly is required. The anti-tip bracket must be installed correctly and the product secured to a suitable wall before children use it.

Intended Use

- This product is a children's pretend-play fridge for indoor domestic use only.
- It is not an electrical appliance and does not cool or preserve food. Do not store perishable food, medicine, liquids or hazardous items inside.
- Use only under responsible adult supervision.

Before Assembly

- Keep children and pets away from the assembly area, packaging, tools and small hardware.
- Check that all panels and hardware are present and undamaged before beginning.
- Assemble on a clean, level, padded surface to prevent damage to the finish.

Safe Placement

- Place on a flat, stable floor away from stairs, windows, heaters, open flames, water and blind or curtain cords.
- Do not place heavy objects on top of the unit.
- Use wall fixings suitable for the wall material. Seek professional advice when unsure.
- When relocating, do not drag the play equipment. Ensure you reattach the wall-fixing to prevent tipping.

Safe Placement

- Supervise children during play and teach them how to use doors, knobs and shelves gently.
- Do not allow children to climb, sit, stand, lean or hang on the unit, shelves, handles or doors.
- Keep fingers clear of hinges and closing doors to reduce pinch injuries.
- Do not overload shelves or doors. Distribute lightweight play items evenly.
- Remove any accessory that becomes broken or small enough to prevent a choking hazard.



Stop Use Immediately If:

Any panel, leg, hinge, handle, fastener or wall anchor becomes loose, cracked, bent, split or otherwise damaged. Keep the product out of use until it has been correctly repaired with suitable replacement parts.

Wall-fixing safety

- Before drilling, check the wall for concealed electrical cables, water pipes and other services.
- The supplied wall plugs may not be suitable for every wall. Select fixings that are appropriate for masonry, timber studs, plasterboard or other wall construction.
- Where possible, anchor into solid masonry or a timber stud. Do not rely on a screw driven directly into plasterboard without a suitable rated anchor.
- If you are unsure which fixings to use, seek advice from a qualified tradesperson.

II. BEFORE ASSEMBLY

Read all instructions before assembly. Follow the illustrated steps in order and keep this manual with the product.

Assembly Requirements	Tools Required
Adult assembly only. Two adults are recommended when positioning the completed unit and securing it to the wall.	Phillips-head screwdriver, hammer or rubber mallet, drill with a wall-appropriate bit, pencil/level and a soft protective surface.

How to Lock the Cam Fittings

Step 1:

Screw cam bolt A into the pre-drilled hole.

Step 2:

Insert cam lock B with its arrow facing the bolt entry hole.

Step 3:


Join the panels and turn the cam lock clockwise until firmly locked.






Cam Fitting Check

Do not force a cam lock. If it will not turn, separate the panels and check that the cam bolt is fully inserted and the cam-lock arrow is facing the bolt entry hole. Turn only until snug; overtightening may damage the panel.


III. ASSEMBLY INSTRUCTIONS

PARTS LIST

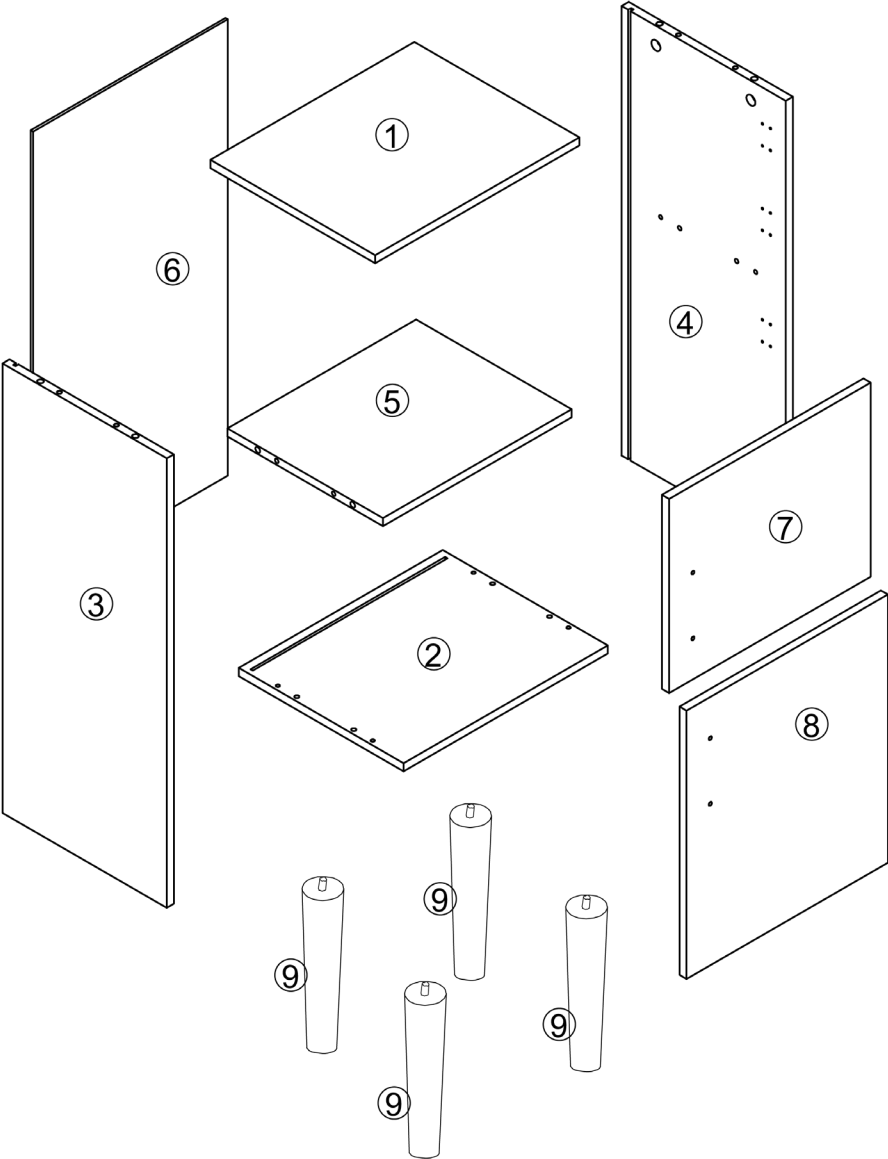


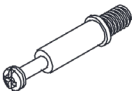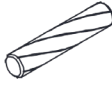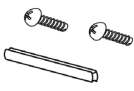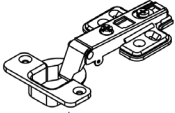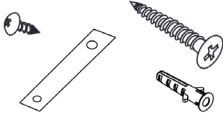A	x8	B	x8	C	x12	D	x4	E	x2
									
F	x4	G	x24	H	x4	I	x1		
									


1

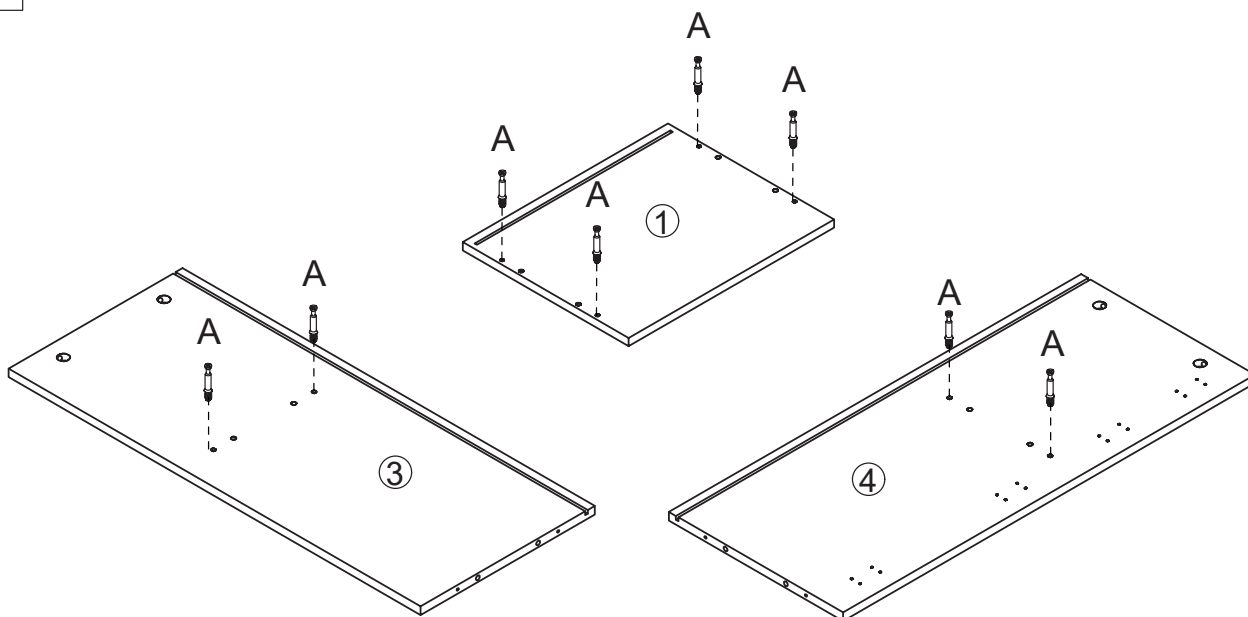

 Tip: Confirm all cam bolts are straight before continuing.


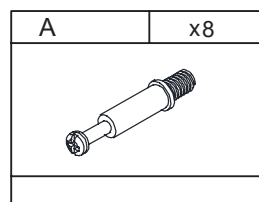


2



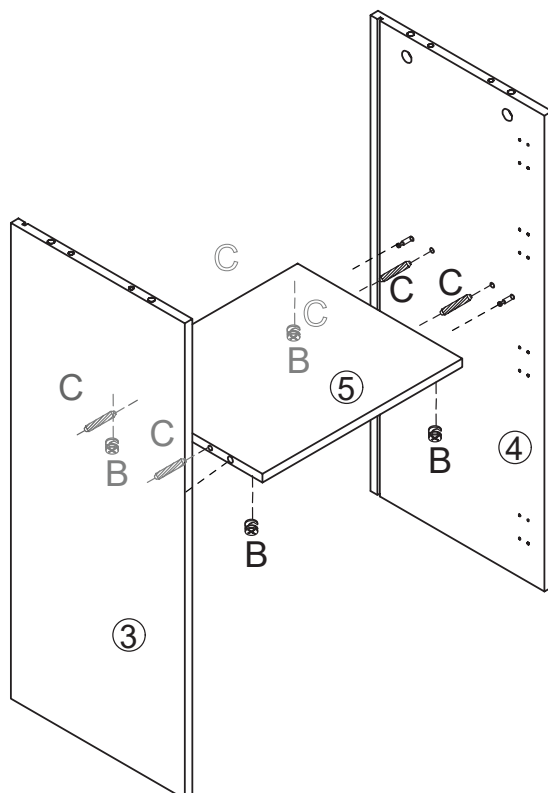


Tip: Read the instruction on how to attach cam lock in this manual.

Note: The grooves of panel (3) and (4) should be facing each other.

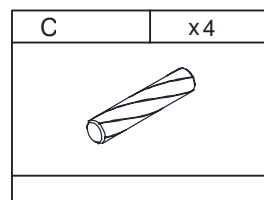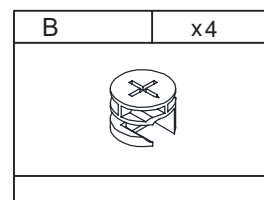


3

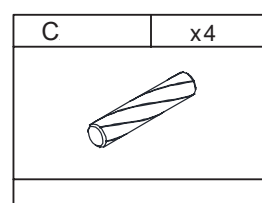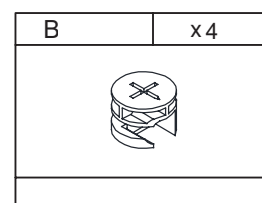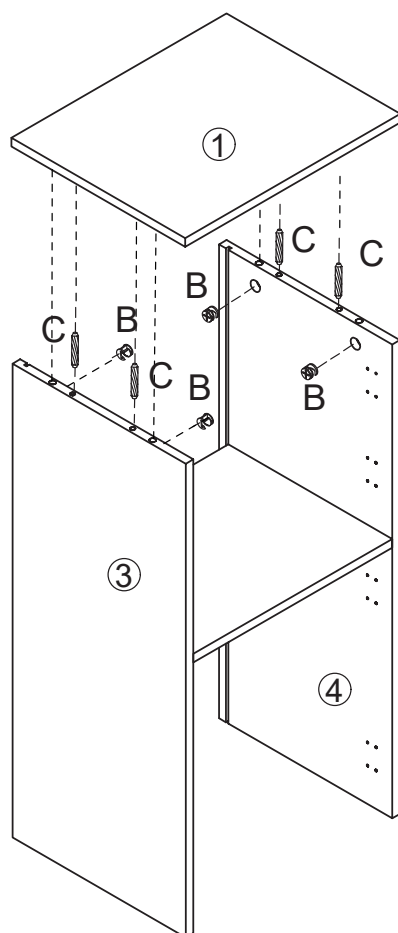




4

Note: This view is from the bottom, face panel (1) to the ground then slide the panel into the grooves.

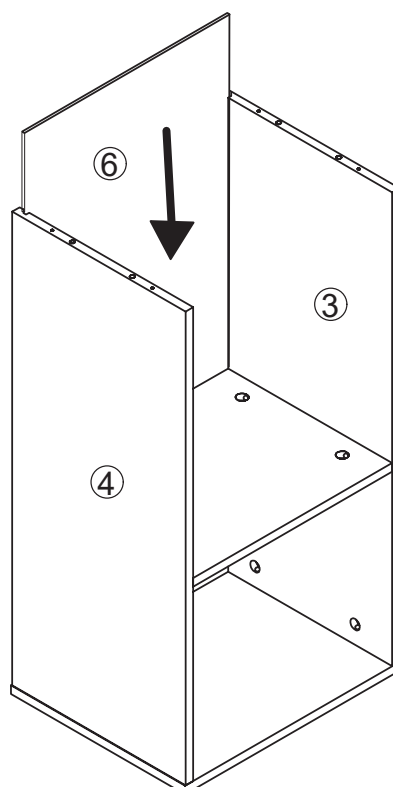


5


Note: Face the groove on panel (2) to the back panel and ensure it is properly seated before attaching the screws.

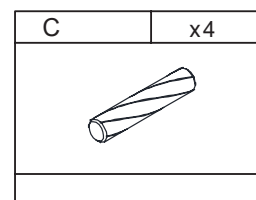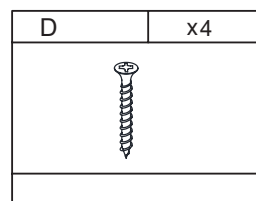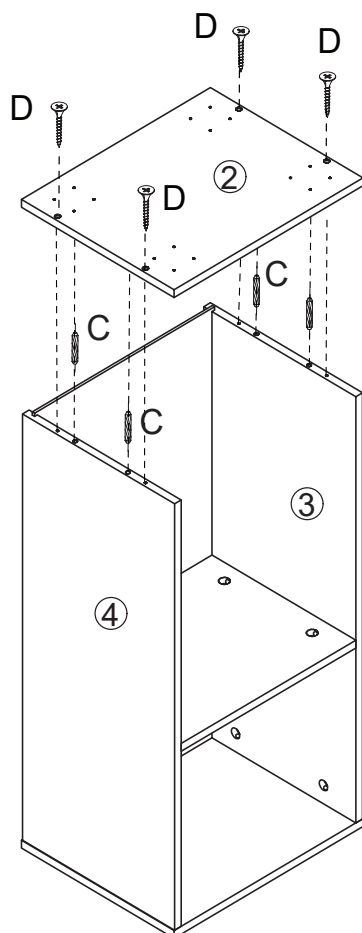

6




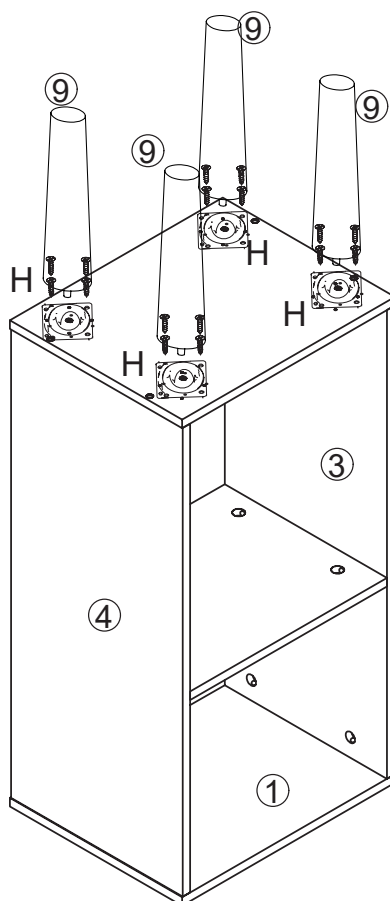


Note: Install plate (H) first then attach the legs (9).

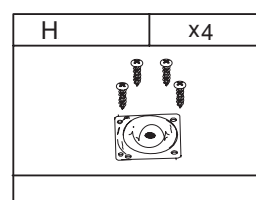


7

Tip: Fully tighten only once door is attached to the fridge and properly aligned.

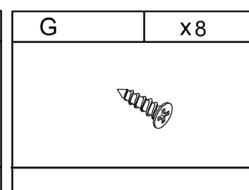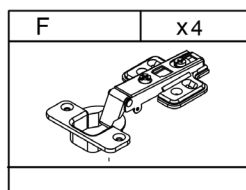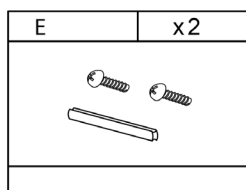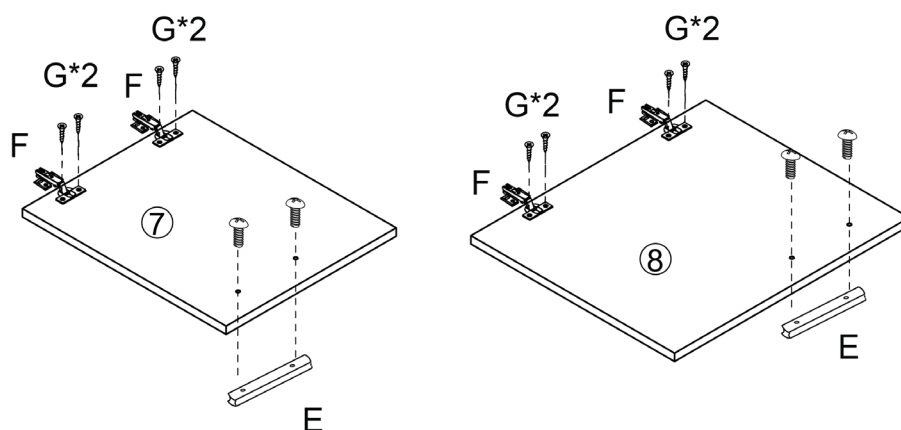

8



Tip: Once all hinges are attached, carefully open and close both doors to check their alignment. Make small adjustments using the hinge screws:

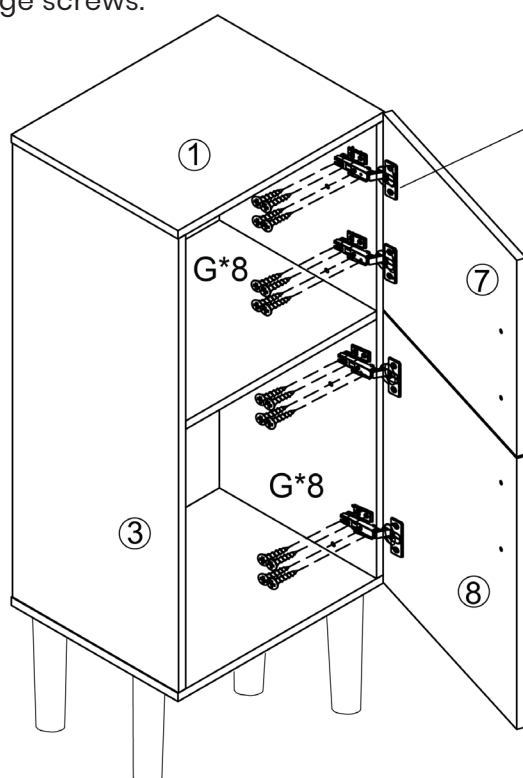

* Picture 3 – Height adjustment: Loosen the mounting screws, move the door up or down, then retighten the screws.


* Picture 4 – Side adjustment: Turn the adjustment screw to move the door left or right and even the gaps.

* Picture 5 – Depth adjustment: Turn the adjustment screw to move the door inward or outward so it sits flush with the cabinet.

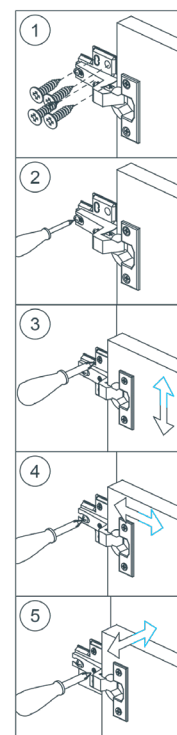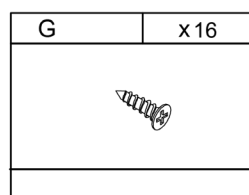

Adjust each hinge gradually and check the door alignment after every adjustment.


Note: Fully tighten the screws for the hinges once door is properly aligned and opening smoothly.

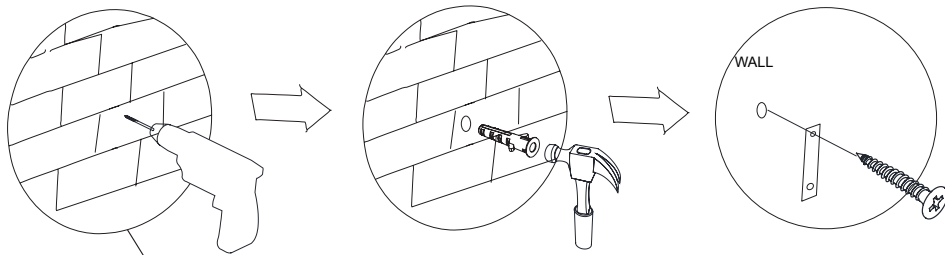

Important: Check for hidden services, drill suitable pilot holes and install the correct wall plugs or anchors for the wall type.

Tip: The wall anchors are a permanent safety feature. If the bookshelf is moved, it must be re-anchored before being used again.

wall

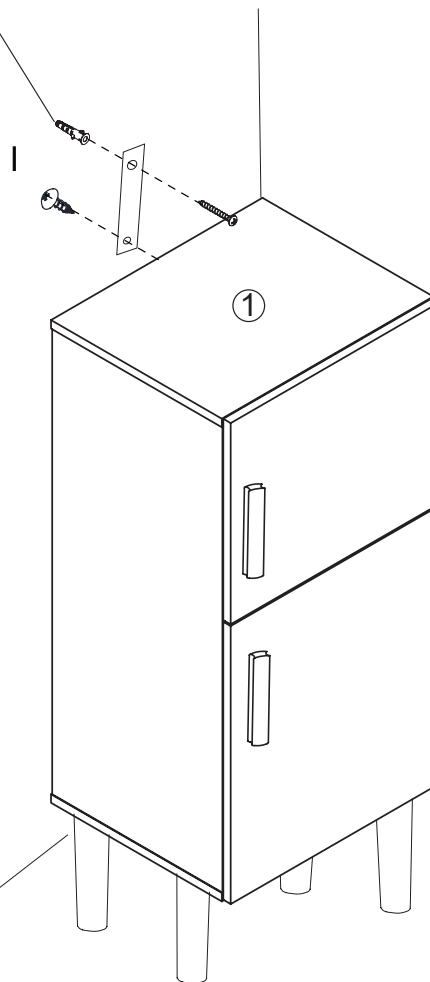

I	x1

IV. CARE, MAINTENANCE & TROUBLESHOOTING

Cleaning

- Wipe with a soft cloth lightly dampened with water and mild detergent.
- Dry immediately with a clean cloth. Do not soak or immerse any part.
- Do not use abrasive pads, bleach, solvents, alcohol-based cleaners or furniture polish.
- Remove spills promptly, especially around panel edges, joints and screw holes.

Routine Inspection

- Regularly check all panels, fittings, hinges, handles, legs and the wall anchor.
- Retighten loose hardware using the correct hand tool. Do not use power tools for routine tightening.
- Stop use if there are cracks, splinters, sharp edges, swollen panels, loose joints or damaged hardware.

Storage & Moving

- Keep indoors in a dry, well-ventilated area away from direct sunlight and excessive humidity.
- Empty the unit before moving. Lift from the cabinet body with adult assistance; do not drag by the doors or handles.
- Reinstall and check the wall anchor after every move.

General Care

- Use only lightweight pretend-play items.
- Do not modify the product or substitute structural hardware.
- Keep assembly instructions and proof of purchase for future reference.

TROUBLESHOOTING

Issue	Check/Action
Cabinet rocks or feels unstable	Move to a level surface. Check that each leg is fully threaded into its plate, tighten all fittings and confirm the wall bracket is secure.
Door is uneven or will not close	Check that the cabinet is square and not overloaded. Loosen hinge screws slightly, adjust alignment in small increments, then retighten.
Door rubs against the cabinet	Adjust hinge position left/right or in/out. Confirm the back panel is seated and the base and top are fully locked.
Handle, hinge or leg becomes loose	Stop play, tighten by hand and inspect the surrounding panel for damage before returning the product to use.
Panel is swollen, split or cracked	Stop use immediately. Do not continue using a structurally damaged product; contact the retailer for support or replacement-part guidance.

End of Product Life

Remove all hardware before disposing of the product. Recycle cardboard packaging, metal fittings and wood-based panels where local facilities accept them. Follow local waste and recycling requirements.

V. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Please email us at **support@lifespankids.com.au** for all warranty or support issues.

For all warranty or support related enquiries, please lodge a support ticket first by sending us an email. **support@lifespankids.com.au**.

SECURITY SUPPORT INFORMATION

Reporting

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

Device Support Period

This product will receive security updates for a minimum of 12 months from the date of purchase.

