

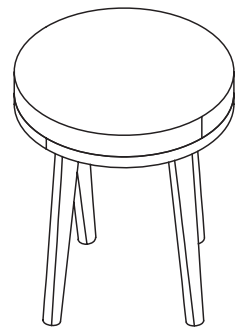


USER MANUAL

LK406 Oliver 3-piece Table and Stool Set

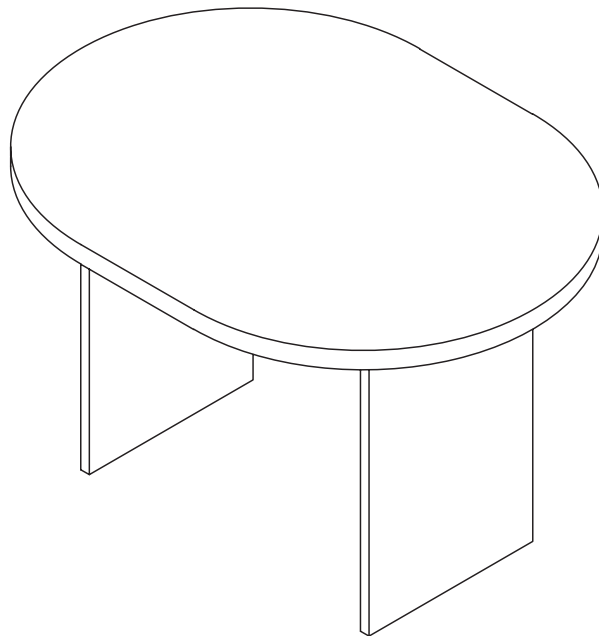

Find the Digital
Manual Online

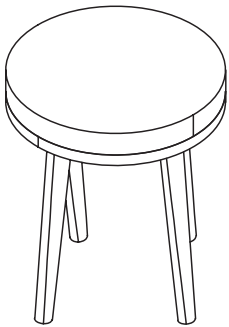

WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. SAFETY INFORMATION	3
II. BEFORE ASSEMBLY	4
III. ASSEMBLY INSTRUCTIONS	5
IV. SAFE USE AND MAINTENANCE	10
V. WARRANTY	11
VI. SECURITY AND SUPPORT	12

I. SAFETY INFORMATION

Read all instructions before assembly and use.



WARNING

- Adult assembly is required. Keep children and pets away from the assembly area.
- Small hardware and packaging may present choking or suffocation hazards. Dispose of packaging immediately after assembly.
- Do not allow children to stand, climb, jump, lean or play roughly on the table or stools.
- Use only on a flat, stable indoor surface. Stop use immediately if any part is loose, damaged or missing.

Safe Use

- One child per stool at a time. The stools are for sitting only.
- Do not sit or stand on the table, and do not place heavy objects on it.
- Do not move the table or stools while a child is using them.
- Keep the set away from stairs, heaters, fireplaces, wet areas and other hazards.
- Place the furniture on a level surface with clear space around it.
- Adult supervision is recommended for young children.
- Check the product before use and stop using it if it becomes unstable or damaged.

II. BEFORE ASSEMBLY

- Unpack all parts on a clean, soft surface to prevent scratches.
- Check all parts and hardware against the parts list. Do not assemble the product if any part is damaged or missing.
- Use a Phillips-head screwdriver and the supplied Allen key.
- Do not use power tools, as overtightening may damage the product.
- Loosely fit components first, align them, then tighten securely.
- Keep all hardware and tools out of reach of children.

How to Lock the Cam Fittings

Step 1:

Screw cam bolt A into the indicated small pre-drilled hole until its shoulder is seated. Do not overtighten.

Step 2:

Insert cam lock B into the large round hole. Point the arrow/opening on the cam toward the hole where cam bolt A will enter.

Step 3:

Bring the panels together so the head of cam bolt A slides fully into cam lock B.

Step 4:


Turn cam lock B clockwise with a Phillips-head screwdriver until the joint is secure, usually about one-half turn. Stop when resistance is felt.

 
 
 
 
 
Cam Fitting Check

If a cam will not turn, do not force it. Separate the panels and confirm the cam arrow is facing the cam bolt entry hole and that the bolt is screwed to the correct depth.


III. ASSEMBLY INSTRUCTIONS

PARTS LIST

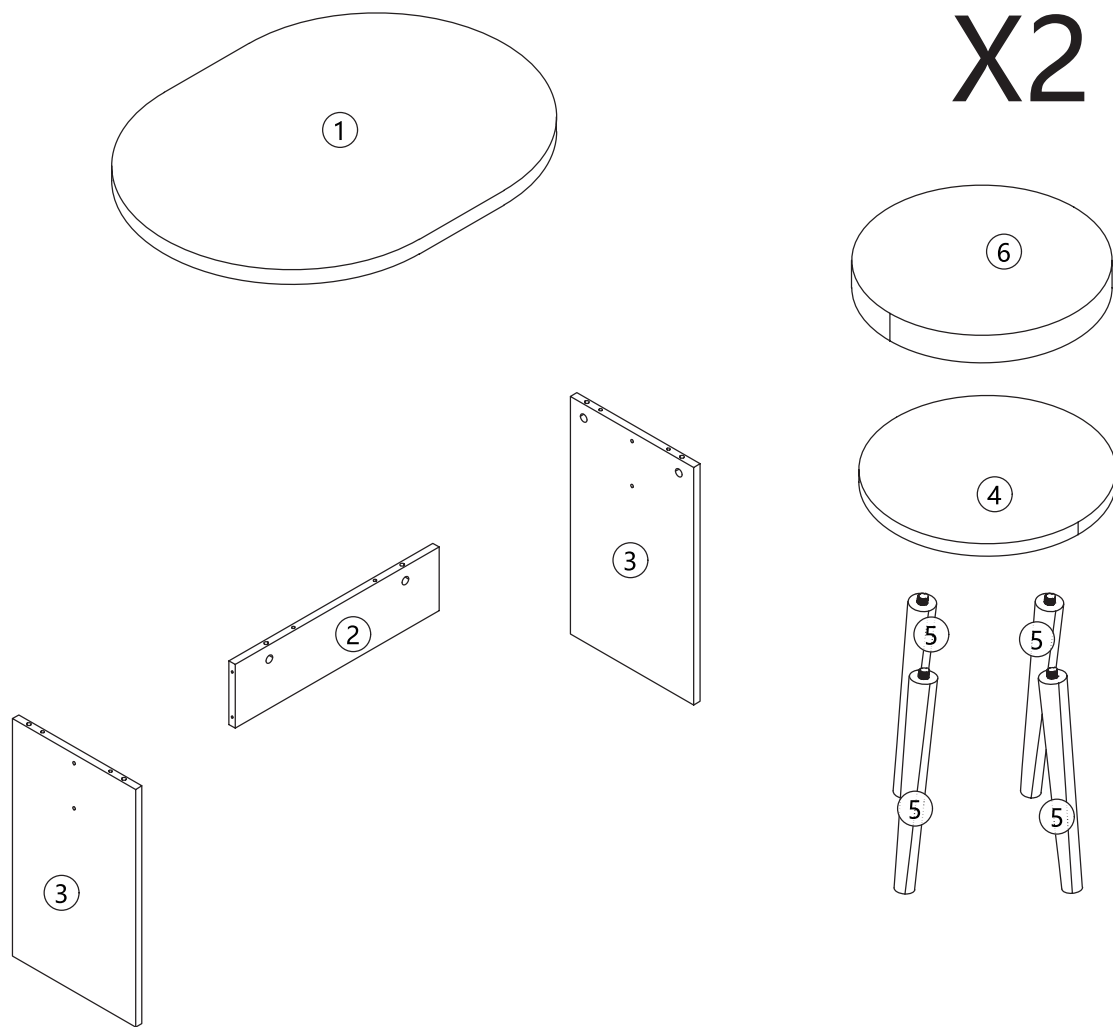


A	x6	B	x6	C	x 6	D	x4
							
				6 x 30mm		5 x 40mm	
E	x 32	F	x 8	G	x 1		
							
4 x 12mm				M3			

1

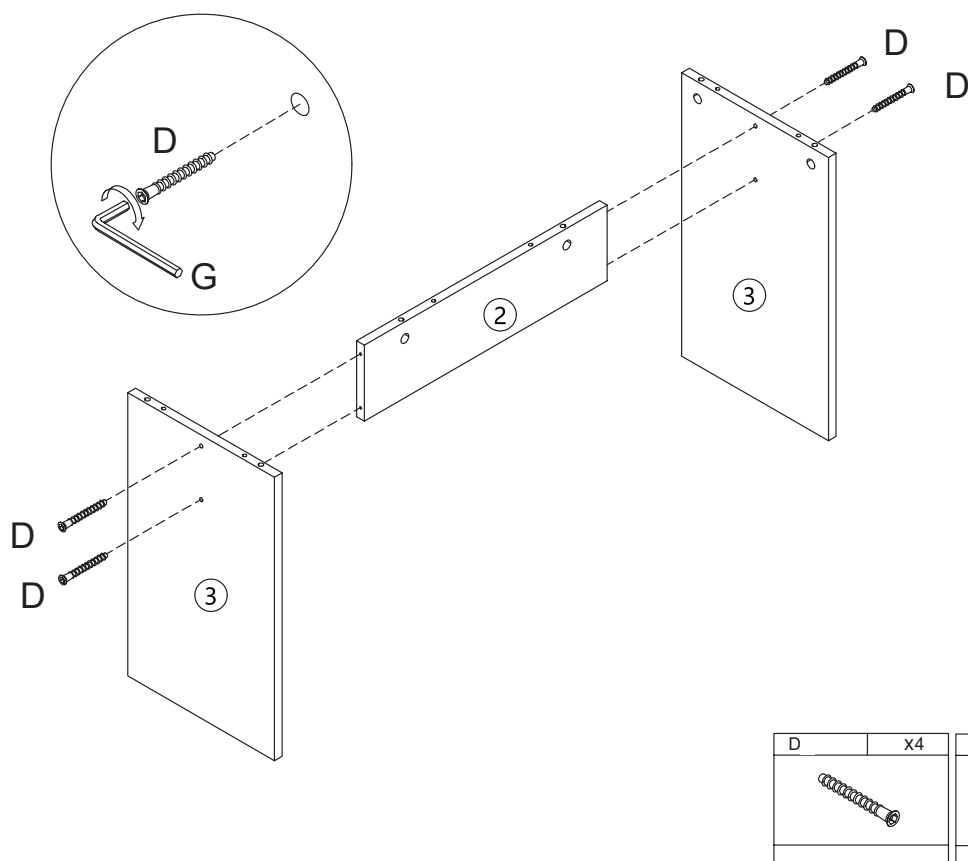

2


Tip: Make sure the bolts are straight.

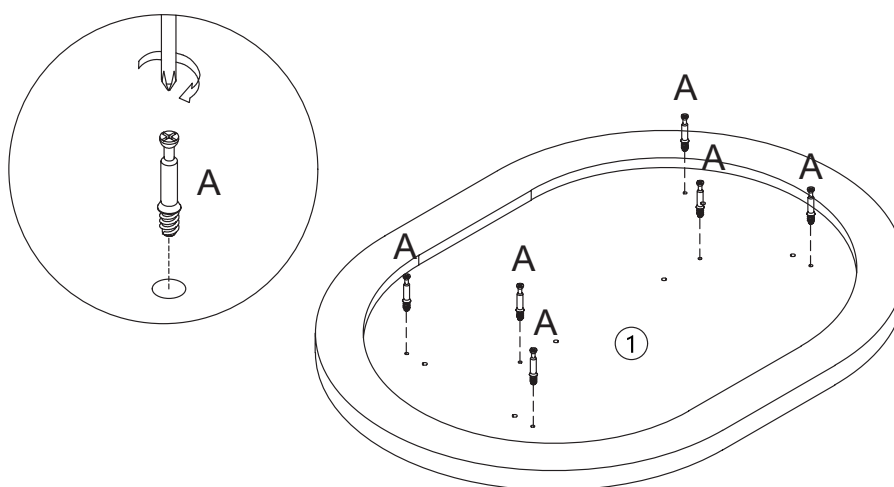

A	x6
	

3


Tip: Read the Cam lock instructions for proper fitting.

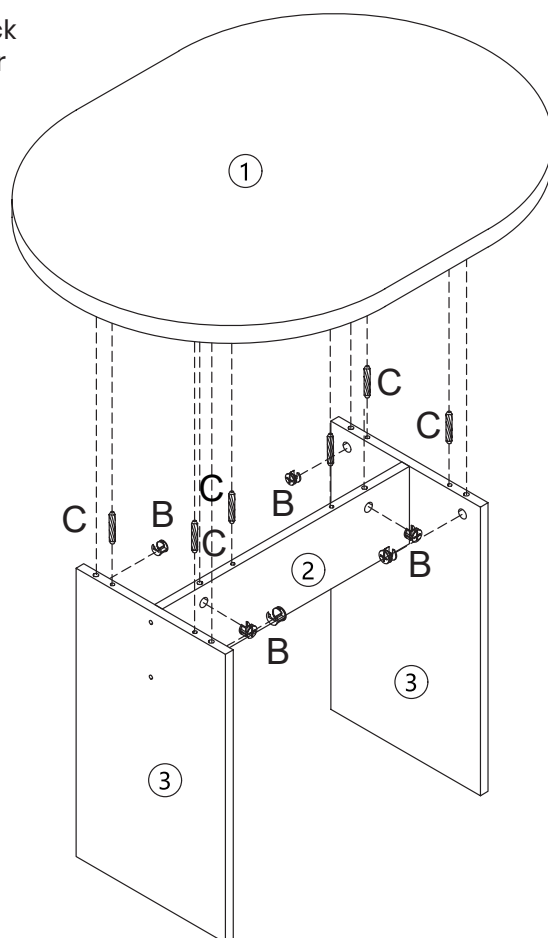

B	x6	C	x6
			

4

X2

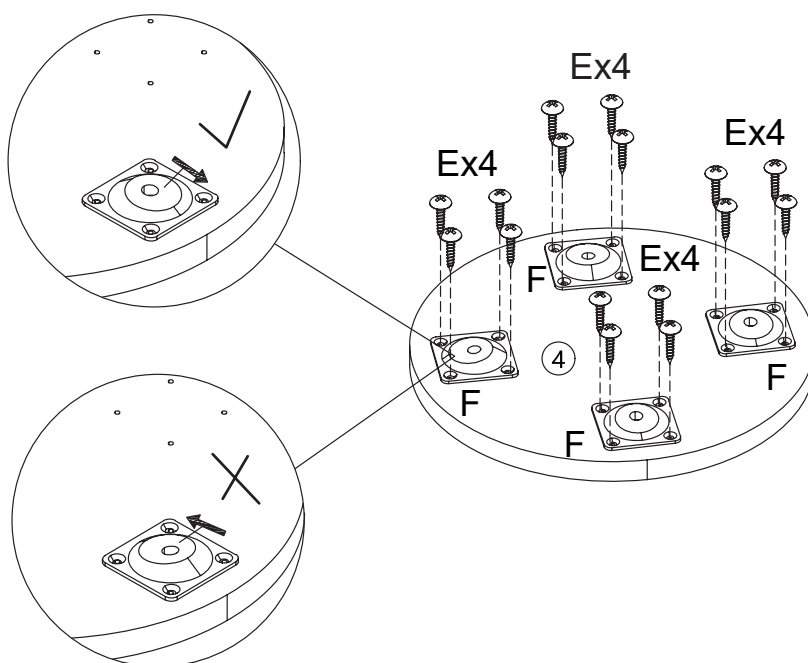


Tip: Note the correct fitting of Part F zoomed image.

E	x 32	F	x 8
			

5


X2

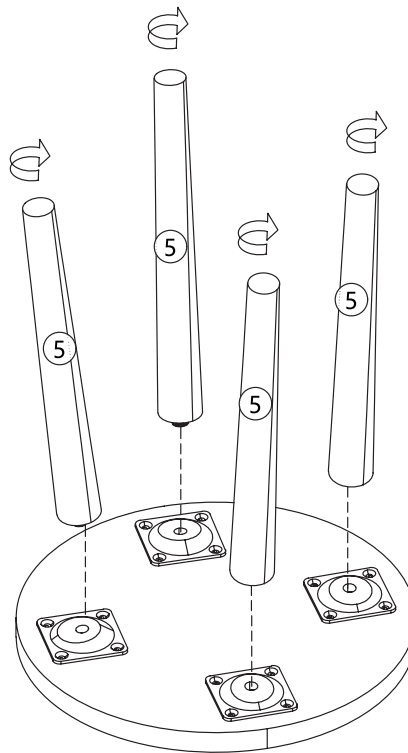

6


X2

Note: Keep the lid supported until both hinges and the lid support are fully fastened. Never place fingers in the hinge area.

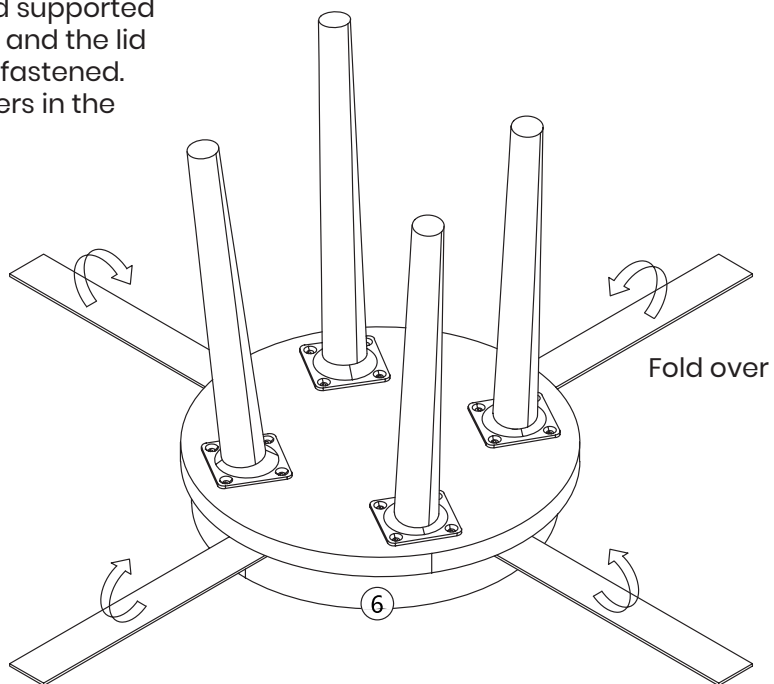


7

X2

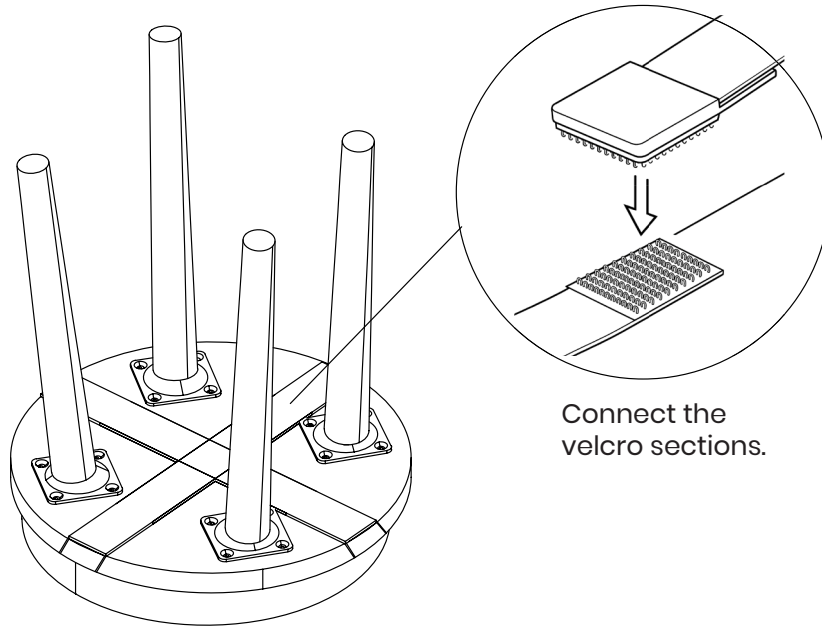

8

X2

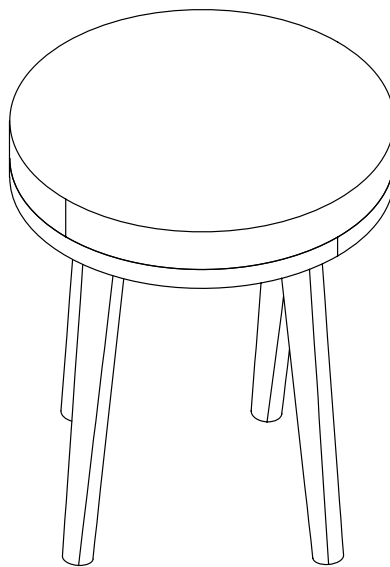

IV. FINAL CHECKS, CARE & MAINTENANCE

Complete these checks before first use and inspect the product regularly.

Final Checks

- Confirm every fastener is secure and all cam locks are fully engaged.
- Check that all table and stool legs sit evenly on the floor.
- Make sure each cushion is centred and the hook-and-loop straps are secure underneath.
- Gently test the table and stools for movement before use.
- Remove all packaging, tools and unused hardware from the play area.
- Do not use the product if it is unstable, damaged or has missing parts.

Care and Maintenance

- Before use, check the legs, mounting plates, cushion straps, panels and fasteners for looseness, cracks, splinters or sharp edges.
- Retighten loose hardware when required. Do not overtighten.
- Wipe with a soft, slightly damp cloth. Use mild soap only when required, then dry immediately.
- Clean spills promptly. Do not soak, hose or steam-clean the product.
- Do not use abrasive cleaners, solvents or harsh chemicals.
- Keep indoors and away from prolonged moisture, direct heat and strong sunlight.
- Lift the furniture when moving it. Do not drag it across the floor.
- Stop use if damage is found. Do not modify the product or use substitute parts.
-

Troubleshooting

Issue	Check/Solution
Table rocks or feels uneven	Place it on a level floor. Loosen the table connections slightly, align the frame, then retighten evenly.
Stool leg feels loose	Turn the leg clockwise until secure. Check that the mounting plate screws are tight.
Seat cushion moves	Reposition the cushion and secure the hook-and-loop straps firmly in the cross pattern shown in Step 7.
Parts do not align	Do not force the connection. Confirm the panel orientation and hardware number, then refit loosely before tightening.

V. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Please email us at **support@lifespankids.com.au** for all warranty or support issues.

For all warranty or support related enquiries, please lodge a support ticket first by sending us an email.
support@lifespankids.com.au.

VI. SECURITY SUPPORT INFORMATION

Reporting

To report a cyber security issue, please email support@gflgroup.com.au with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

Device Support Period

This product will receive security updates for a minimum of 12 months from the date of purchase.

