


# USER MANUAL

## LK383 Everlyn Bookshelf with Toy Box

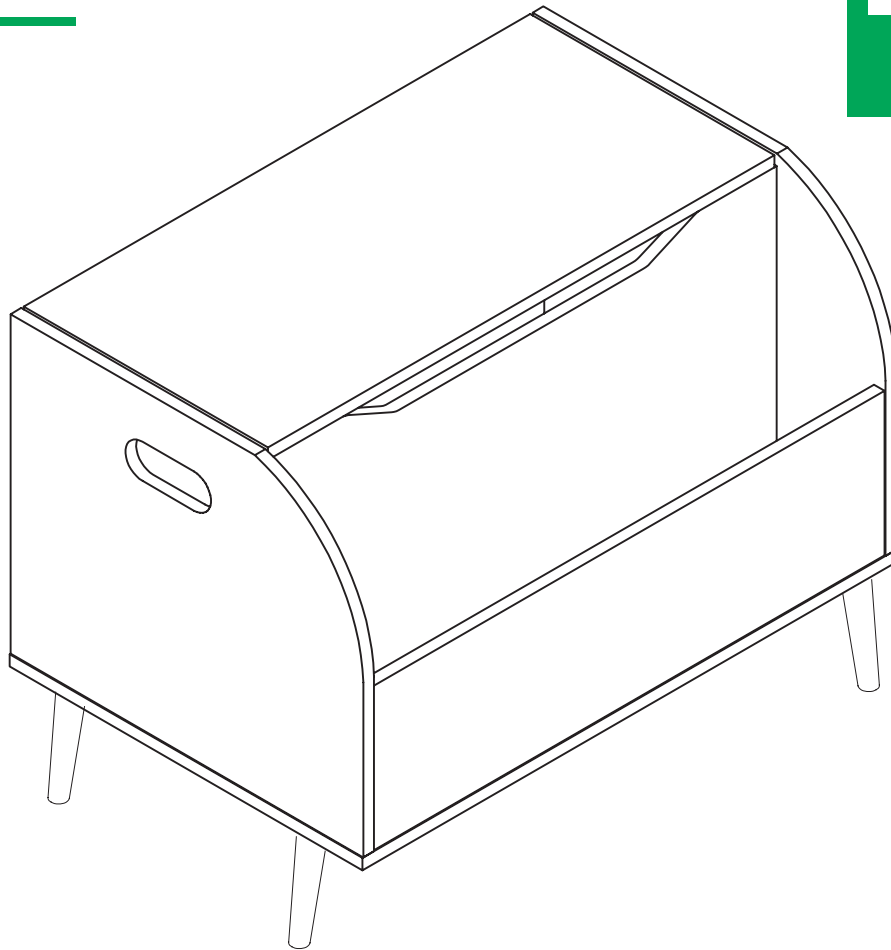

Find the Digital  
Manual Online



**WARNING:** The disassembled product may contain small parts which pose a choking hazard to children under 3.

### IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

*For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.*

### NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at [www.lifespankids.com.au](http://www.lifespankids.com.au).

---

## TABLE OF CONTENTS

|                                          |           |
|------------------------------------------|-----------|
| <b>I. SAFETY INSTRUCTIONS</b>            | <b>3</b>  |
| <b>II. BEFORE ASSEMBLY</b>               | <b>5</b>  |
| <b>III. ASSEMBLY INSTRUCTIONS</b>        | <b>6</b>  |
| <b>IV. CARE AND MAINTENANCE</b>          | <b>11</b> |
| <b>V. STORAGE AND TROUBLESHOOTING</b>    | <b>11</b> |
| <b>VI. WARRANTY</b>                      | <b>12</b> |
| <b>VII. SECURITY SUPPORT INFORMATION</b> | <b>13</b> |

---

## I. SAFETY INFORMATION



### **WARNING – Serious Injury Can Occur**

This product must be assembled by an adult and used on a firm, level indoor surface. Never allow children to climb, stand or sit on the shelves, lid, side panels or inside the storage compartment.

### **General Safety**

- Adult assembly is required. . Keep children and pets away from the assembly area and packaging.
- Inspect all panels, hardware and fittings before assembly. Do not assemble or use the product if any component is missing, cracked, bent or damaged.
- Install all supplied hinges, the lid support and fasteners exactly as shown. Do not use the product with the lid support or hinges removed, loose or damaged.
- Place the unit on a stable, dry and level floor. Do not place it near stairs, open windows, heaters, fireplaces or other hazards.
- For added stability, position the unit against a wall. Where appropriate, secure it to the wall with anti-tip hardware suitable for the wall construction. Wall fixings are not shown in the supplied hardware list.
- Do not allow climbing, hanging, rough play or use as a seat, step, bed or ride-on toy.
- Do not overload the shelves or storage area. Distribute books and toys evenly and keep heavier items low.
- Keep the floor around the unit clear to reduce trip hazards.

### **Lid and Pinch-Point Safety**

- Keep hands and fingers clear of hinges, the lid support and all closing edges.
- Open and close the lid slowly using the intended handhold. Do not slam or force the lid.
- An adult should supervise young children whenever the lid is being opened or closed.
- Never allow a child or pet to enter the storage compartment or become enclosed by the lid.
- Stop using the product immediately if the lid drops unexpectedly, will not remain controlled, or the support fitting becomes loose.



### **SMALL PARTS**

Unassembled hardware may present a choking hazard. Keep screws, cam fittings, dowels and packaging out of reach of children.

## Intended Use

The Everlyn Bookshelf with Toy Box is designed for indoor household storage of children's books and lightweight toys. It is not designed for commercial use, outdoor use, or supporting a person's body weight.

---

## II. BEFORE ASSEMBLY

### What You Will Need

- A Phillips-head screwdriver
- A clean, soft assembly surface
- A second adult to help hold panels
- Enough clear floor space to lay out all parts

### Assembly Tips

- Do not use power tools, as overtightening may damage the panels
- Identify every part before starting
- Leave fittings slightly loose until panels are aligned
- Tighten securely, but do not overtighten

### How to Lock the Cam Fittings

#### Step 1:

Screw cam bolt A into the indicated small pre-drilled hole until its shoulder is seated. Do not overtighten.

#### Step 2:

Insert cam lock B into the large round hole. Point the arrow/opening on the cam toward the hole where cam bolt A will enter.

#### Step 3:

Bring the panels together so the head of cam bolt A slides fully into cam lock B.

#### Step 4:

Turn cam lock B clockwise with a Phillips-head screwdriver until the joint is secure, usually about one-half turn. Stop when resistance is felt.

#### Cam Fitting Check


If a cam will not turn, do not force it. Separate the panels and confirm the cam arrow is facing the cam bolt entry hole and that the bolt is screwed to the correct depth.






**Safe Use**

- Place books upright or flat without forcing them into the compartments
- Store toys so they do not obstruct the lid, hinges or lid support.
- Keep heavy or frequently used items in the lowest storage area.
- Lift the product with assistance when moving it. Empty all contents first and lift from the body, not the lid or legs.
- Do not drag the product, as this may loosen the legs or damage the floor.
- Do not place hot, wet, sharp or leaking items directly on the surfaces.


III. ASSEMBLY INSTRUCTIONS

PARTS LIST

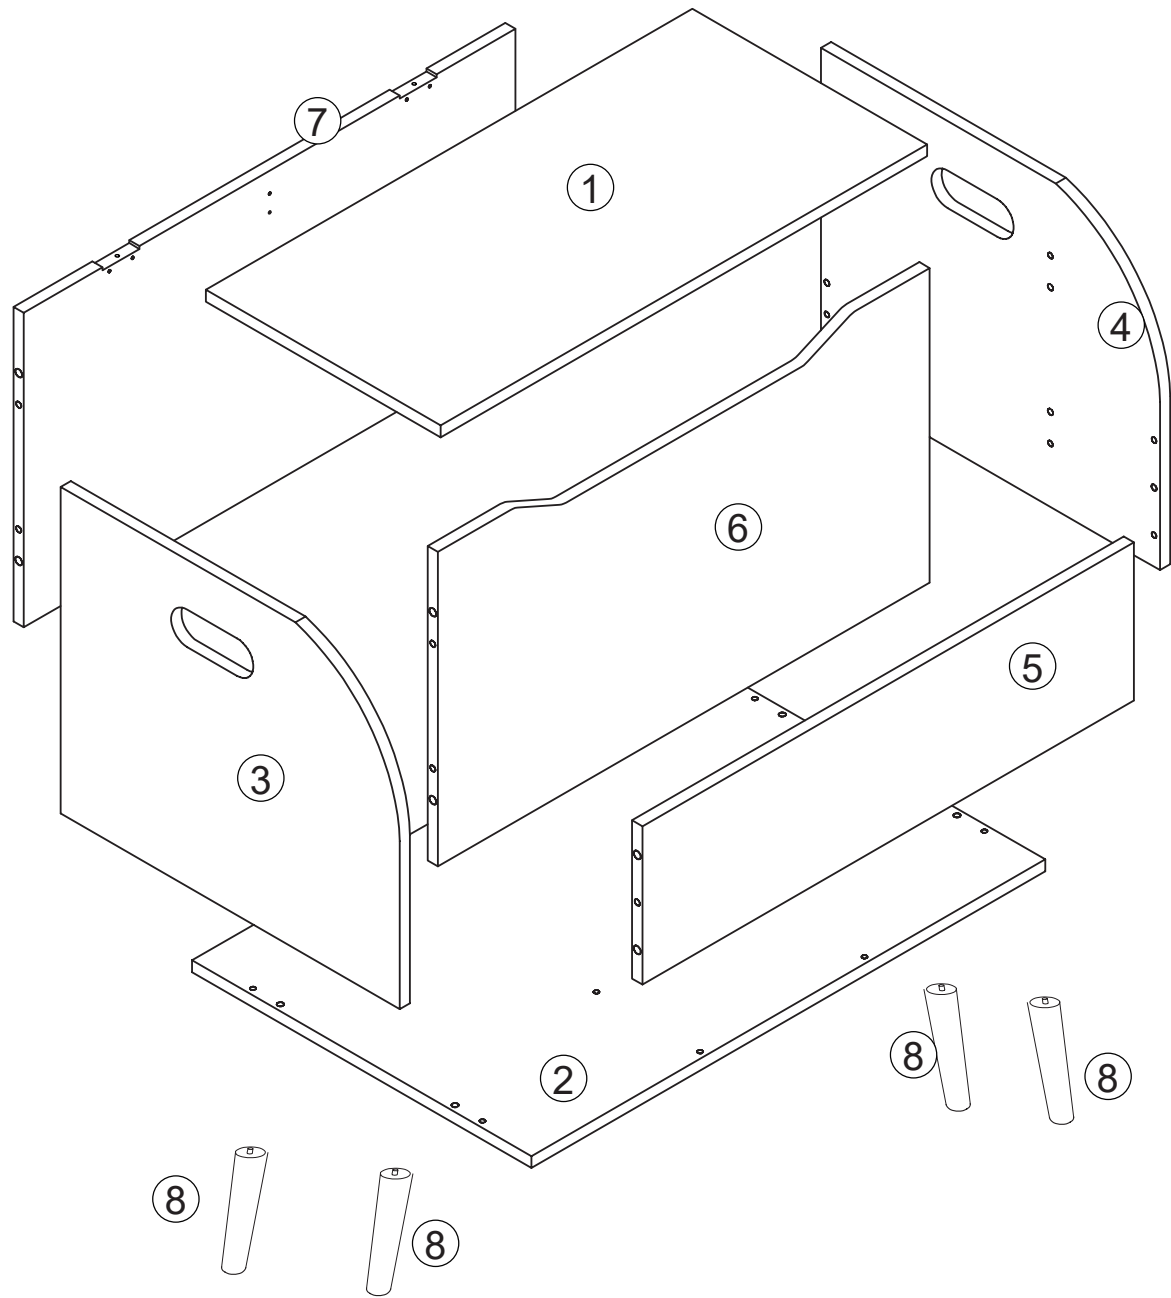

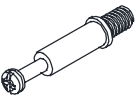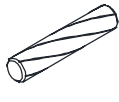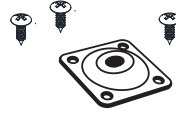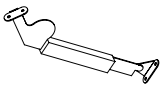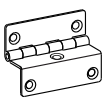
|                                                                                                                            |                                                                                                                            |                                                                                                                            |                                                                                                                              |                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <div>A</div> <div></div> <div>x12</div> | <div>B</div> <div></div> <div>x12</div> | <div>C</div> <div></div> <div>x14</div> | <div>D</div> <div></div> <div>x10</div> | <div>E</div> <div></div> <div>x4</div> |
|                                                                                                                            |                                                                                                                            | Screw Size: 6 x 30                                                                                                         | Screw Size: 4 x 35                                                                                                           | Large Flat Head Screw Size: 4 x 12                                                                                          |
| <div>F</div> <div></div> <div>x14</div> | <div>G</div> <div></div> <div>x1</div>  | <div>H</div> <div></div> <div>x2</div>  |                                                                                                                              |                                                                                                                             |
| Screw Size: 3.5 x 12                                                                                                       |                                                                                                                            |                                                                                                                            |                                                                                                                              |                                                                                                                             |


1

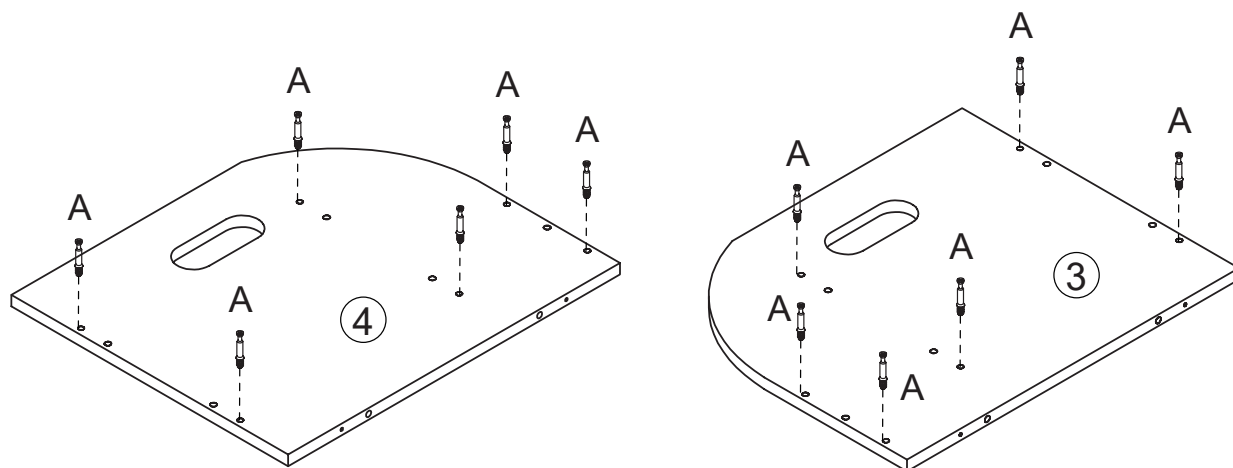

**Tip:** Confirm all cam bolts are straight before continuing.

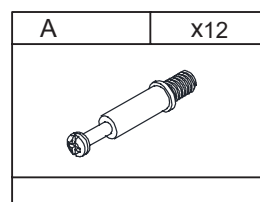


2

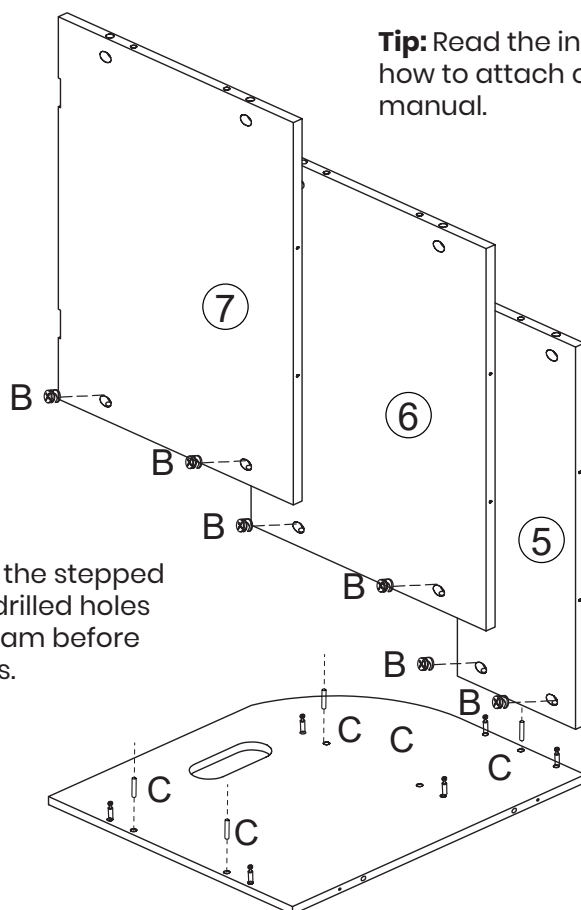



**Tip:** Read the instruction on how to attach cam lock in this manual.

**Note:** Make sure the stepped edges and pre-drilled holes match the diagram before locking the cams.

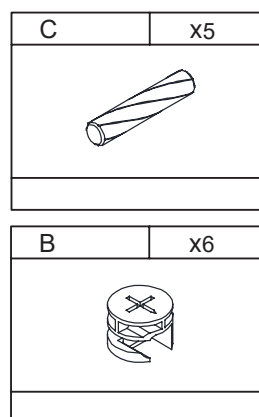


3

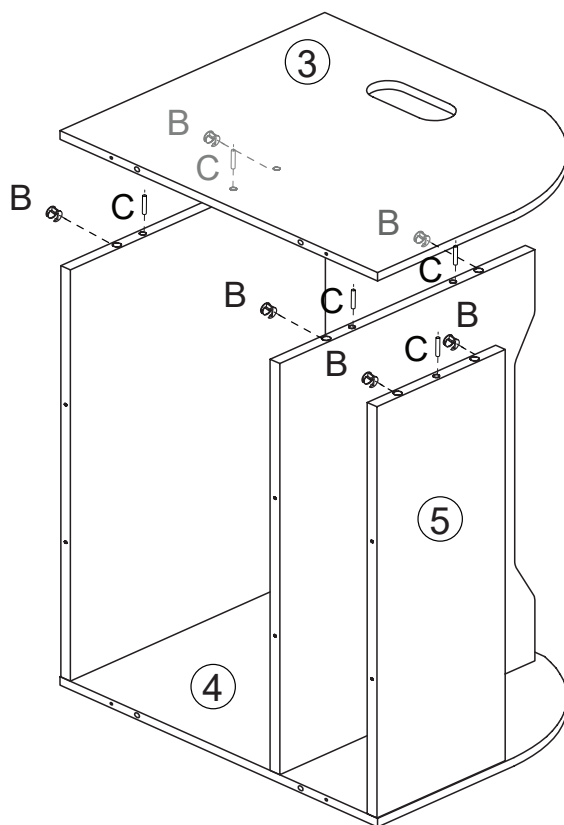

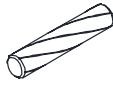
|                                                                                      |    |
|--------------------------------------------------------------------------------------|----|
| C                                                                                    | x5 |
|   |    |
|                                                                                      |    |
| B                                                                                    | x6 |
|  |    |
|                                                                                      |    |


4

 **Note:** The unit is shown upside down in the diagram.

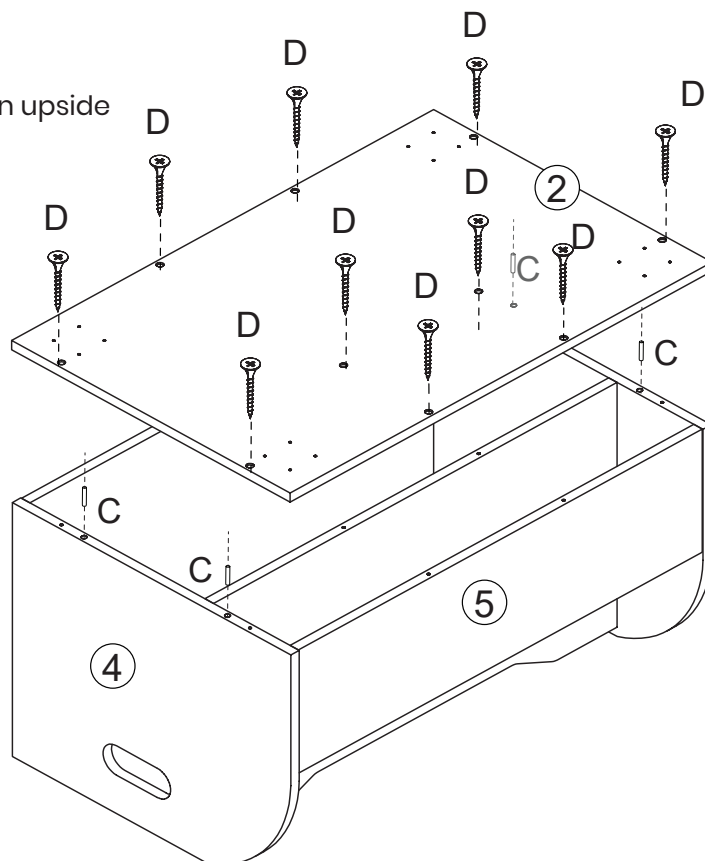


|                                                                                       |     |
|---------------------------------------------------------------------------------------|-----|
| C                                                                                     | x4  |
|  |     |
|                                                                                       |     |
| D                                                                                     | x10 |
|  |     |
|                                                                                       |     |

5

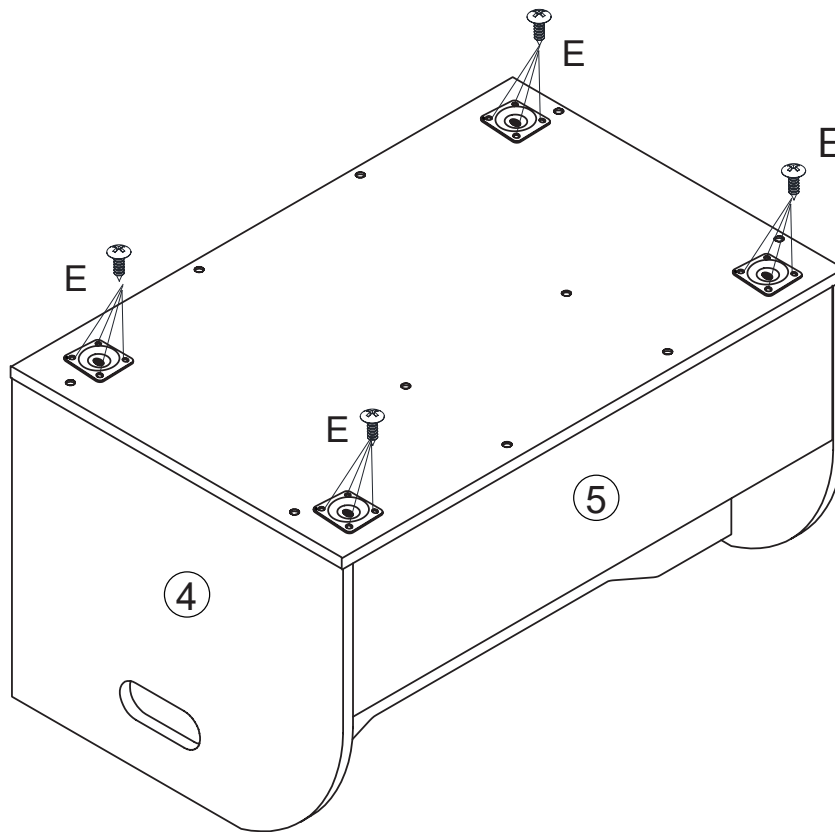



6

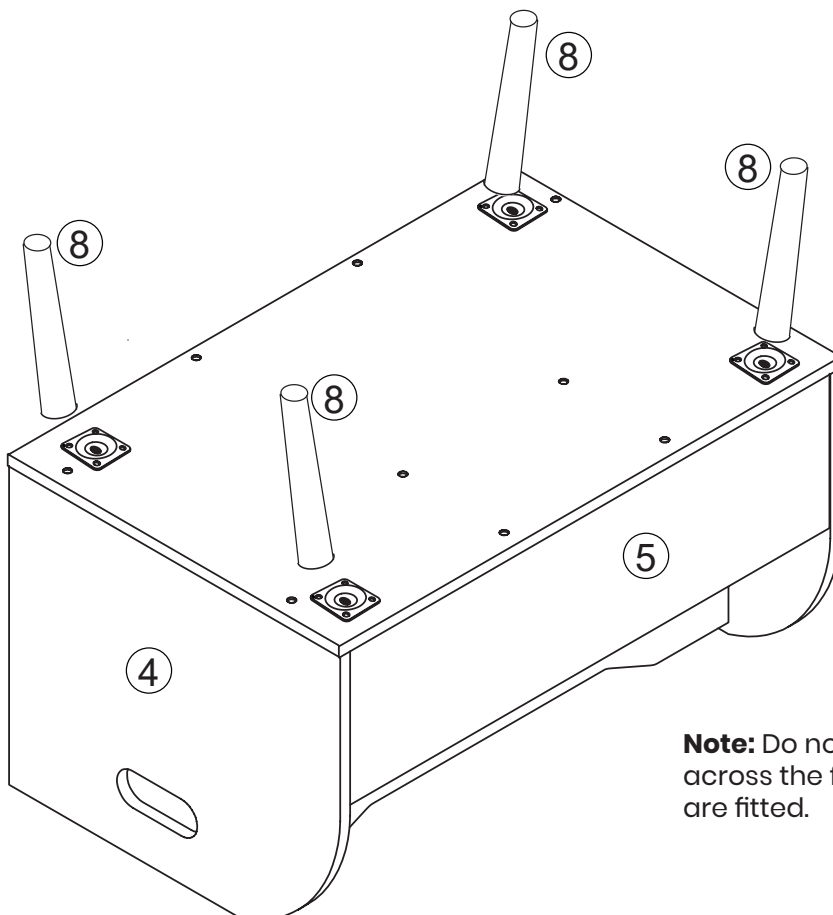

**Note:** Do not drag the unit across the floor after the legs are fitted.

7

**Tip:** Leave hinge screws slightly loose until the doors are aligned.

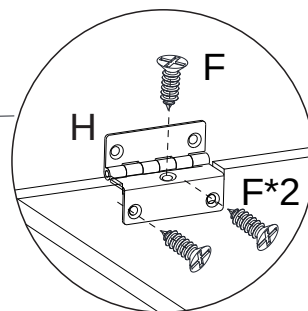
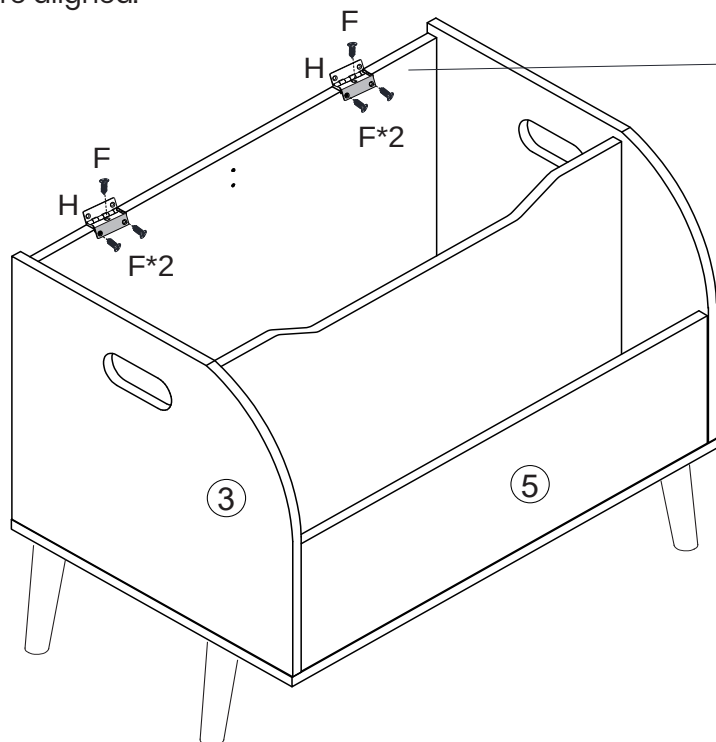



| F                                                                                   | x6 |
|-------------------------------------------------------------------------------------|----|
|  |    |

| H                                                                                   | x2 |
|-------------------------------------------------------------------------------------|----|
|  |    |

8

**Tip:** Check the hinges are aligned and moving smoothly before tightening.

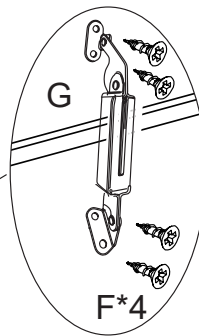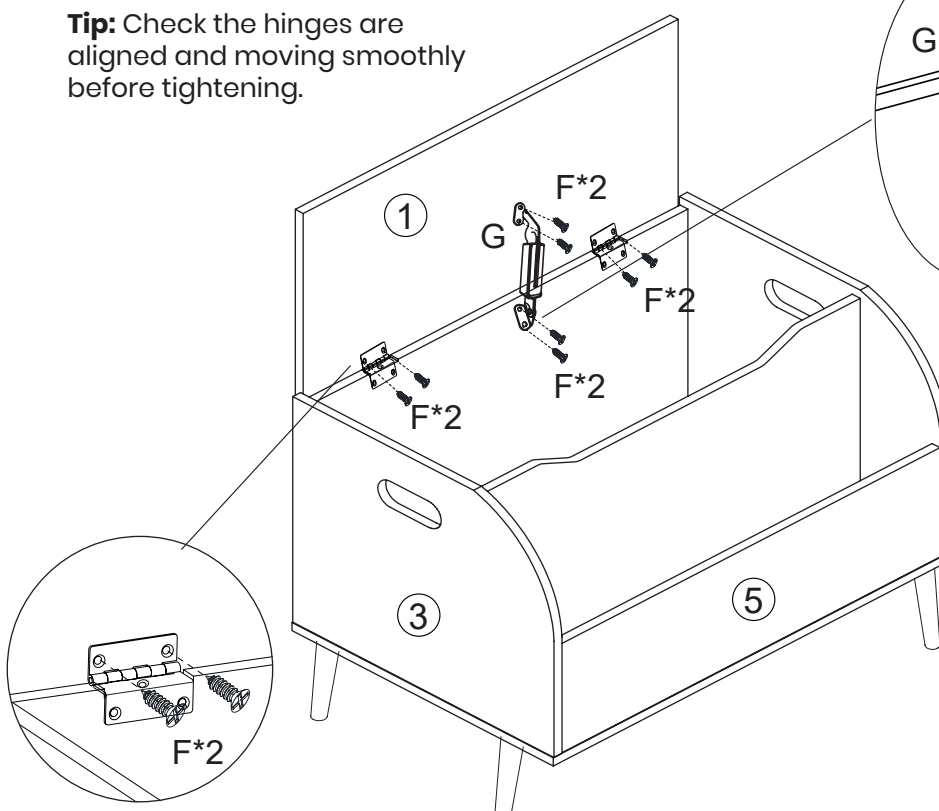
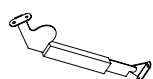
| G                                                                                     | x1 |
|---------------------------------------------------------------------------------------|----|
|  |    |

| F                                                                                     | x8 |
|---------------------------------------------------------------------------------------|----|
|  |    |

#### FINAL ASSEMBLY CHECK:

Confirm that all twelve cam locks are engaged, every screw is tight, all four legs are secure, and the lid support controls the lid. Do not use the product until it is stable and all fittings have been checked.

## IV. CARE AND MAINTENANCE

| Task               | Recommended Method                                                                                                                   |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Routine Cleaning   | Wipe with a soft, dry cloth. For marks, use a lightly damp cloth with mild detergent, then dry immediately.                          |
| Avoid Damage       | Do not use abrasive pads, bleach, solvents, furniture polish or harsh chemical cleaners. Do not saturate the panels with water.      |
| Hardware Check     | Check cam locks, screws, hinges, mounting plates and legs after initial use, then regularly. Tighten any loose fittings by hand.     |
| Lid Mechanism      | Inspect the hinges and lid support for looseness, bending, cracking or abnormal movement. Stop use until damaged parts are replaced. |
| Surface Protection | Keep away from prolonged direct sunlight, high humidity, heaters and open flames. Use the product only in a dry indoor area.         |
| Moving or Storage  | Empty the unit before moving. Store flat and dry if disassembled, and keep all hardware together in a labelled bag.                  |

## V. STORAGE AND TROUBLESHOOTING

### Storage

If the product is not in use, clean and dry all surfaces before storage. Keep it in a dry indoor location away from moisture and temperature extremes. Do not stack heavy items on top of the lid.

| Issue                                 | Action                                                                                               |
|---------------------------------------|------------------------------------------------------------------------------------------------------|
| Unit rocks or is uneven               | Move to a level surface and confirm each leg is fully threaded into its mounting plate.              |
| Panels feel loose                     | Empty the unit and retighten the relevant cam locks and screws.                                      |
| Lid drops, sticks or twists           | Stop use. Check hinge alignment and lid-support screws. Replace damaged hardware before further use. |
| Cracked, swollen or delaminated panel | If issue is not cosmetic, check with supplier for replacement part.                                  |
| Missing fastener or fitting           | Do not substitute unsuitable hardware. Obtain the correct replacement part before use.               |



### DO NOT MODIFY THE PRODUCT

Drilling new holes, removing structural panels, changing the hinges or substituting the lid support may reduce stability and create pinch or collapse hazards.

---

## VI. WARRANTY

### AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **[www.consumerlaw.gov.au](http://www.consumerlaw.gov.au)**.

Please visit our website to view our full warranty terms and conditions:  
**[www.lifespankids.com.au/Warranty-Policy-Kids](http://www.lifespankids.com.au/Warranty-Policy-Kids)**

### WARRANTY AND SUPPORT

Please email us at **[support@lifespankids.com.au](mailto:support@lifespankids.com.au)** for all warranty or support issues.

For all warranty or support related enquiries, please lodge a support ticket first by sending us an email.  
**[support@lifespankids.com.au](mailto:support@lifespankids.com.au)**.

---

## VII. SECURITY SUPPORT INFORMATION

### **Reporting**

To report a cyber security issue, please email **[support@gflgroup.com.au](mailto:support@gflgroup.com.au)** with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

### **Device Support Period**

This product will receive security updates for a minimum of 12 months from the date of purchase.





