


USER MANUAL

LK388 Harlow Indoor Washing Machine

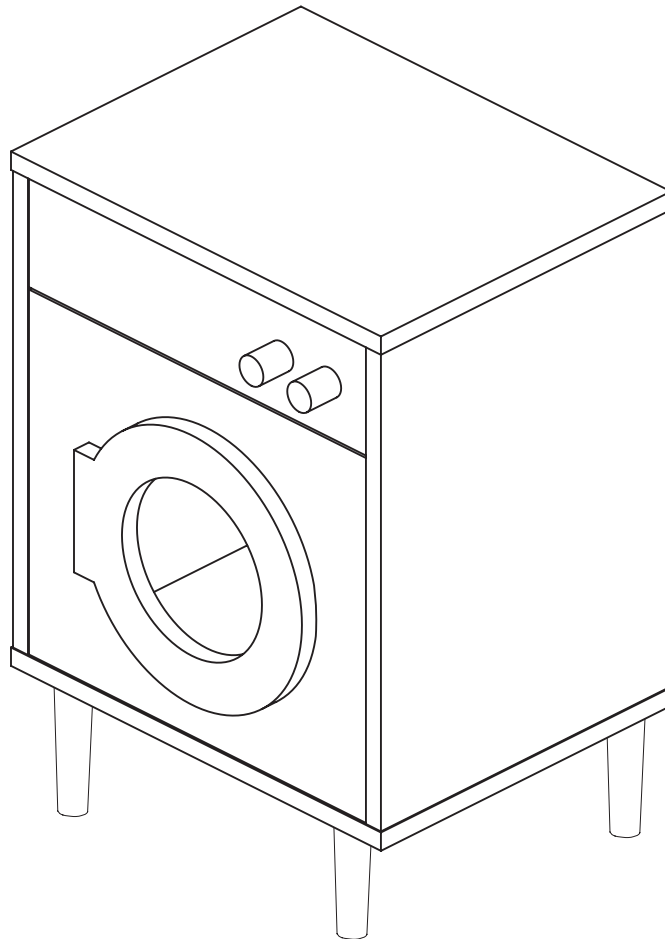

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. SAFETY INSTRUCTIONS	3
II. INTENDED USE	3
III. BEFORE ASSEMBLY	4
IV. ASSEMBLY INSTRUCTIONS	5
V. MAINTENANCE	10
V. WARRANTY	12

I. SAFETY INFORMATION



WARNING

- Adult assembly is required.
- Adult supervision is required during use.
- Unassembled parts and hardware may present a choking hazard. Keep all small parts, screws, fittings and packaging away from children.
- Do not allow children to use the product until it has been fully assembled and inspected by an adult.
- This product is intended for indoor, domestic pretend play only.
- Do not add water, detergent, liquids, food or wet clothing to the product.
- Do not connect the product to electricity, plumbing or a household washing machine connection.
- Do not allow children to climb, sit, stand or lean heavily on the product.
- Do not use the product as a step, stool, seat or storage cabinet.
- Keep fingers clear of the door, hinges and other moving parts to prevent pinching.
- Do not allow children to slam, pull down on or hang from the door. Hinges can loosen and may require re-tightening.
- Place the washing machine on a flat, level and stable indoor surface.
- Keep the product away from stairs, doorways, heaters, fireplaces, direct heat and open flames.
- Do not use the product if any component is cracked, loose, damaged or missing.
- Remove all packaging before allowing children to play with the product.
- Plastic packaging must be disposed of immediately or stored safely away from children.

II. INTENDED USE

The Harlow Indoor Washing Machine encourages imaginative household and role play. Children can pretend to load clothes through the front door and operate the play controls.

Only use clean, dry and lightweight pretend-play items inside the washing machine. Do not place children, pets, heavy objects or liquids inside the product.

III. BEFORE ASSEMBLY

1. Choose a clean, spacious and level assembly area.
2. Protect the floor with cardboard, a rug or a soft blanket.
3. Carefully unpack all components.
4. Compare the contents with the parts and hardware list.
5. Keep small hardware away from children.
6. Do not use power tools unless specifically recommended. Excessive force may damage the panels or fittings.
7. Do not fully tighten fittings until the connected panels are correctly aligned.
8. Once assembly is complete, tighten all fittings securely without overtightening. A Phillips-head screwdriver may be required.

How to Lock the Cam Fittings

Step 1:

Screw cam bolt A into the indicated small pre-drilled hole until its shoulder is seated. Do not overtighten.

Step 2:

Insert cam lock B into the large round hole. Point the arrow/opening on the cam toward the hole where cam bolt A will enter.

Step 3:

Bring the panels together so the head of cam bolt A slides fully into cam lock B.

Step 4:


Turn cam lock B clockwise with a Phillips-head screwdriver until the joint is secure, usually about one-half turn. Stop when resistance is felt.

Cam Fitting Check

If a cam will not turn, do not force it. Separate the panels and confirm the cam arrow is facing the cam bolt entry hole and that the bolt is screwed to the correct depth.


IV. ASSEMBLY INSTRUCTIONS


PARTS LIST

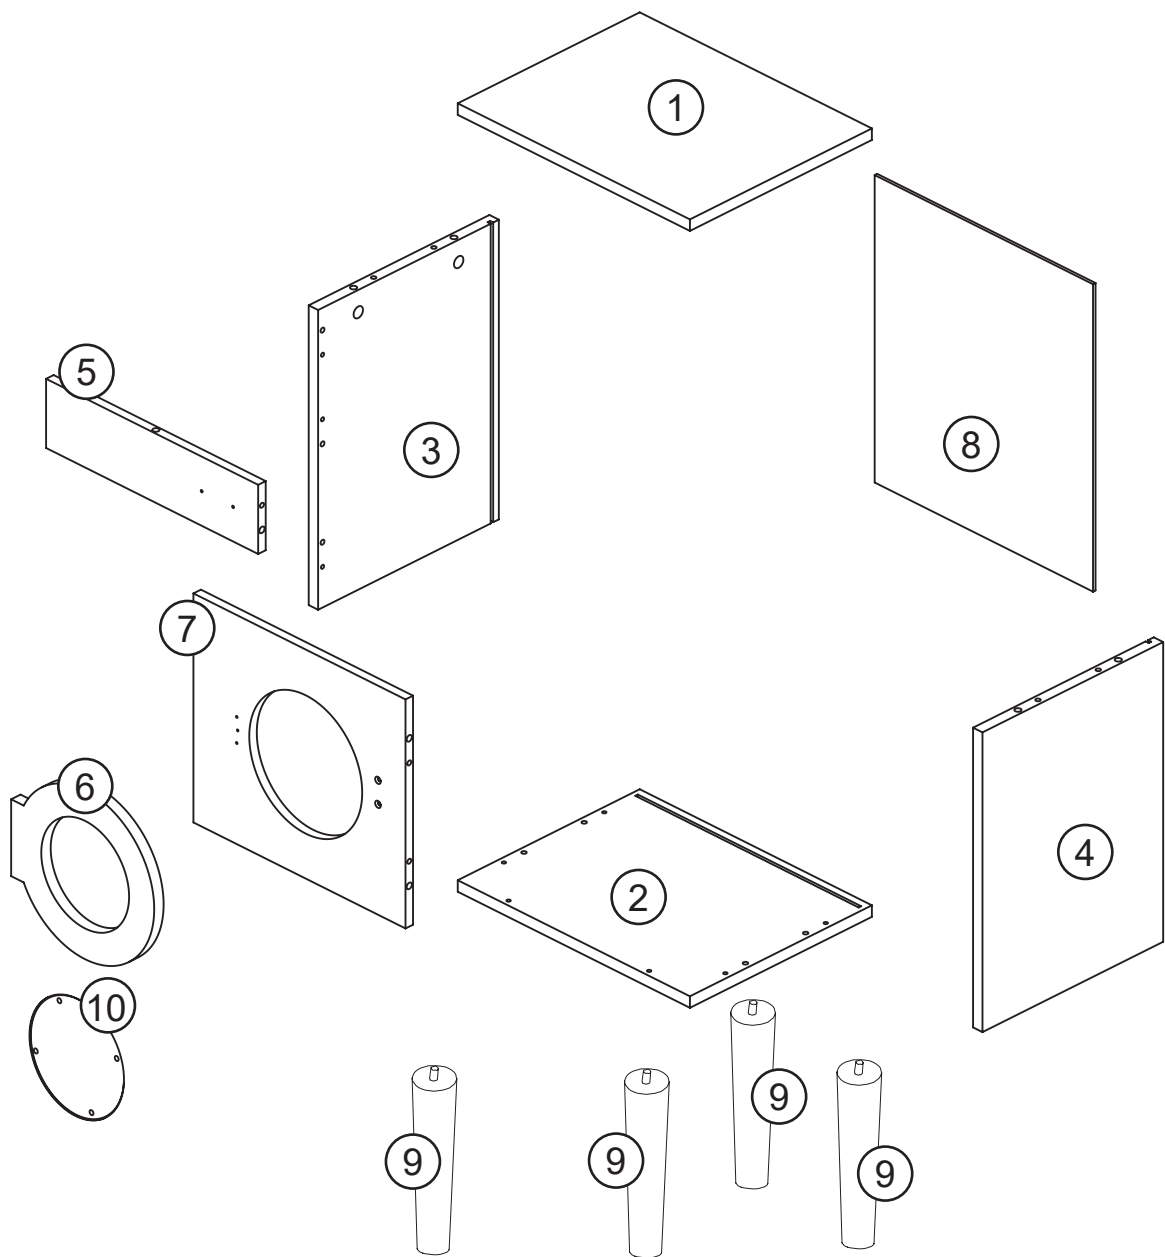


A	x11	B	x11	C	x14	D	x6	E	x4
F	x1	G	x2	H	x1	I	x10	J	x20


1

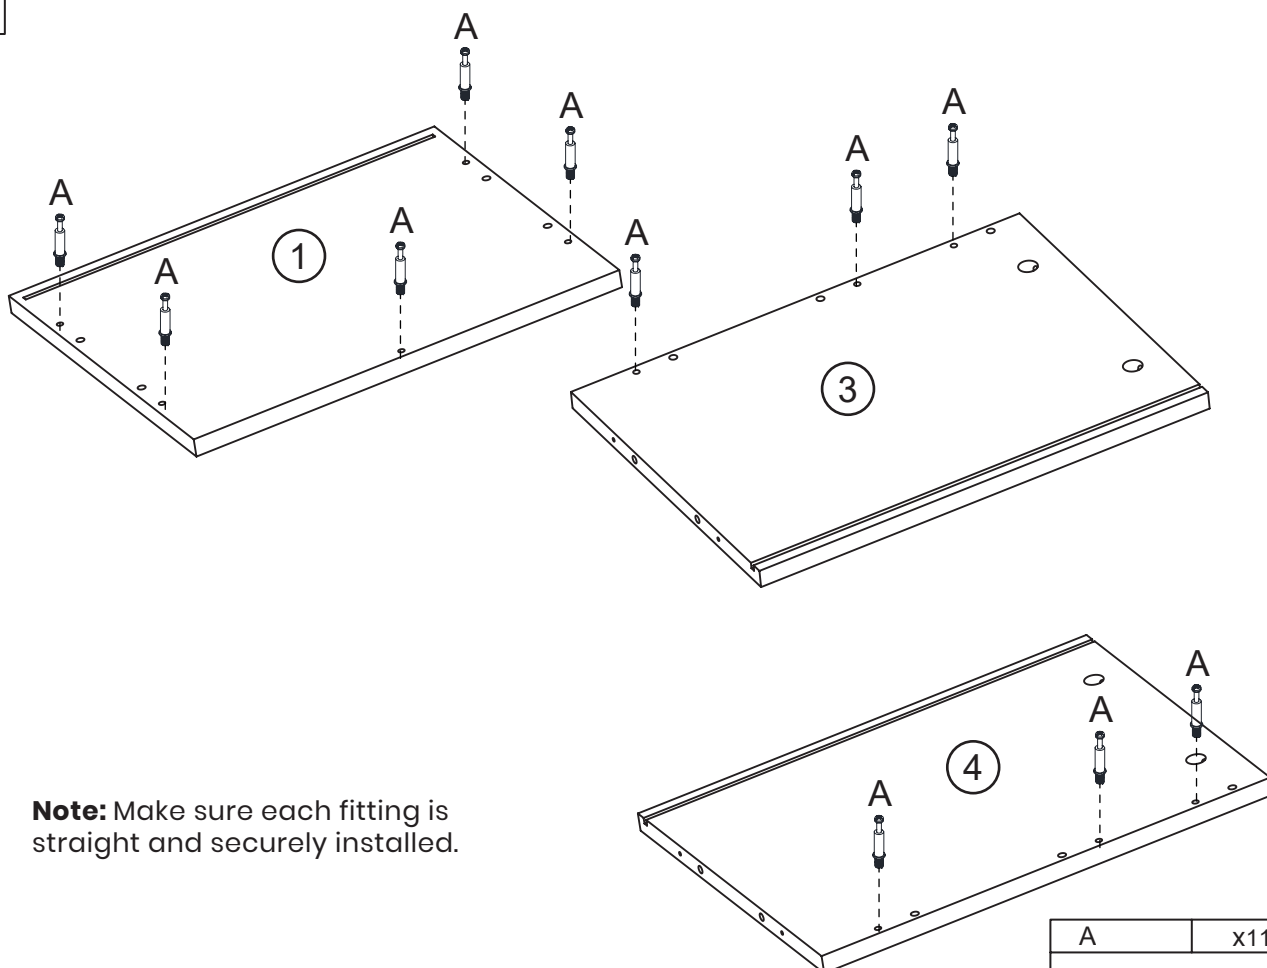


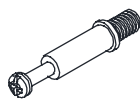A	x11
	

2

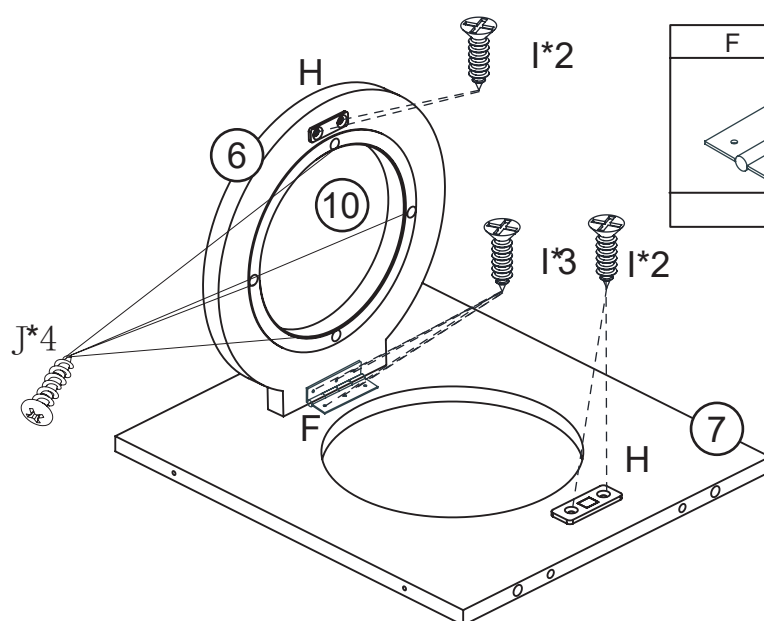

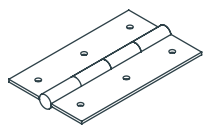F	x1
	




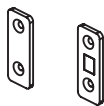
H	x1
	

I	x10
	




J	x4
	

3


Tip: Read the instructions on cam lock fitting to properly secure the panels.

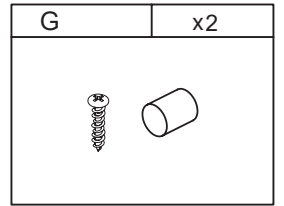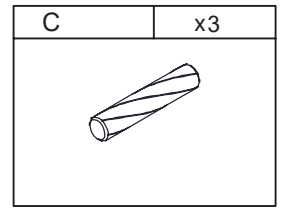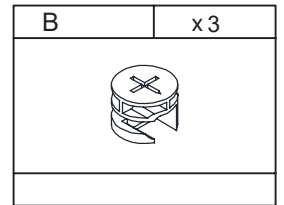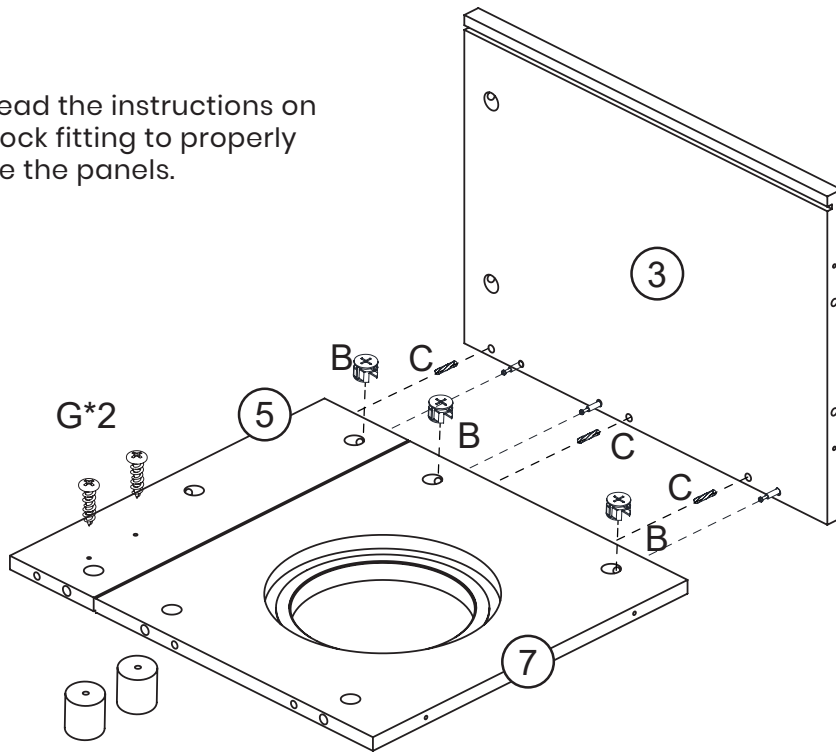

4

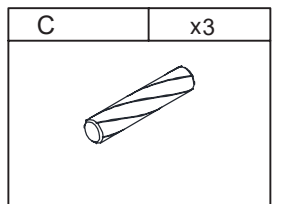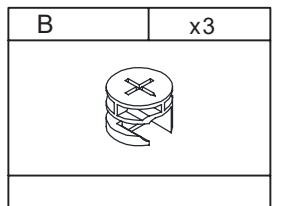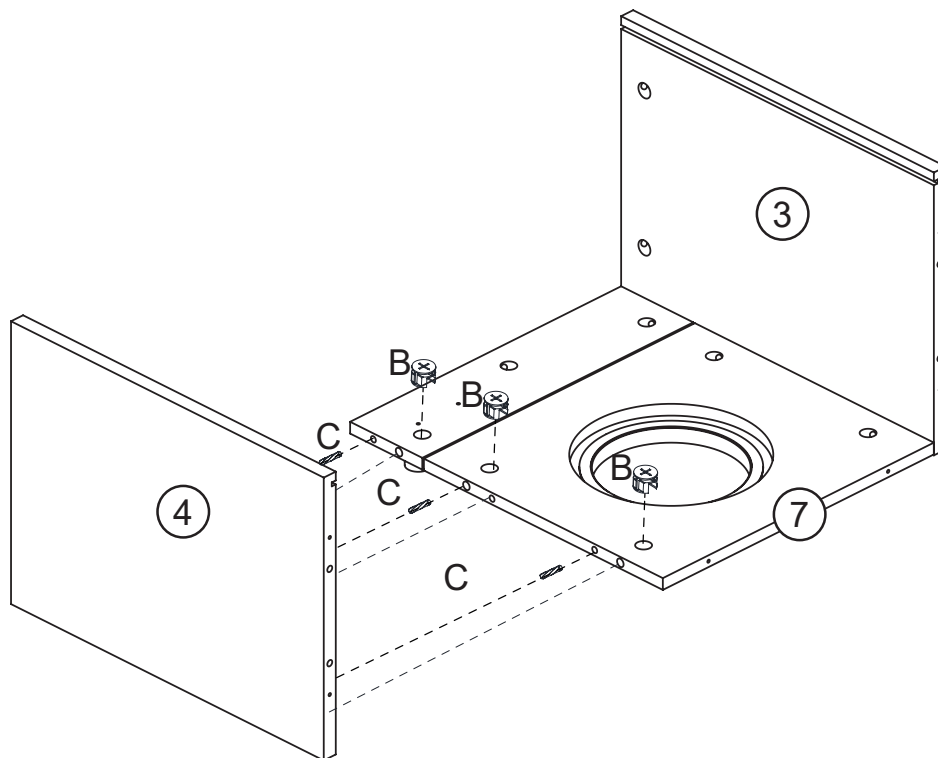


5

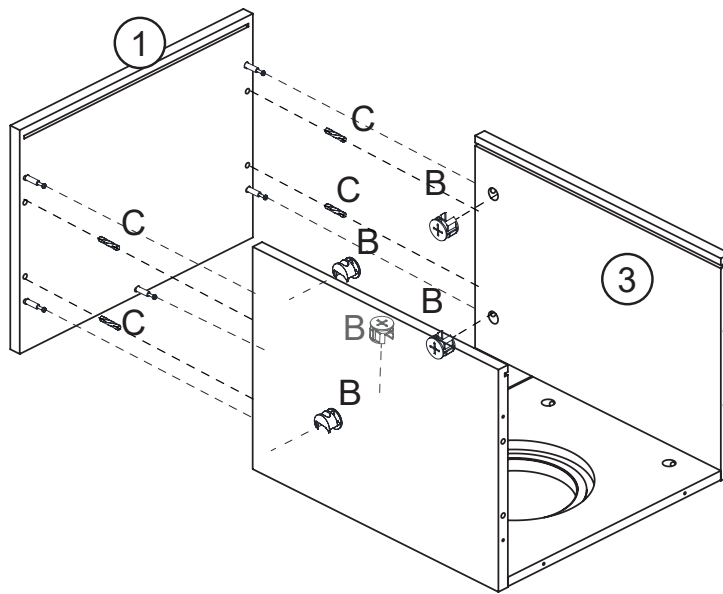




B	x5
	
C	x4
	

6



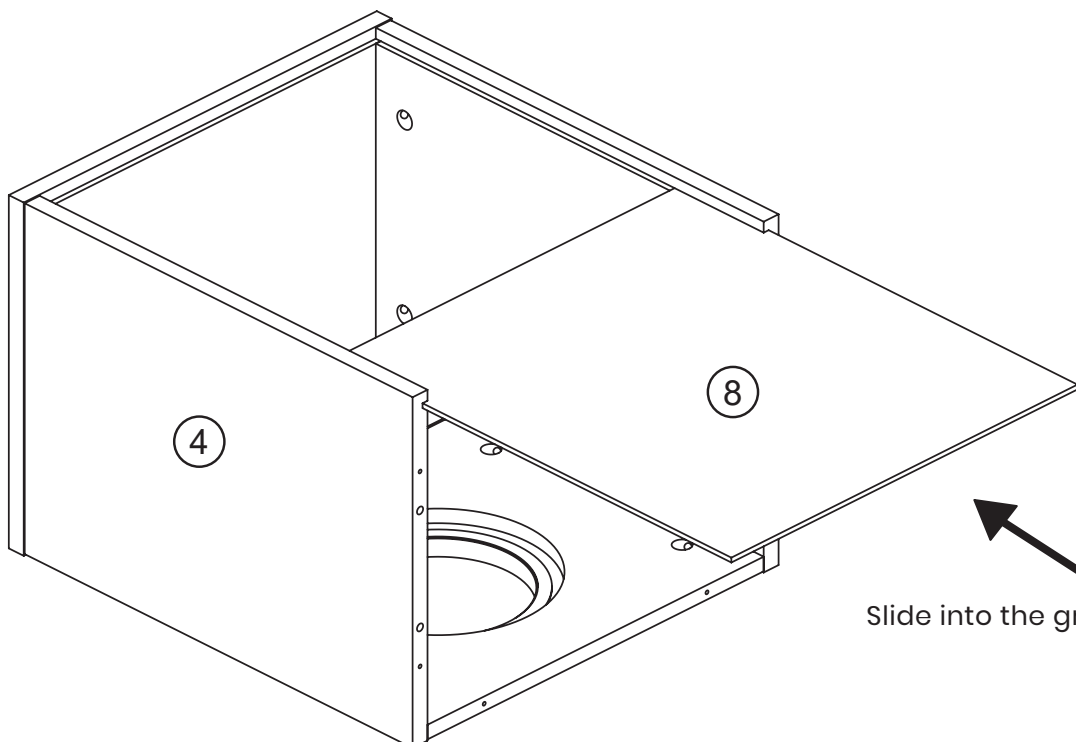


Slide into the grooves.

7

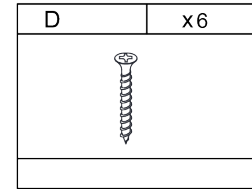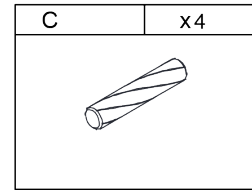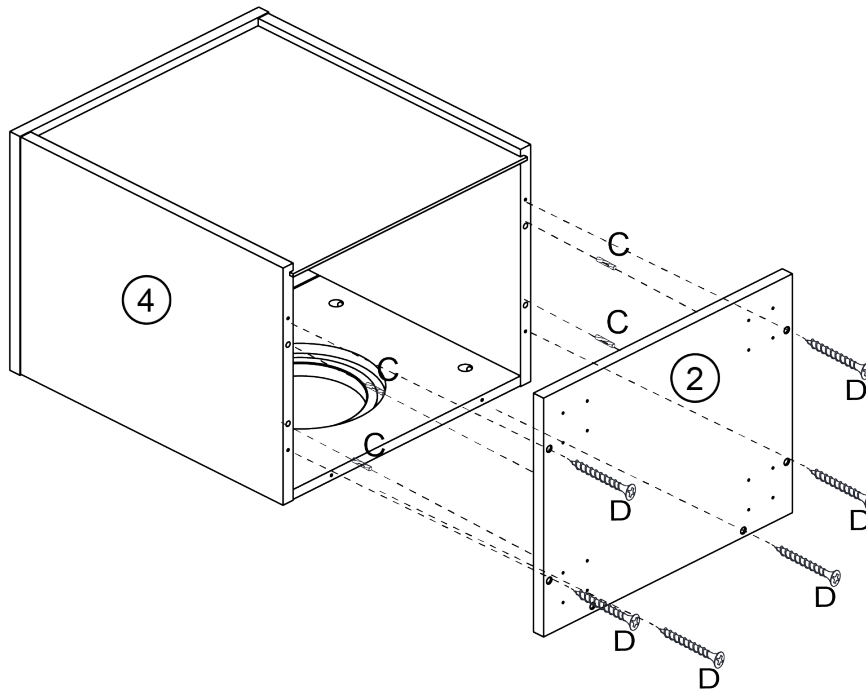

8

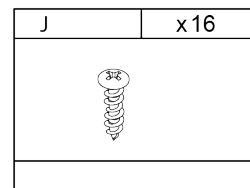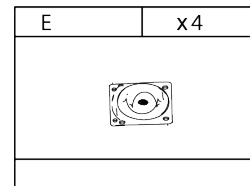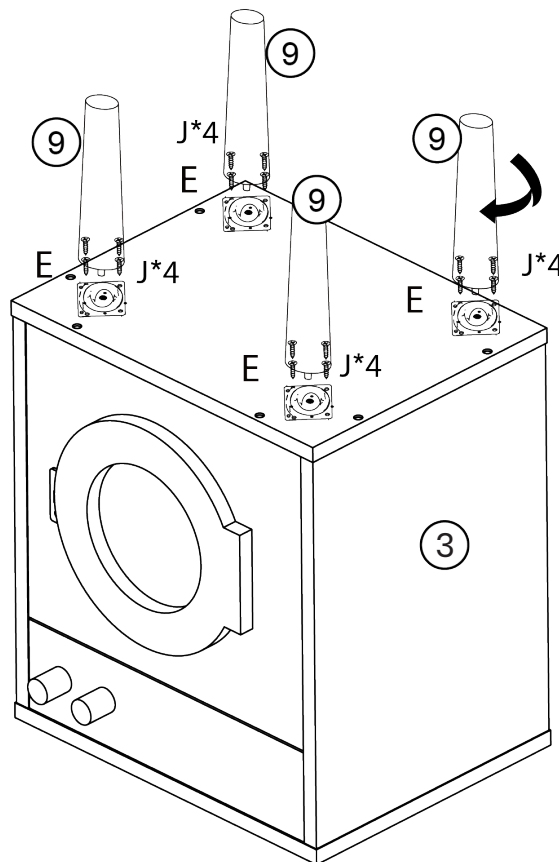

Secure (E) plate first
then mount the legs (9).

Final Check:
After turning the equipment to
its feet, check all screws are
tightened and the hinges are
operating smoothly.

V. MAINTENANCE

Inspect the product regularly and before each period of use.

Check for:

- Loose screws or fittings
- Loose legs
- Movement between connected panels
- Damage around the door and hinge
- Cracks, splits or sharp edges
- Peeling or damaged surface finishes
- Missing components

Tighten loose fittings as required. Do not overtighten.

Stop using the product immediately if it becomes unstable or damaged. Do not make temporary repairs using unsuitable screws, nails, tape or glue. Replacement parts should match the original components.

Moving and Storage

- Remove all toys and play items before moving the washing machine.
- Lift the product from its main frame with adult assistance.
- Do not drag the product across the floor.
- Do not lift or carry it by the door, knobs, legs or back panel.
- Store the product upright in a clean, dry and well-ventilated indoor location.
- Do not place heavy objects on top of the product.
- Keep the product away from prolonged direct sunlight, which may fade or damage the finish.

CARE AND CLEANING

General Cleaning

- Wipe the product with a soft, dry cloth after use.
- For minor marks, use a slightly damp cloth with a small amount of mild soap.
- Dry the surface immediately with a clean cloth.
- Do not soak the product or pour water directly onto any surface.
- Do not clean the product with a hose, pressure cleaner or steam cleaner.
- Do not use bleach, abrasive cleaners, solvents, alcohol-based cleaners or harsh chemicals.
- Do not use scouring pads or rough brushes, as these may damage the finish.

Test any cleaning product on a small, inconspicuous area before wider use.

Moisture Protection

This product is intended for dry indoor environments. Keep it away from bathrooms, laundries, outdoor areas and other locations where it may be exposed to moisture or humidity.

Immediately wipe away any spills. Continued exposure to water may cause the panels to swell, warp, stain or deteriorate.

VI. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Please email us at **support@lifespankids.com.au** for all warranty or support issues.

For all warranty or support related enquiries, please lodge a support ticket first by sending us an email. **support@lifespankids.com.au**.

SECURITY SUPPORT INFORMATION

Reporting

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

Device Support Period

This product will receive security updates for a minimum of 12 months from the date of purchase.

