


USER MANUAL

Climbing Rocks Set of 4

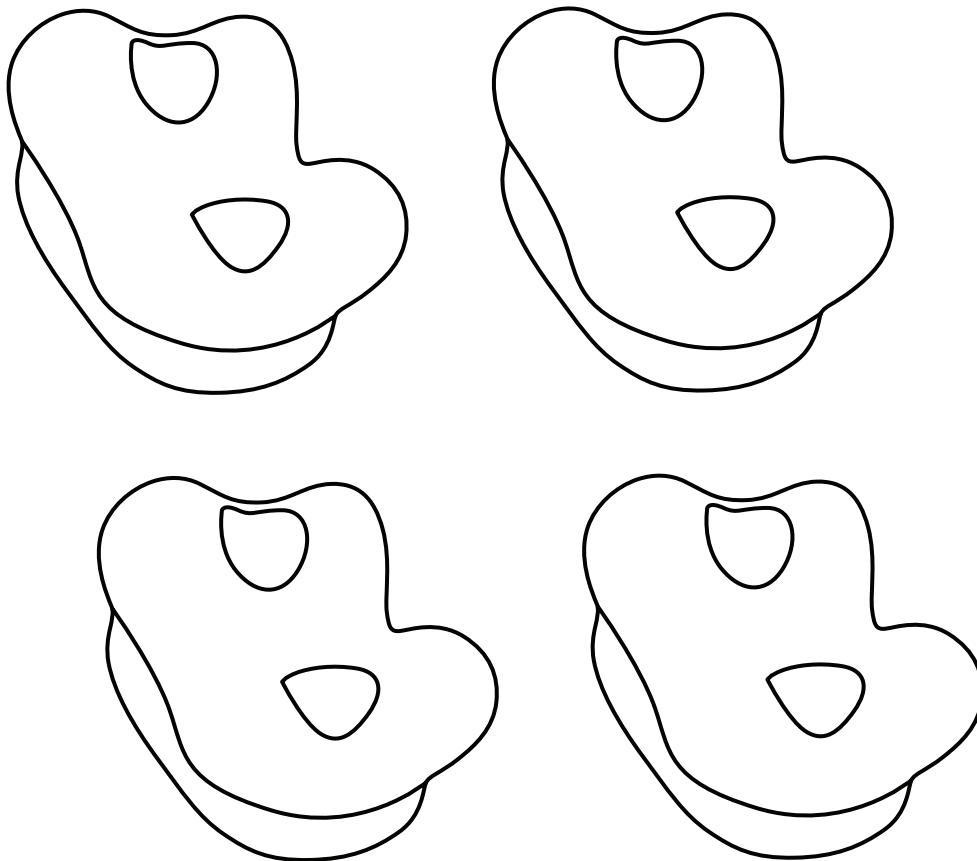

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

SAFETY INFORMATION

INTENDED USE

- For private domestic outdoor use only.
- Not suitable for public or commercial use.
- Designed for one user at a time.
- Suitable for children aged 3–12 years (max. 100 kg).

INSTALLATION SAFETY

- Install only onto a stable, secure structure.
- Ensure installation eliminates any risk of entrapment, collision, or falling hazards.
- Maintain adequate clearance from walls, fences, and other obstacles.
- Follow the correct installation method as per assembly instructions.

USER SAFETY

- Adult supervision is required at all times.
- Only allow use by children with appropriate strength and coordination.
- Instruct users on proper use before play.
- Do not attach additional items (e.g. ropes, chains, or accessories).

INSPECTION & MAINTENANCE

- Inspect every 1–3 months, depending on frequency of use.
- Check for:
 - Loose or missing bolts and fixings
 - Cracks or wear in climbing rocks
 - Damage to the supporting structure
- Tighten or replace any worn or damaged parts immediately.

WEATHER & STORAGE

- Do not use in extreme weather conditions.
- Surfaces may become unsafe in wet, icy, or frosty conditions.
- Remove and store in a dry, frost-free area during extended periods of non-use or winter.


WARNINGS

- Damaged or improperly installed equipment may cause serious injury.
- Failure to follow instructions may result in unsafe use.
- Always ensure the product is in good working condition before use.

LIABILITY

- No liability is accepted for damage or injury caused by:
 - Incorrect installation
 - Improper use
 - Failure to follow these instructions
- No liability for indirect or consequential loss or damage.

INSTALLATION

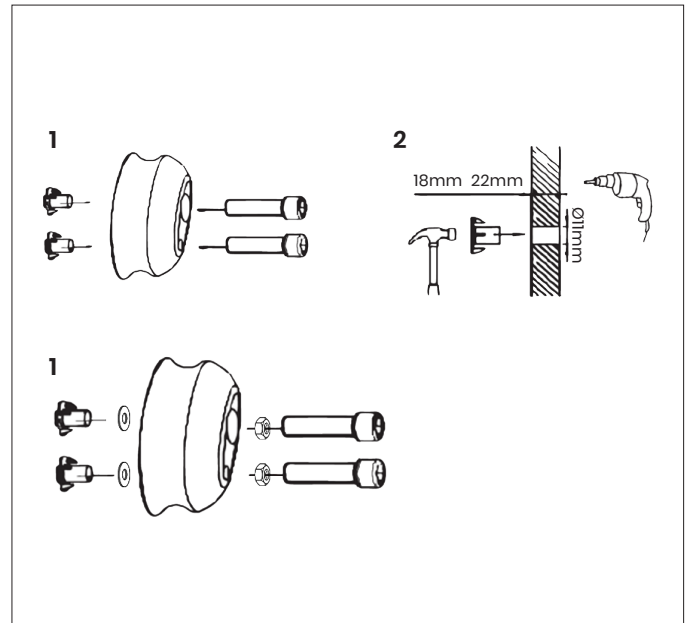

1. Each rock will have 2x bolts (with 2x washers each bolt) and 2x T-Nut.
2. Use the climbing rocks to mark the bolt holes. Use a power drill to make two $\Phi 11\text{mm}$ hole into the timber. Timber needs to be 18mm–22mm thick. Once the holes are made, hammer the T-nuts into the drilled out holes. Ensure the nut is fully gripping the wood.
3. Secure the 2x bolts: Place a washer, followed by the climbing then another washer and locking to the nut with Allen key. Tighten both bolts securely.

WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au.

Please visit our website to view our full warranty terms and conditions:

www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit www.lifespankids.com.au/warranty-form

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit www.lifespankids.com.au/warranty-form and fill in our Repair/Service Request Form or Parts Purchase Form.

SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email support@gflgroup.com.au with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.

