


USER MANUAL

Charlie 5-Tier Bookshelf

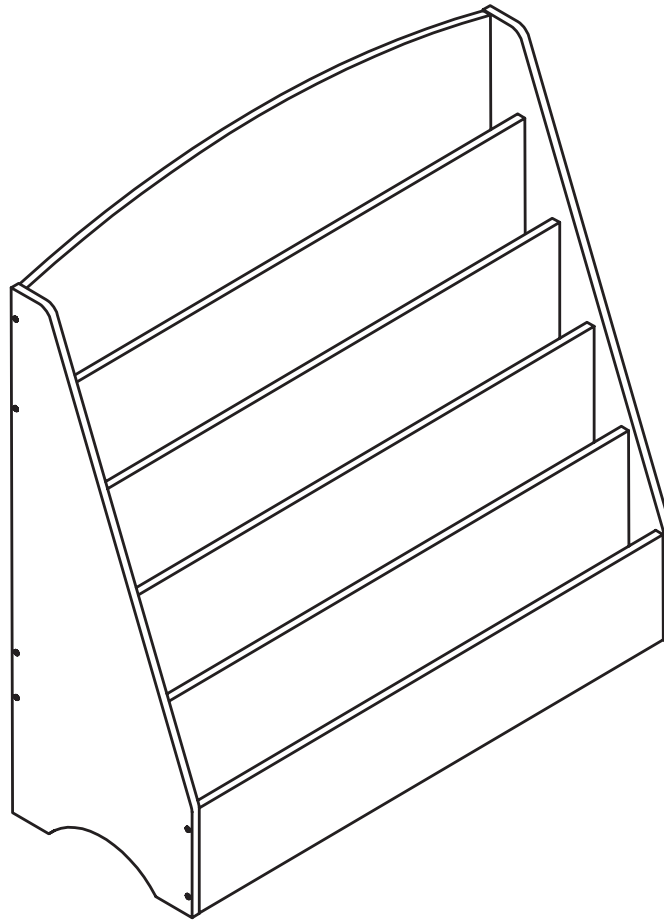

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. IMPORTANT SAFETY INFORMATION	3
II. BEFORE ASSEMBLY	4
III. PARTS LIST	5
IV. ASSEMBLY INSTRUCTIONS	6
V. SAFE USE, CARE AND MAINTENANCE	9
VI. WARRANTY	10
VII. SECURITY SUPPORT INFORMATION	11

I. IMPORTANT SAFETY INFORMATION



WARNING: This bookshelf must be securely anchored to a suitable wall using the supplied anti-tip brackets and wall fixings, or other fixings appropriate for your wall type. Never use the bookshelf without the wall anchors installed.

- Adult assembly and installation are required. Keep children and pets away from the assembly area.
- Unassembled hardware and small components may present a choking hazard. Keep all parts out of reach of children until assembly is complete.
- Place the bookshelf on a flat, stable and dry indoor surface. Do not place it on an uneven floor or where it may obstruct walkways or doorways.
- This product is furniture, not play equipment. Do not allow children to climb, sit, stand, swing, hang or pull on any part of the bookshelf.
- Do not place televisions, appliances or other heavy equipment on the bookshelf. Store larger and heavier books in the lower tiers and distribute the load evenly.
- Do not use the product if any panel, fastener, dowel, bracket or wall fixing is missing, loose, cracked or damaged.
- Keep the bookshelf away from open flames, heaters, high humidity, direct water exposure and prolonged direct sunlight.
- Do not modify the product or substitute structural hardware. Replacement parts should be suitable for the model and intended use.

WALL-FIXING SAFETY

- Before drilling, check the wall for concealed electrical cables, water pipes and other services.
- The supplied wall plugs may not be suitable for every wall. Select fixings that are appropriate for masonry, timber studs, plasterboard or other wall construction.
- Where possible, anchor into solid masonry or a timber stud. Do not rely on a screw driven directly into plasterboard without a suitable rated anchor.
- If you are unsure which fixings to use, seek advice from a qualified tradesperson.

INTENDED USE

The bookshelf is intended for the organised storage and display of books in an indoor domestic setting. Use it only as described in this manual.


II. BEFORE ASSEMBLY

- Check that all parts and hardware are present.
- Assemble the unit on a clean, soft surface close to its final position.
- A second adult is recommended to help align the panels and safely position the completed bookshelf.

TOOLS REQUIRED FOR WALL INSTALLATION

A suitable drill and drill bit, screwdriver, pencil, level and wall fixings appropriate for the wall construction may be required. The supplied Allen key is used for connector bolts A.


III. PARTS LIST

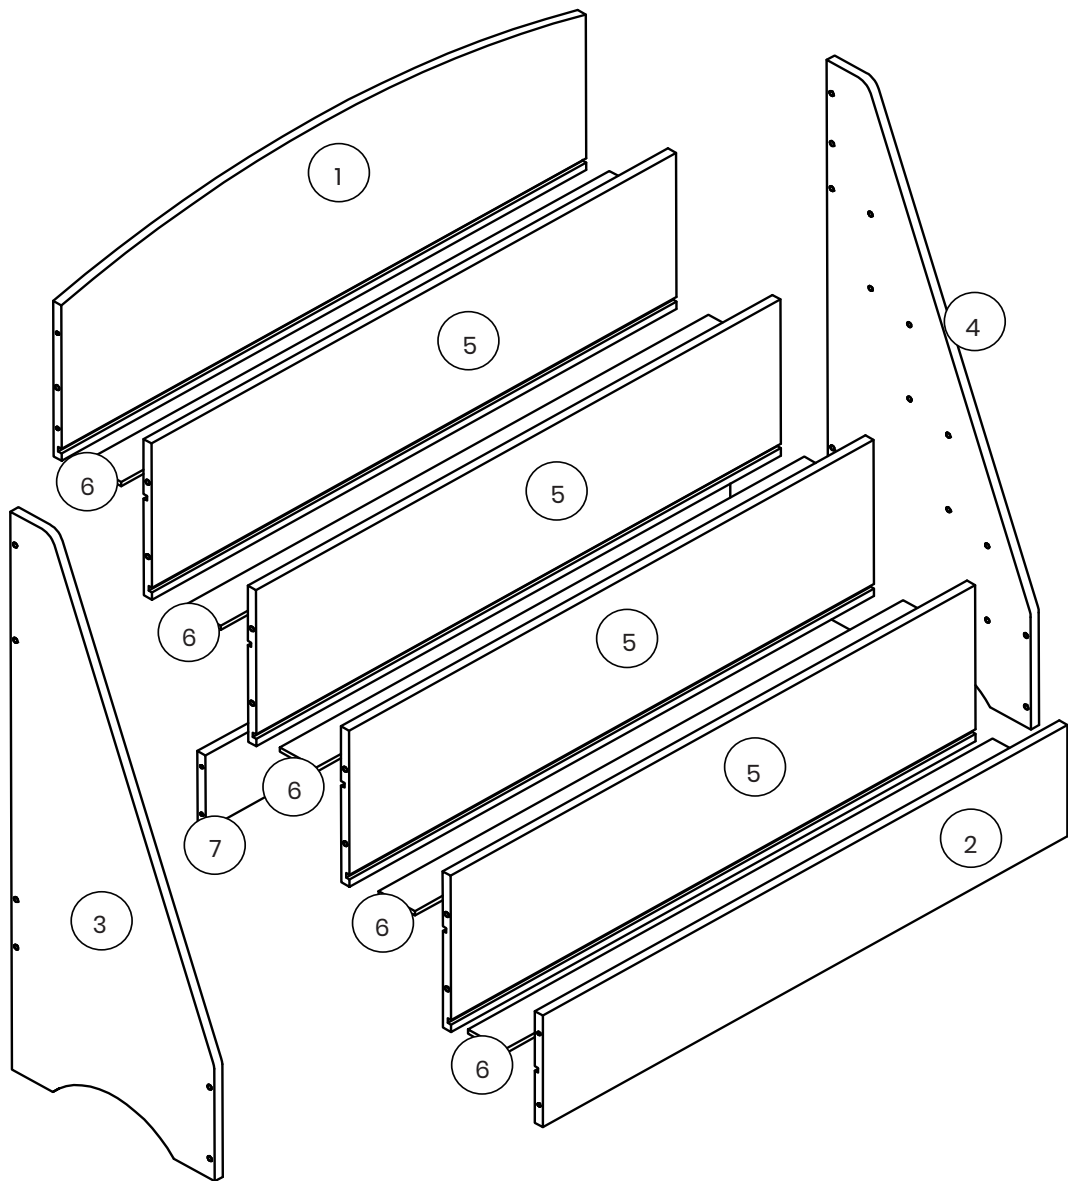

A x 12



B x 18

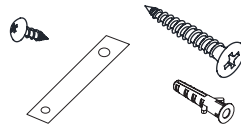

C x 2




D x 1

IV. ASSEMBLY INSTRUCTIONS


STEP 1

IMPORTANT: Insert dowels fully and align all pre-drilled holes before tightening the connector bolts. Start each bolt by hand, tighten evenly with the Allen key, and do not overtighten.

PANEL 1: The grooved section should face upwards to receive shelf components.

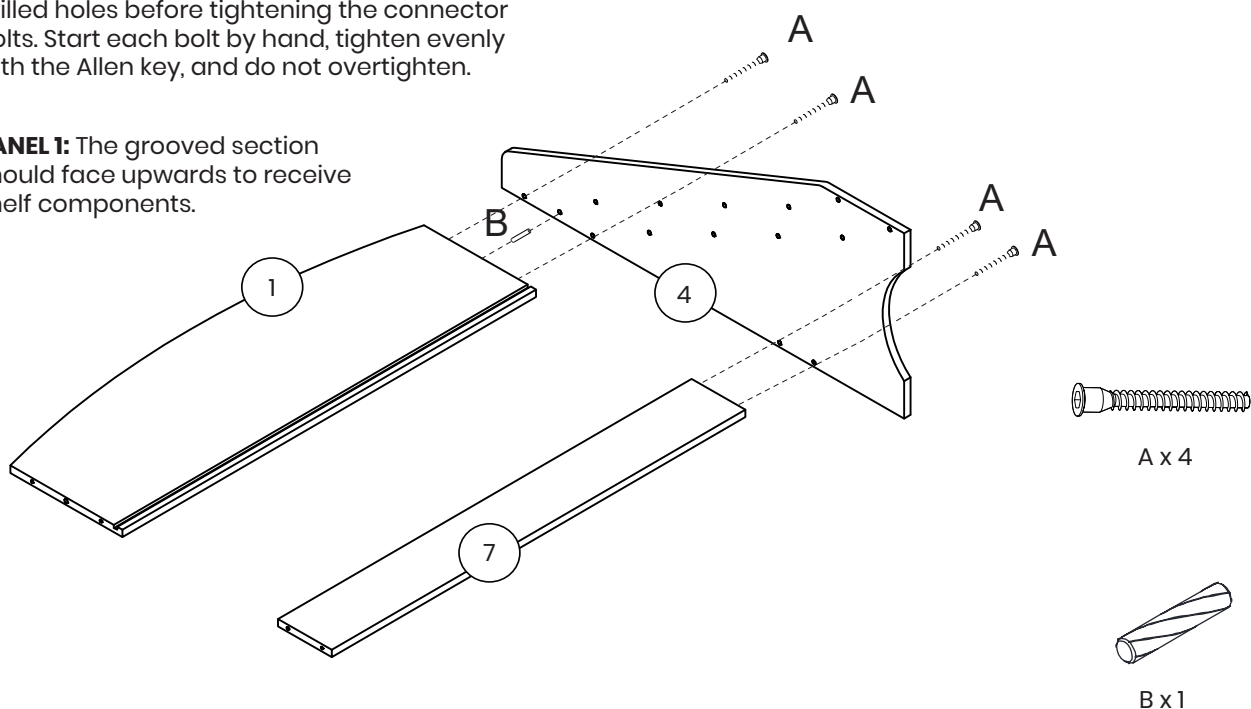


STEP 2

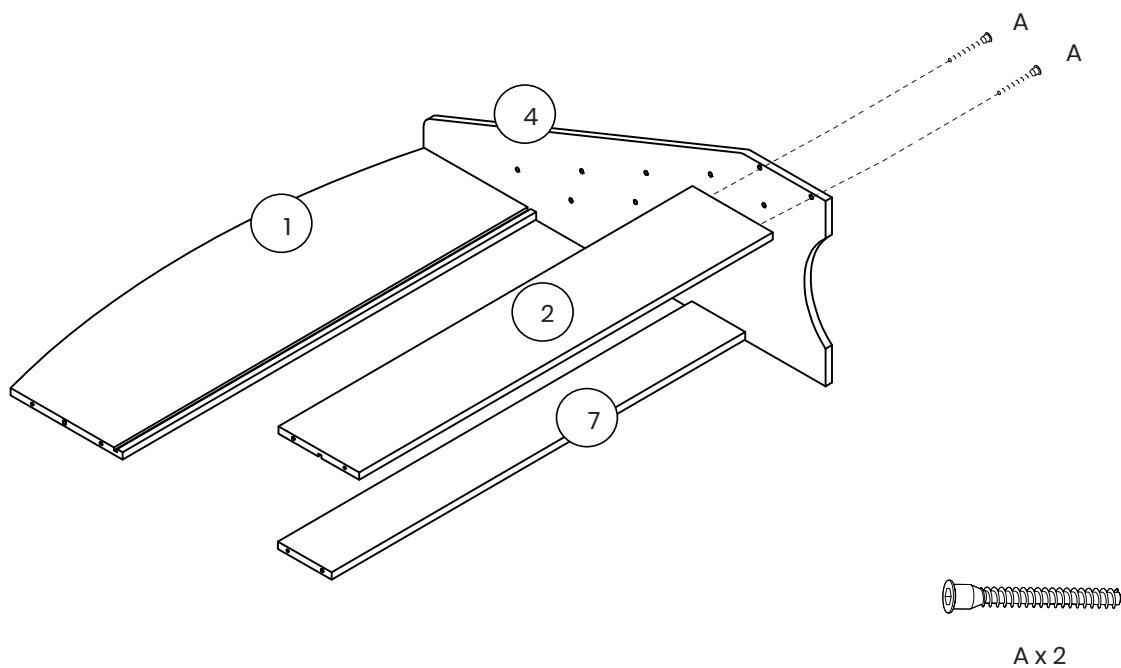


STEP 3

TIP: Take note of the direction of the grooves and ensure each panel is fully seated.

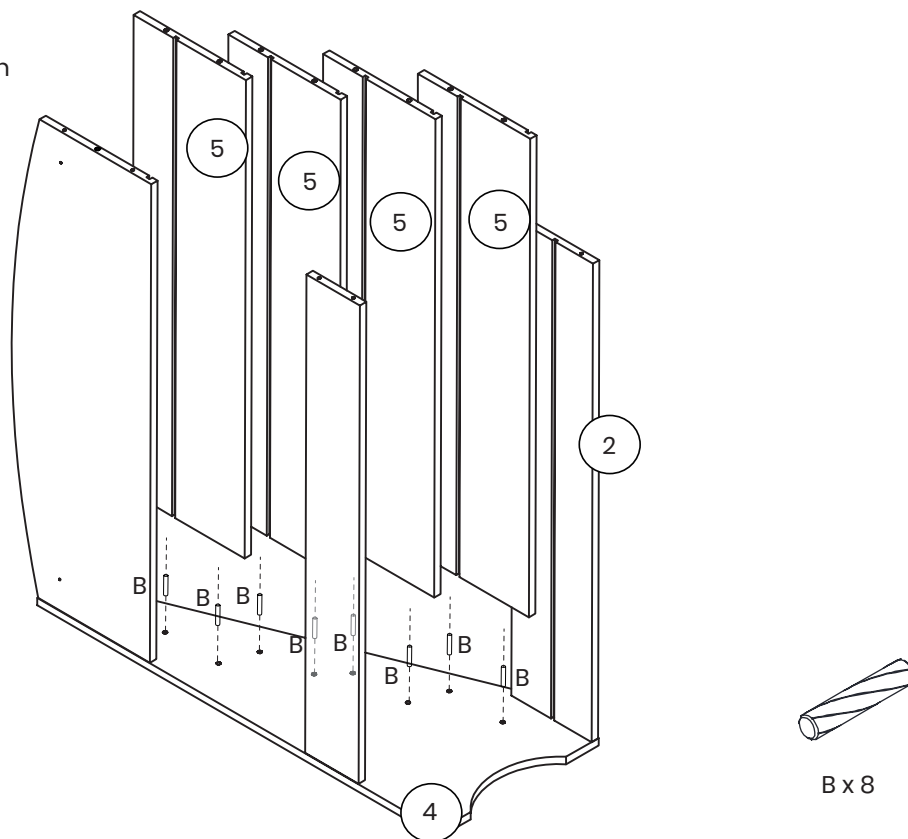


STEP 4

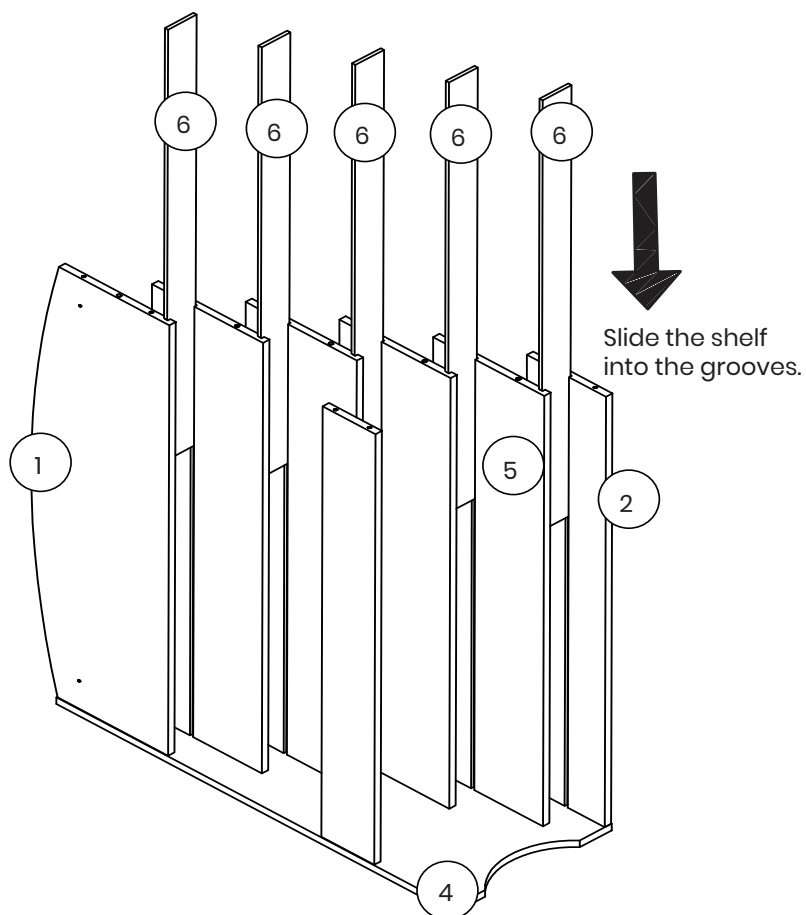

STEP 5

TIP: Before standing the unit upright, confirm that every dowel is fully engaged and all bolts are secure.

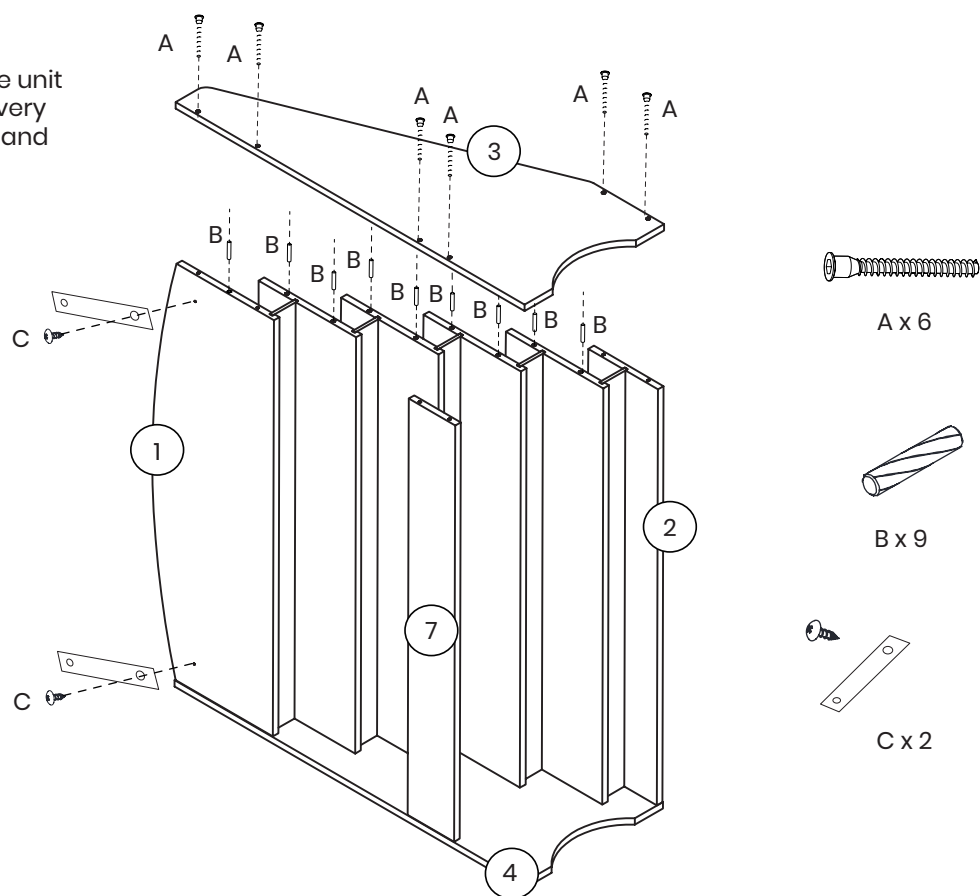


STEP 6

IMPORTANT: Check for hidden services, drill suitable pilot holes and install the correct wall plugs or anchors for the wall type.

TIP: The wall anchors are a permanent safety feature.

If the bookshelf is moved, it must be re-anchored before being used again.

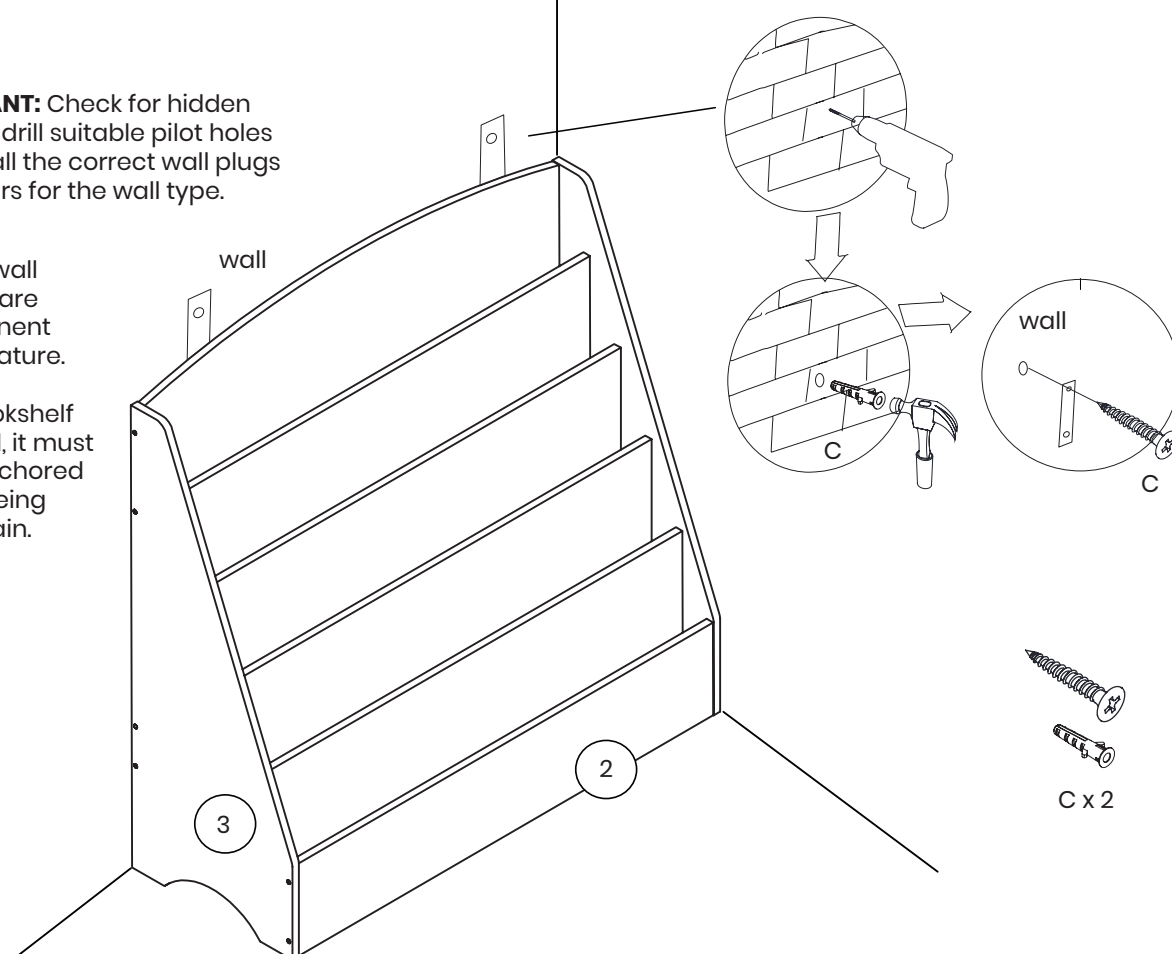

V. SAFE USE, CARE AND MAINTENANCE

SAFE LOADING AND EVERYDAY USE

- Place larger and heavier books in the lower tiers and lighter books in the upper tiers.
- Distribute books evenly from side to side. Do not overload any tier or force oversized items into the compartments.
- Keep books and other items within the edges of the bookshelf so they do not create a trip or impact hazard.
- Do not place drinks, plant pots or other items that may leak into the product.
- Supervise young children around the bookshelf and reinforce that it must not be climbed or used as seating.

CLEANING

- Dust regularly with soft, dry cloth.
- For marks, wipe with a soft cloth lightly dampened with water and a small amount of mild detergent. Dry immediately with a clean cloth.
- Do not soak the panels or allow water to remain in joints, grooves or around hardware.
- Do not use abrasive pads, scouring powders, bleach, solvents, strong chemicals, steam cleaners or furniture polish containing silicone.

INSPECTION AND MAINTENANCE

- Inspect the bookshelf after initial use and periodically thereafter. Tighten any loose connector bolts carefully.
- Check both anti-tip brackets and wall fixings regularly, particularly after the unit has been bumped, moved or heavily loaded.
- Check panels, dowels, grooves and edges for cracking, swelling, splintering or other damage. Stop using the product if damage affects stability or safe use.
- Do not drag the bookshelf. Empty it first, release the wall fixings and lift it with assistance. Re-anchor it immediately in the new position.
- Keep the product in a dry, ventilated indoor environment and away from direct heat and prolonged sunlight.

STOP USING THE PRODUCT IMMEDIATELY IF

The unit becomes unstable, the wall anchors loosen, panels crack or separate, hardware is missing, or any sharp edge becomes exposed. Keep children away until the issue has been corrected or the affected part has been replaced.

VI. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:

www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit **www.lifespankids.com.au/warranty-form**

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit **www.lifespankids.com.au/warranty-form** and fill in our Repair/Service Request Form or Parts Purchase Form.

VII. SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue. We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.

