


USER MANUAL

Harper Toy Box with Seating Bench

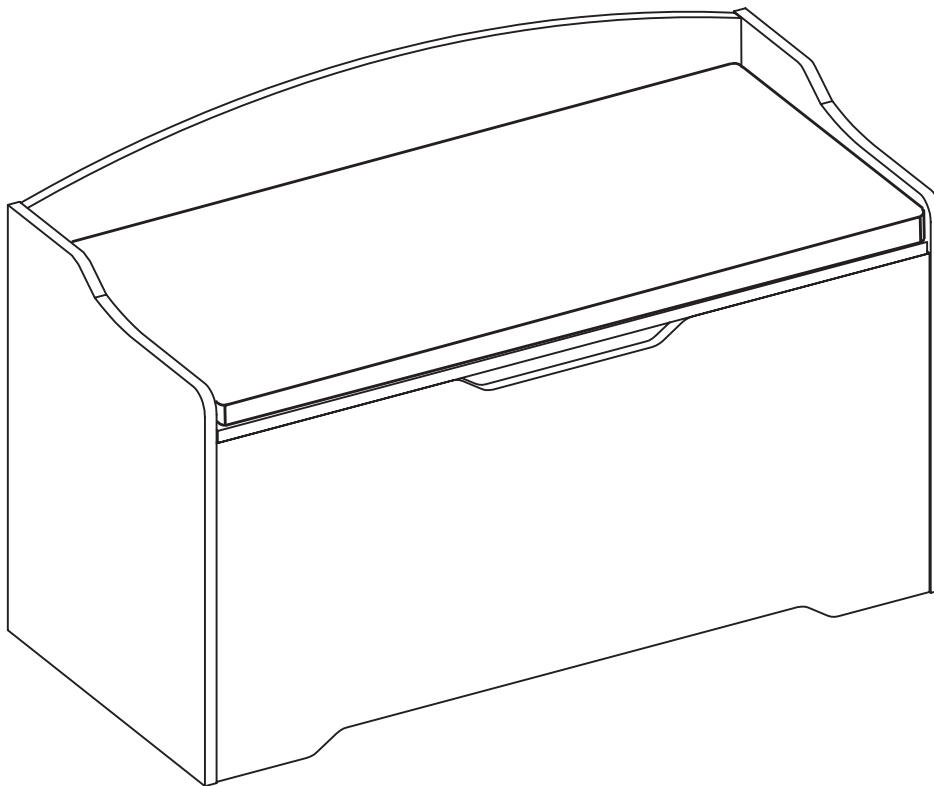

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. IMPORTANT SAFETY INFORMATION	3
II. BEFORE ASSEMBLY	4
III. PARTS LIST	5
IV. ASSEMBLY INSTRUCTIONS	6
V. CLEANING AND MAINTENANCE	12
VI. STORAGE	13
VII. WARRANTY	14
VIII. SECURITY SUPPORT INFORMATION	15

I. IMPORTANT SAFETY INFORMATION



WARNING: Failure to follow these instructions may result in injury or damage to the product.

- Adult assembly and supervision are required.
- Keep children away from the assembly area until the product is completely assembled.
- Small hardware components present a choking hazard. Keep all screws, cam fittings, dowels and packaging materials away from children.
- Assemble the product on a clean, level and protected surface.
- Do not use the toy box until all screws, hinges, cam fittings and the lid support are correctly installed and securely tightened.
- Place the product on a firm, flat and level floor.
- Do not allow children to stand, jump or climb on the seat, lid, side panels or back panel.
- Do not allow children to sit on the lid while it is open.
- Keep hands and fingers clear of the hinges and the area between the lid and storage box when opening or closing the lid.
- Always open and close the lid using the designated hand opening.
- Do not force the lid beyond its normal opening range.
- Do not remove, disconnect or modify the lid support mechanism.
- Do not allow children to climb inside the storage compartment.
- Never lock or secure a child inside the toy box.
- Do not place the product near stairs, windows, heaters, fireplaces or other hazards.
- Do not place heavy, sharp, hot, wet or hazardous items inside the toy box.
- Distribute stored items evenly. Do not overload the storage compartment.
- Only sit on the designated cushioned seating surface when the lid is fully closed.
- Inspect the product regularly. Stop using it immediately if any panel, hinge, screw, cam fitting or lid support becomes loose, damaged or missing.
- Only use replacement components approved for this product.

INTENDED USE

The Harper Toy Box with Seating is designed for indoor household use as:

- A storage box for children's toys and lightweight play items.
- A child-sized seat when the lid is fully closed and the cushion is correctly fitted.

This product is not designed for outdoor use, commercial use, sleeping, standing or climbing.

II. BEFORE ASSEMBLY

 

1. Remove all components from the packaging.
2. Check that all panels and hardware are present.
3. Check each component for transport damage.
4. Place the components on a soft surface to prevent scratches.
5. Do not fully tighten all fittings until the connected panels are correctly aligned.
6. Dispose of plastic bags and packaging promptly and keep them away from children.

USING THE CAM FITTINGS

Cam fittings consist of a cam bolt (A) and a cam lock (B).

1. Screw the cam bolt into the pre-drilled hole until the shoulder of the bolt sits against the panel. Do not overtighten.
2. Insert the round cam lock into the larger hole in the adjoining panel.
3. Position the arrow or opening on the cam lock so it faces the cam bolt.
4. Join the two panels, ensuring the head of the cam bolt enters the cam lock.
5. Turn the cam lock clockwise with a Phillips-head screwdriver until the panels are pulled firmly together.
6. Stop when the fitting is secure. Do not force or overtighten the cam lock.


III. PARTS LIST

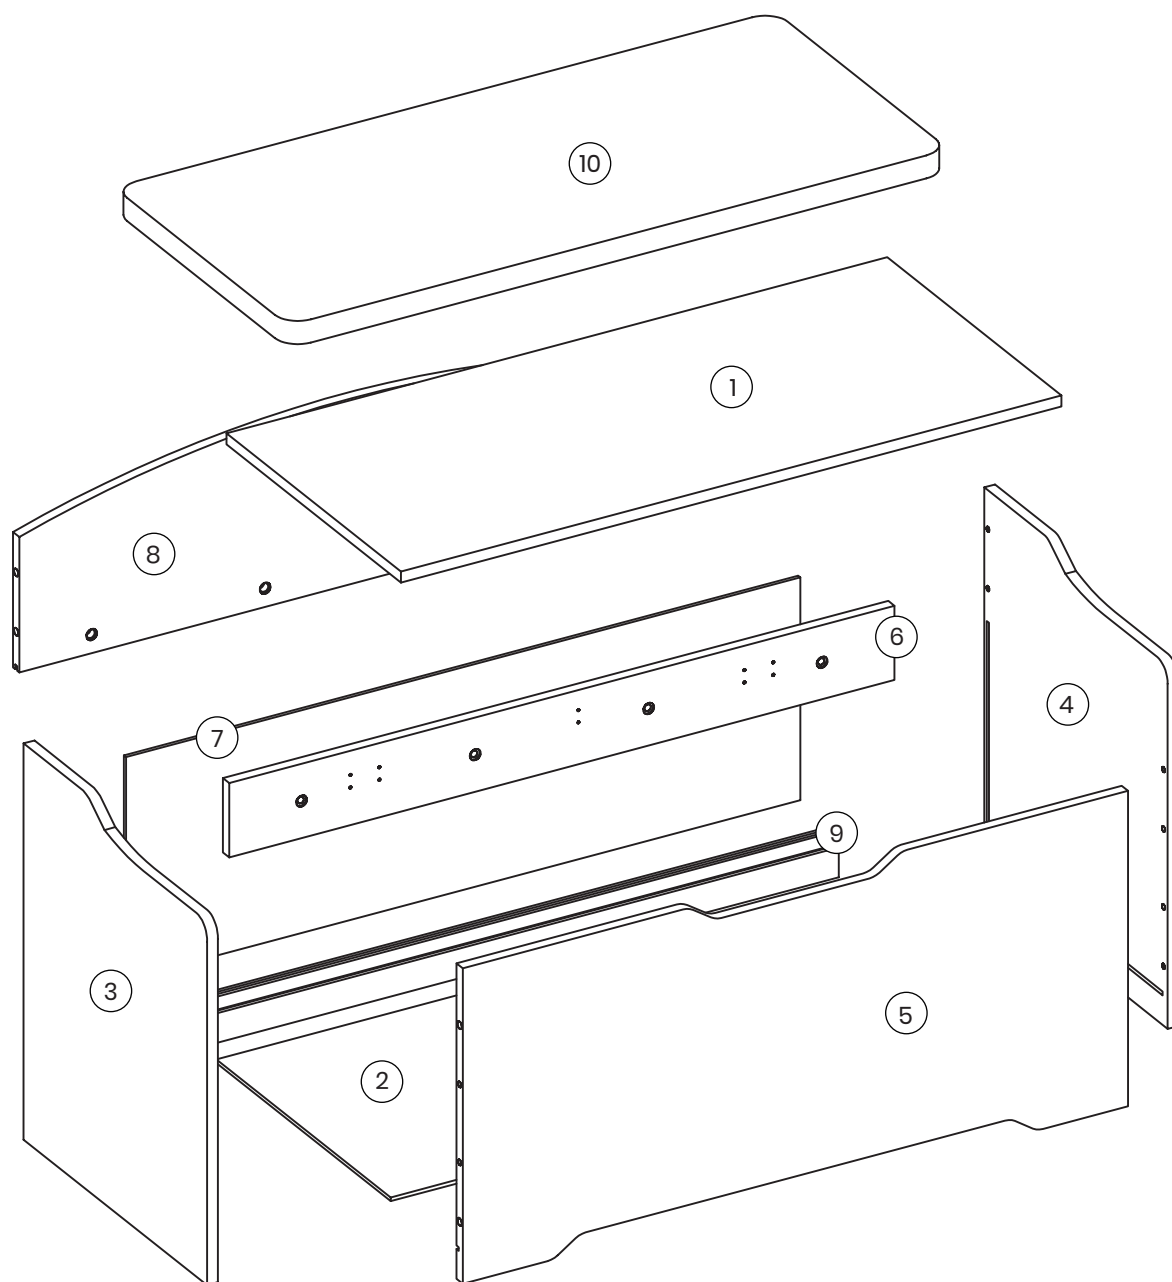

A x 10



 
B x 10



C x 4
(6 x 30)



 
D x 4
(6 x 16)



E x 2



 
F x 16
(3.5 x 12)




G x 1

STEP 1


TIP: Read the instruction on how to attach cam lock in this manual.

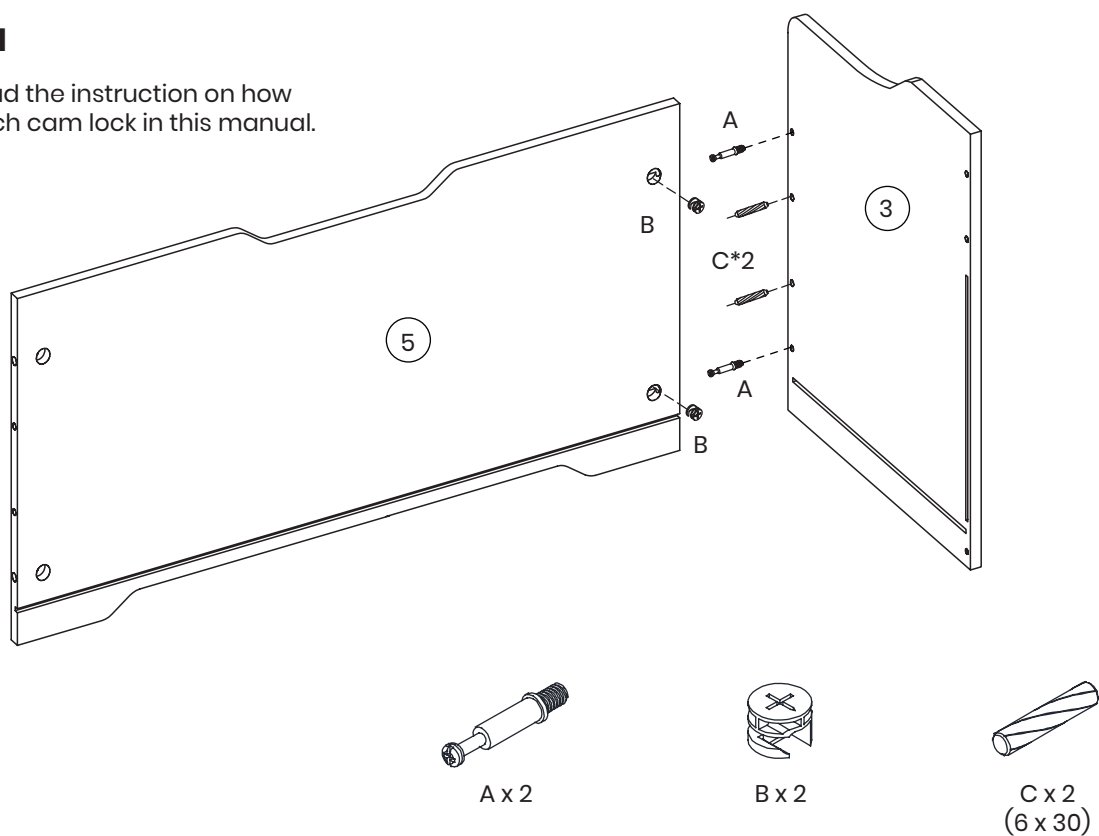

STEP 2


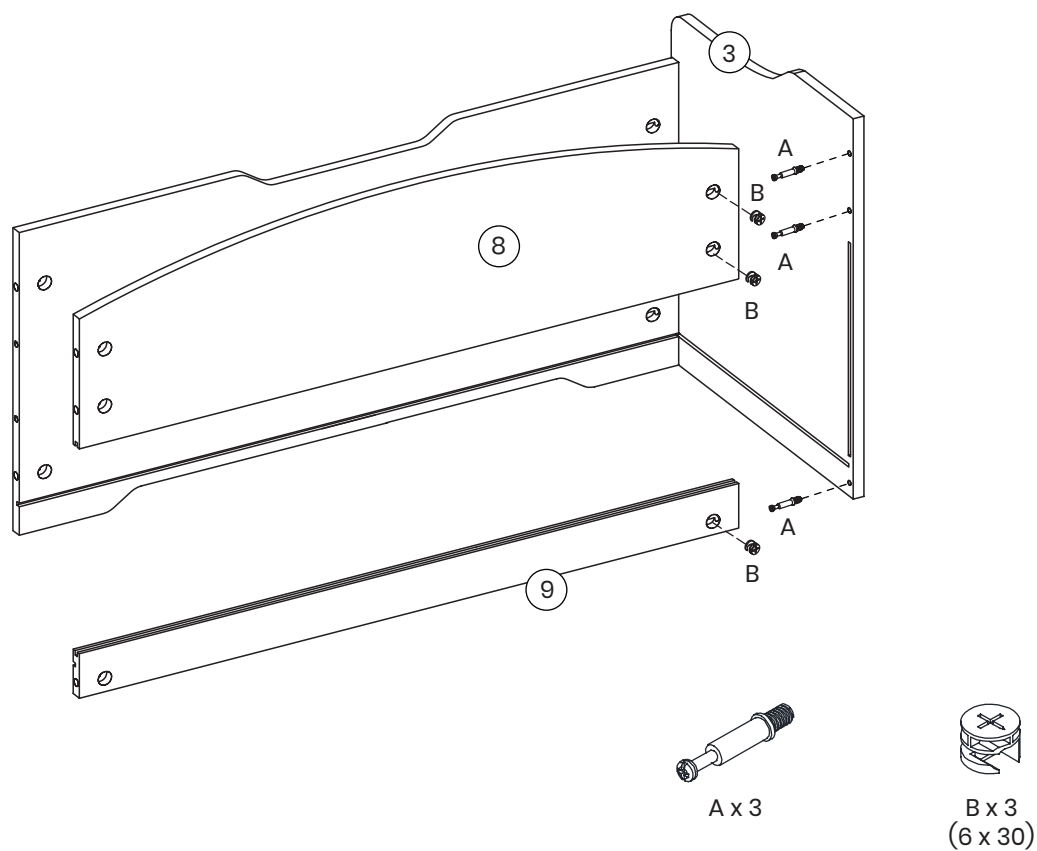


STEP 3

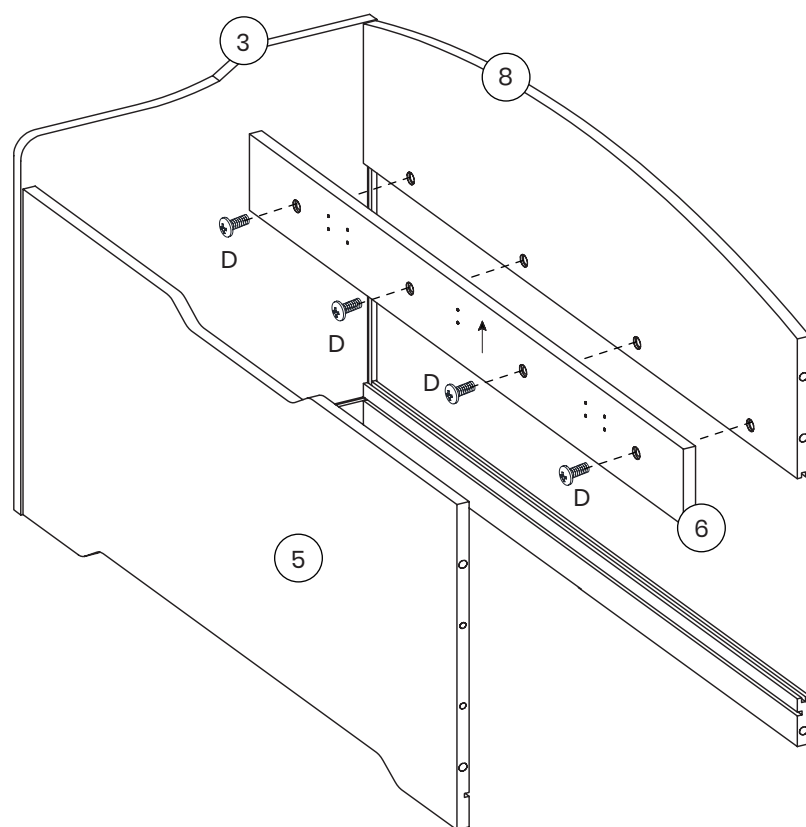


D x 4
(6 x 16)

STEP 4

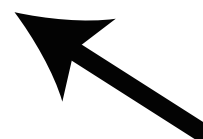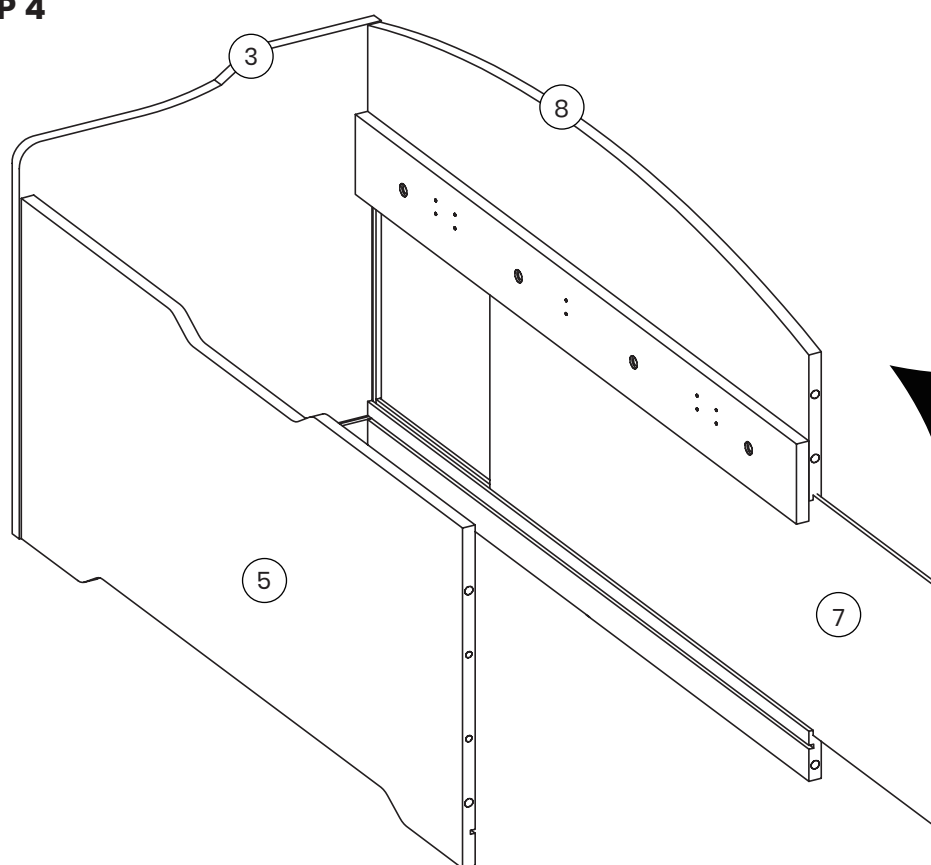


Slide into the
grooves.



STEP 5

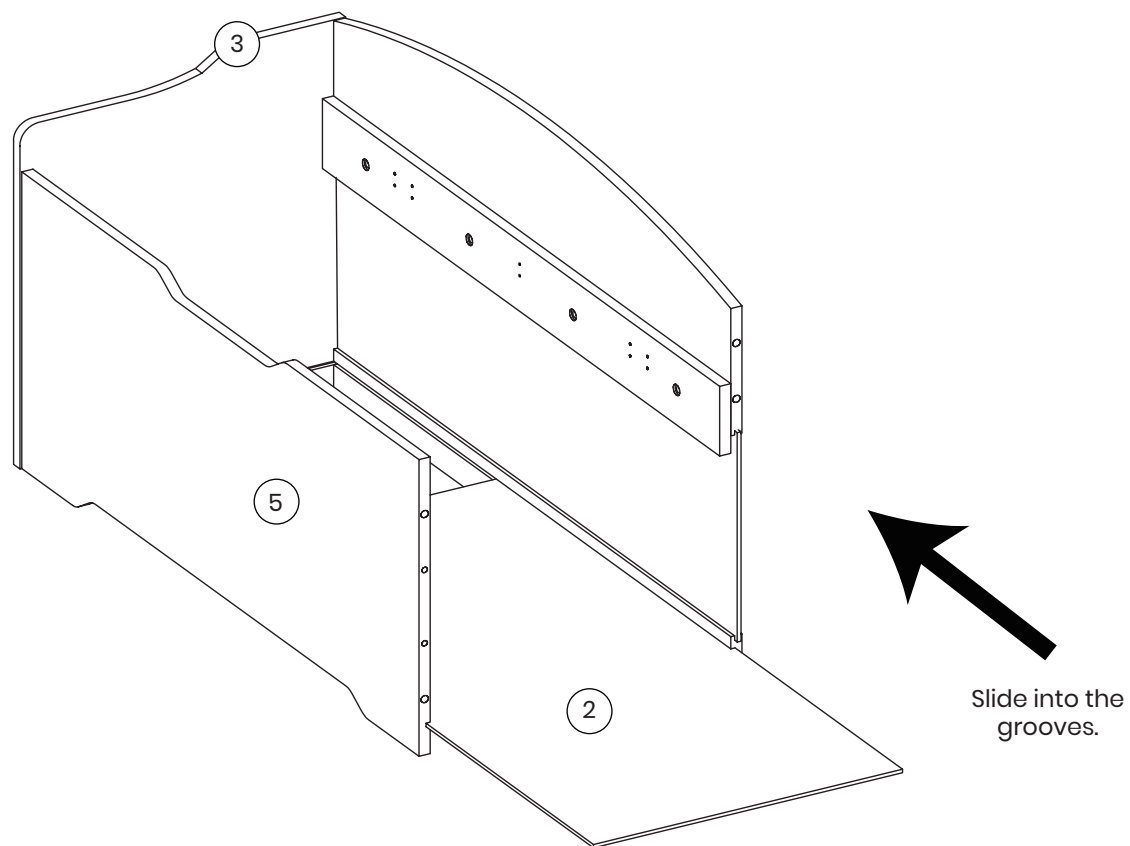

STEP 6

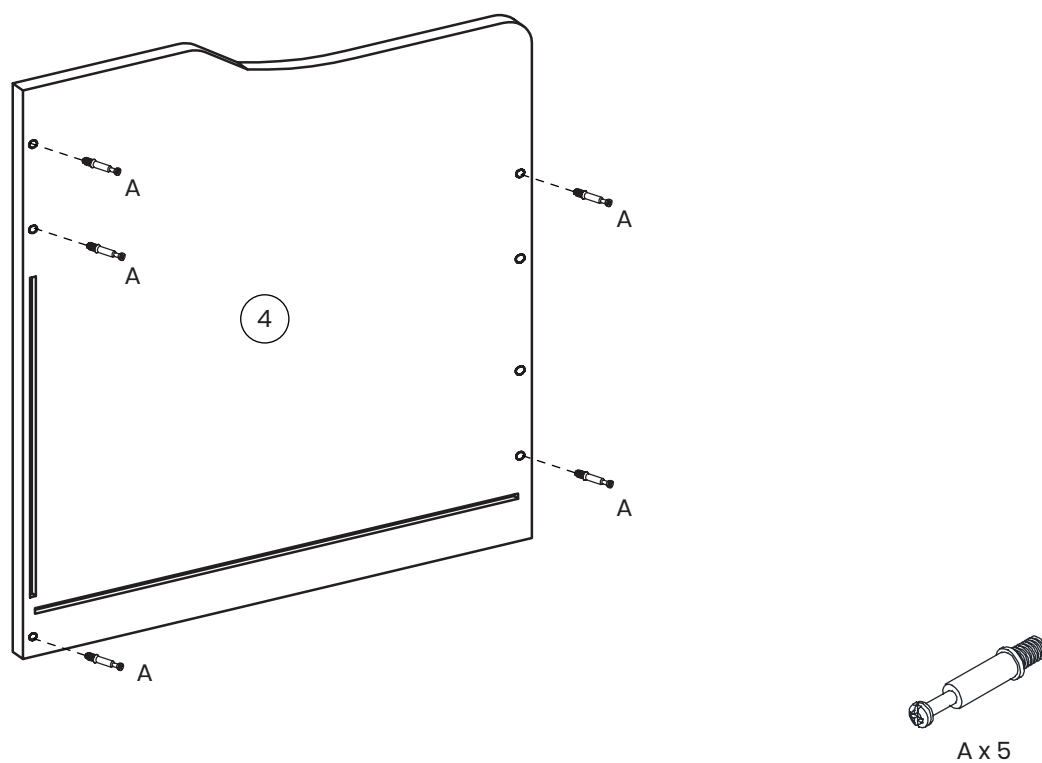

 STEP 7

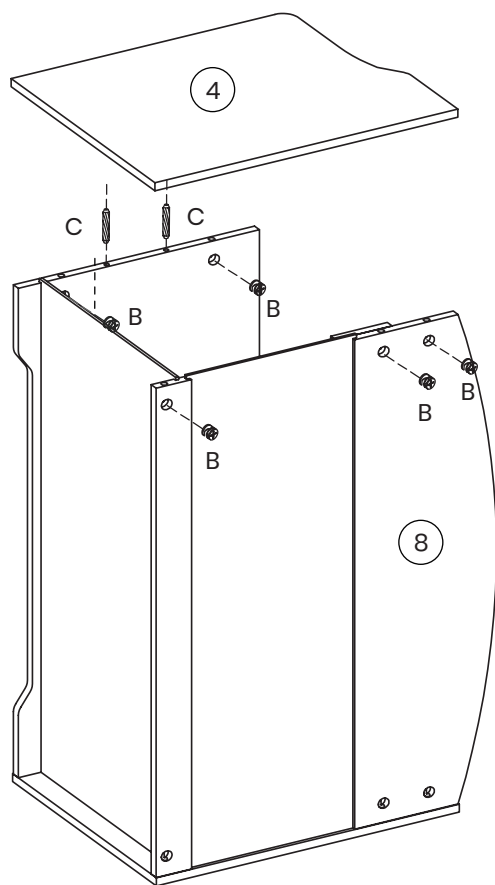


C x 2
(6 x 30)




B x 5

STEP 8

TIP: Fully tighten only once door is attached to the fridge and properly aligned.

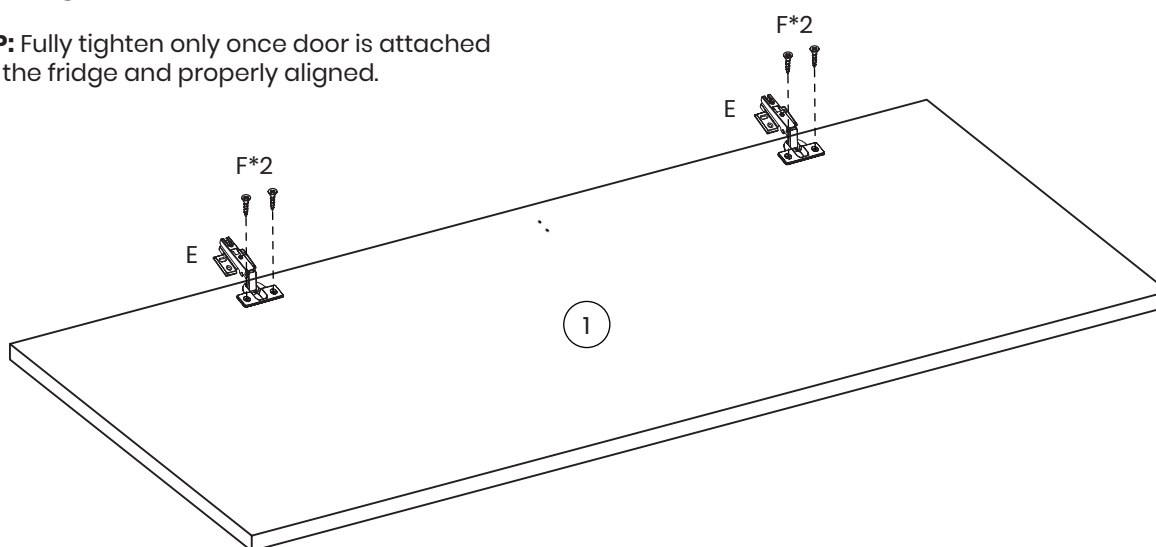


F x 4
(3.5 x 12)

 

E x 2

STEP 9


NOTE: Fully tighten the screws for the hinges once door is properly aligned and opening smoothly.

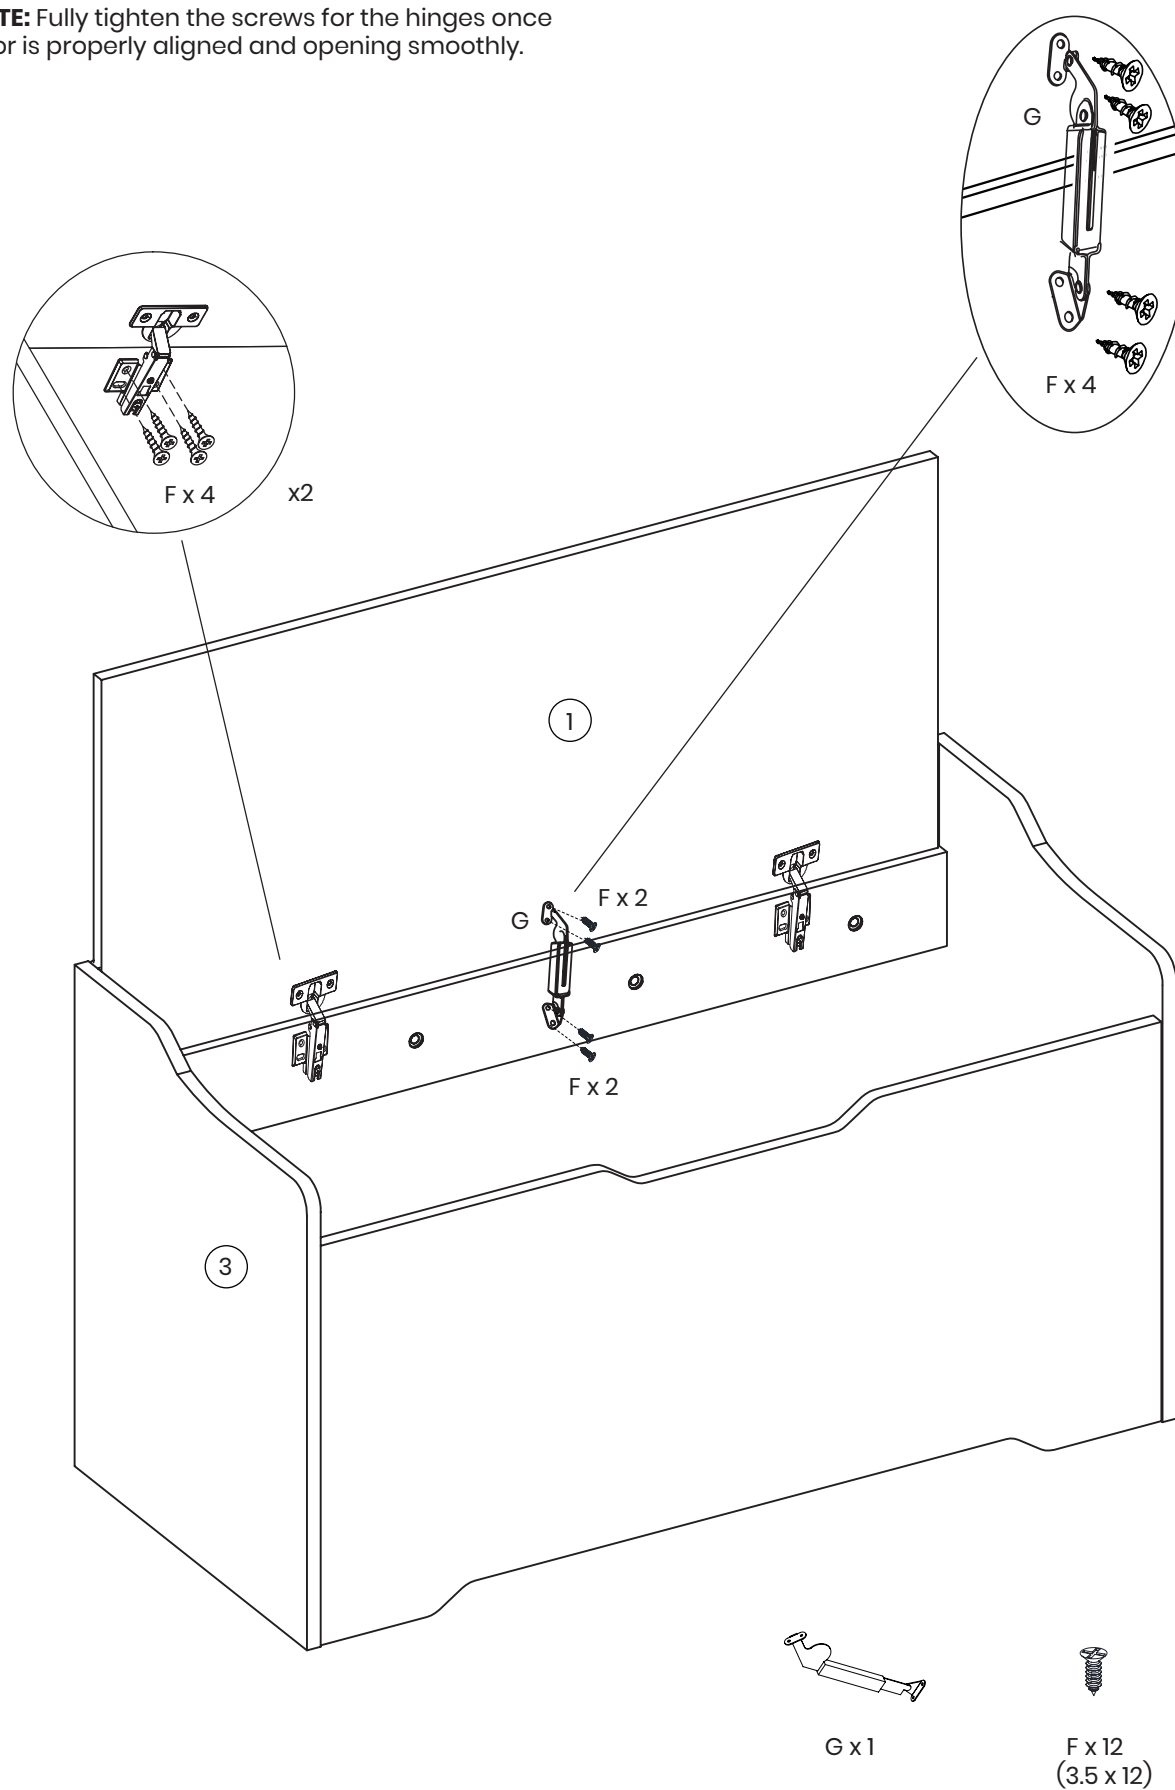

STEP 10

NOTE: Make sure the surface of the bench lid is clean. Then remove the protective backing from the pre-fitted velcro strap beneath cushion (10). Once you have aligned the cushion into position on the bench, push down and ensure the sticker is fully attached to bench.

The cushion can be removed if required via the velcro backing

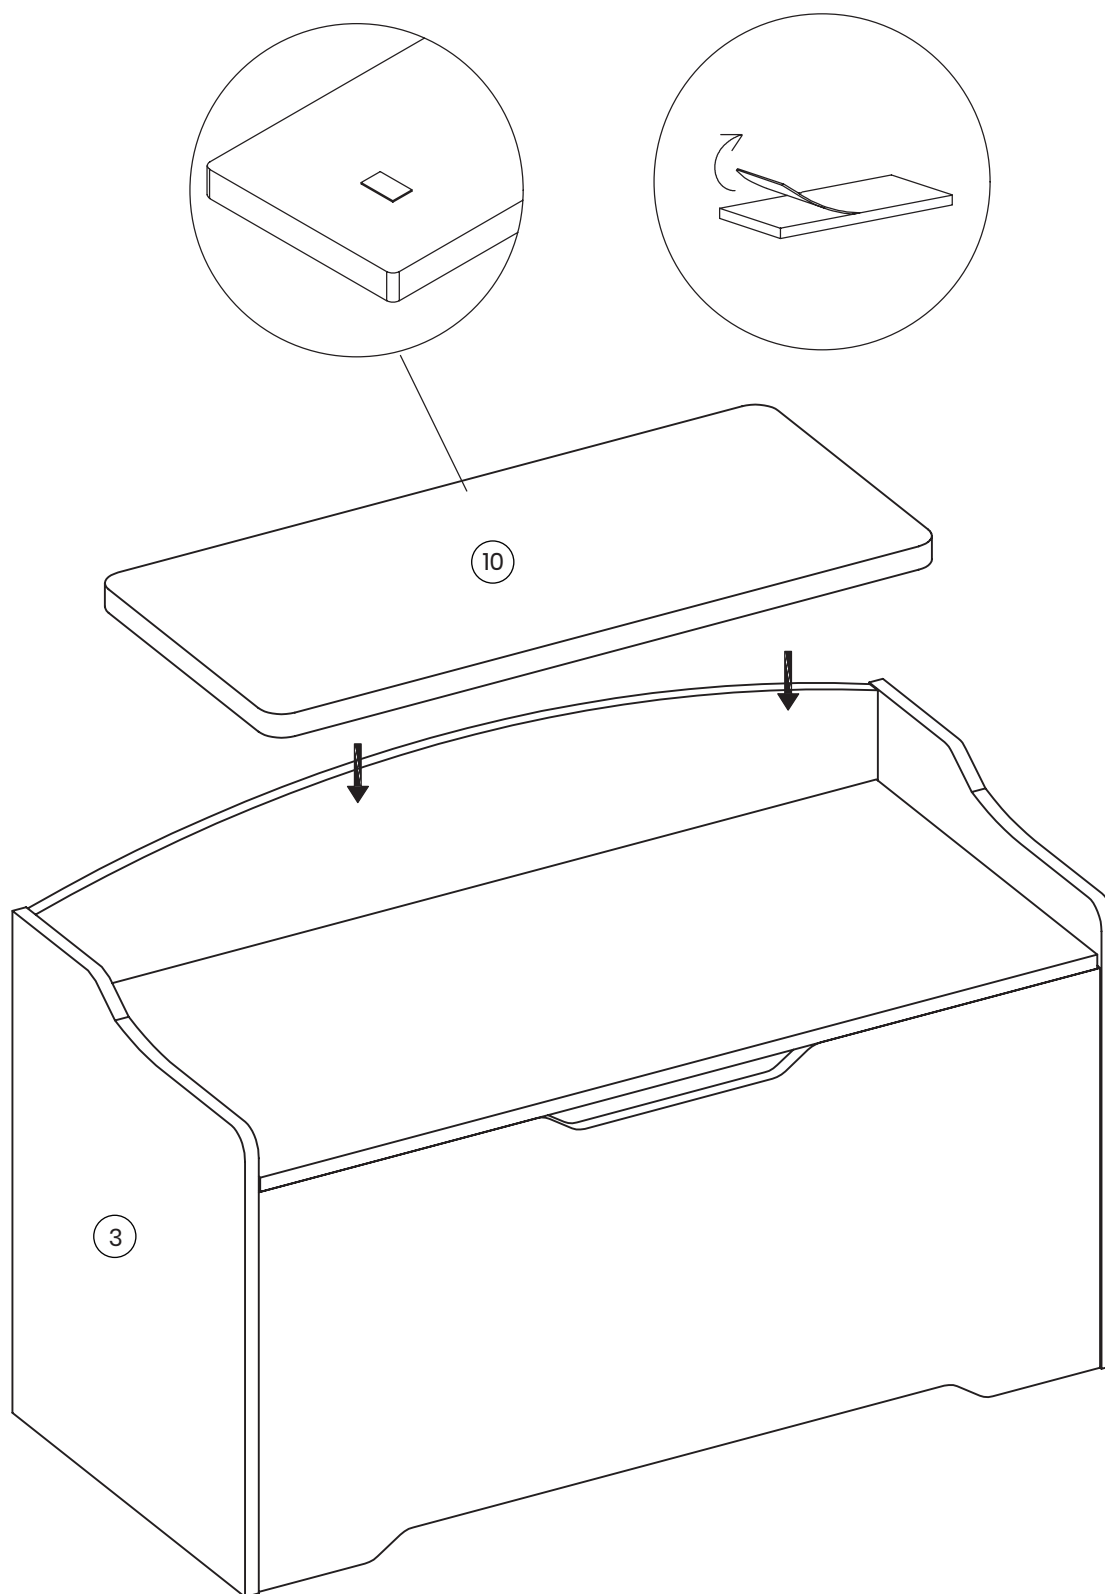

V. CLEANING AND MAINTENANCE

ROUTINE CLEANING

- Wipe wooden surfaces using a soft cloth lightly dampened with water.
- Dry the product immediately with a clean, dry cloth.
- Clean the cushion according to its care label, where provided.
- Remove spills promptly to prevent staining or moisture damage.
- Regularly remove dust and debris from around the hinges and lid support.

DO NOT USE

- Abrasive cleaning pads.
- Bleach or harsh chemicals.
- Solvents, alcohol-based cleaners or furniture polish.
- Steam cleaners.
- Excessive water or high-pressure cleaning equipment.

Do not soak any part of the product or allow water to remain around panel edges, joints or hardware.

REGULAR INSPECTION

Inspect the product before use and at least once each month.

Check that:

- Screws and cam fittings remain tight.
- Hinges are straight, secure and free from damage.
- The lid support operates smoothly.
- Panels are not cracked, swollen, warped or separating.
- The cushion remains securely attached.
- There are no sharp edges or exposed hardware.

Tighten loose fittings using the correct hand tool. Do not use excessive force or power tools, as these may damage the panels.

VI. STORAGE

- Store and use the product indoors in a cool, dry and well-ventilated location.
- Keep it away from direct sunlight, moisture and significant temperature changes.
- Do not store the product outdoors, in a bathroom or in a damp garage.
- Do not stack heavy objects on the seat.
- If the product is dismantled, store all fittings in a labelled container away from children.

VII. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:

www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit **www.lifespankids.com.au/warranty-form**

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit **www.lifespankids.com.au/warranty-form** and fill in our Repair/Service Request Form or Parts Purchase Form.

VIII. SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue. We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.

