


USER MANUAL

Harlow Indoor Play Kitchen

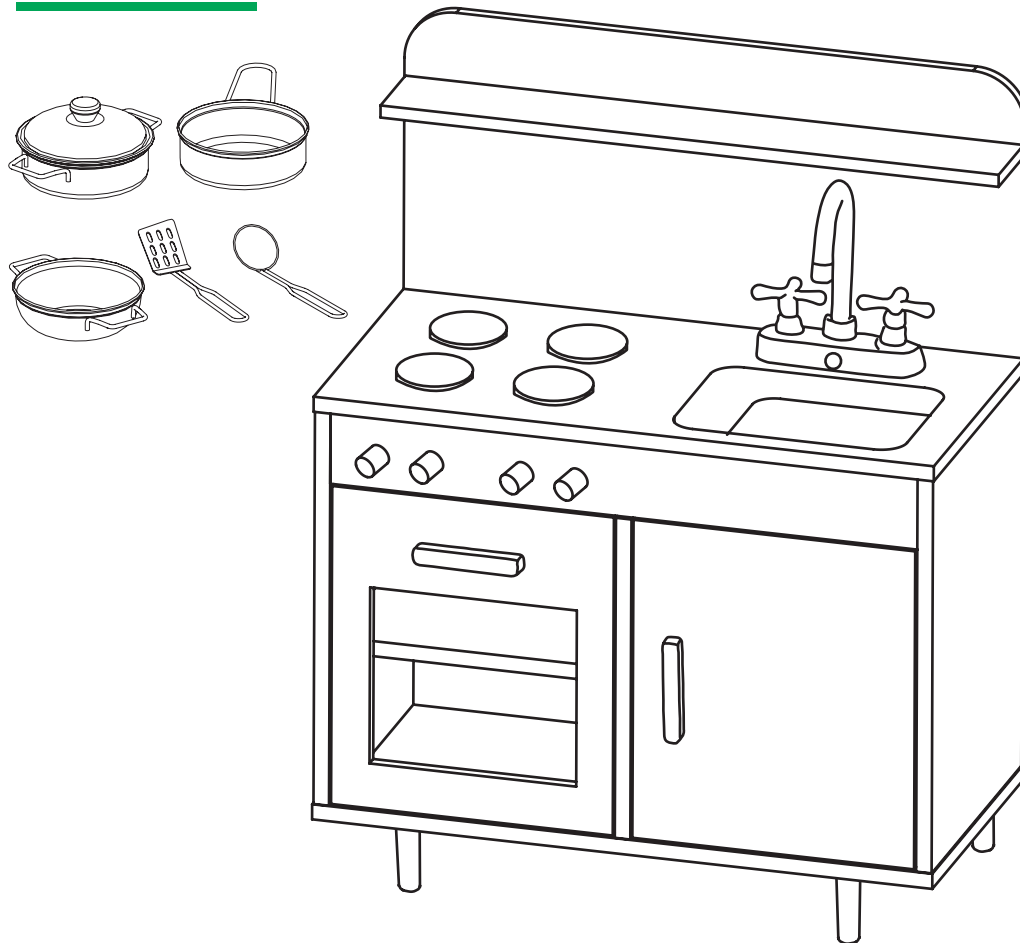

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. IMPORTANT SAFETY INFORMATION	3
II. SAFE PLAY GUIDELINES	4
III. BEFORE YOU BEGIN	5
IV. PARTS LIST	6
V. ASSEMBLY INSTRUCTIONS	8
VI. CLEANING AND MAINTENANCE	15
VII. STORAGE AND TROUBLESHOOTING	16
VIII. WARRANTY	17
IX. SECURITY SUPPORT INFORMATION	18

I. IMPORTANT SAFETY INFORMATION

READ BEFORE USE

Read all instructions before assembly and use. Keep this manual in a safe place for future reference and pass it on if the product is transferred to another owner.



WARNING: Failure to follow these instructions may result in injury or product damage. Adult supervision is required during play.

ASSEMBLY SAFETY

- Adult assembly only. Unassembled parts and hardware contain small components that may present a choking hazard. Keep children and pets away from the assembly area.
- Remove and safely dispose of all plastic bags, film and packaging materials immediately after unpacking.
- Assemble on a clean, level surface. Use a soft mat or blanket to protect the panels and flooring.
- Two adults are recommended for lifting, turning and positioning the unit.
- Use only the supplied parts and fasteners. Do not substitute hardware or modify the product.
- Do not use power tools. Tighten fixings firmly by hand, but do not overtighten as this may damage the panels.

SAFE POSITIONING AND USE

- Place the kitchen on a level, stable floor, away from stairs, doorways, heaters, fireplaces, windows, blinds and other hazards.
- Keep the play area well lit and free from trip hazards.
- Do not allow children to climb, sit, stand, hang or lean on the worktop, doors, shelves, backboard or handles.
- Do not allow more than one child to pull on or load an open door at the same time.
- Keep fingers clear of hinges, door edges and closing gaps. Open and close doors gently; do not slam them.
- Use only lightweight, age-appropriate pretend-play accessories. Keep small accessories away from children who may place them in their mouths.
- Stop use immediately if the product becomes unstable, damaged, cracked or has loose/missing hardware.

ONGOING CHECKS

- Before each use, check that the unit is stable and all legs, cams, screws, hinges, handles and knobs are secure.
- Inspect regularly for sharp edges, splinters, damaged panels or exposed fasteners.
- Do not use the product until any fault has been corrected and replacement parts have been fitted.

INTENDED USE

- For supervised children's pretend play only.
- For indoor household use on a flat, stable and dry floor.
- This product is not a real appliance and must not be connected to water, electricity or gas.
- Do not use real food, hot cookware, liquids, flames, heating elements or electrical appliances with this product.
- The kitchen, shelves, doors and worktop are not designed to support a child's body weight.

IMPORTANT: Product appearance and hardware may vary slightly from the illustrations. Always follow the part numbers and hardware letter codes shown in the diagrams.

II. SAFE PLAY GUIDELINES

ADULT SUPERVISION

Supervise children during play and teach them to use the doors, knobs, sink and shelves gently.

- Use the kitchen only for pretend play. Never add real water to the sink or connect the faucet to plumbing.
- Do not place hot, sharp, breakable, heavy or electrical items on or inside the kitchen.
- Do not use the kitchen as a seat, step, climbing frame, support or storage unit for heavy household items.
- Keep hands and fingers clear when doors are moving. Do not slam, force or swing on the doors.
- Do not pull the kitchen across the floor. Lift it with two adults when relocating it.
- Keep the floor around the kitchen dry and clear of toys to reduce slip and trip hazards.
- Remove any accessory that becomes broken or small enough to present a choking hazard.

FINAL ASSEMBLY CHECKLIST

- ☐ The unit stands evenly on all four legs.
- ☐ All cam locks and screws are fully engaged.
- ☐ The backboard and shelves are firm and level.
- ☐ The doors open and close smoothly without excessive gaps.
- ☐ No sharp edges, splinters or exposed fasteners are present.
- ☐ All packaging and unused small hardware are stored safely away from children.

III. BEFORE YOU BEGIN

RECOMMENDED TOOLS

- Phillips-head screwdriver (not supplied).
- Soft mat or blanket to protect the panels and floor.
- A second adult help lift and turn the assembled unit.

ASSEMBLY CHECKLIST

- ☐ Unpack all components and compare them with the Parts and Hardware diagrams.
- ☐ Sort hardware into labelled groups before starting.
- ☐ Keep the panel identification numbers visible until assembly is complete.
- ☐ Follow the steps in order. Do not fully force any joint that is not aligned.
- ☐ Begin each screw by hand to avoid cross-threading.


HOW TO LOCK THE CAM FITTINGS


1. Screw cam bolt A into the indicated small pre-drilled hole until its shoulder is seated. Do not overtighten.
2. Insert cam lock B into the large round hole. Point the arrow/opening on the cam toward the hole where cam bolt A will enter.
3. Bring the panels together so the head of cam bolt A slides fully into cam lock B.
4. Turn cam lock B clockwise with a Phillips-head screwdriver until the joint is secure, usually about one-half turn. Stop when resistance is felt.

CAM FITTING CHECK

If a cam will not turn, do not force it. Separate the panels and confirm the cam arrow is facing the cam bolt entry hole and that the bolt is screwed to the correct depth.

IV. PARTS LIST

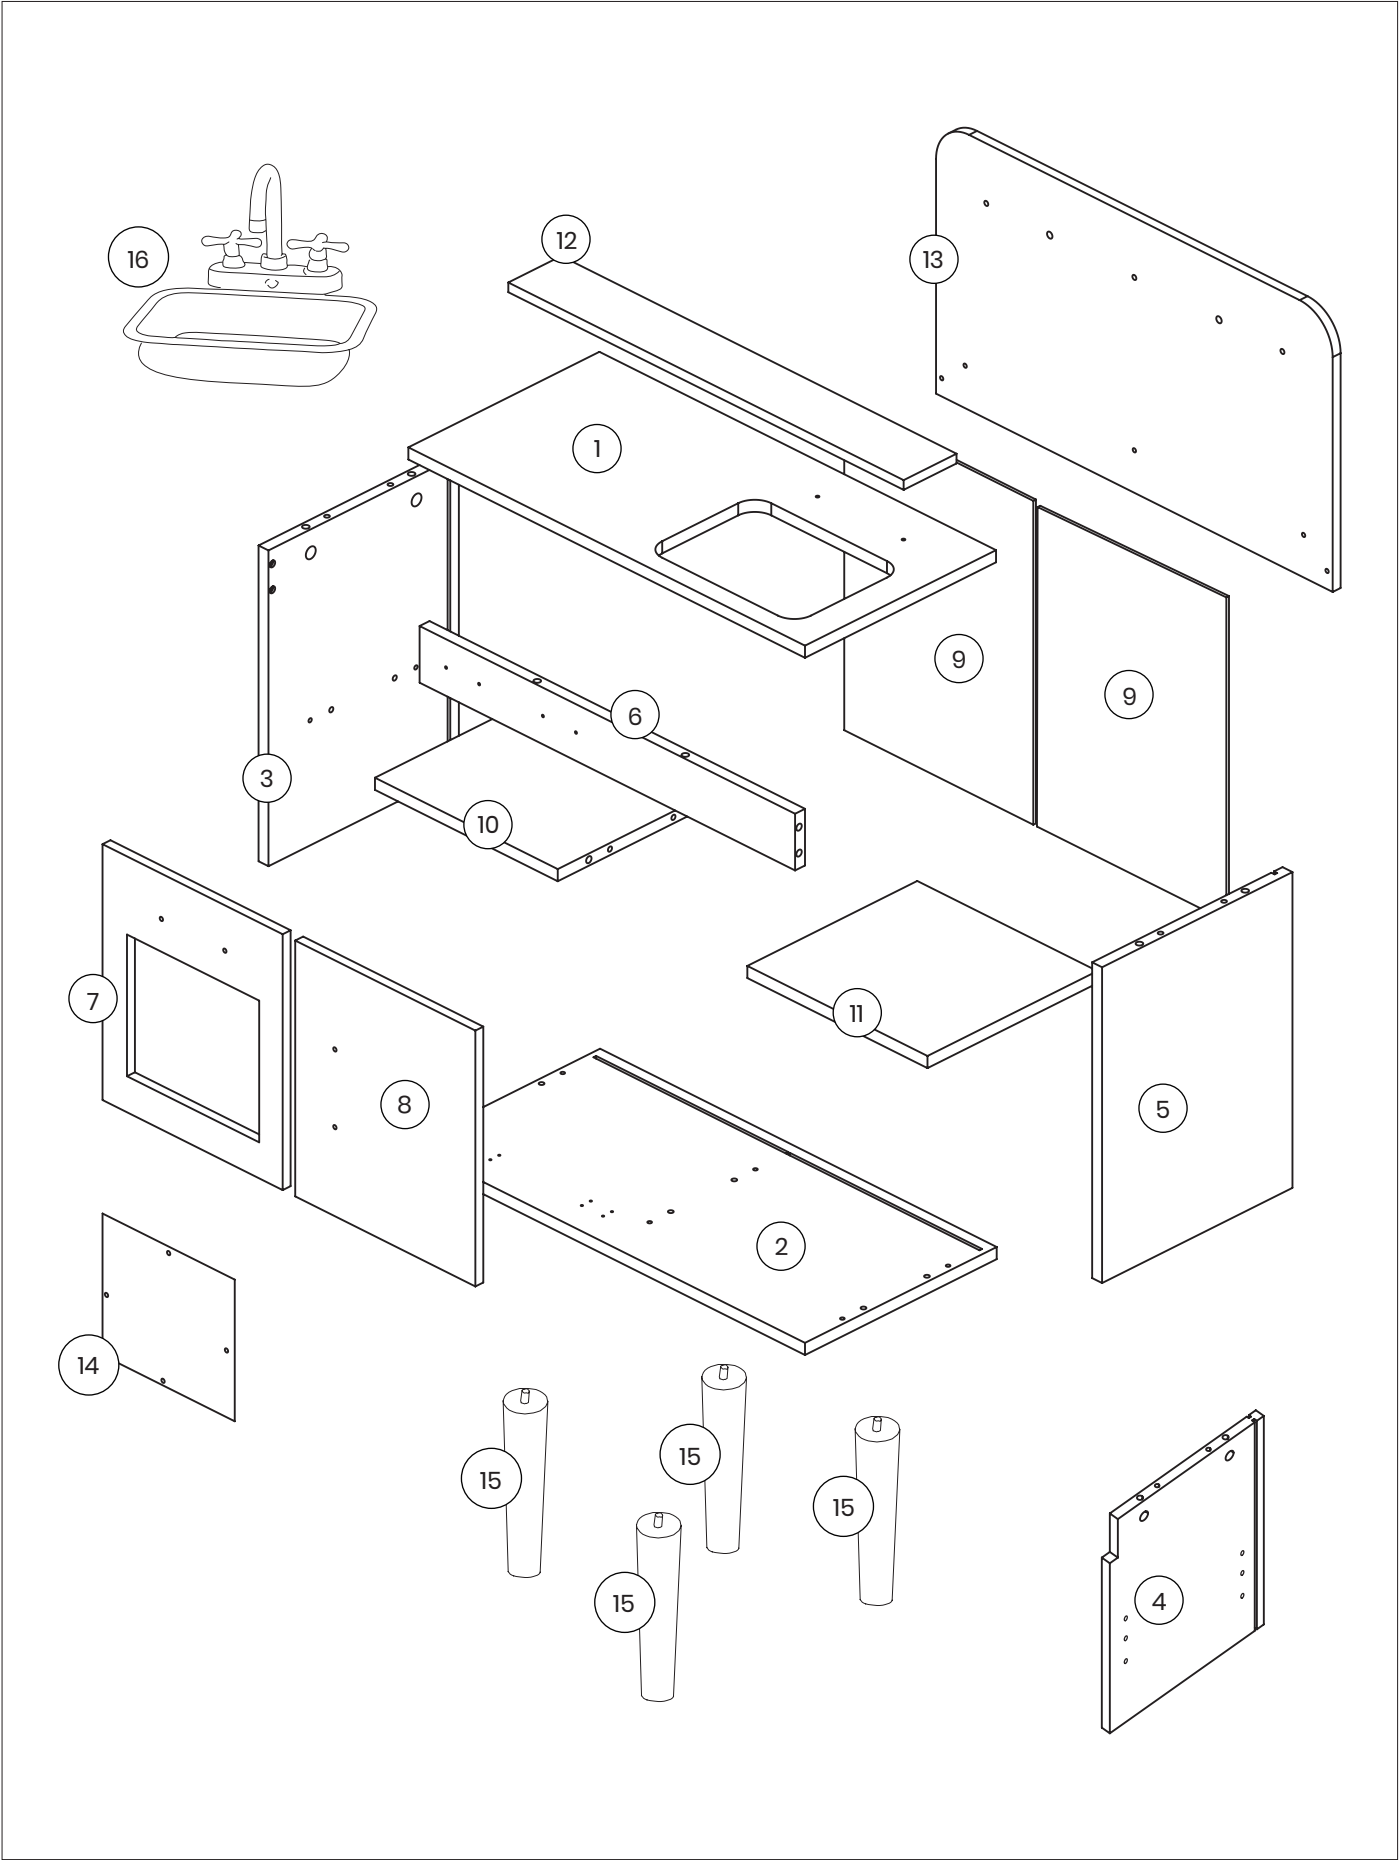

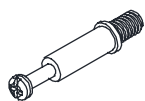

A x 16



B x 16



C x 16
(6 x 30)



 
D x 6
(4 x 35)



E x 4




F x 4
(4 x 25)



G x 2
(4 x 16)



 H x 24
(3.5 x 12)




I x 4



J x 4



 
K x 2
(3 x 25)




L x 1



 M x 22
(4 x 12)



N x 2
(8 x 30)

 

O x 8
(5 x 40)



P x 1



Q x 4




Spare Parts

V. ASSEMBLY INSTRUCTIONS

STEP 1


TIP: Confirm all cam bolts are straight before continuing.

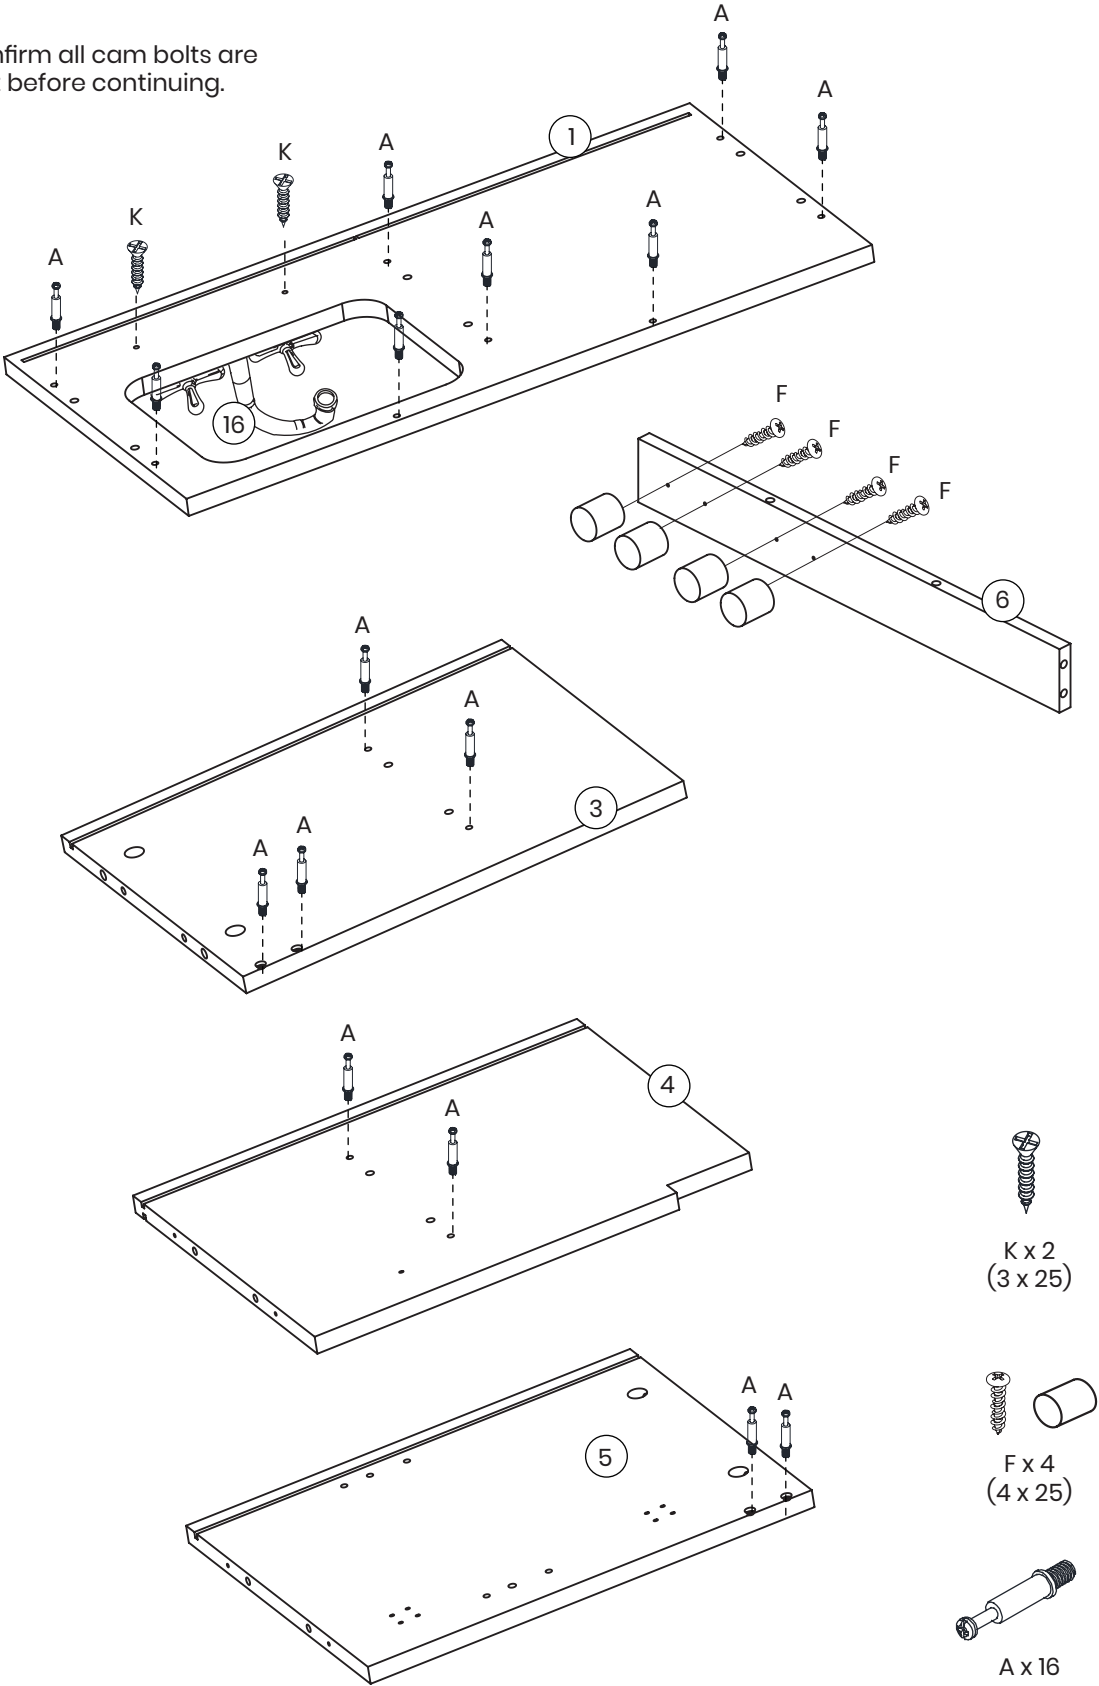

STEP 2

TIP: Read the instruction on how to attach cam lock in this manual.


IMPORTANT: Take note of the direction the panels are facing.

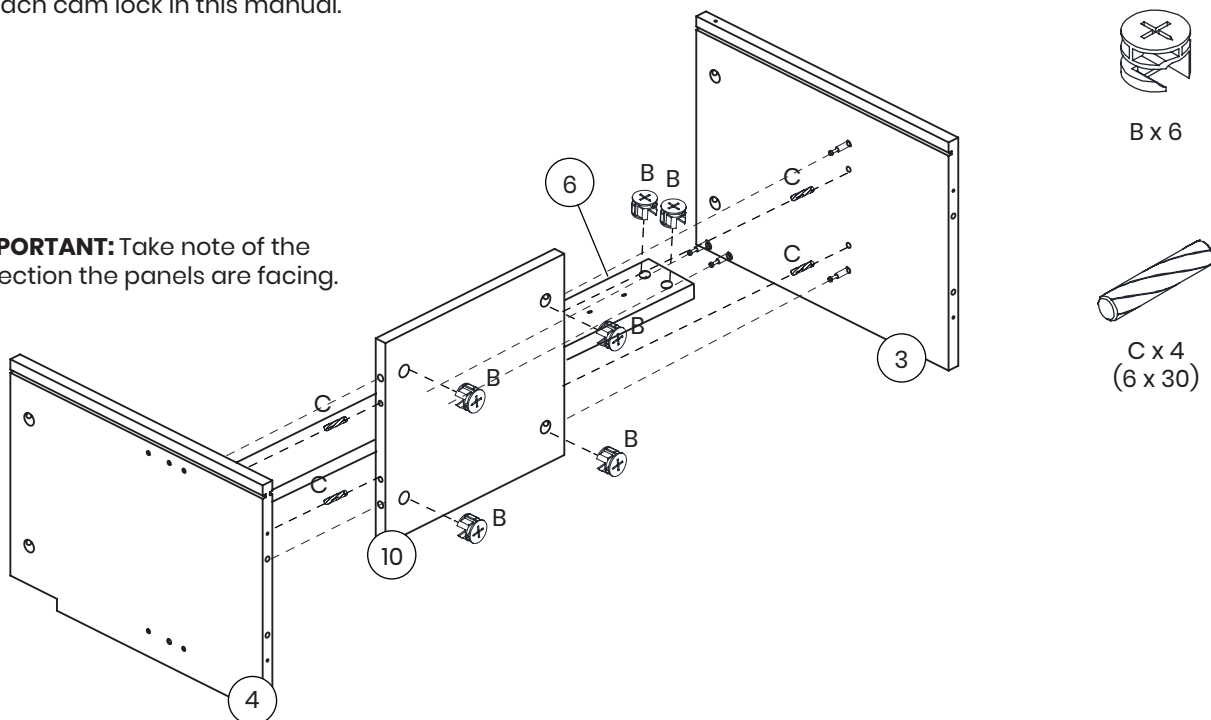

STEP 3

TIP: Start all base screws before fully tightening to keep the cabinet square.


PANEL 5: 2x cam locks need to be inserted on the internal side. Ensure the grooved side is at the top.

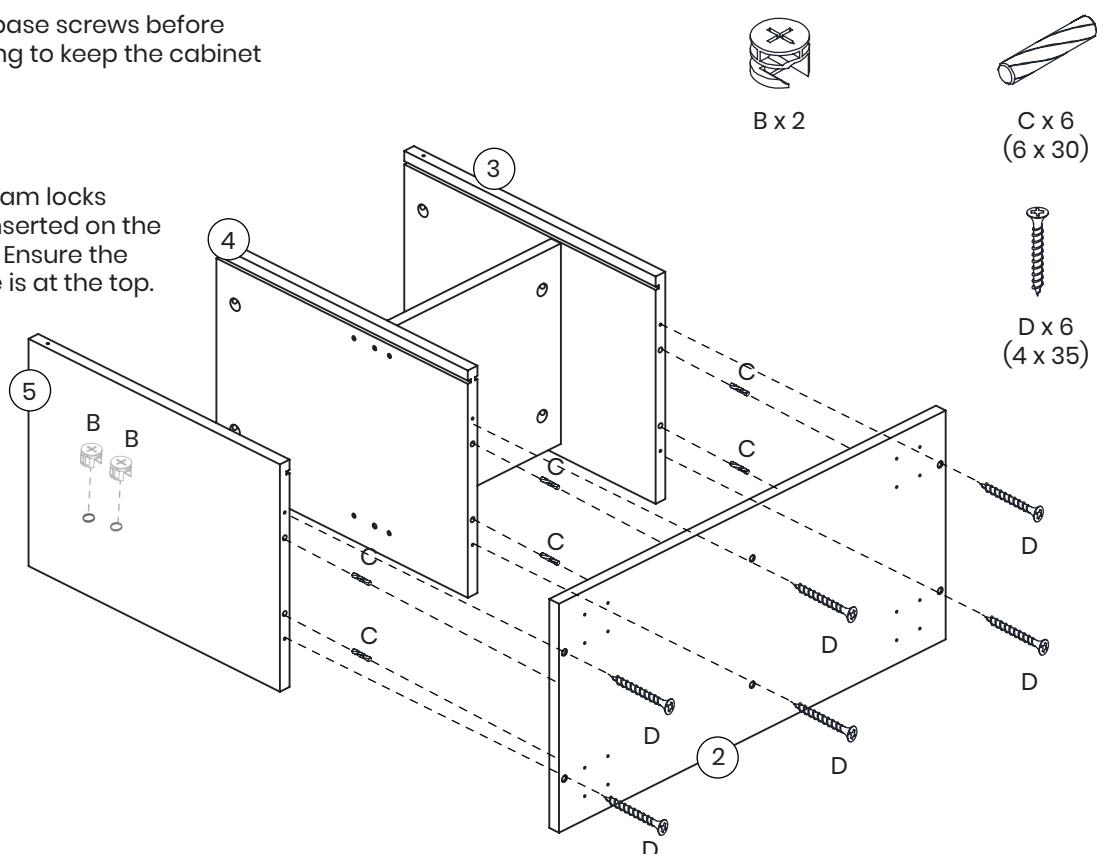

STEP 4


Insert the panels into the grooves.

TIP: Do not force the rear panels. If they bend, loosen the cabinet fixings slightly, square the frame and try again.

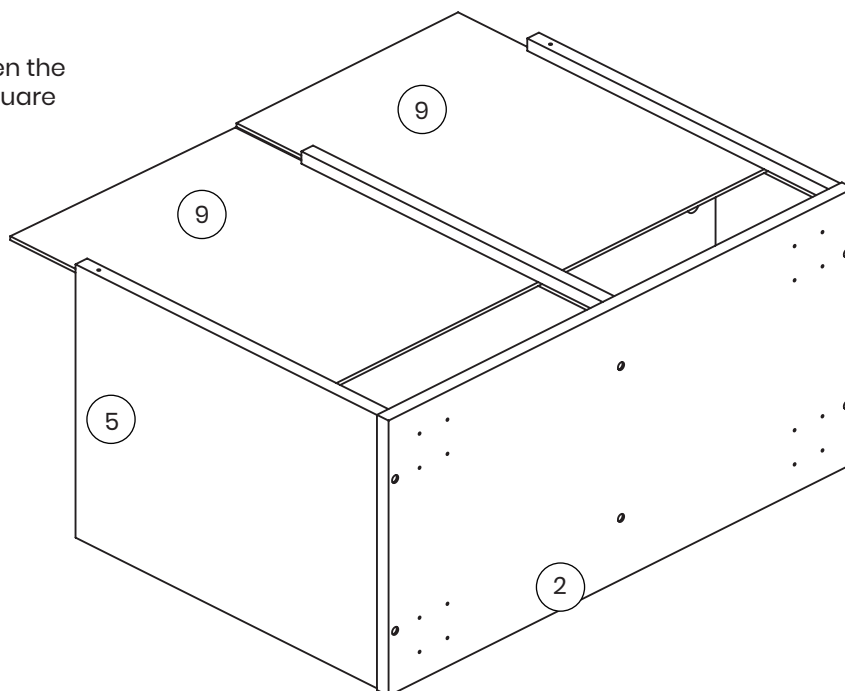

STEP 5

TIP: Press down evenly across the worktop; do not strike it into position.

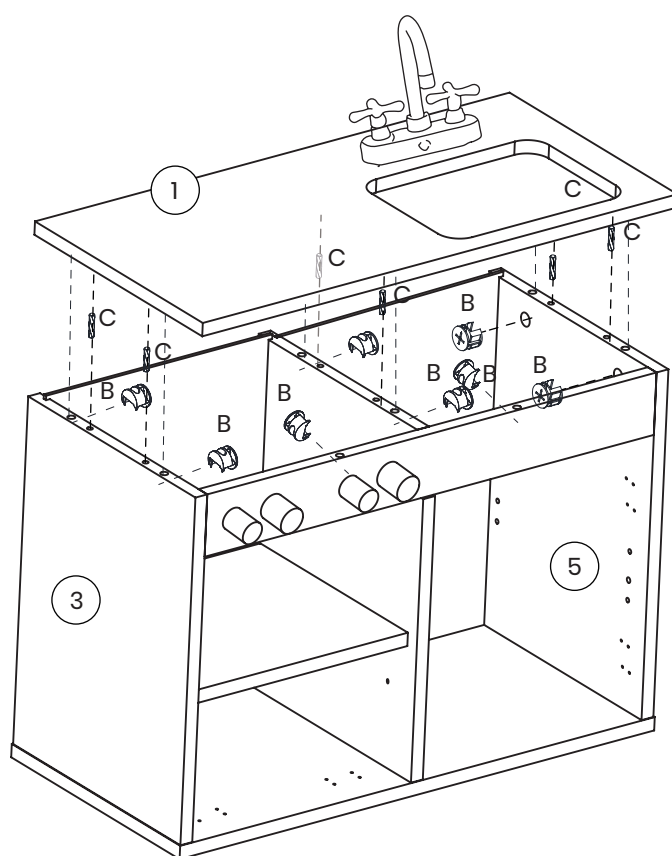


B x 8




C x 6
(6 x 30)


STEP 6

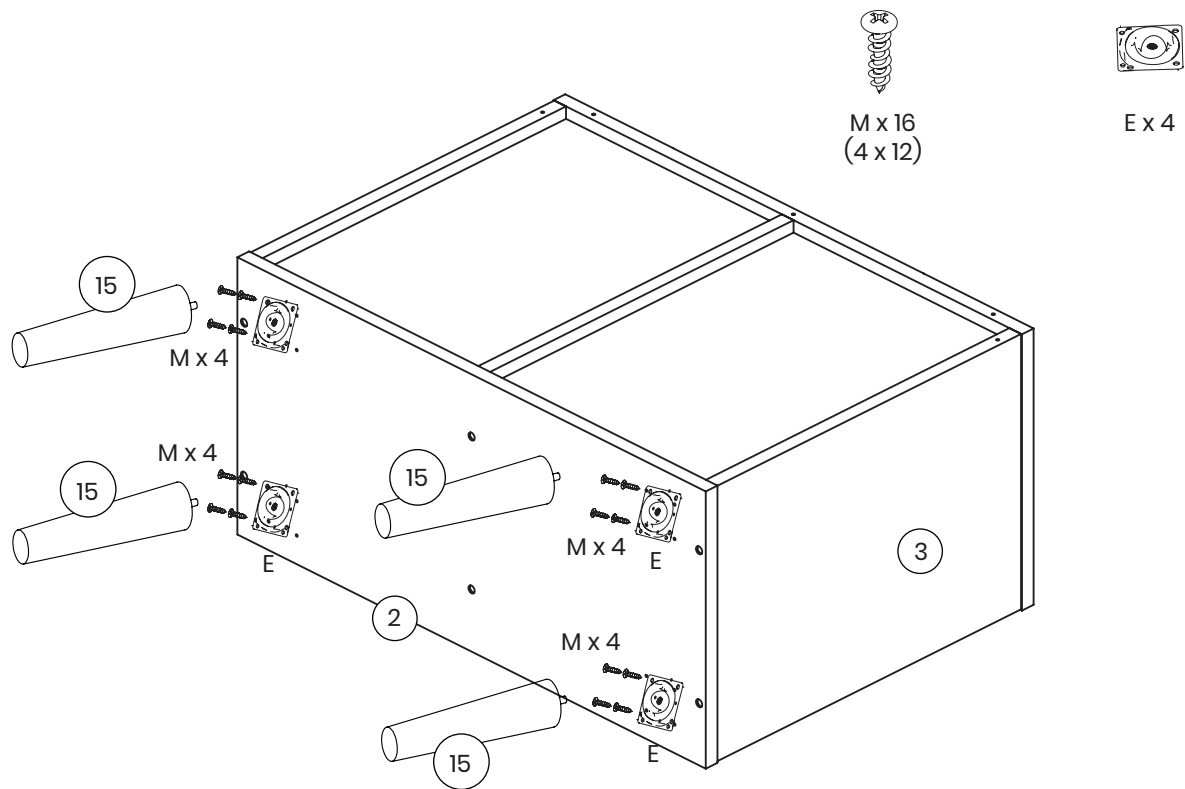


STEP 7

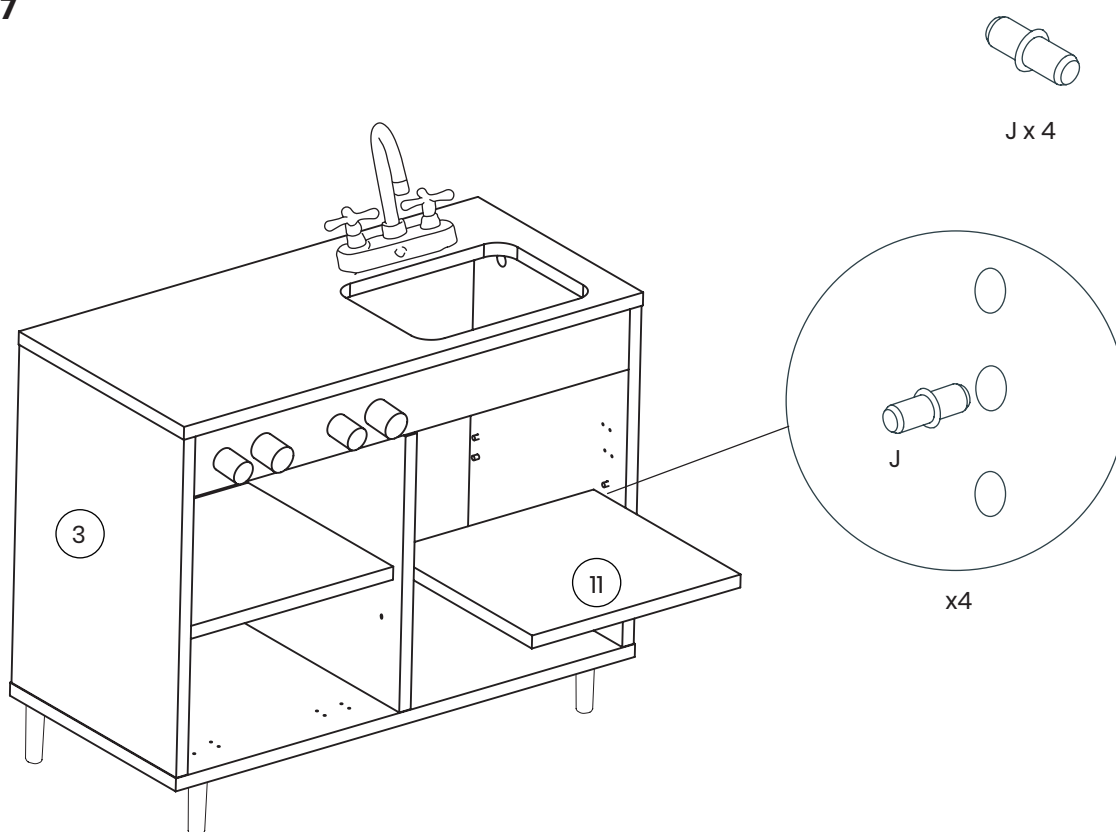


STEP 8

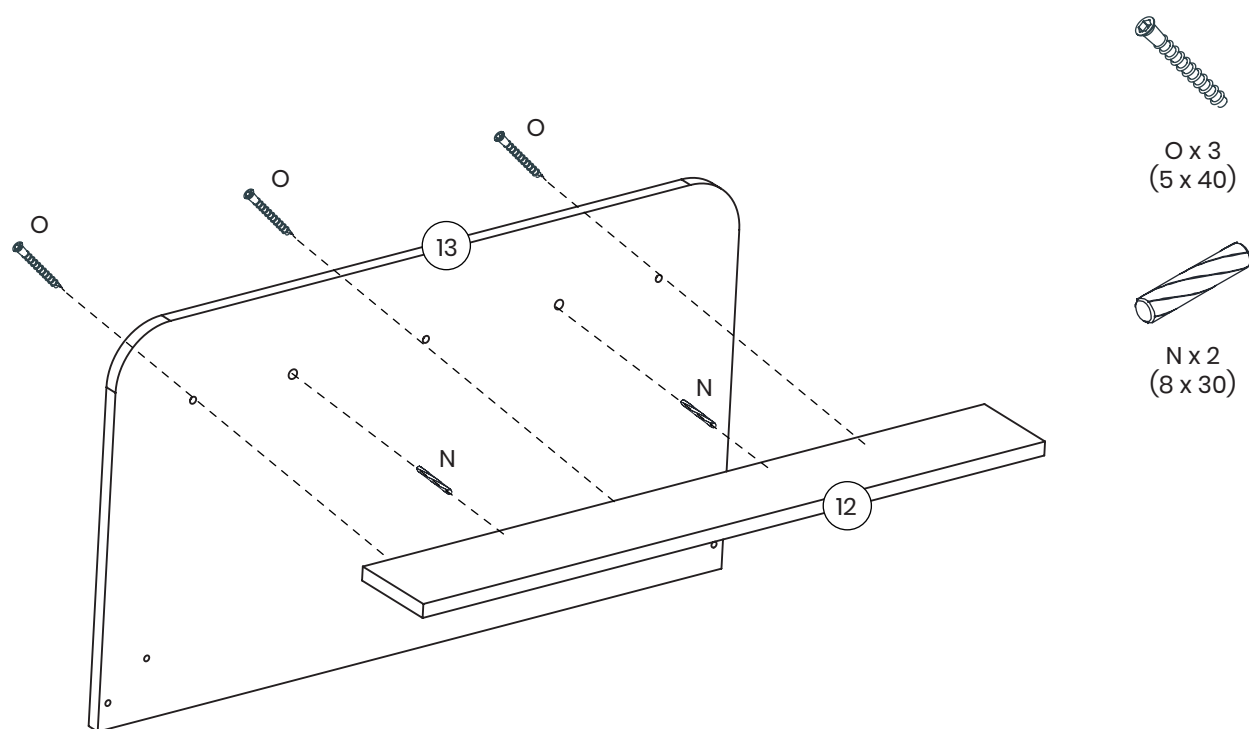

STEP 9

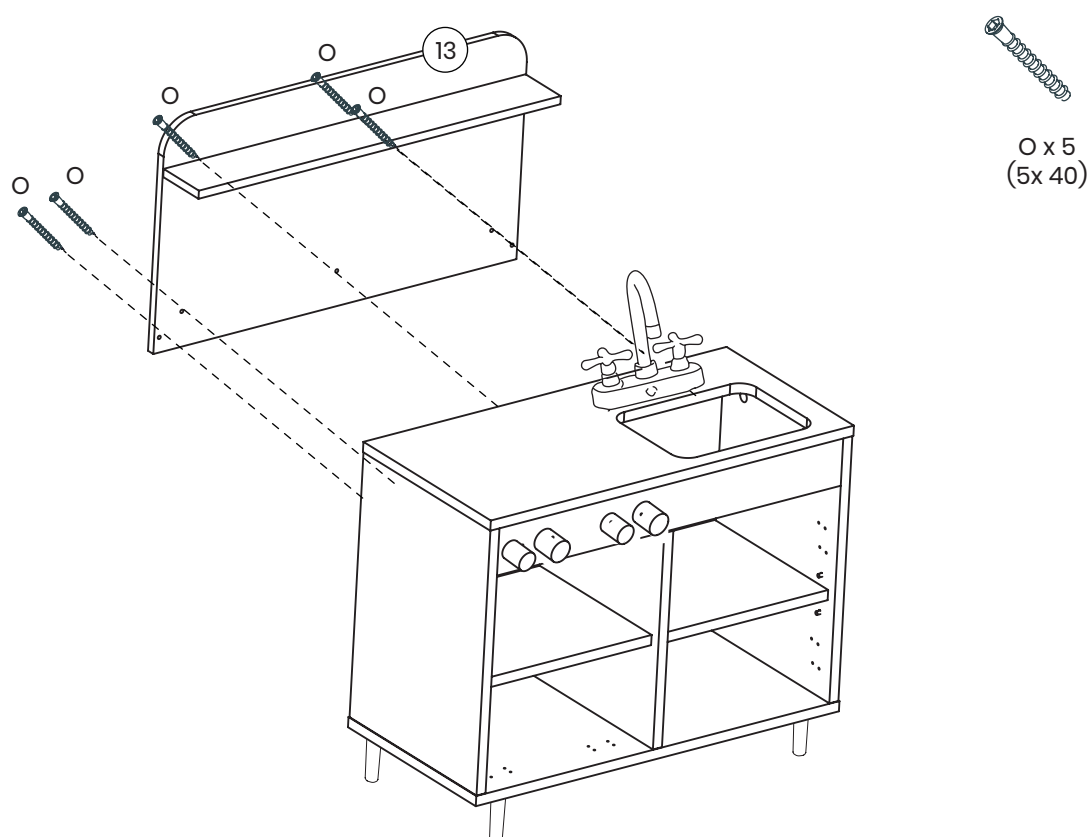


STEP 10

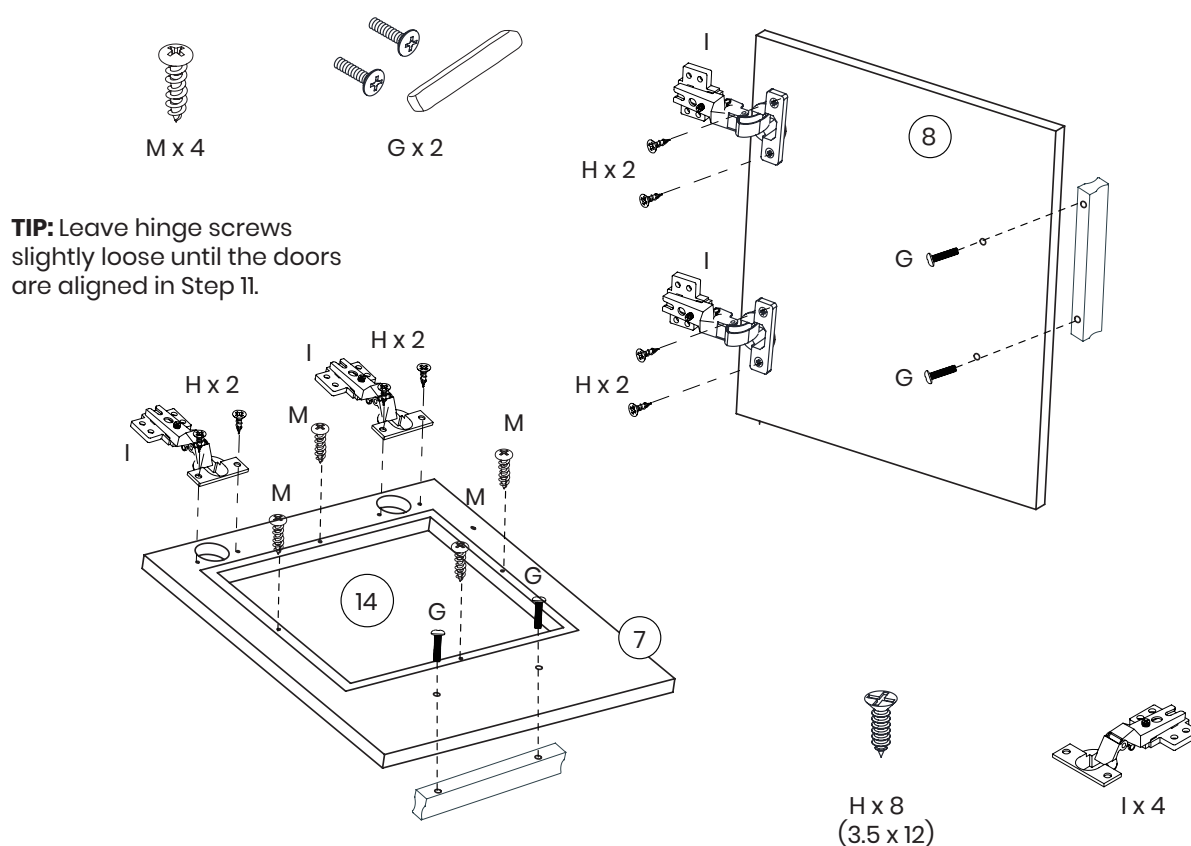


STEP 11

TIP: Keep fingers clear of the hinges while checking door movement. Fully tighten the screws once they are aligned and doors open smoothly.

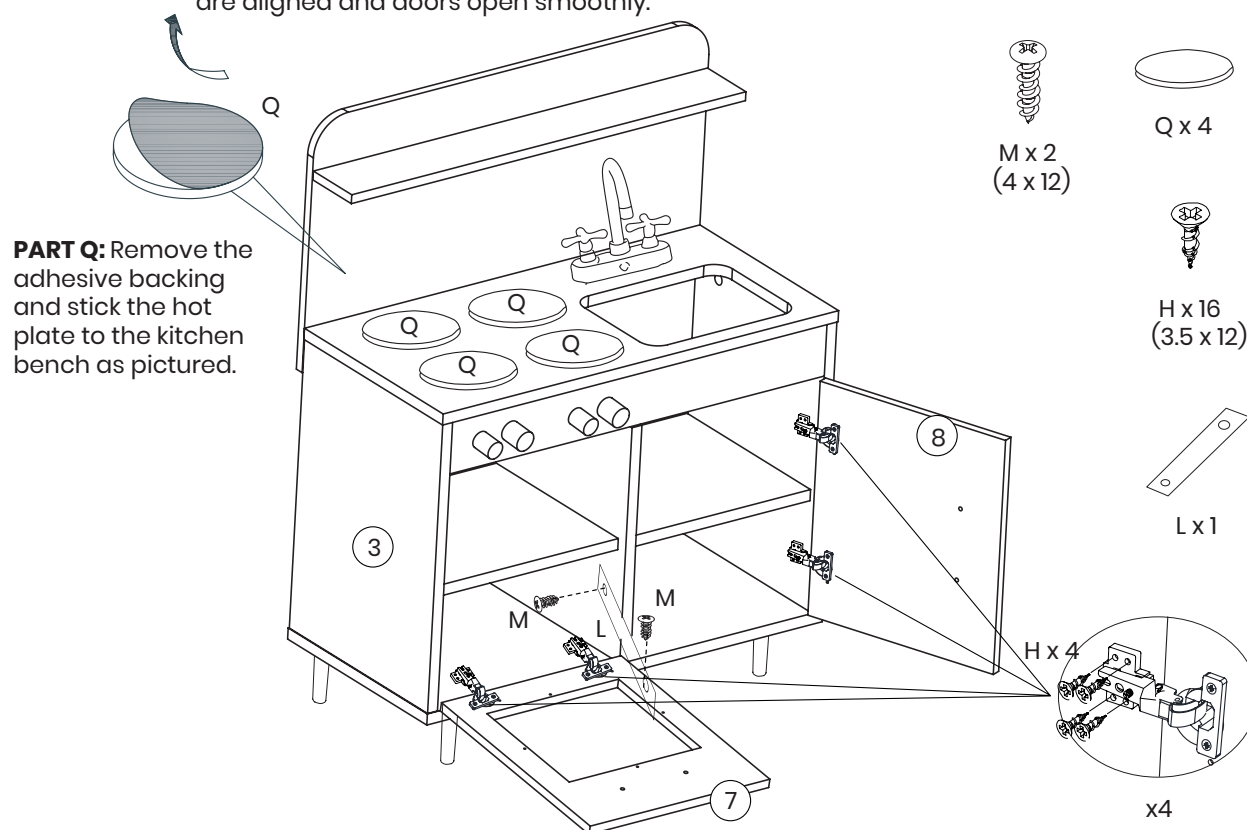

STEP 12

TIP: Check all screws are fastened, legs are stable and doors are opening smoothly.

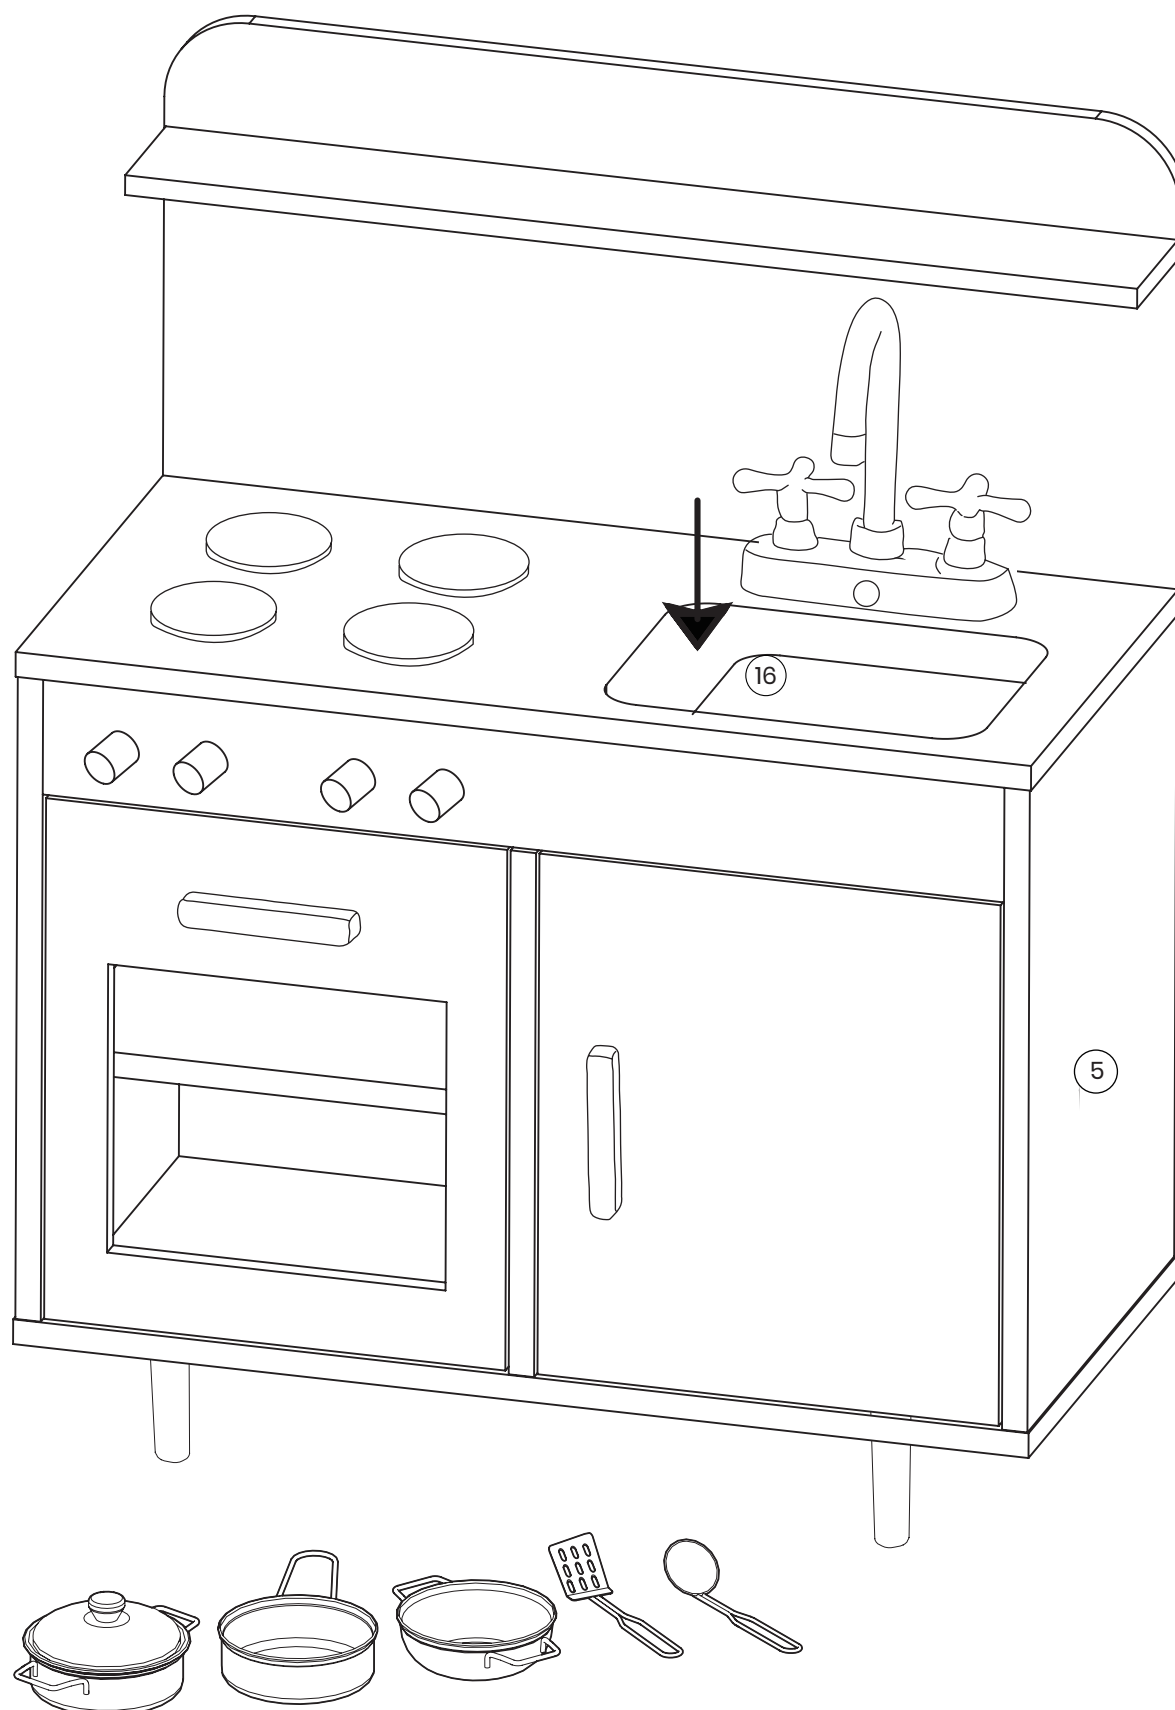

VI. CLEANING AND MAINTENANCE

ROUTINE CLEANING

- Wipe surfaces with a soft cloth lightly dampened with water and a small amount of mild detergent.
- Dry all surfaces immediately with a clean cloth.
- Do not immerse, hose or soak the product. Do not allow water to pool in the sink, around panel joins or near hardware.
- Do not use bleach, solvents, alcohol-based cleaners, abrasive powders, scouring pads or harsh chemicals.
- Remove marks promptly. Test any cleaner on a small hidden area first.

REGULAR INSPECTION

- Check cams, screws, hinges, handles, knobs, shelves and legs regularly and tighten any loose fixings.
- Check doors for smooth operation. If a door is misaligned, loosen the hinge screws slightly, reposition the door and retighten.
- Inspect panels and edges for cracks, swelling, splinters or other damage.
- Replace damaged or missing components before allowing further use. Use only compatible replacement parts.

PROTECTING THE FINISH

- Keep the kitchen indoors in a dry, ventilated area.
- Avoid prolonged direct sunlight, heaters and high humidity, which may fade or distort the finish.
- Do not place wet objects, adhesive tape, stickers or permanent markers on the painted surfaces.
- Use lightweight felt or rubber pads beneath accessories that may scratch the worktop.

MAINTENANCE INTERVAL

Perform a quick safety check before each play session and a detailed hardware and condition inspection at least once a month, or more often with frequent use.

VII. STORAGE AND TROUBLESHOOTING

STORAGE

- Store indoors in a cool, dry place away from moisture and temperature extremes.
- Remove loose play accessories before moving or storing the unit.
- Do not stack heavy items on the worktop, shelf or backboard.
- If disassembled, label each panel and keep all hardware in a sealed, labelled bag with this manual.

TROUBLESHOOTING GUIDE

Issue	Likely Cause	Action
Cam will not lock	Cam arrow is facing away from the cam bolt, or bolt depth is incorrect.	Separate the panels, reorient cam B toward the bolt entry hole and check cam bolt A is seated correctly.
Rear panel will not slide	Cabinet frame is not square or grooves are misaligned.	Loosen nearby fixings slightly, square the cabinet, align the grooves and slide the panel without forcing it.
Door rubs or sits unevenly	Hinge alignment needs adjustment.	Loosen hinge screws slightly, reposition the door for an even gap, then retighten.
Kitchen wobbles	Uneven floor, loose legs or loose cabinet hardware.	Move to a level surface and check all leg fittings, cams and screws.
Shelf is unstable	Shelf support pins are at different heights or not fully inserted.	Remove the shelf, reinstall all four pins at the same height and seat the shelf flat.

VIII. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:

www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit **www.lifespankids.com.au/warranty-form**

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit **www.lifespankids.com.au/warranty-form** and fill in our Repair/Service Request Form or Parts Purchase Form.

IX. SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue. We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.

