


USER MANUAL

Ari Drawing Board

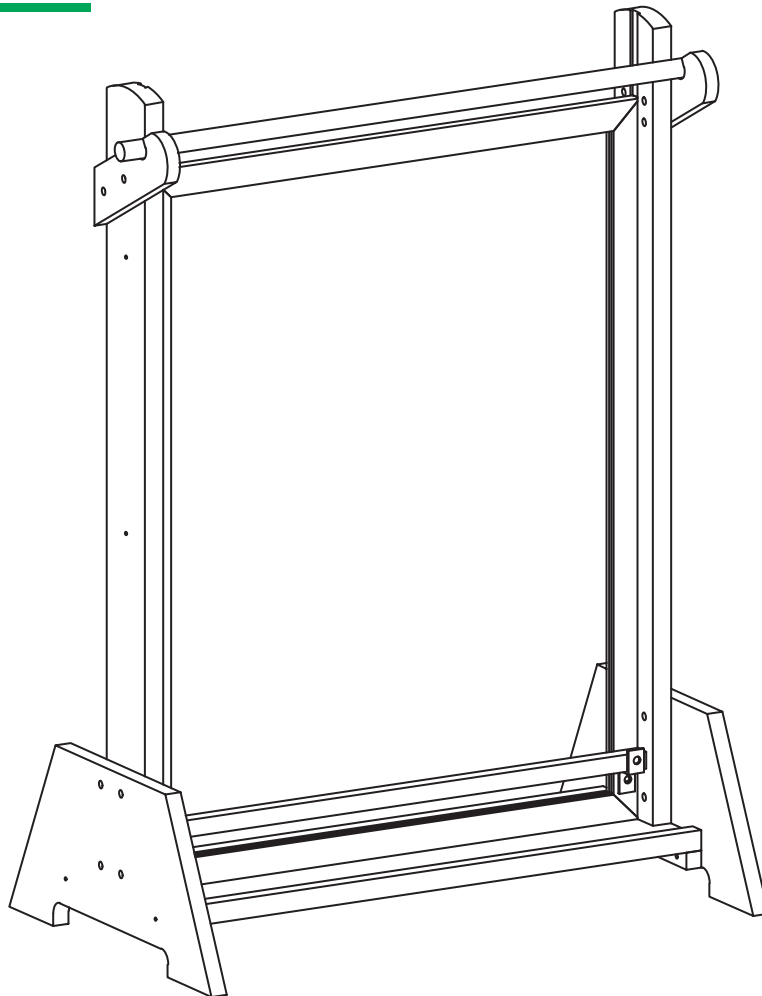

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. GENERAL SAFETY INSTRUCTIONS	3
II. ASSEMBLY SAFETY	4
III. PARTS LIST	5
IV. EXPLODED DIAGRAM	7
V. ASSEMBLY INSTRUCTIONS	8
VI. CLEANING	12
VII. REGULAR INSPECTION AND MAINTENANCE	13
VIII. WARRANTY	14
IX. SECURITY SUPPORT INFORMATION	15

I. GENERAL SAFETY INSTRUCTIONS



IMPORTANT: This product is intended for domestic use and stored indoors only. Read all safety, assembly, cleaning and maintenance instructions before use and retain this manual for future reference.

1.1 CHILD SAFETY

- Adult supervision is required at all times while children are using this product.
- Do not allow children to eat or drink while using the drawing board, particularly when small accessories are in use.
- Keep unassembled parts, hardware and tools out of reach of children and pets.
- Keep all packaging materials away from children. Plastic bags, films and small packaging components may present choking or suffocation hazards.
- Do not allow children to climb, sit, stand, swing, hang or pull on the drawing board or any attached components.
- The drawing board and its accessories are not designed to support a child's body weight.
- Ensure small accessories such as chalk, markers, magnets or other drawing components are appropriate for the child's age and are used under adult supervision.

1.2 RISK OF INJURY

- Inspect the product before each use. Do not use the drawing board if any part is damaged, loose, cracked or missing.
- Tighten any loose screws, bolts or fittings before use. Replace damaged or worn components as required.
- Place the drawing board on a flat, level, stable and non-slip indoor surface.
- Keep the product away from stairs, doorways, heaters, fireplaces, windows and other potential hazards.
- Keep sufficient clear space around the product to allow children to use it safely.
- Keep fingers and hands clear of hinges, folding sections, adjustable components and other potential pinch points.
- Do not place hands, fingers or objects into gaps or openings while parts are being adjusted.
- Do not push, rock or tip the product during use.
- Do not use the product as a step, seat, climbing frame or support.
- Do not allow rough play around the drawing board.
- Only use the product as intended and as described in this manual.

1.3 PRODUCT CARE AND DAMAGE

- Do not modify or alter the product.
- Only use replacement parts and accessories recommended by the manufacturer.
- Do not continue using the product if its stability or structural integrity has been affected.
- Repairs should only be carried out by a suitably qualified person.
- Keep the product indoors and away from excessive moisture, direct heat and prolonged exposure to sunlight.
- Do not use abrasive cleaners or harsh chemicals on the timber, Perspex or other finished surfaces.


II. ASSEMBLY SAFETY

- Assembly must be completed by a capable adult.
- Read all assembly instructions carefully before beginning.
- Remove all packaging and lay the components on a clean, open surface before assembly.
- Check the supplied parts against the parts list before starting.
- Keep children and pets away from the assembly area.
- Take care when using tools. Do not leave tools, screws or other small components unattended where children can access them.
- Wear appropriate hand protection if required when handling components or hardware.
- Assemble the product on a flat and stable surface.
- Follow the assembly sequence shown in this manual. Do not skip steps or substitute hardware.
- After assembly, check that all screws, bolts, fittings and joints are correctly installed and securely tightened.
- Ensure the product is stable and does not rock or wobble before allowing children to use it.
- Dispose of packaging safely once assembly is complete.
- The product must be fully and correctly assembled before use.


SAFE USE

- This product must only be used under adult supervision.
- Before each use, ensure the drawing board is stable and all fittings are secure.
- Only use drawing materials suitable for the designated drawing surface.
- Do not use sharp or pointed objects on or around the drawing board.
- Keep unused accessories stored safely when not in use.
- Do not allow children to throw drawing accessories or place them in their mouth.
- If the drawing board includes adjustable or folding components, an adult should make adjustments where there is a risk of fingers becoming trapped.
- Stop using the product immediately if it becomes unstable or if any component becomes loose or damaged.


III. PARTS LIST

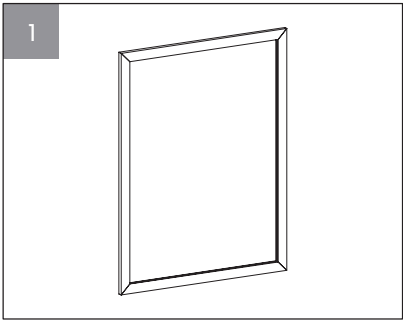


1pc

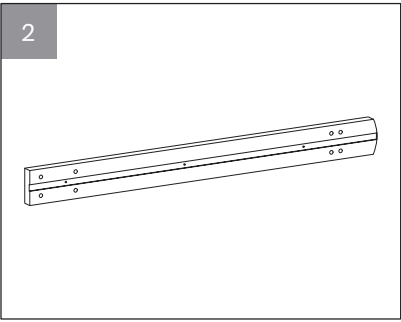


2pcs

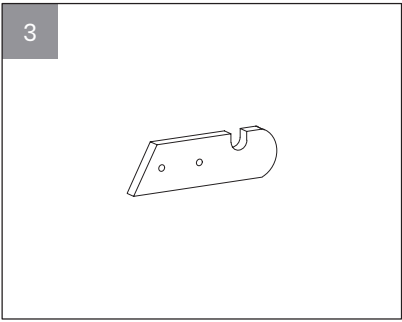


2pcs

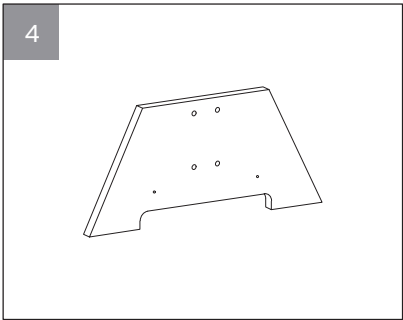


2pcs

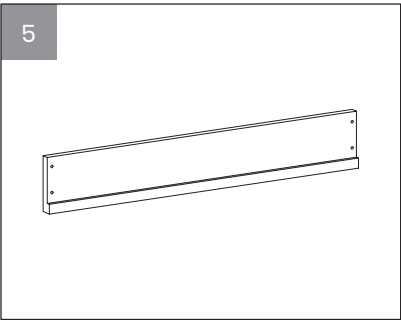


2pcs

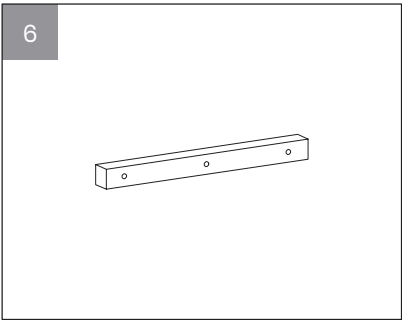

2pcs

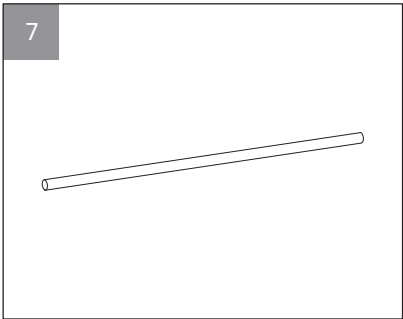

1pc

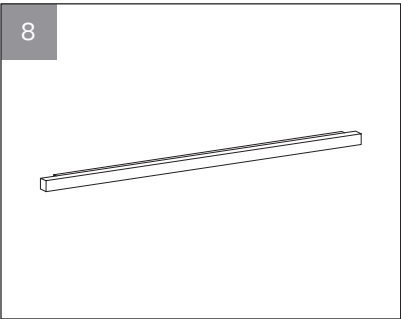

1pc

A x 6pcs.



3 x 35

B x 4pcs.



3 x 40

C x 8pcs.



4 x 30

D x 4pcs.



6 x 40

E x 8pcs.



 
6 x 45

F x 14pcs.



6 x 15

G x 2pcs.



H x 6pcs.




4 x 40

I x 8pcs.



6 x 45

IV. EXPLODED DIAGRAM

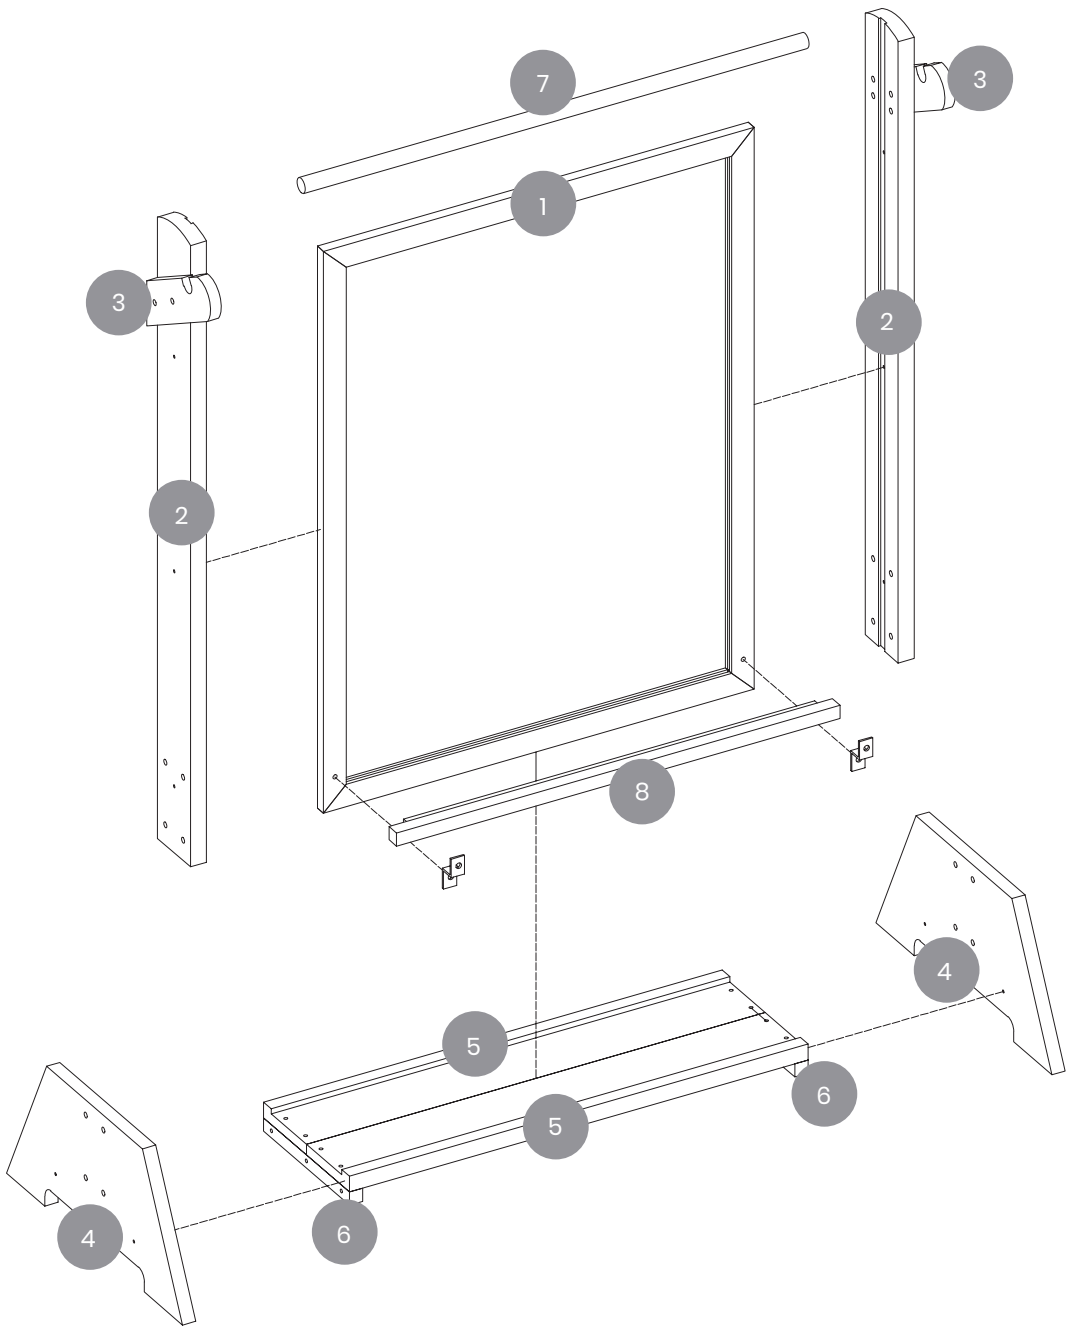

V. ASSEMBLY INSTRUCTIONS


STEP 1

(H) 4 x 40 = 6pcs.

Z1 = 2

IMPORTANT:


- Do not over tighten the screws as this can cause the wood to split.
- Assemble the equipment on flat and levelled ground.
- Assembled sections will be labelled as Z1, Z2 and so forth.

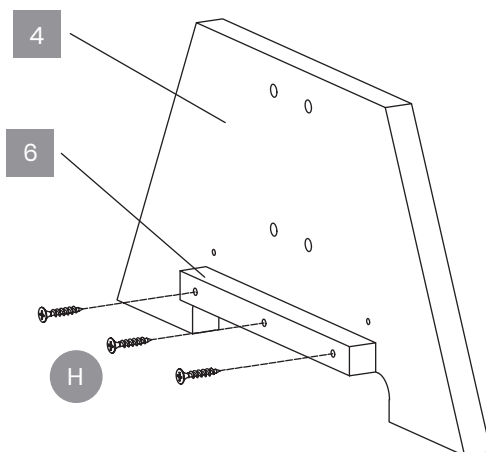

STEP 2

(B) 3 x 40 = 4pcs.
(H) 4 x 30 = 8pcs.


Z2 = 1

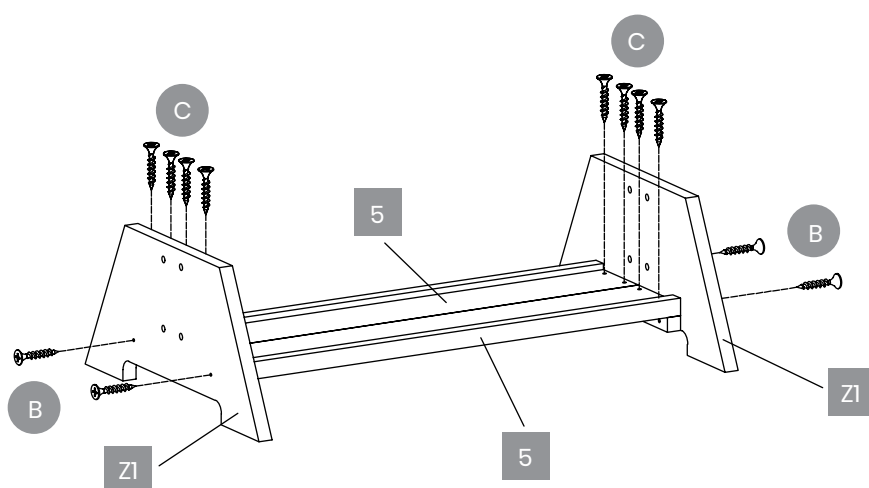

STEP 3


(A) 3 x 35 = 6pcs.

Z3 = 1

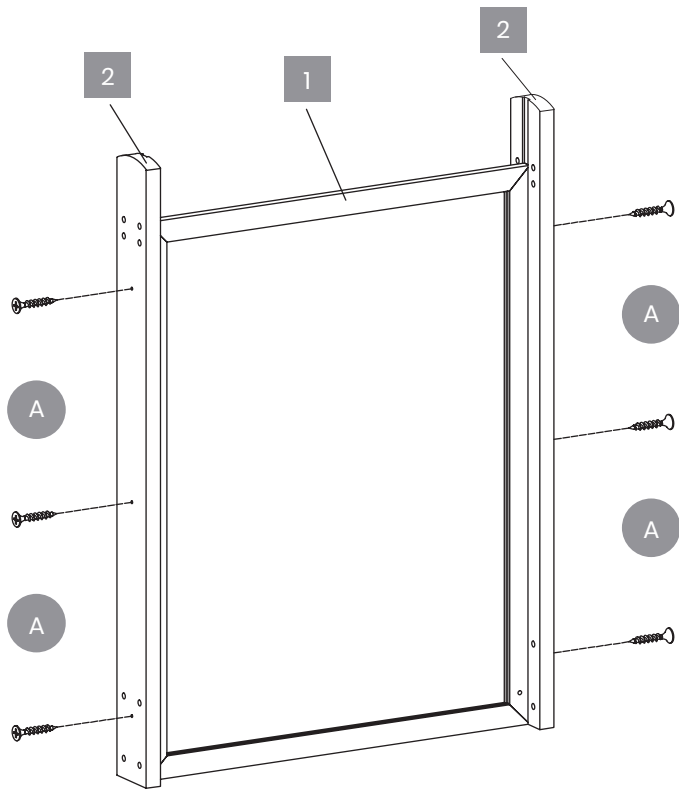

STEP 4

(E) 6 x 45 = 8pcs.
(F) 6 x 15 = 8pcs.


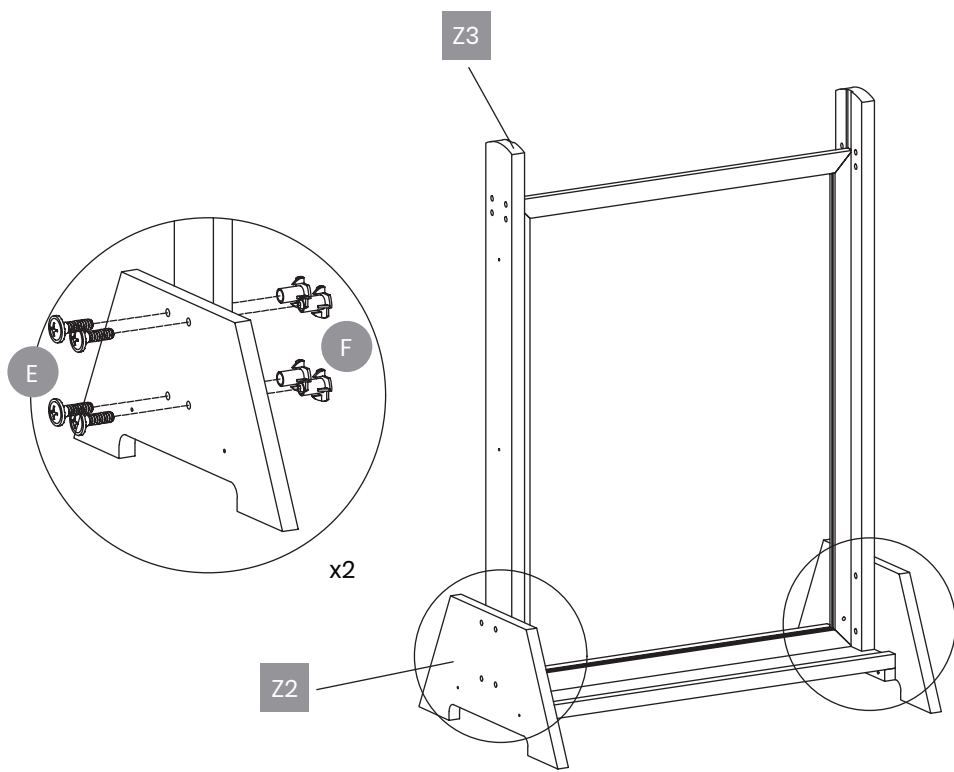


STEP 5

(I) 6 x 18 = 2pcs.
(F) 6 x 15 = 2pcs.



NOTE: Place part 8 with the wooden side facing outside and the padded side facing the screen. This parts rests on part G holder.

Part 10 is used to hold the paper in place during use.

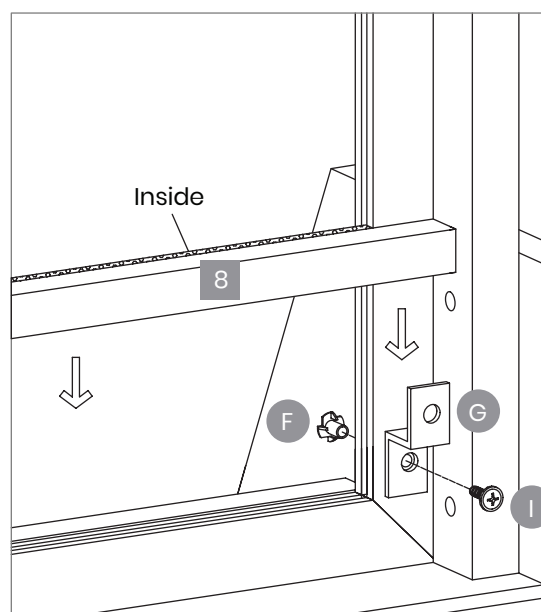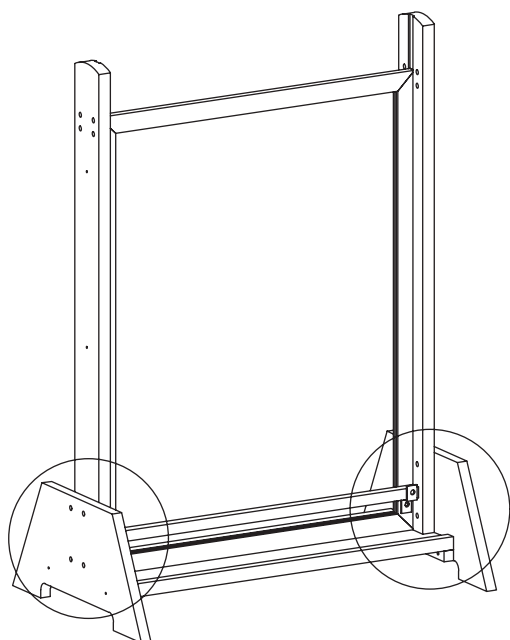


STEP 6


(D) 6 x 40 = 4pcs.
(F) 6 x 15 = 4pcs.

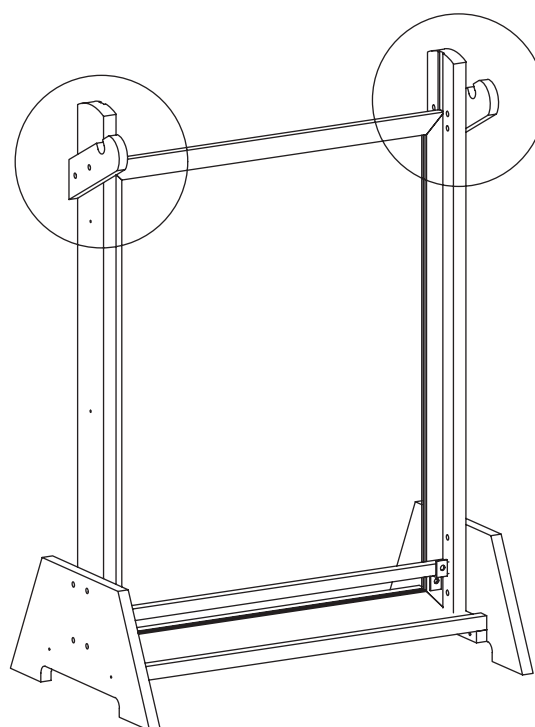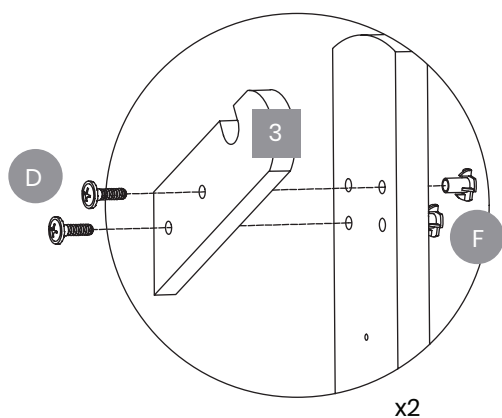

STEP 7

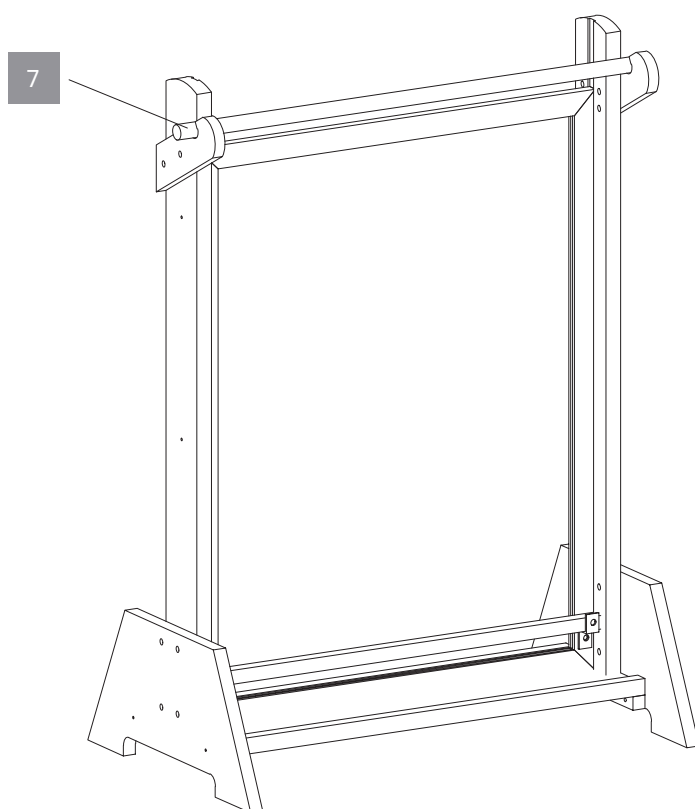

COMPLETION

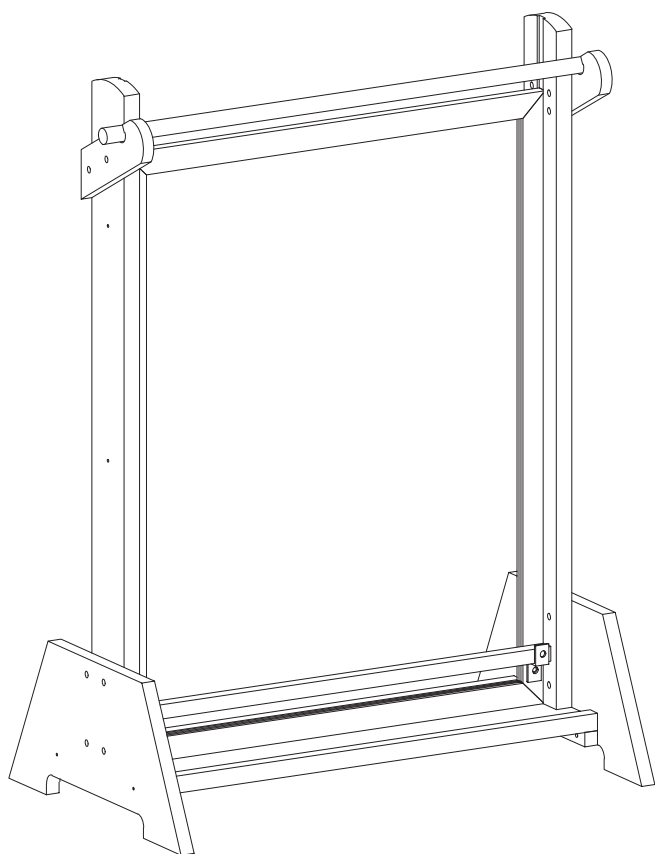

VI. CLEANING

WOODEN SECTIONS

- Do not use abrasive cleaners on wooden components.
- Wipe away dirt and dust using a soft, damp cloth.
- Wipe away excess moisture after cleaning and allow the timber to dry completely.

PERSPEX DRAWING SCREEN

The Perspex screen may be used with non-toxic whiteboard markers or water-based paint.



IMPORTANT: Do not use oil-based paint, permanent markers or other permanent drawing materials, as these may not be removable and may permanently stain or damage the Perspex.

- Clean the board immediately after use. Do not allow paint or marker residue to dry on the surface, as this may cause staining.
- For whiteboard marker, use a suitable whiteboard marker remover and a soft cloth.
- For water-based paint, clean with warm soapy water and a soft cloth. If required, use a non-toxic paint remover that is suitable for plastic surfaces.
- If staining remains, a suitable plastic polish may be used according to the polish manufacturer's instructions. Test on a small, inconspicuous area first.
- Do not use abrasive pads, scourers, solvents or harsh chemicals, as these may scratch, cloud or damage the Perspex.
- Dry the screen with a clean, soft cloth after cleaning.

VII. REGULAR INSPECTION AND MAINTENANCE

Regularly inspect the product to help maintain safe use.

- Check screws, bolts, fittings and joints for looseness and tighten as required.
- Check timber, panels and drawing surfaces for cracks, sharp edges, splinters or other damage.
- Check hinges, trays, holders and adjustable components for wear or damage.
- Check the Perspex screen for cracks, sharp edges or other damage before use.
- Remove the product from use until any damaged or worn parts have been repaired or replaced.
- Clean the product regularly following the cleaning instructions above.



WARNING: Failure to follow these instructions may result in product damage, instability or injury.

VIII. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:

www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit **www.lifespankids.com.au/warranty-form**

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit **www.lifespankids.com.au/warranty-form** and fill in our Repair/Service Request Form or Parts Purchase Form.

IX. SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue. We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.

