


USER MANUAL

Henley 3-Tier Bookshelf with Toy Box

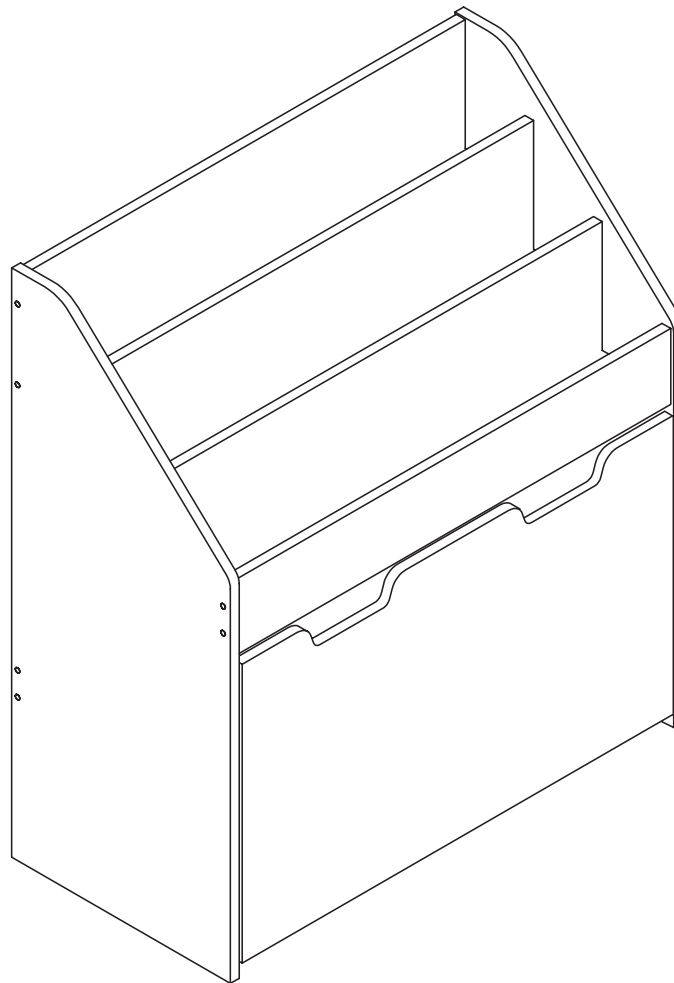

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. SAFETY WARNINGS	3
II. PARTS LIST	4
III. ASSEMBLY INSTRUCTIONS	5
IV. WARRANTY	13
V. SECURITY SUPPORT INFORMATION	13


I. SAFETY WARNINGS

 
 
 
- **Adult assembly required.** Ensure all parts are securely fastened before use.
- **Always secure the bookshelf to a wall** using the supplied anti-tip strap or wall fixing kit. Unsecured furniture can tip over and cause serious injury.
- **Do not allow children to climb, stand, sit, or hang on the shelves or drawer.** This unit is designed for storage only and is not a toy.
- **Place heavier books and items on the lower shelves or inside the drawer** to improve stability.
- **Do not overload the shelves or drawer.** Follow the recommended weight limits if provided.
- **Keep the drawer closed when not in use** to prevent tripping hazards and reduce the risk of tipping.
- **Supervise young children during use.** Take care to avoid fingers being caught when opening or closing the drawer.
- **Use only on a flat, level surface.** Do not place the bookshelf on uneven flooring or thick rugs that may affect stability.
- **Do not use the bookshelf if any part is loose, cracked, broken, or damaged.** Stop use immediately until repaired or replaced.
- **Keep away from open flames, heaters, and direct sources of high heat.**

MAINTENANCE & CARE

- **Regularly check all screws, bolts, and fittings** to ensure they remain tight and secure. Re-tighten when required.
- **Inspect the shelves, side panels, drawer, and edges** for signs of wear, cracks, splinters, or damage.
- **Clean with a soft, damp cloth.** Dry immediately with a clean cloth after cleaning.
- **Do not use harsh chemicals, abrasive cleaners, bleach, or solvents** as these may damage the finish.
- **Avoid excessive moisture.** Do not pour water directly onto the unit or leave wet items on the shelves or inside the drawer.
- **Do not drag the bookshelf when moving it.** Empty the unit first, then lift and reposition with adult assistance.
- **Store only suitable children's books, toys, and lightweight items.** Avoid placing heavy or unstable objects on the top shelf.
- **Check the wall anchor periodically** to ensure it remains firmly attached to both the bookshelf and the wall.

II. PARTS LIST

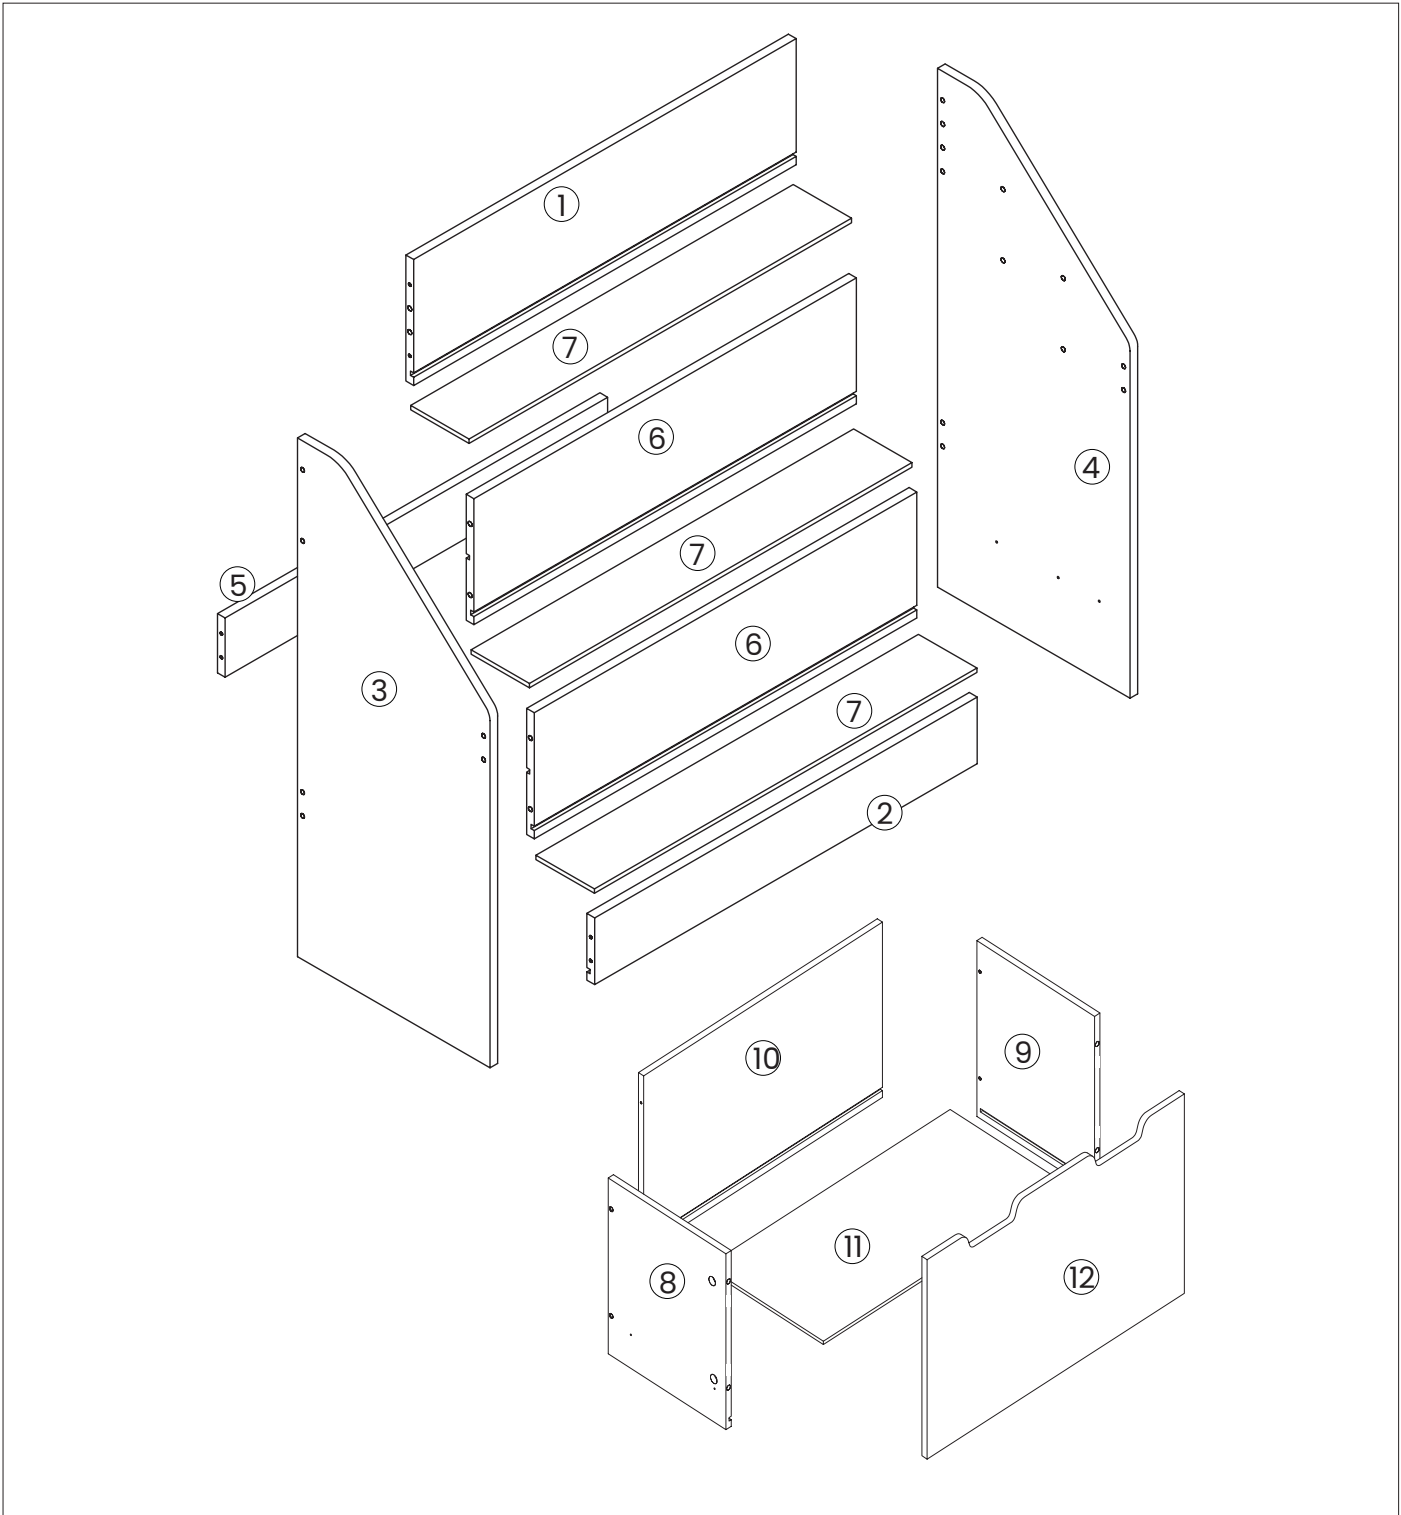


A	x4	B	x4	C	x12	D	x16	E	x2
									
F	x10	G	x2	H	x1				
									

ASSEMBLY INSTRUCTIONS


STEP 1

IMPORTANT: Do not over-tighten the screws.

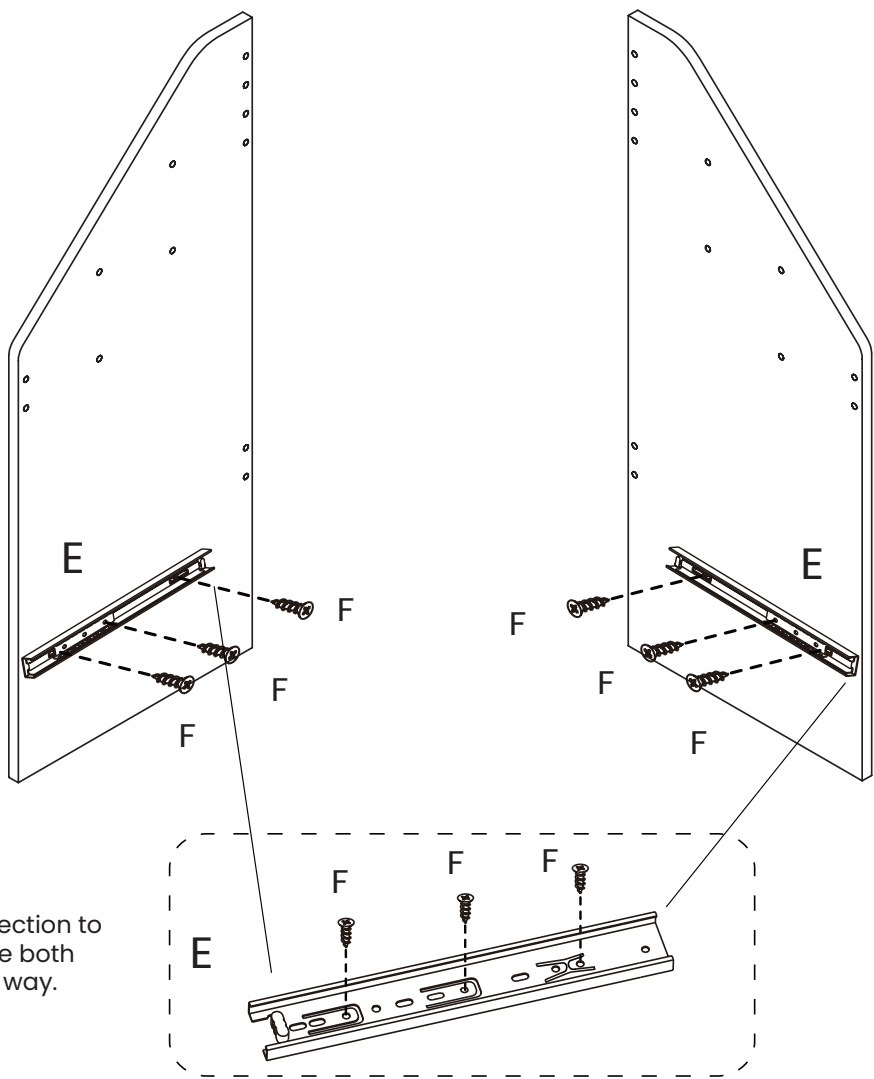


Take note of the direction to mount Part E, ensure both are facing the right way.

Remove the inner slider from part E before mounting Part E.
Take note of which side the sliders were removed from as you will need to install them later to the same side for the drawers.

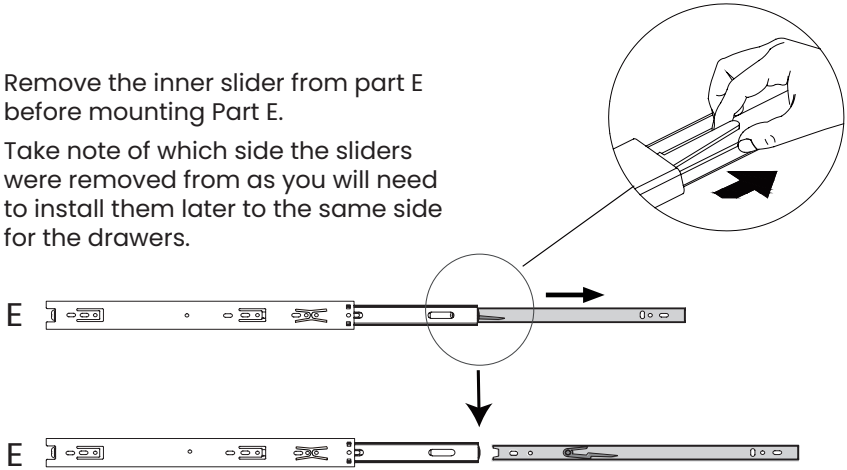


F	x6
	
E	x2
	


STEP 2

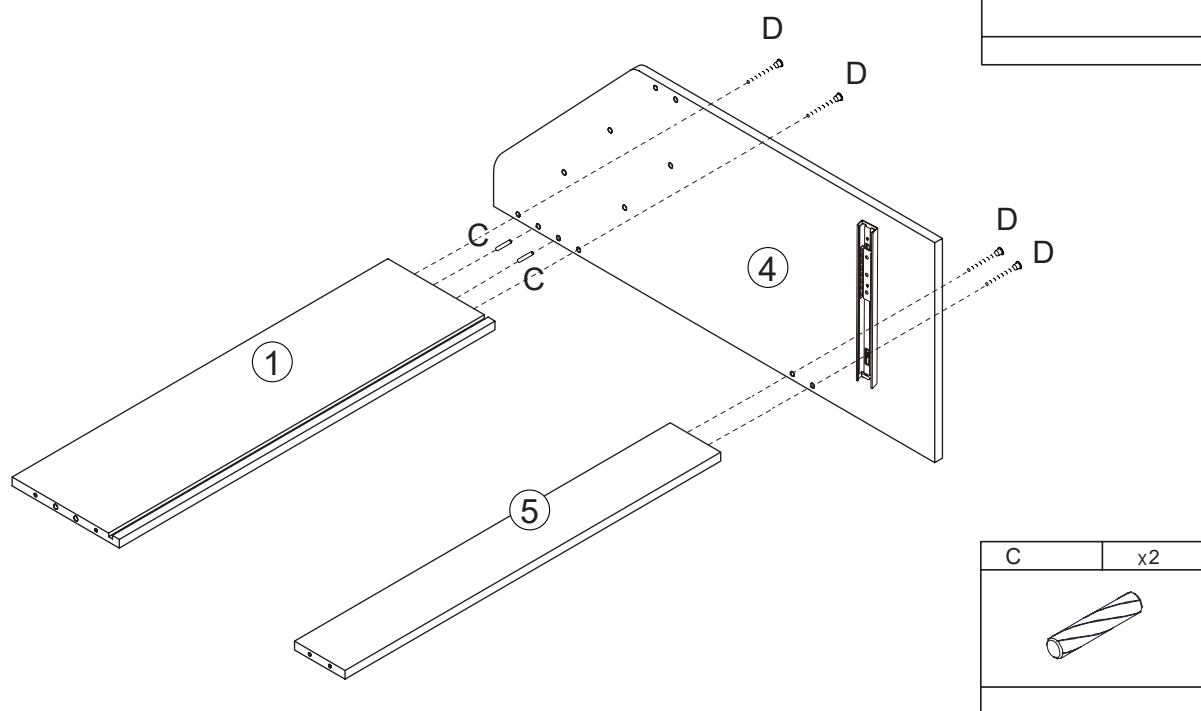


STEP 3

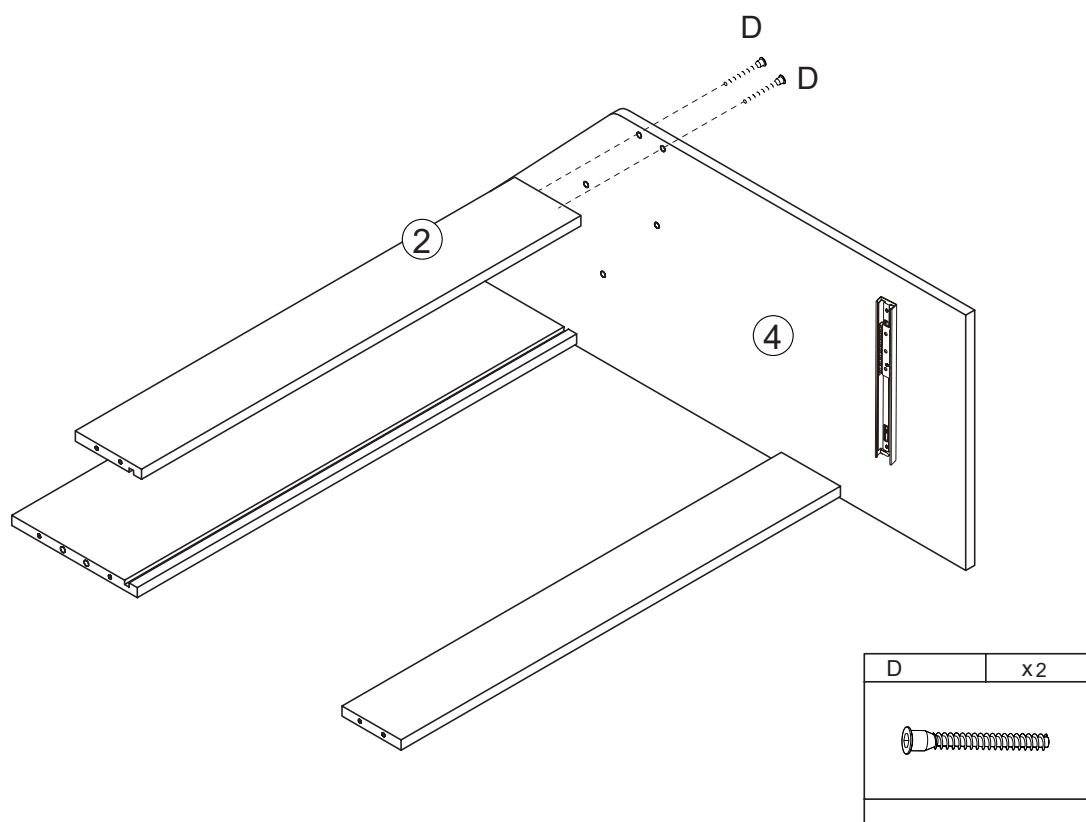


STEP 4

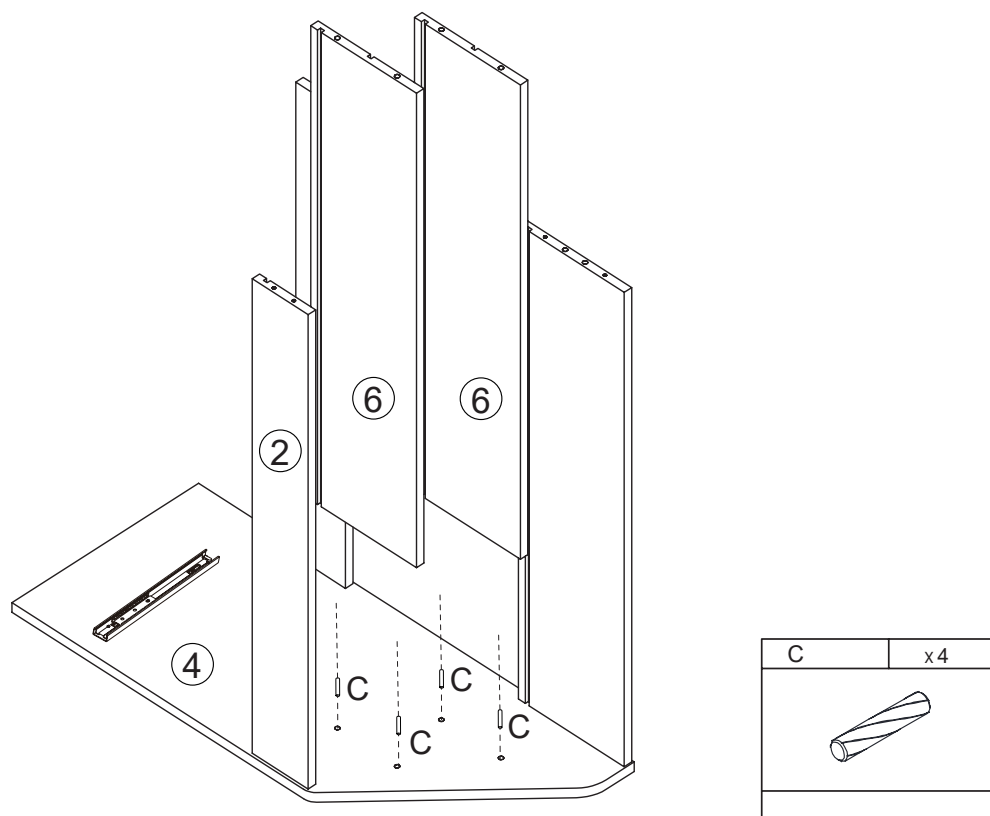

STEP 5

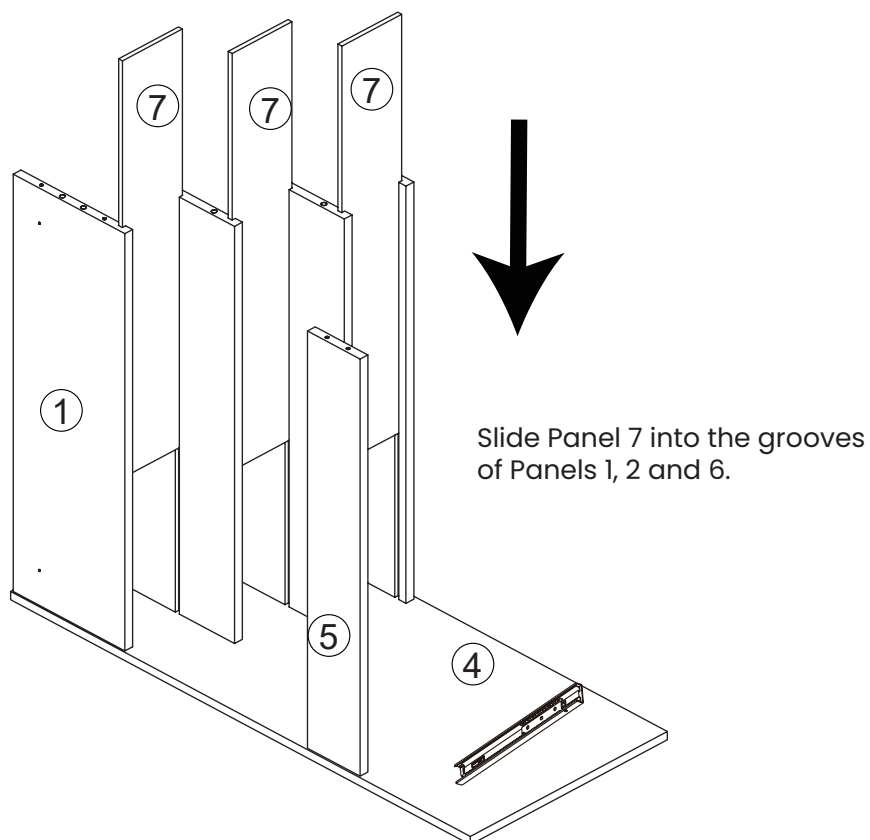


STEP 6

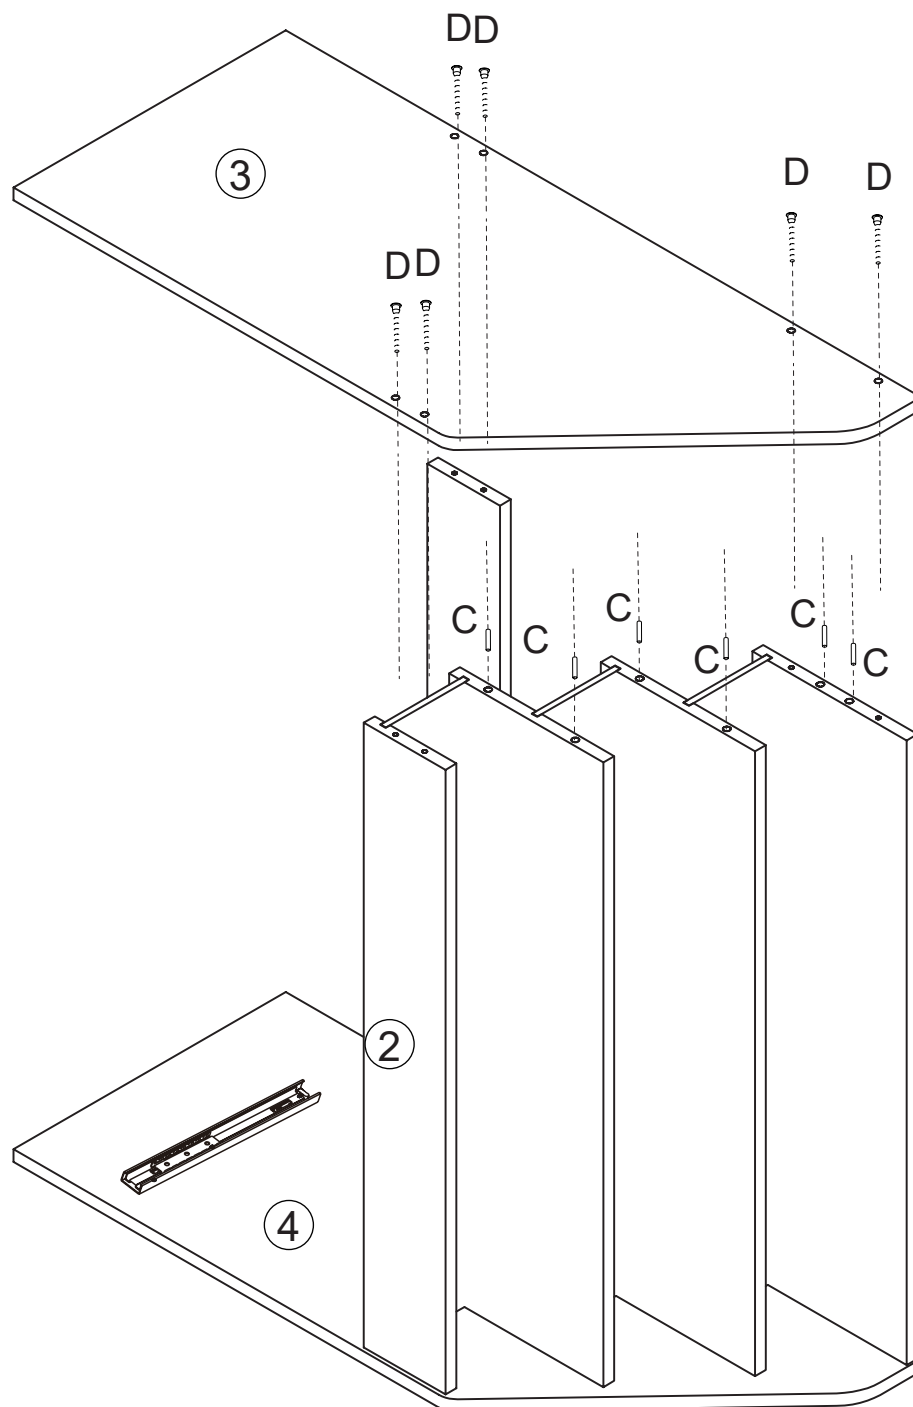

C	x6
	


D	x6
	

STEP 7

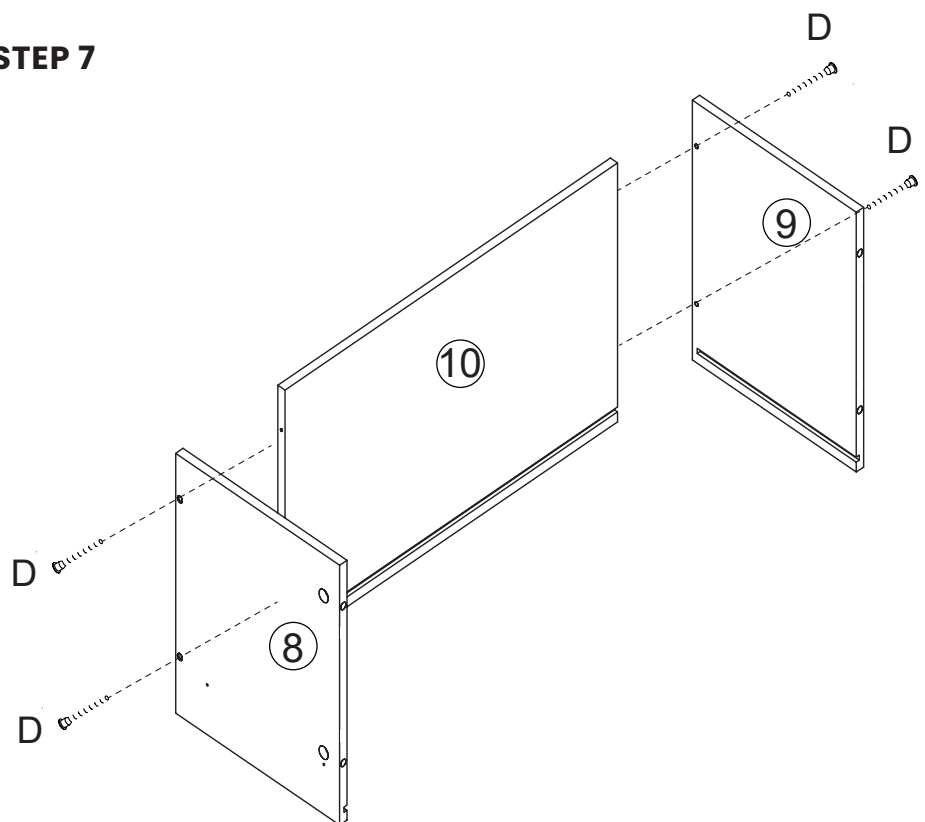



D	x4
	

STEP 8


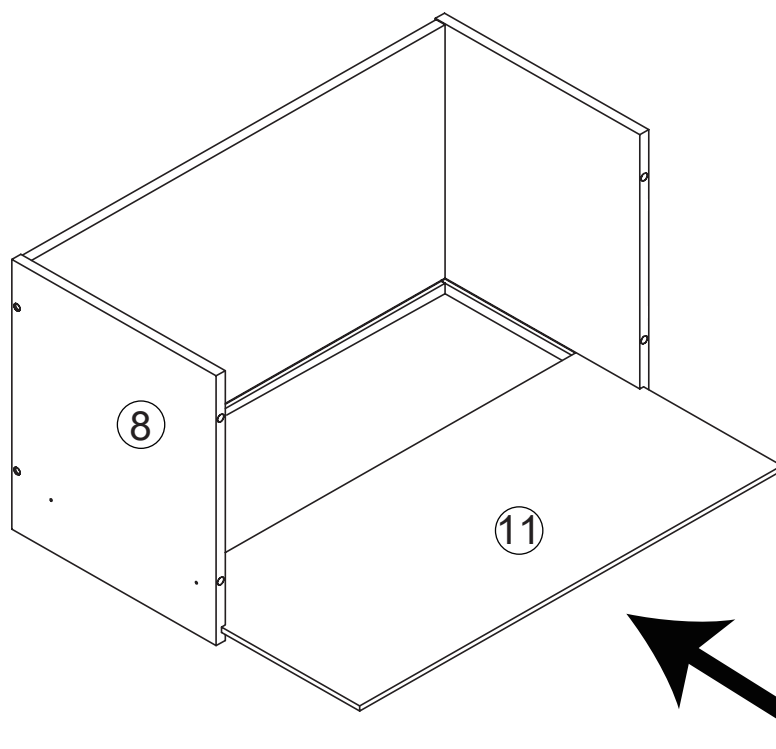


Slide the Panel 11 into the grooves of the assembled panels.

STEP 9

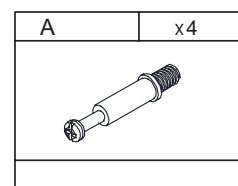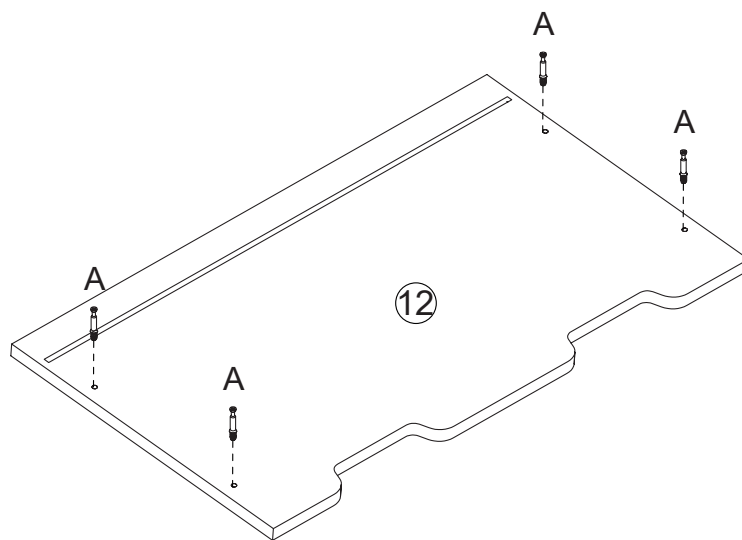


STEP 10

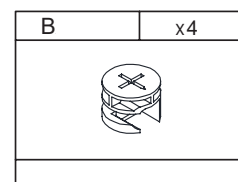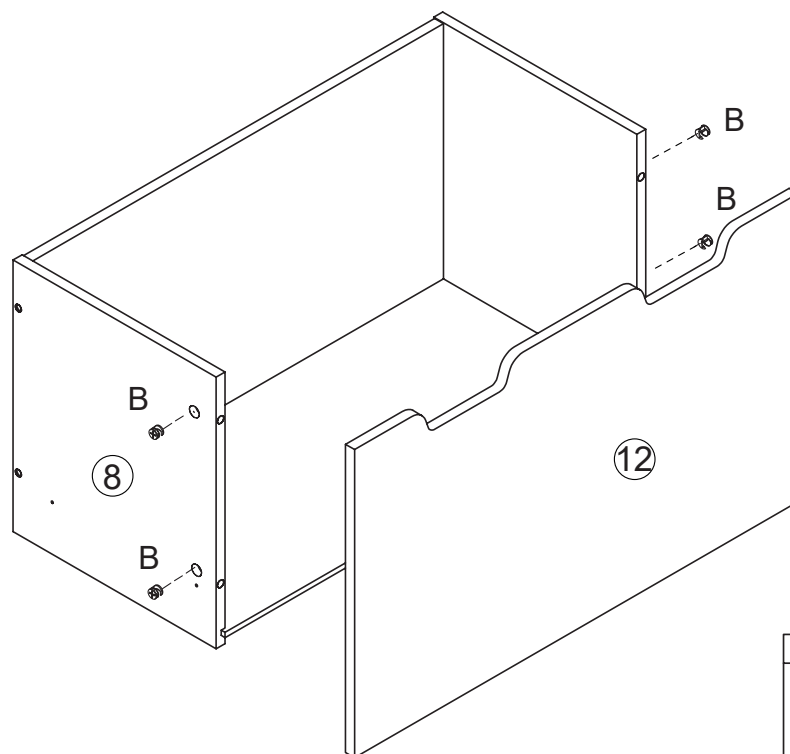


1. After the cam lock bolts are attached (in previous step), position Panel 12 at the front of the drawer, making sure the shaped edge faces upward and the cam bolts align with the holes on the side panels.
2. Insert 4 x cam locks (B) into the side panels of the drawer.
3. Push Panel 12 into place, then turn each cam lock clockwise to secure the drawer front firmly.

STEP 11

Secure the inner slider of Part E to the sides of the drawer. Make sure to match the part to the same sides.

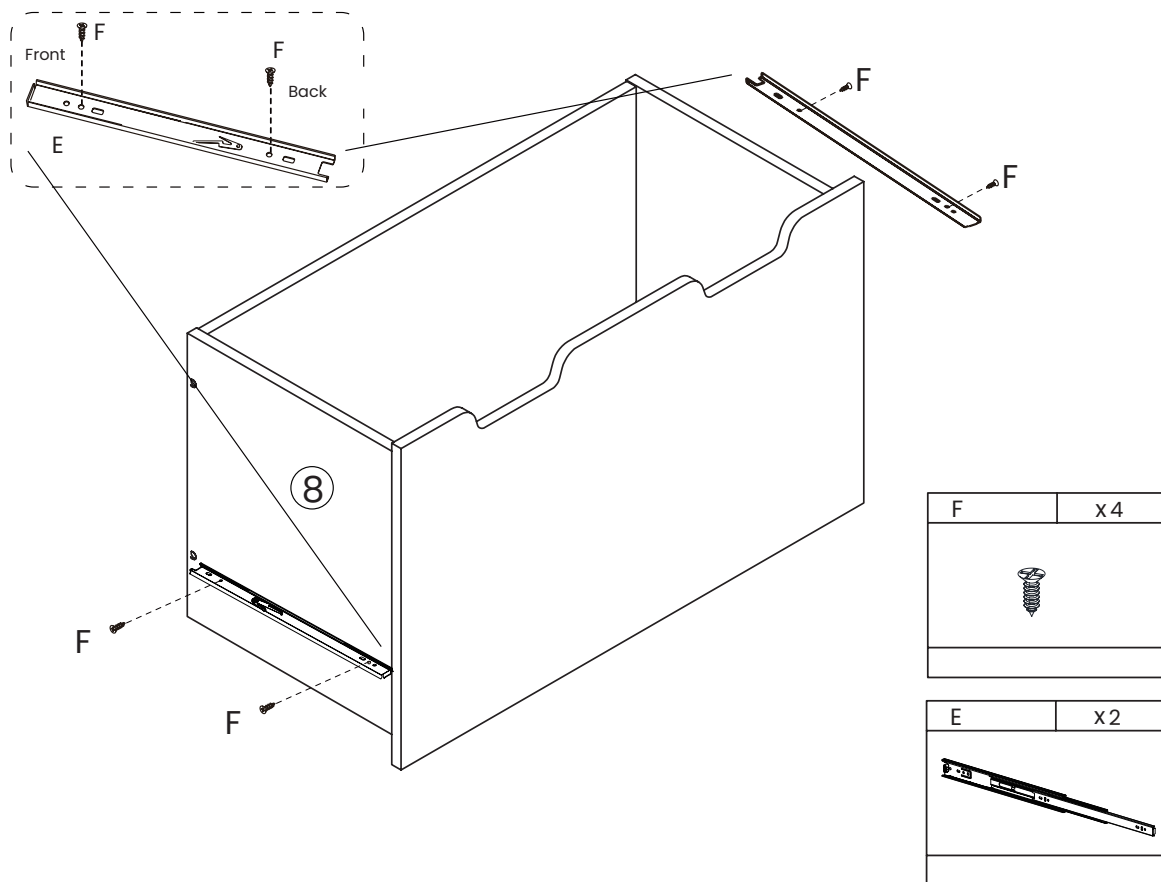



STEP 12

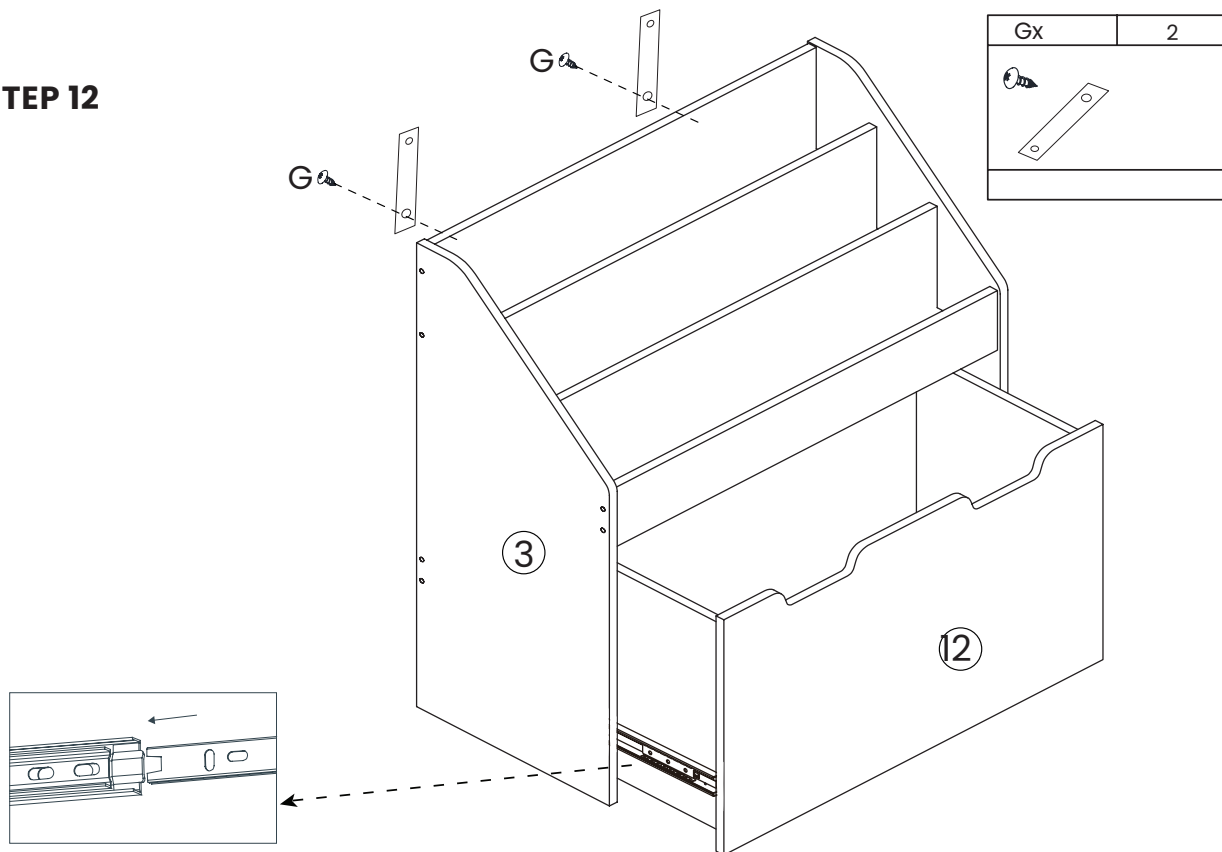

STEP 13

1. Mark the wall through the holes in the safety brackets.
2. Drill the marked holes and insert the wall plugs.
3. Fix the brackets to the wall using 2 x screws (G). Check that the bookshelf is stable and securely attached.

wall

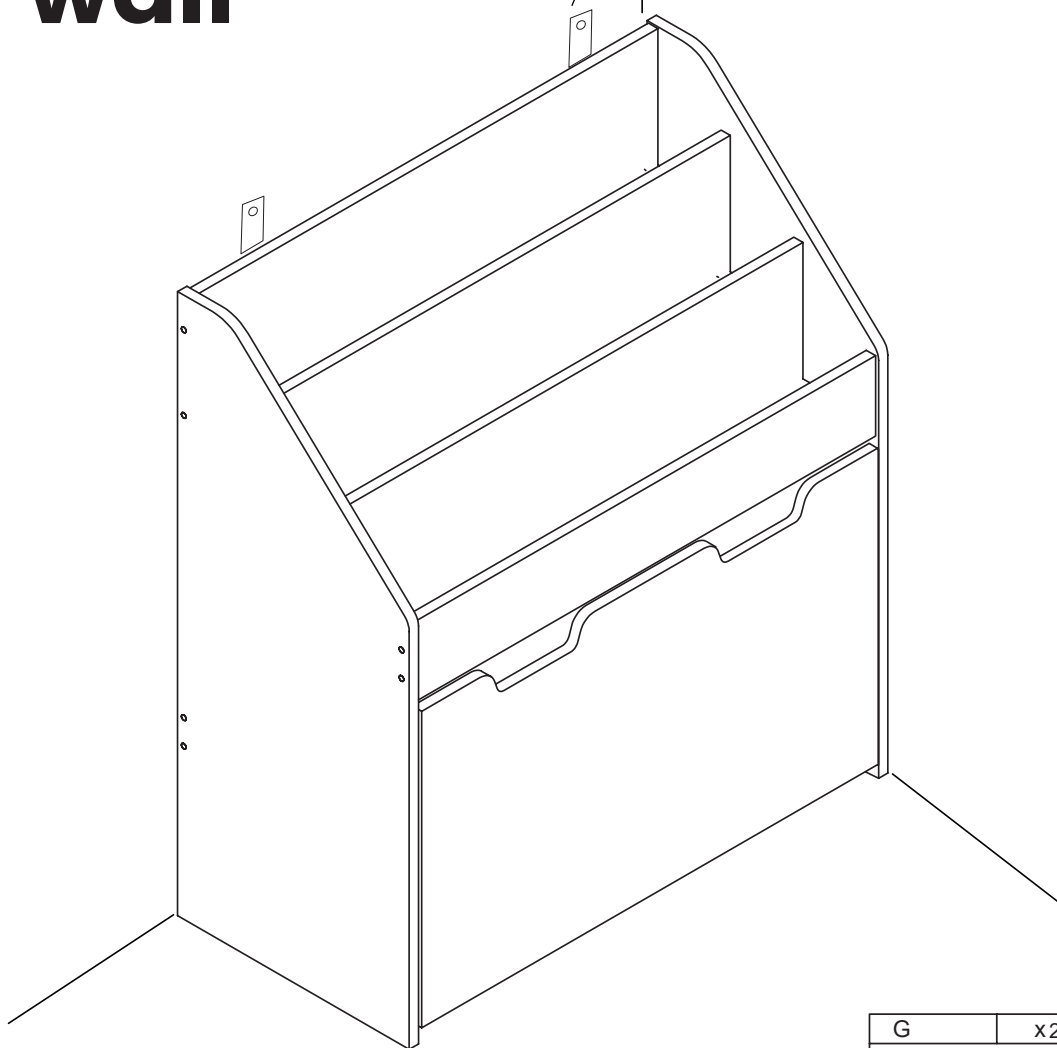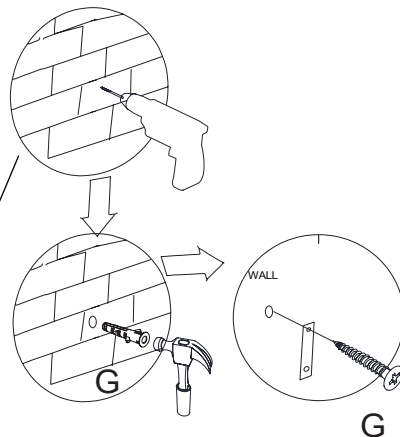

G	x2

SAFETY WARNING

- * This bookshelf must be secured to the wall before use to prevent tipping.
- * Use wall fixings suitable for your wall type.
- * Check for hidden wires or pipes before drilling.
- * Do not allow children to climb, hang, or pull on the bookshelf.

IV. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Please email us at support@lifespankids.com.au for all warranty or support issues.

For all warranty or support related enquiries, please lodge a support ticket first by sending us an email.
support@lifespankids.com.au.

V. SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email support@gflgroup.com.au with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.

