


USER MANUAL

Wattle Play Centre with 1.8m Slide

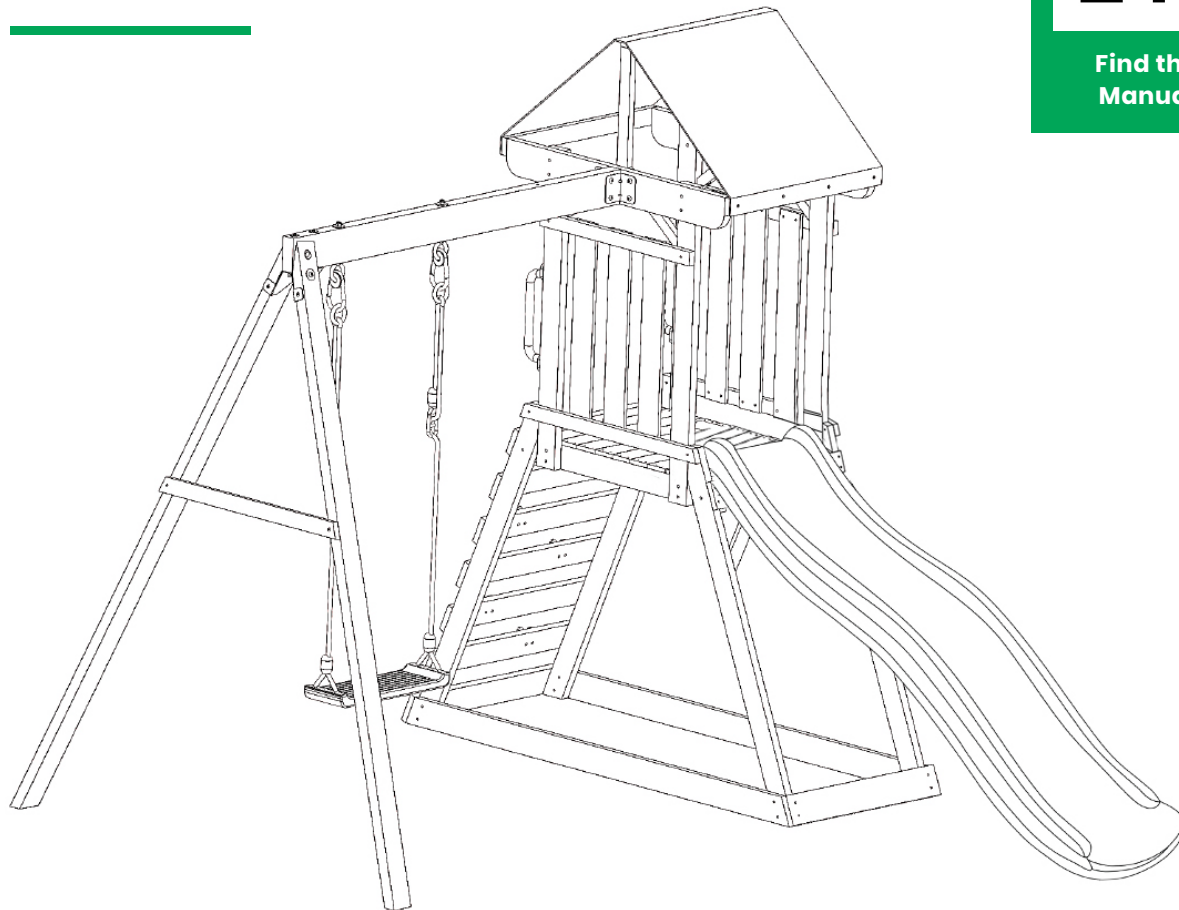

Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. GENERAL SAFETY INSTRUCTIONS	3
1.1 Danger for Children	3
1.2 Risk of Injuries	3
1.3 Product Damage	3
1.4 Assembly Advice	4
II. SAFETY INSTRUCTIONS	5
III. PARTS LIST	7
IV. ASSEMBLY INSTRUCTIONS	9
V. PLAY SET ASSEMBLY FAQs	18
VI. WOOD ADVICE	19
VII. WARRANTY	22
VIII. SECURITY SUPPORT INFORMATION	23

I. GENERAL SAFETY INSTRUCTIONS

NOTE: This product is intended for outdoor domestic use only.

1.1 DANGER FOR CHILDREN



WARNING: No eating while using the product at the same time.

- Children do not recognize potential dangers from this product. The unassembled product must be stored out of reach of children and pets.
- This product may only be used with adult supervision at all times.
- The packaging material is not suitable for children due to choking and suffocation hazards.

1.2 RISK OF INJURIES

- Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician.
- Check the product before each use. Defective parts must be changed immediately as they can impair the function and the safety of the product.
- Adhere to the weight loading and user at a time as specified on the product manual or website product specifications.
- Use the product only on even and non-slipping surfaces. Never use it near water and keep sufficient space around for safety.
- Beware of moving parts such as the springs or elastics, which could catch your arms and legs. Do not place any objects or body parts in the product's openings.
- Do not lean, sit, stand or place body weight on any window ledge, play fence, play kitchen ledge, door or similar accessory feature. These components are not designed to support user weight and may break, detach or cause the equipment to become unstable.
- Children must not swing, hang or pull on window doors, cubby doors or any other doors attached to the play equipment. Misuse may result in damage to the product and could cause serious injury.

1.2 PRODUCT DAMAGE

- Do not make alterations to the product. Only use original spare parts. Qualified technicians should only carry out repairs – improper repairs can lead to danger for the user. Use this product only as described in this manual.

1.3 PRODUCT DAMAGE

- Do not make alterations to the product. Only use original spare parts. Qualified technicians should only carry out repairs – improper repairs can lead to danger for the user. Use this product only as described in this manual.

1.4 ASSEMBLY ADVICE

- The product should not be installed over concrete, asphalt or any hard surface. We recommend installing on grass area or dirt ground with playground wood-chips (mulch) or other impact absorbing ground cover on top (see page 6).
- The assembly of the product must be done carefully and by an able-bodied adult. If in any doubt, ask a technically qualified person.
- Before you start with the assembly, read the instructions carefully.
- Remove all packaging materials and lay down all parts on an open space. This gives you an overview and simplifies the assembly procedure.
- Check with the parts list that all parts are available. Dispose of the packaging material when the assembly is completed.
- Beware that when using tools or doing technical work, there is always a risk of injuries. Assemble the product with care.
- Create a danger free environment; for example, do not let tools lay around the workspace. Store the packaging material in a way that cannot cause any danger.
- After installing the product according to the instruction manual, ensure all screws, bolts and nuts are correctly installed and tightened and that all joints are secure.
- Reasonable space must be kept between the product and possible sources of danger, such as other equipment swimming pools and fences.
- The product must be assembled correctly before use.
- Your play structure must be installed on a flat horizontal surface with a minimum of 2m between it and any structure or obstacle such as a fence, garage house, tree branches, clothes lines, or electric cables.
- Modifications made to the original product shall be carried out according to the instructions of the manufacturer.
- The product must always be used in a well-lit area.
- Do not place anything under the product.
- Use gloves during assembly and disassembly.
- Outdoor products should be equipped with a device that in strong wind conditions avoid displacement due to wind (e.g. steel bars in the ground or loads like sandbag or water bags).
- In certain areas during winter, snow buildup and the low temperatures can damage the product. It is recommended to remove snow buildup and to store the product indoor.
- We strongly recommend visual inspections every 3 months to ensure the integrity of the entire product. Replace any parts as necessary.

II. SAFETY INSTRUCTIONS

Your set has been designed and engineered for children only and for residential use only. A maximum of 50kg per child is recommended for play activities designed for multiple child use. A maximum of 2 children is recommended for this swing set.

- The safety instructions of the product should always be considered and obeyed.
- No clothes with hooks or loose parts should be worn or carried during product usage in order to avoid hooks getting caught and causing injury.
- Strong winds can result in the product being blown away or damaged. If strong winds are predicted the product must be disassembled and moved to a sheltered area or sufficiently anchored down.
- Moving the product whilst assembled may affect the integrity of the frame. Should it be necessary to move the product, please consider the following:
 1. Force to be evenly spaced around the frame to lift the product off the ground
 2. The product must be carried horizontally
 3. Use caution whilst moving as it could bend the product frame.
- Users should be familiar with the assembly manual. This manual contains assembly guidance; selected precautionary measures as well as recommendations for servicing and maintenance of the product, in order to ensure a secured and fun use of the product.
- It is the responsibility of the owner or the supervisor to guarantee that all users of the product are informed sufficiently of all warning references and safety instructions.

For the supervisor

The supervisor's role is to make sure users are aware of all safety precautions and that these precautions are enforced. When a supervisor is not available, the product may be disassembled or covered to limit access.

- The product can be only used if it is in good condition, worn or damaged parts should be replaced.
- Objects, which could be dangerous to the user, should be away from the product.
- Avoid unauthorized and unsupervised use of the product.
- Do not use the product under influence of alcohol or drugs (incl. medicines).
- Do not use the product as a jumping platform for other articles.

Consumer Information Sheet for Playground Surfacing Materials

The US Consumer Product Safety Commission (CPSC) estimates that about 100 000 playground equipment-related injuries resulting from falls to the ground surface are treated annually in US hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall on to a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces, such as concrete or asphalt, and while grass may appear to be acceptable, it may quickly turn to hard-packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or the gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table B.1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall on to four different loose-fill surfacing materials if they are installed and maintained at depths of 150 mm, 225 mm and 300 mm.

TABLE B.1: Fall height in millimetres from which a life-threatening head injury would not be expected.

TYPE OF MATERIAL	DEPTH OF SURFACING MATERIAL		
	150mm	225mm	300mm
Double Shredded Bark Mulch	1800	3000	3300
Wood Chips	1800	2100	3600
Fine Sand	1500	1500	2700
Fine Gravel	1800	2100	3000

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
However, it should be recognised that all injuries due to falls cannot be prevented, no matter what surfacing material is used.

It is recommended that a shock absorbing material extend a minimum of 1800mm in all directions from the perimeter of stationary equipment such as climbing frames and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of twice the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for the equipment in question. The choice of a material depends on the type and height of the playground equipment, the availability of the material in a particular area, and its cost.



III. PARTS LIST

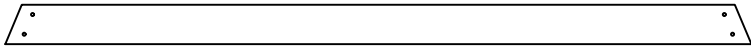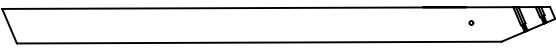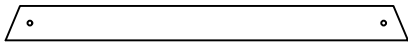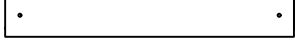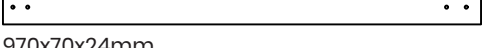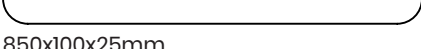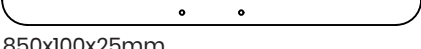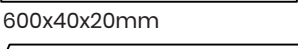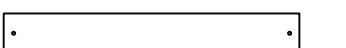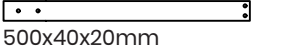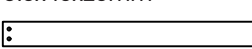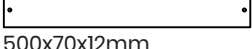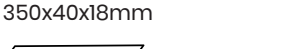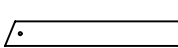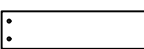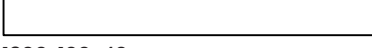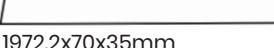WP01=2	
	1512x80x18mm
WP02=4	
	1104x70x25mm
WP03=2	
	816.5x70x25mm
WP04=2	
	586x87x18mm
WP05=4	
	970x70x24mm
WP06=1	
	850x100x25mm
WP07=1	
	850x100x25mm
WP08=2	
	600x40x20mm
WP09=2	
	700x40x20mm
WP11=6	
	600x80x10mm
WP12=2	
	500x40x20mm
WP13=1	
	510x40x20mm
WP14=2	
	600x50x20mm
WP15=11	
	500x70x12mm
WP16=2	
	350x40x18mm
WP17=4	
	300x40x20mm
WP18A=1	
	1972.2x70x35mm
WP19=1	
	740x50x20mm
WP20A=2	
	550x76x18mm
WP20B=5	
	550x80x18mm
WP21=1	
	1300x100x40mm
WP18B=1	
	1972.2x70x35mm
TI=2	






Spring Hook 2pcs



Handle 2pcs




Rocks 5pcs

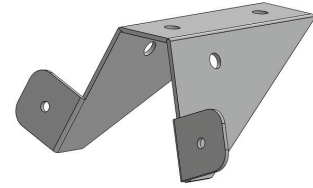

BR-06 1pc




Anchor 6pcs

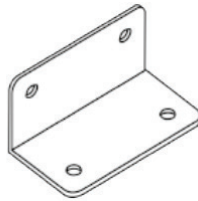

BR-05 2pcs



Swing Seat 1pc

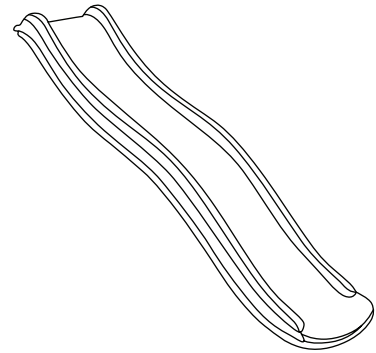


Slide 1pc



SP-01 1pc



SP-02 1pc

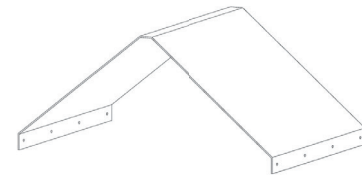

SP-03 1pc



A - M6 x 50mm 4pcs



C - M6 x 40mm 78pcs



F - M6 x 60mm 6pcs



X - M4 x 25mm 36pcs

 


Y - M4 x 20mm 8pcs
with washers x 8pcs




M - M4 x 40mm 48pcs


TOOLS



M5 x 2

 

M8 x 1

 

x2



B - M8 x 45mm 20pcs
with washer 20pcs



D - M10 x 30mm 10pcs



H - M8 x 25mm 4pcs



G - M8 x 42mm 4pcs



O - Bolt M8 x 90mm 1pc
with 2 washers



P - Lock Bolt M8 x 38mm 2pcs
with 1 spring washer & 20mm
big washer



Q - Bolt M8 x 100mm 2pcs






E - M6 x 35mm 6pcs

IV. ASSEMBLY INSTRUCTIONS


STEP 1

IMPORTANT:
Do not overtighten the bolts during assembly, as excessive force may cause the timber to crack or split. Tighten all hardware securely, but only until firm.

TIPS:
Insert the spur nut into the timber by hammer.

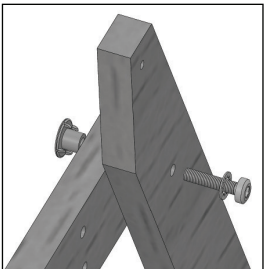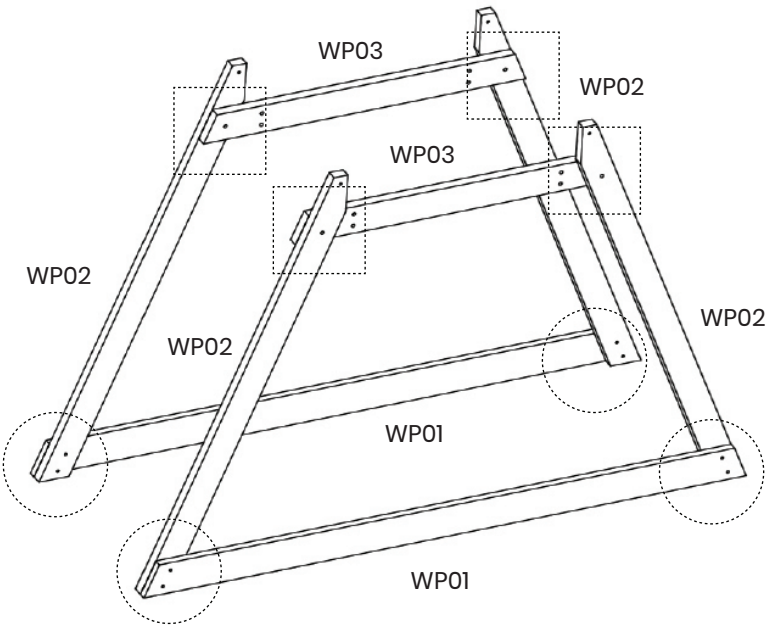
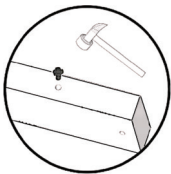


B - M8 x 45mm 4pcs
with Washer 4pcs

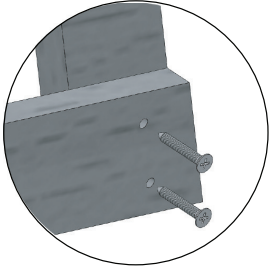


C - M6 x 40mm 8pcs

STEP 2

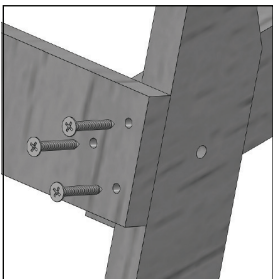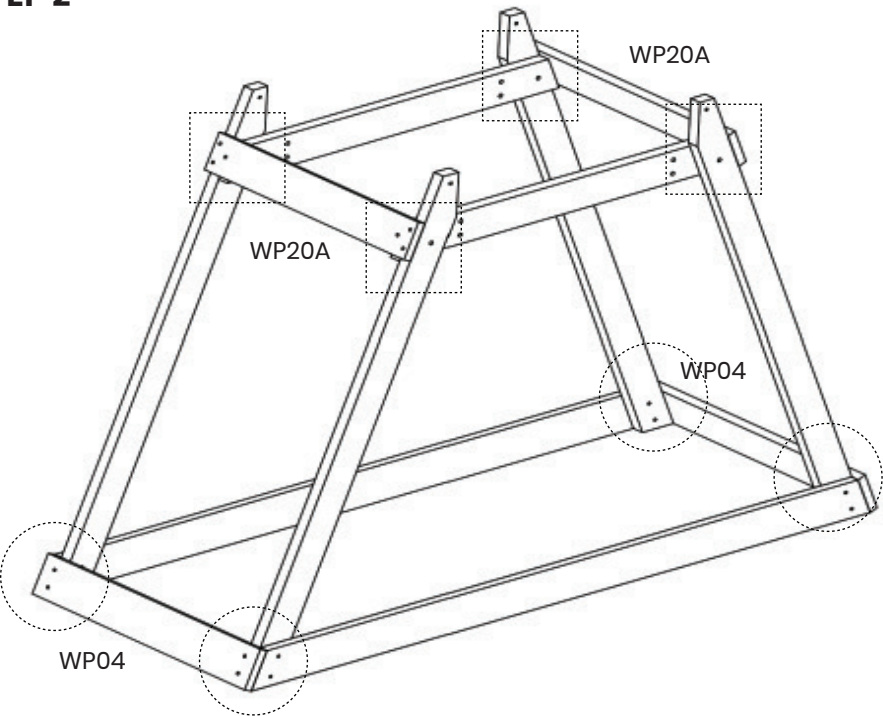



C - M6 x 40mm 12pcs

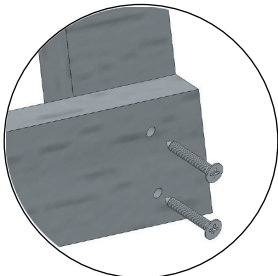

C - M6 x 40mm 8pcs


STEP 3

WP20B x 5pcs

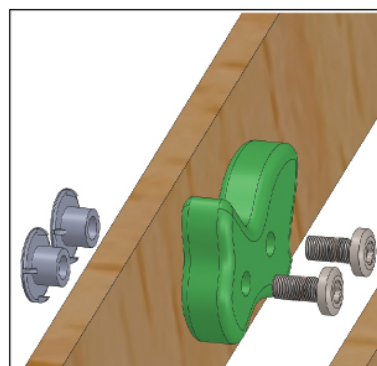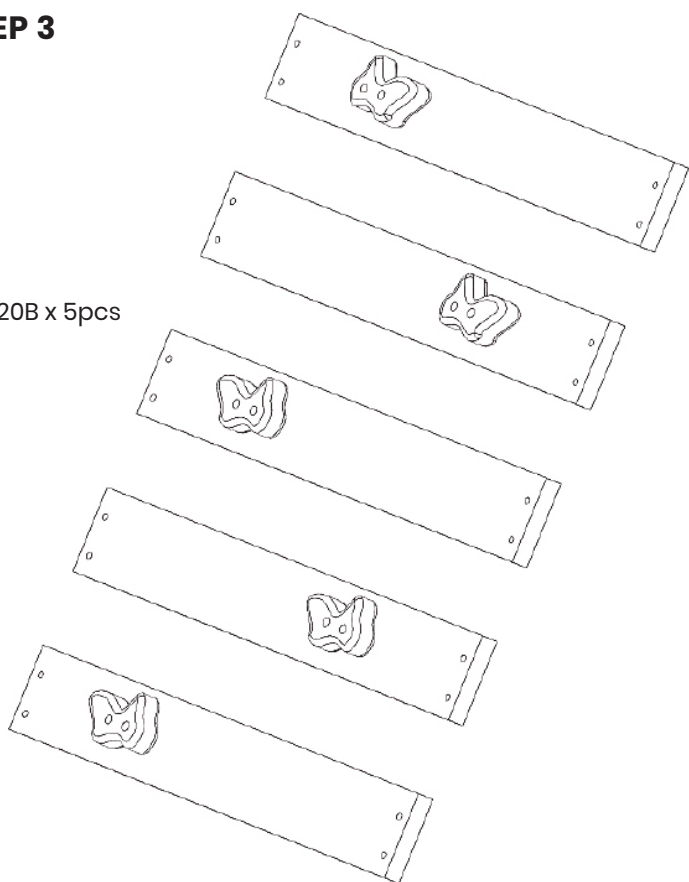


D – M10 x 30mm 10pcs


STEP 4

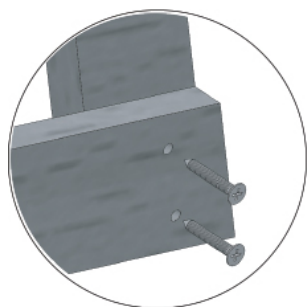

C – M6 x 40mm 20pcs

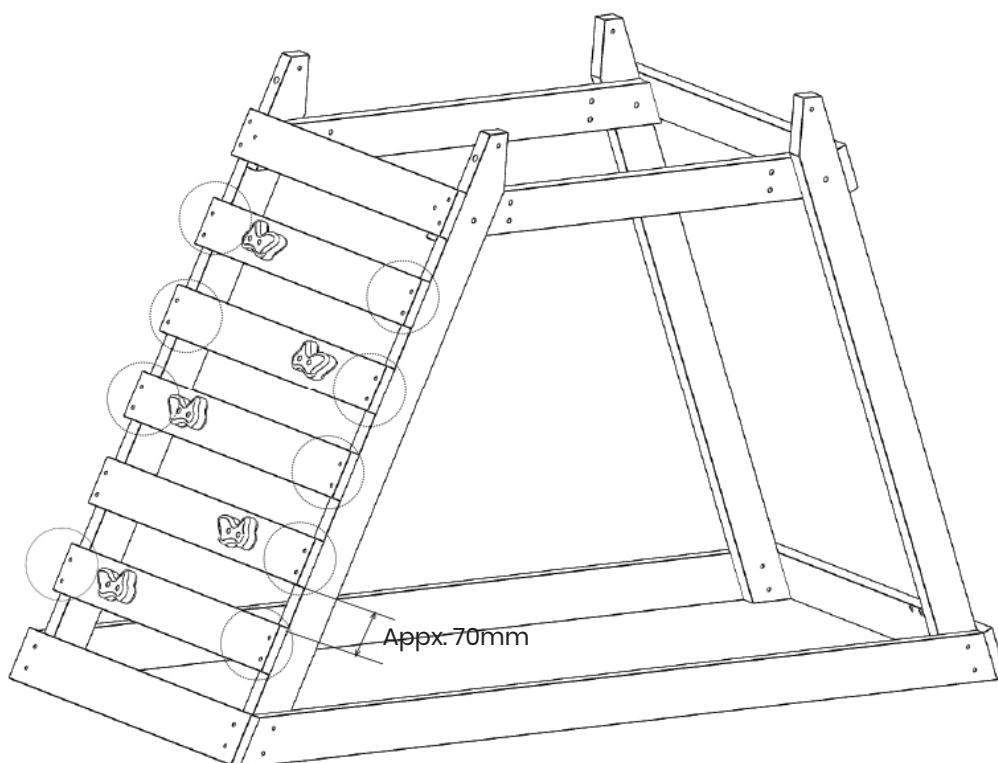


STEP 5

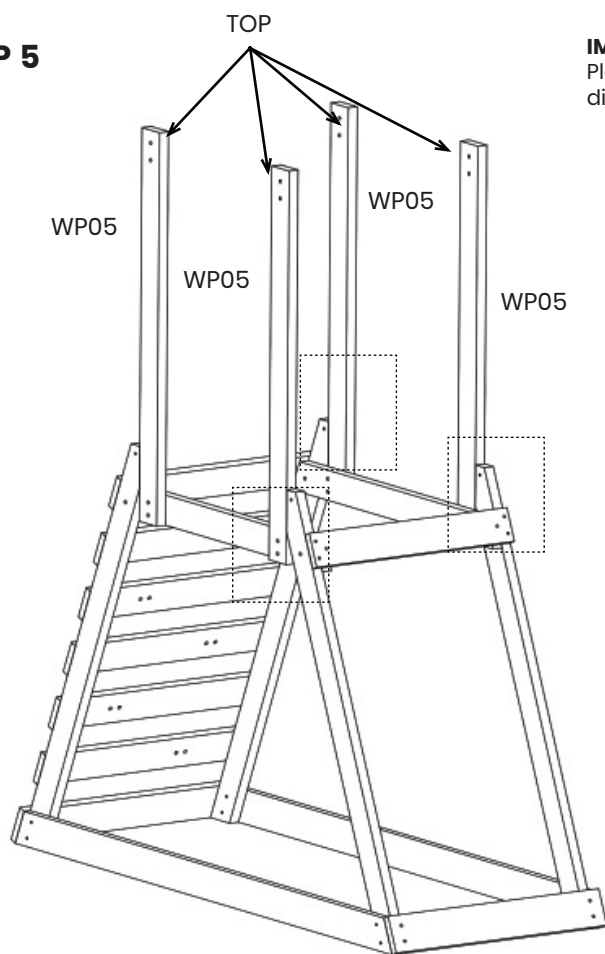


IMPORTANT:
Please pay attention to the
direction of post WP05.


E - M8 x 48mm 8pcs
with Washer 8pcs

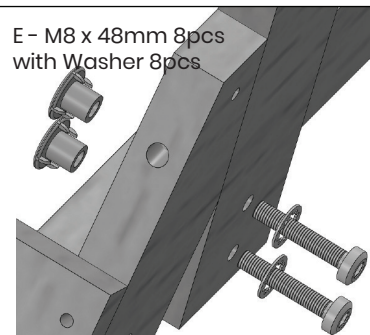


F - M6 x 60mm 4pcs

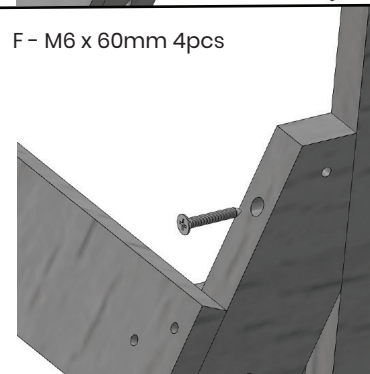


STEP 6

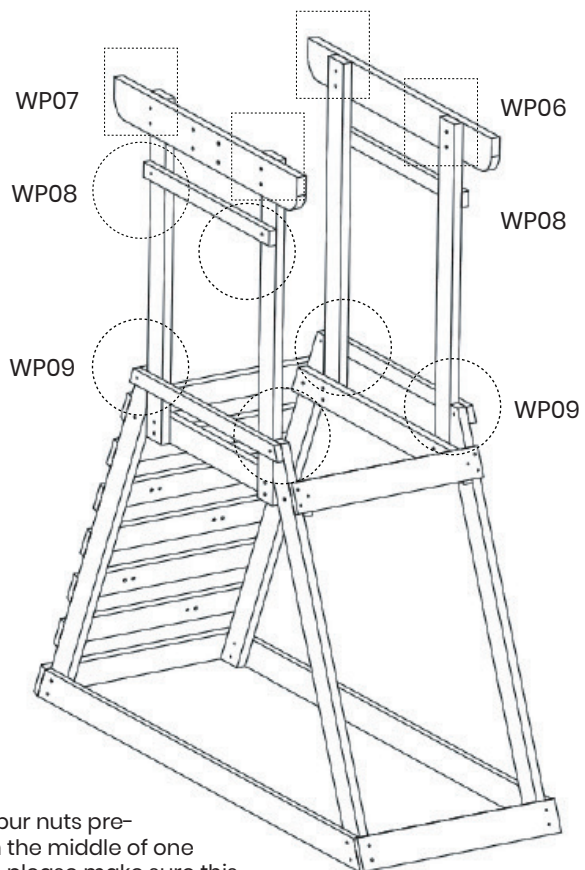

IMPORTANT:
There are 4 spur nuts pre-
assembled in the middle of one
side on WP07, please make sure this
side at the back as figure above.


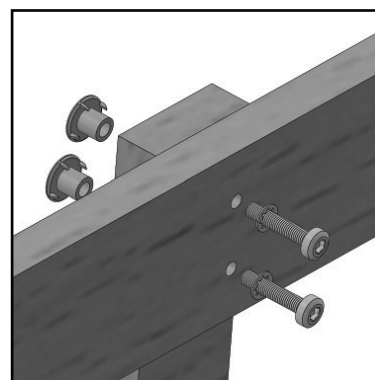


B - M8 x 45mm 8pcs
with Washer 8pcs

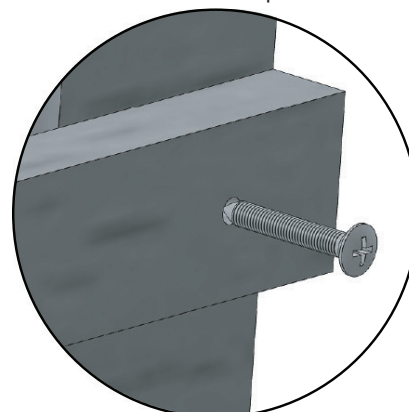



C - M6 x 40mm 8pcs

STEP 7

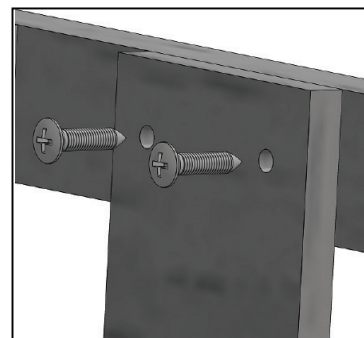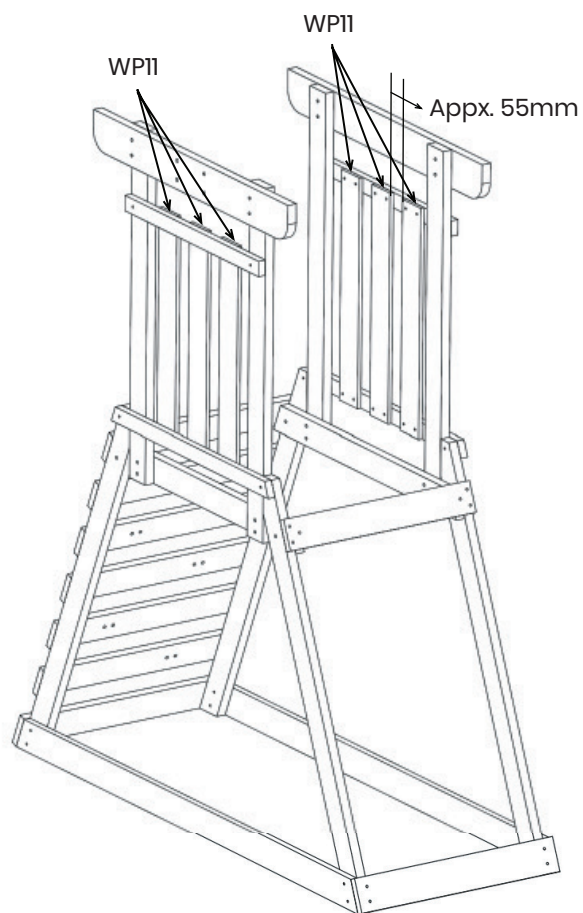


X - M4 x 25mm 24pcs

STEP 8

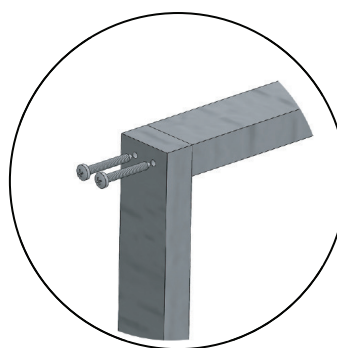
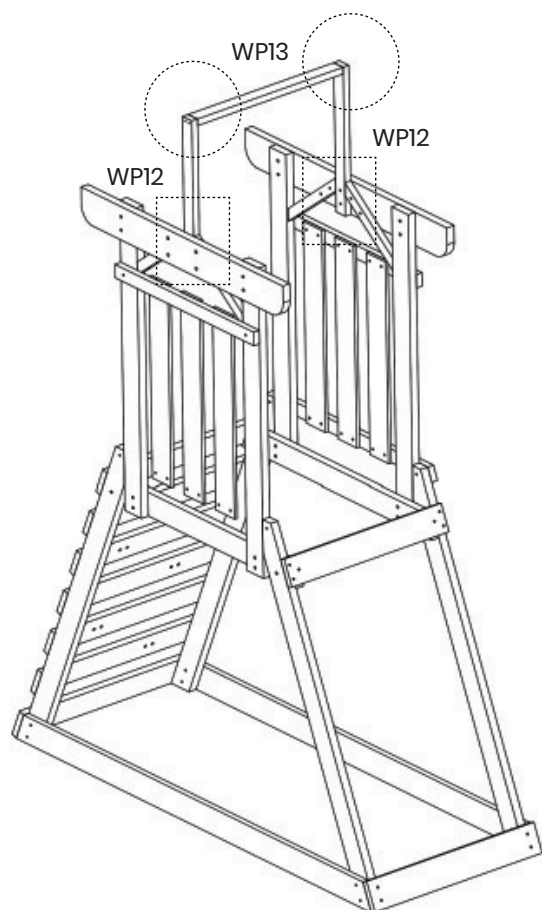


M - M4 x 40mm 4pcs

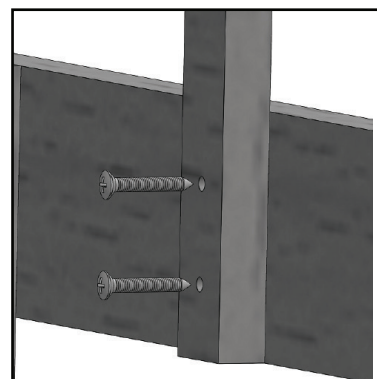


C - M6 x 40mm 4pcs

STEP 9

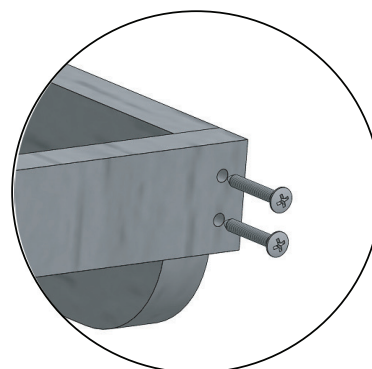
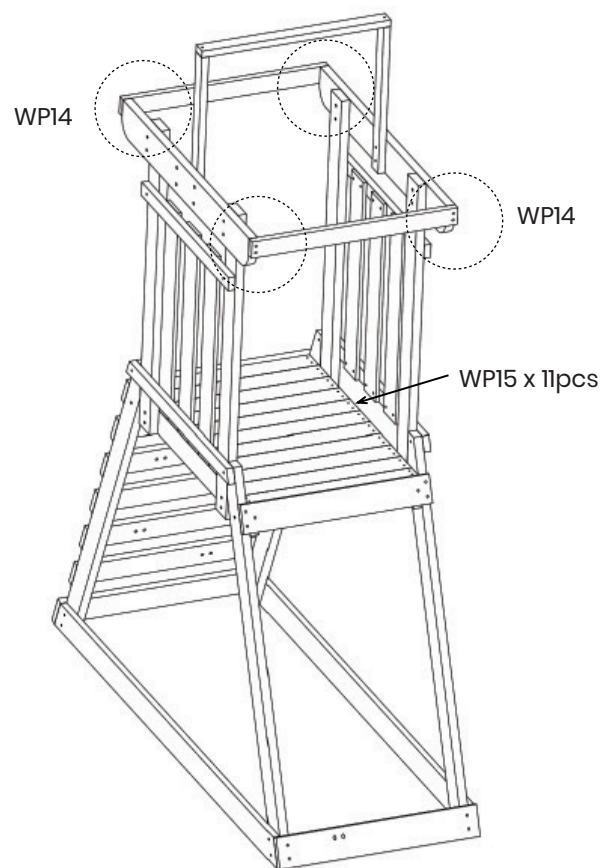


C - M6 x 40mm 4pcs

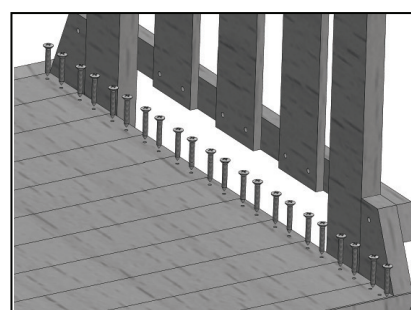


M - M4 x 40mm 44pcs

STEP 10

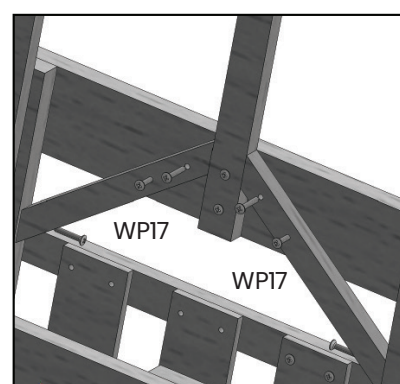
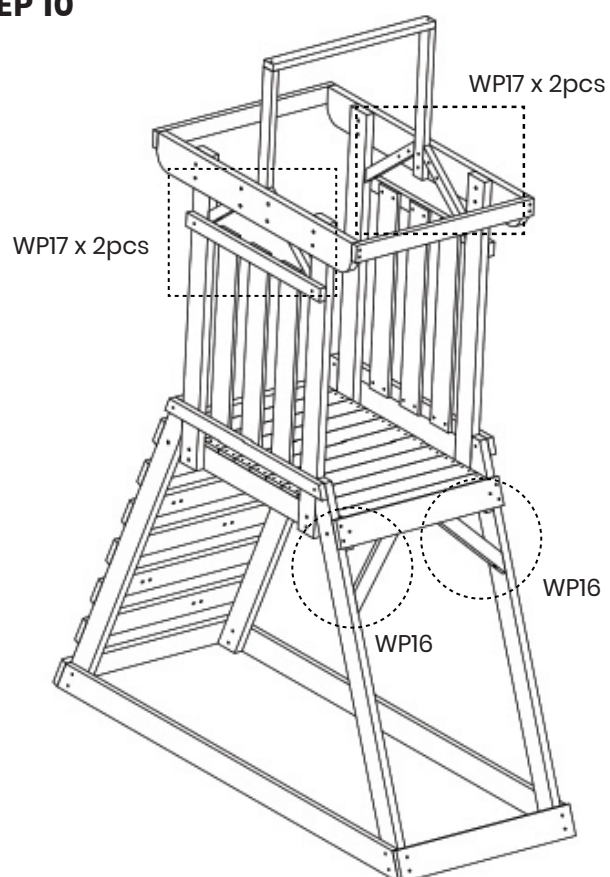


C - M6 x 40mm 12pcs

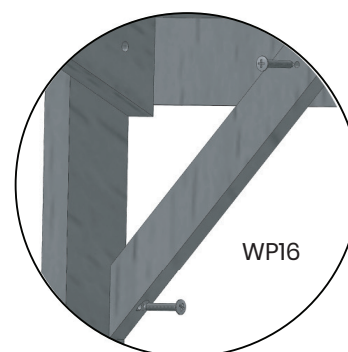



E - M6 x 35mm 4pcs

STEP 11

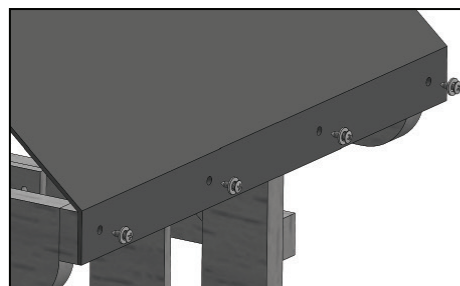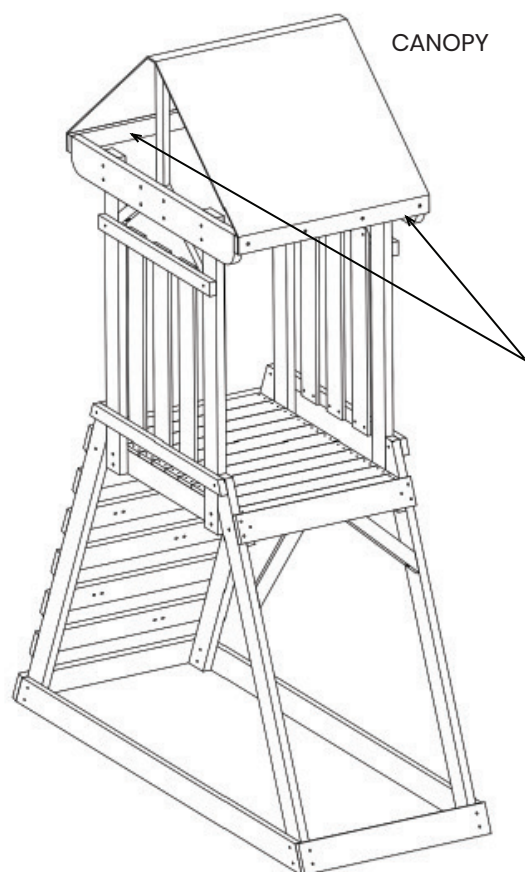


Y - M4 x 20mm 8pcs
with Washer 8pcs



STEP 12

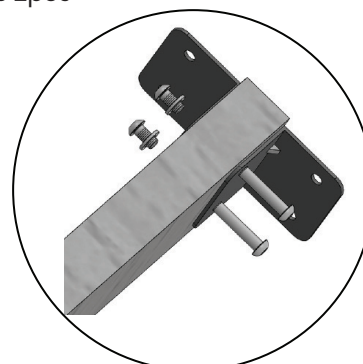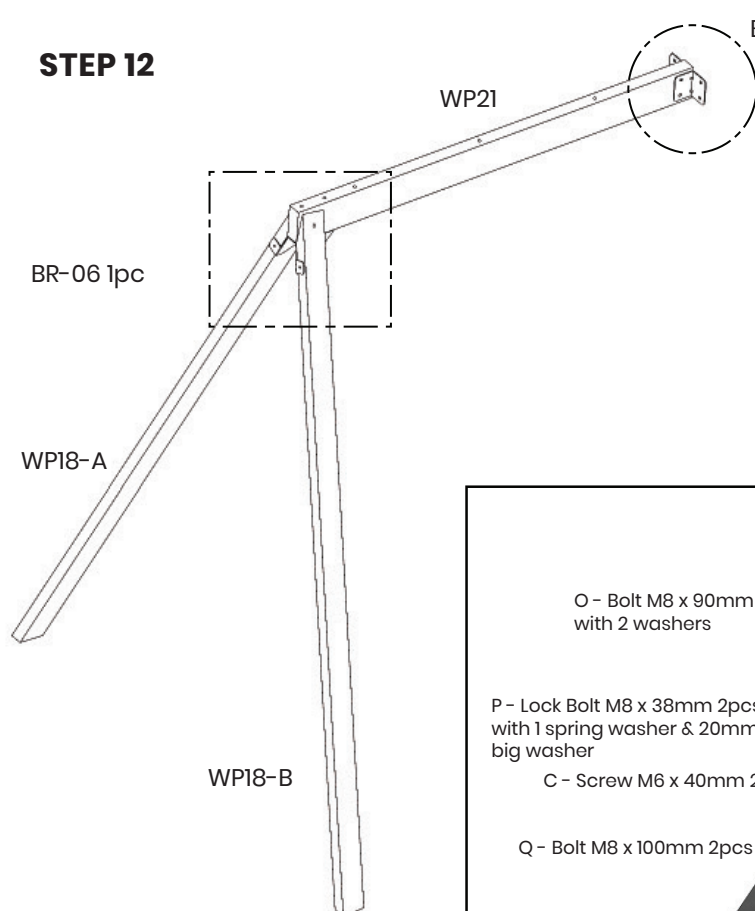


G - Lock Bolt M8 x 42mm 2pcs

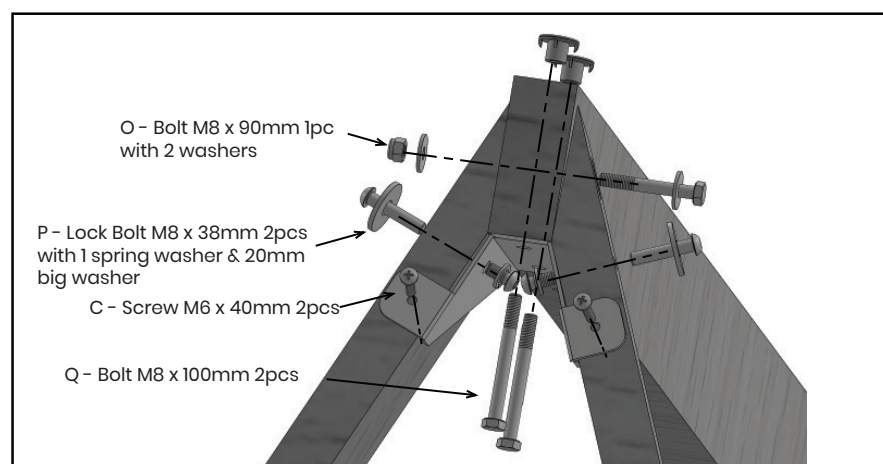

STEP 13

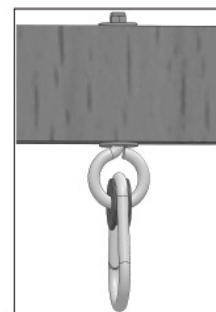
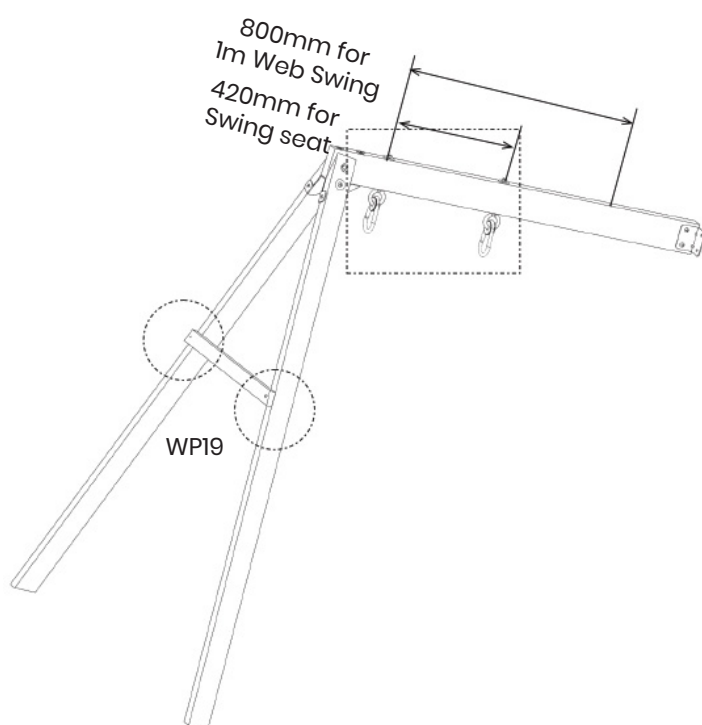


Spring Hook Assembly 2pcs

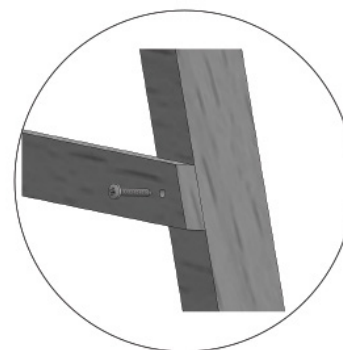


F - M6 x 60mm 2pcs

STEP 14

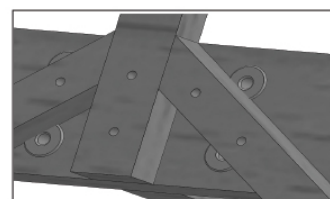
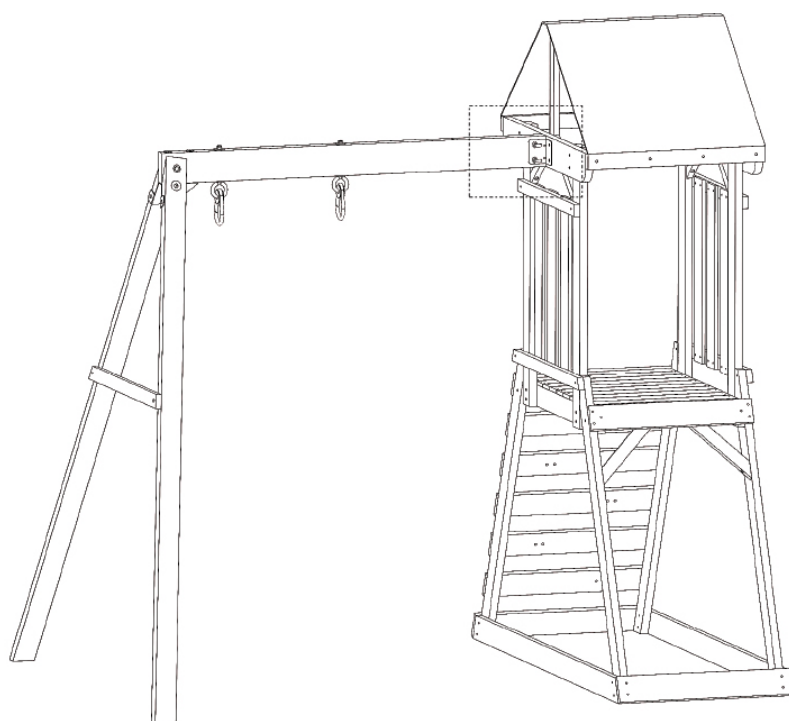


Spur Nuts pre-assembled on the board

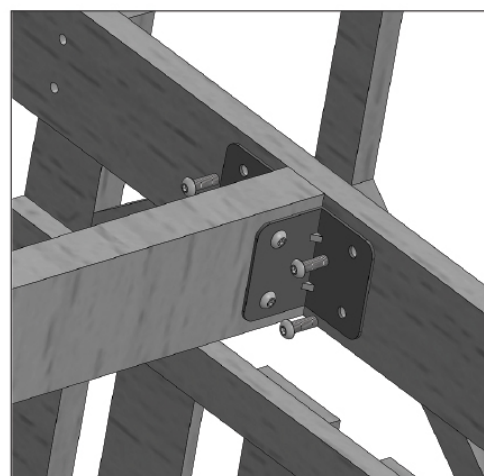


H - Bolt M8 x 25mm 4pcs

STEP 15

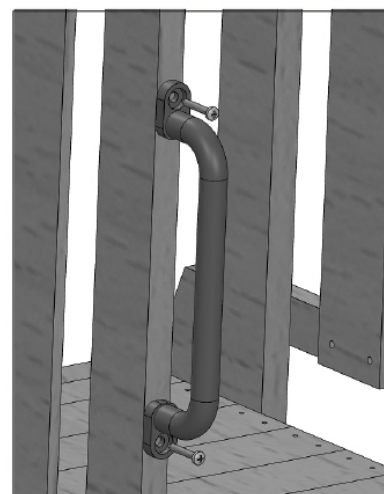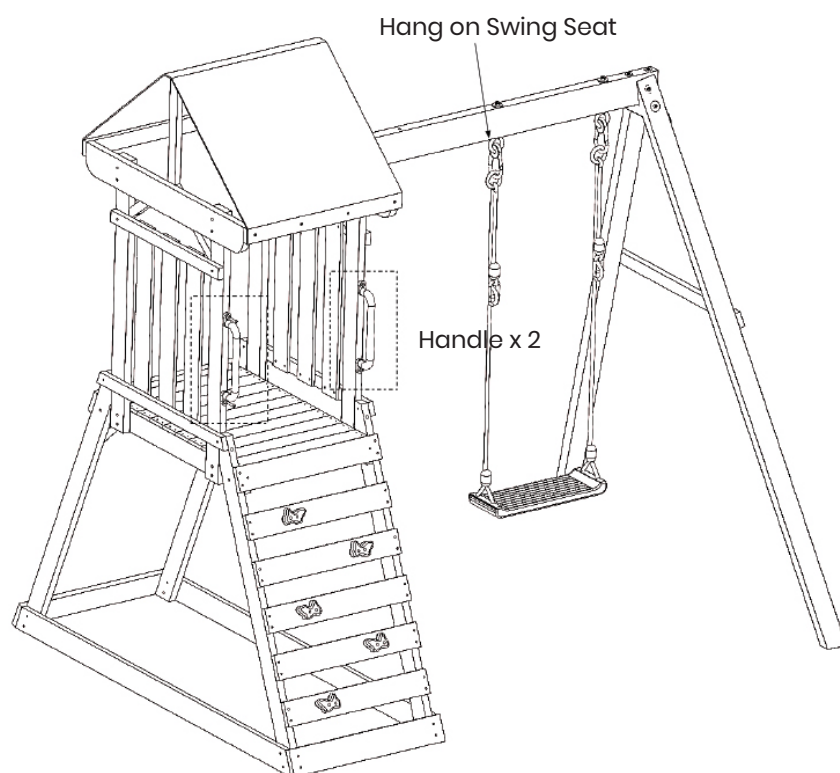


A - M6 x 50mm 4pcs

STEP 16

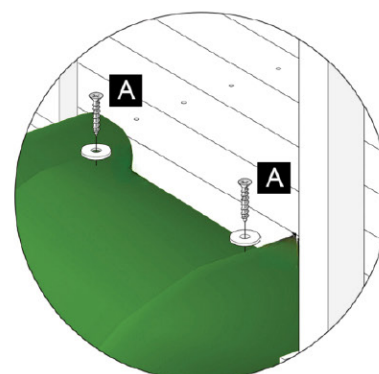


A - M6 x 35mm 2pcs
with Washer 2pcs

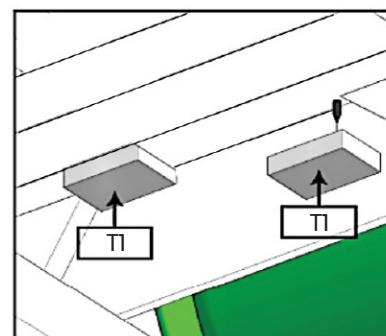


Put the slide braces T1 under the floor boards and fix the slide with floor and slide braces together.

STEP 17

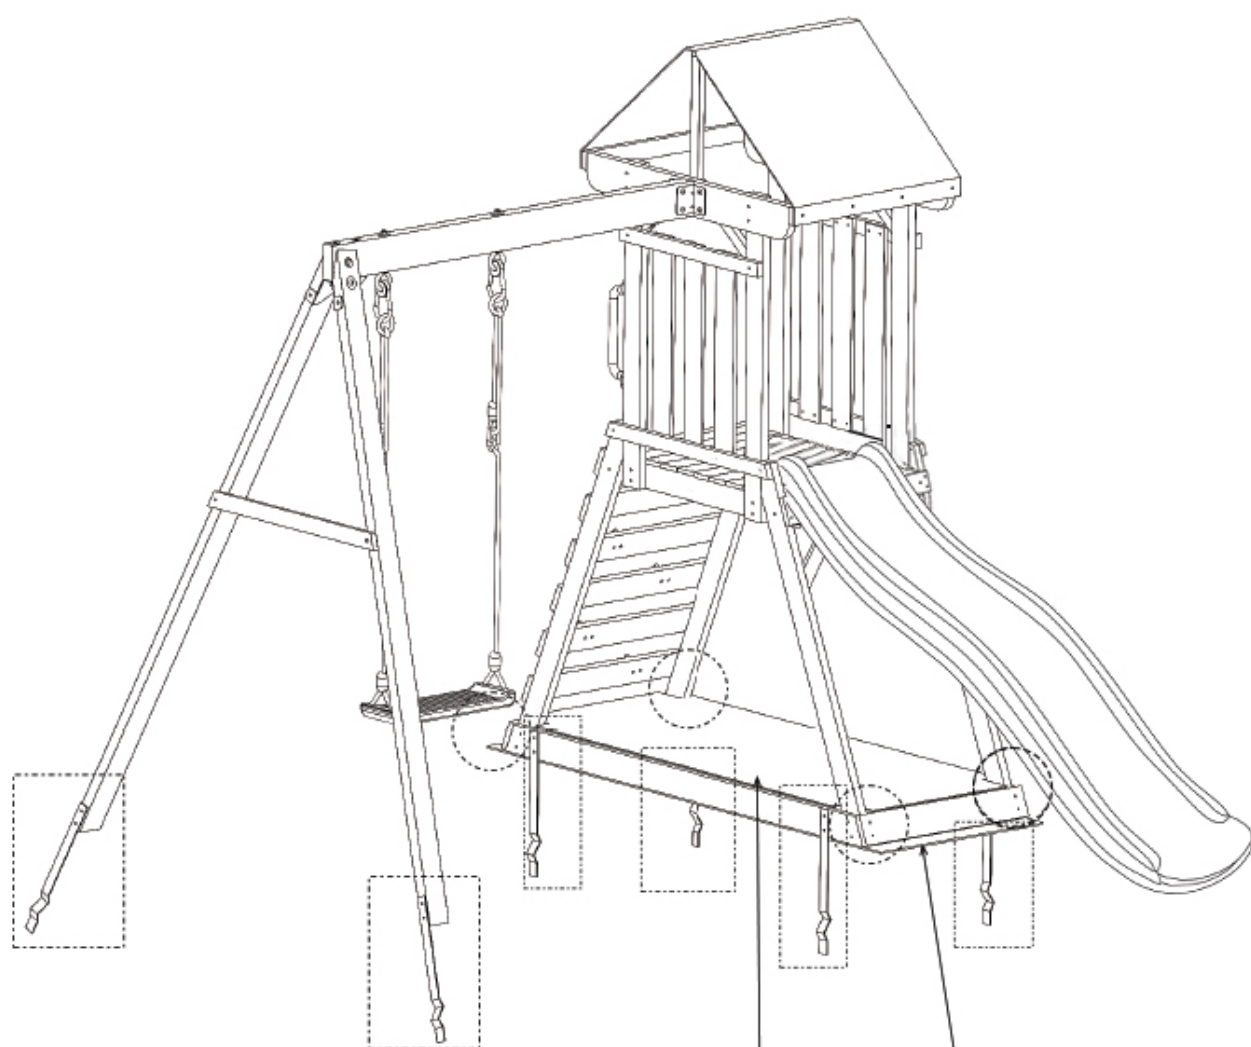


SP02
Sandpit Base Cloth

SP01
Sandpit Cover
Tie the rope tightly

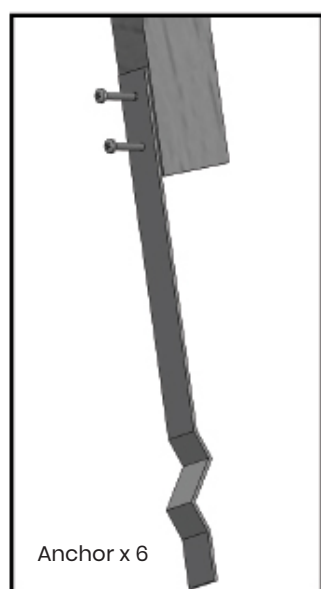

Anchor x 6

X-M6 x 25mm 12pcs

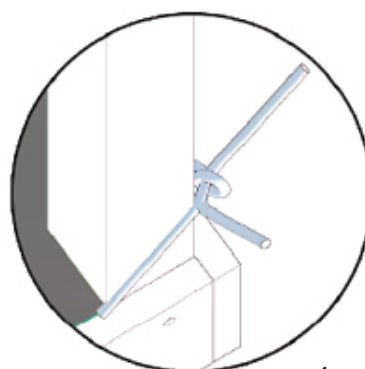

x4

V. PLAY SET ASSEMBLY FAQS

1. Does the area for the playset need to be level?

Yes. We strongly recommend installing your playset on a flat, level surface to ensure maximum safety and durability. Always use the included ground stakes to securely anchor the playset.

2. What age range are the playsets suitable for?

Our playsets are designed for children aged 3 to 10 years.

3. Is the wood treated with chemicals?

No. For your child's safety, our timber is completely chemical-free and not pressure-treated. The finish is a water-based stain, applied as a topcoat for appearance only.

4. How often should the playset be stained?

We recommend re-staining your playset once per year to maintain its appearance and longevity. You may use either a water-based stain or paint.

5. Why is my playset developing cracks?

Wood is a natural material, and each piece reacts differently to environmental conditions. What you're seeing are called "wood checks", which are natural separations along the grain caused by temperature and moisture changes.

These are not structural cracks and do not affect the strength or durability of the playset.

6. Do the playsets come with a warranty?

Yes. All Lifespan Kids playsets include a replacement warranty covering manufacturing defects. Please refer to the full warranty policy for detailed coverage.

7. What is the best way to start assembling the playset?

Before starting assembly:

- Unpack all components
- Sort parts by their part numbers

This helps speed up the process and allows you to quickly identify any missing or damaged parts before you begin.

8. The playset rocks or sways—what should I do?

This is usually caused by uneven ground or obstructions like rocks or roots beneath the base.

To fix this:

- Remove any obstructions
- Re-level the ground
- Ensure all anchors are securely installed
- Check all bolts are tightened properly

9. The end beam is not perfectly vertical—is this normal?

Yes, this is intentional. Lifespan Kids designs playsets with a slight angle in certain beams to increase structural strength and help reduce rocking or twisting during use.

VI. WOOD ADVICE

Our products are manufactured from premium timber. Great care is taken in selecting, machining, and treating the timber before it is sold to you.

1. Inspect wood parts monthly. The grain of the wood sometimes will lift in dry periods causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/splitting and other weather damage.

2. The wood is treated via high temperature drying, degreasing and is stained against wood rot and insect damage (Termites not included). This is not a permanent treatment as weather conditions can wear it down. We recommend once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your set. **Please note this is a requirement of your warranty.**

Bear in mind that timber is a natural product and may experience changes throughout the course of its life. It may:


- Develop openings/checks (gaps, slits, apertures, cracks) along the line of the grain.
- Fade as the timber reacts with sunlight.

All woods are hygroscopic, that is, it will absorb or discharge moisture to attain equilibrium with the surrounding atmosphere. Timber openings/checks occur due to the moisture content between internal and outer surfaces of the timber. No two pieces of wood are exactly alike. Each piece has its own characteristics and personality and reacts differently to climate changes. When any wood products are exposed to the elements, it develops 'wood checks'. A check is the radial separation of the wood fibres running with the grain of the wood. These are caused by the varying temperature and moisture conditions. A check does not affect the strength or durability of the wood or structural integrity of the play set.

WHEN SHOULD WOOD CRACKS BE A CONCERN?

Most of the wood splits will never become large enough to affect the reliability and strength of our products, however, there can be rare cases where splits can occur. This happens when a crack develops past the halfway point from the timber, splitting it into two separate pieces.

Feel free to contact us with detailed pictures of your product so we can assess and ensure that your playground remains safe.

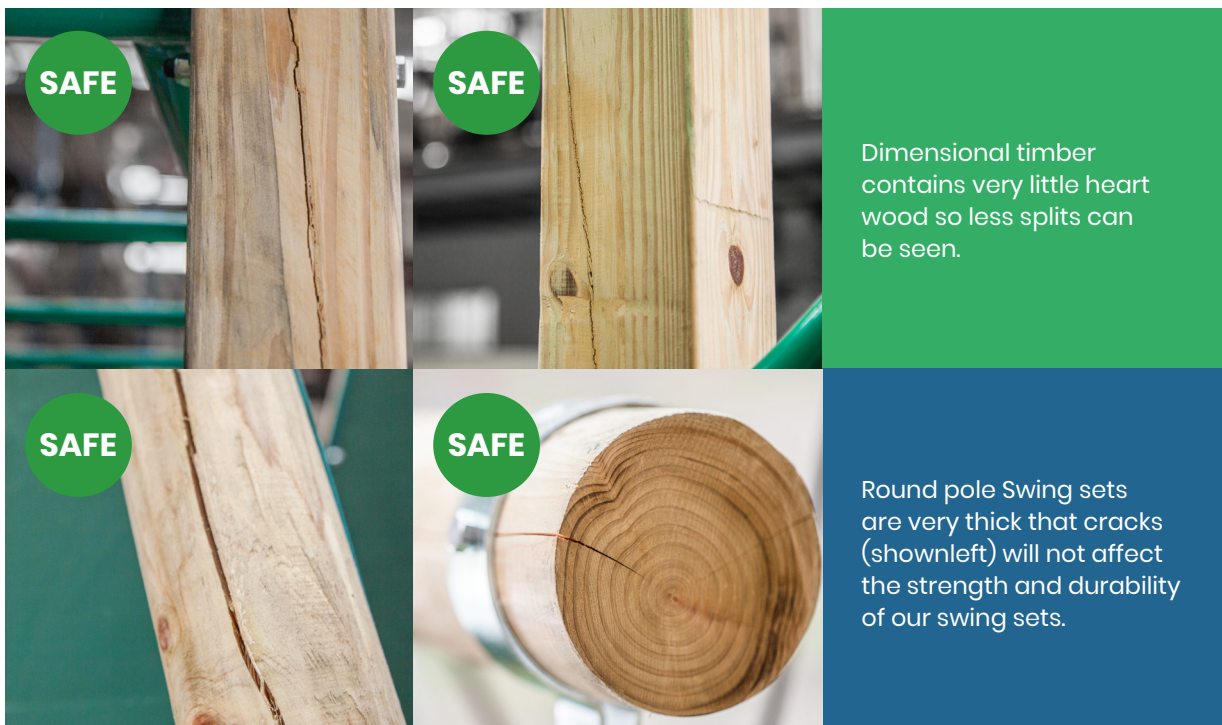

3. Mould and Mildew

Protecting against mould and mildew on your outdoor equipment is an important step in maintaining your backyard. Mould may develop for several reasons, such as certain weather conditions, improper drainage or infrequent usage. Here we'll share our tips for keeping your outdoor areas free of mould and mildew so that you can enjoy your backyard with peace of mind.

Once you spot mould on your equipment, it's important to start clearing it up straight away. The first step is to scrub it off with soap and water, until all the visible signs of mould are removed. It's important to remember however, that just because you can't see it anymore doesn't mean it's gone.

The next step is to kill off the remaining mould so that it doesn't grow back. Here are a few options, but keep in mind these should be used independently. Don't mix or combine these methods at the same time.

Mould Killer or Removal Spray

You can purchase off-the-shelf removal sprays that destroy mould either indoors or outdoors. For these products, make sure to follow the product instructions as well as wearing protective gloves to avoid contact with skin.

Bleach

A solution of bleach and water can also be highly effective in killing mould. For this method, mix the water and bleach on a 1 to 1 ratio, then use a sponge or brush to scrub the affected area. You can also use a higher concentration of bleach for spot treating. After bleach treatment, make sure to rinse off your equipment and allow to dry.

Vinegar

If mould is still lingers after applying bleach or a mould spray, vinegar will be an effective option for removing stubborn remnants. Vinegar will kill most types of mould and is best for nonporous materials like hard plastics or metal. The best method is to fill a spray-bottle with undiluted white vinegar of at least 5% acetic acid. Spray the affected area, then let sit for around an hour. Make sure to thoroughly rinse off afterwards.

For wooden equipment, you can add a coat of paint or stain after it has thoroughly dried.

Some people may find that mould keeps resurfacing after cleaning on certain areas. This can be due to a few reasons, such as poor sunlight. Areas without direct sun are more likely to become damp and take longer to dry off after rain. Consider removing obstacles or rearranging your equipment so that it receives more sunlight, which will also help to kill the mould once it develops.

VII. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:

www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit **www.lifespankids.com.au/warranty-form**

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit **www.lifespankids.com.au/warranty-form** and fill in our Repair/Service Request Form or Parts Purchase Form.

VIII. SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue. We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.

