



VISIT OUR BLOG FOR FITNESS TIPS,
HEALTH TIPS, AND MUCH MORE!

BLOG.LIFESPANFITNESS.COM.AU

DASH OWNER'S MANUAL



Product may vary slightly from the item pictured due to model upgrades

Read all instructions carefully before using this product. Retain this owner's manual for future reference.

TABLE OF CONTENTS

1.	IMPORTANT SAFETY INSTRUCTIONS	3
2.	IMPORTANT ELECTRICAL INFORMATION	4
3.	IMPORTANT OPERATING INSTRUCTIONS	5
4.	ASSEMBLY INSTRUCTIONS	6
5.	FOLDING INSTRUCTIONS	10
6.	OPERATION GUIDE WITH PROGRAM CHART	11
7.	EXERCISE GUIDE	16
8.	MAINTENANCE INSTRUCTIONS	18
9.	EXPLODED DIAGRAM	26
10.	PARTS LIST	27
11.	WARRANTY	28

1. IMPORTANT SAFETY INSTRUCTIONS

WARNING - Read all instructions before using this treadmill.

It is important your treadmill receives regular maintenance to prolong its useful life. Failing to regularly maintain your treadmill may void your warranty.

Danger – To reduce the risk of electric shock disconnect your treadmill from the electrical outlet prior to cleaning and/or service work.

DO NOT USE AN EXTENSION CORD: DO NOT ATTEMPT TO DISABLE THE GROUNDED PLUG BY USING IMPROPER ADAPTERS OR IN ANY WAY MODIFY THE CORD SET.

- Install the treadmill on a flat level surface with access to a 220-240 volt (50/60Hz), grounded outlet.
- Do not operate treadmill on deeply padded, plush or shag carpet. Damage to both carpet and treadmill may result.
- Do not block the rear of the treadmill. Provide a minimum of 1 metre clearance between the rear of the treadmill and any fixed object.
- Place your unit on a solid, level surface when in use
- Never allow children on or near the treadmill.
- When running, make sure the plastic clip is fastened on your clothing. It is for your safety, should you fall or move too far back on the treadmill.
- Keep hands away from all moving parts.
- Never operate the treadmill if it has a damaged cord or plug.
- Keep the cord away from heated surfaces.
- Do not operate where aerosol spray products are being used or where oxygen is being administered. Sparks from the motor may ignite a highly gaseous environment.
- Never drop or insert any object into any openings.
- The treadmill is intended for in-home use only and not suitable for long time running.

- To disconnect, turn all controls to the off position, remove the safety key, and then remove the plug from the outlet.
- The pulse sensors are not medical devices. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensors are intended only as exercise aids in determining heart rate trends in general.
- Use the handrails provided; they are for your safety.
- Wear proper shoes. High heels, dress shoes, sandals or bare feet are not suitable for use on your treadmill. Quality athletic shoes are recommended to avoid leg fatigue.
- Allowed temperature: 5 to 40 degrees.

Remove the safety key after use to prevent unauthorized treadmill operation.

2. IMPORTANT ELECTRICAL INFORMATION


WARNING!

- NEVER use a ground fault circuit interrupt (GFCI) wall outlet with this treadmill. Route the power cord away from any moving part of the treadmill including the elevation mechanism and transport wheels.
- NEVER remove any cover without first disconnecting AC power.
- NEVER expose this treadmill to rain or moisture. This treadmill is not designed for use outdoors, near a pool, or in any other high humidity environment.
- This is high-power item; please do not share the same outlet with other high power machines such as, fridges, air conditioning etc. Please choose an outlet exclusively for the machine and make sure the fuse is 10A.

3. IMPORTANT OPERATING INSTRUCTIONS

- Be sure to read the entire manual before operating your machine.
- Understand that changes in speed and incline do not occur immediately. Set your desired speed on the computer console and release the adjustment key. The computer will obey the command gradually.
- Use caution while participating in other activities while walking on your treadmill, such as watching television, reading, etc. These distractions may cause you to lose balance or stray from walking in the centre of the belt; which may result in serious injury.
- In order to prevent losing balance and suffering unexpected injury, **NEVER** mount or dismount the treadmill while the belt is moving. This unit starts with at a very low speed. Simply standing on the belt during slow acceleration is proper after you have learned to operate this machine.
- Always hold on to handrail while making control changes.
- A safety key is provided with this machine. Remove the safety key will stop the walking belt immediately; the treadmill will shut off automatically. Inserting the safety key will reset the display.
- Do not use excessive pressure on console control keys. They are precision set to function properly with little finger pressure.

4. ASSEMBLY INSTRUCTIONS

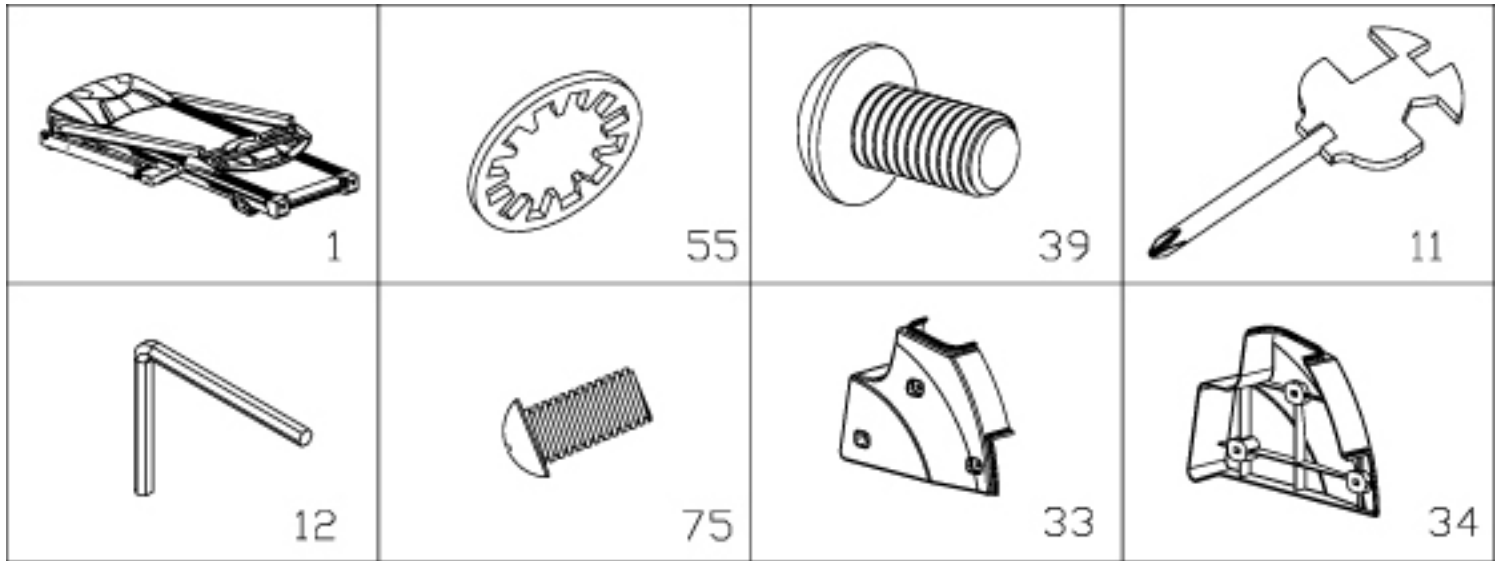

PART LIST

NO.	DES.	Specification	Nos.	NO.	DES.	Specification	Nos.
1	Main Frame		1	55	washer	8	8
39	Allen	M8*15	8	12	5# Allen Wrench	5mm	1
11	Wrench w/screw driver	S=13、 14、 15	1	75	Bolt with washer	M5*12	6
33	Left Upright Tube Cover		1	34	Right Upright Tube cover		1


TOOLS:

5# Allen Wrench 5mm 1pc

Wrench s/screw Driver S=13, 14, 15 1pcs


Note: Do not connect power before completing assembly.

STEP 1:

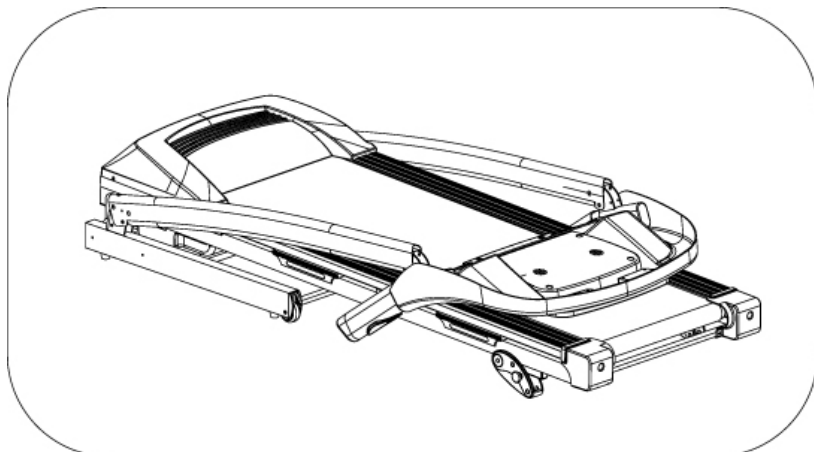

1. Open the carton
2. Extract the parts
3. Place the Main Frame onto level ground


STEP 2:

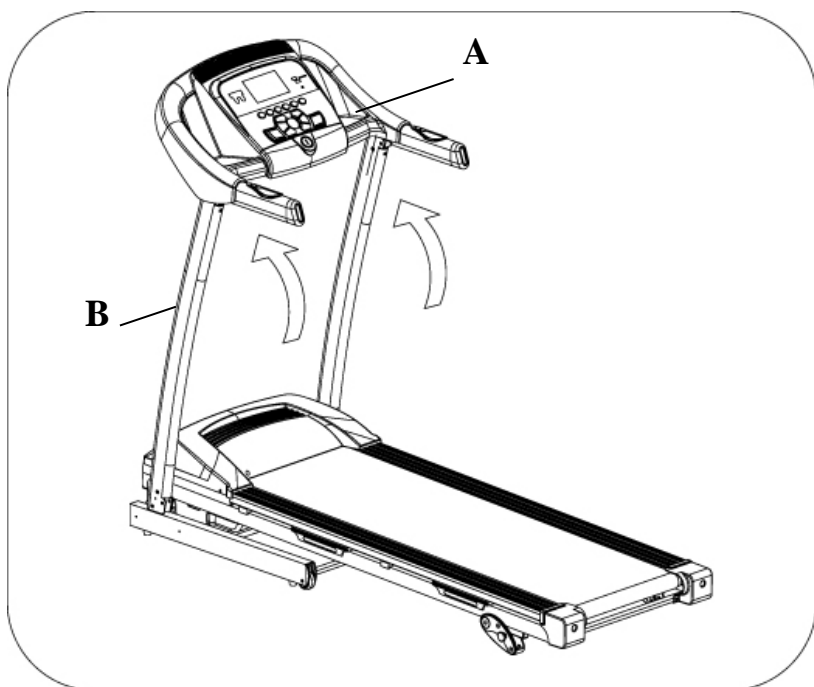

1. Erect the Console A and Upright tube B towards the direction of the arrow.

Note: Whilst erecting the display ensure the upright does not damage the wiring inside. Support the uprights and display with your hand to avoid it falling down and causing injury.


STEP 3:

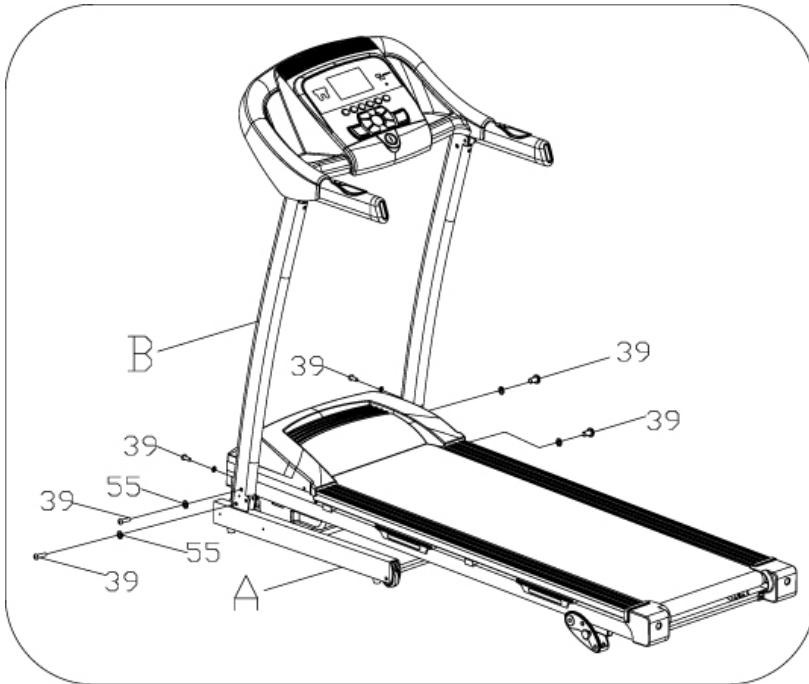

1. Attach the upright tube (B) to the main frame with M8*15 bolt (39), Lock Washer (55). Use the 5# Allen wrench.

Note: Support the Upright Tube with hand to avoid it falling down and causing injury


STEP 4:

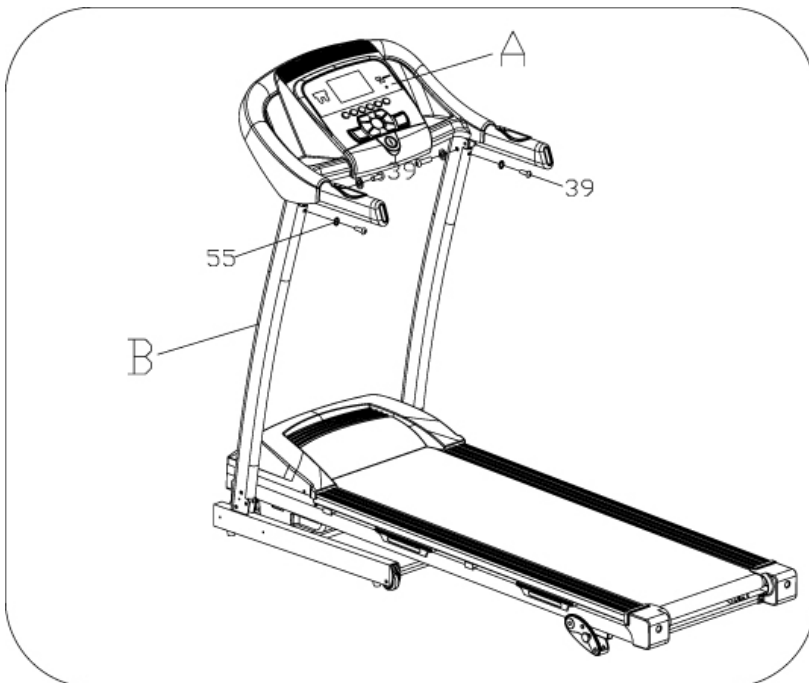

1. Attach the console tube (A) to the main frame with M8*15 bolt (39) and Lock Washer (55). Use the 5# Allen wrench.

Note: Support the Upright Tube with hand to avoid it falling down and causing injury

STEP 5:

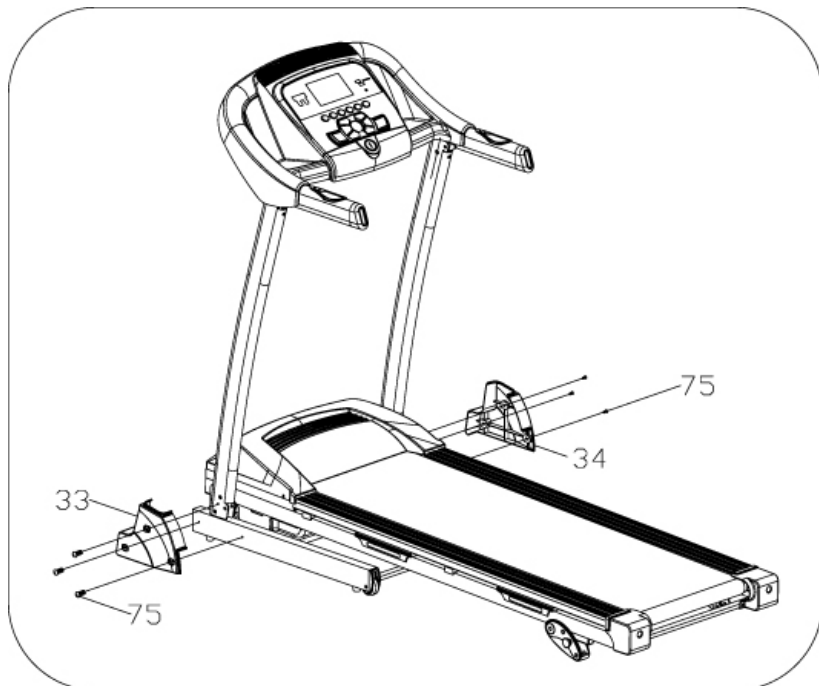


1. Attach the Left & Right Upright Tube Covers (33,34) to the base frame with M5*12 bolt (75). Use the Wrench w/ screw driver(11).
-

ATTENTION: Please double check that assembly has been completed correctly and all nuts and bolts have been correctly tightened.


5. FOLDING INSTRUCTIONS

Folding:

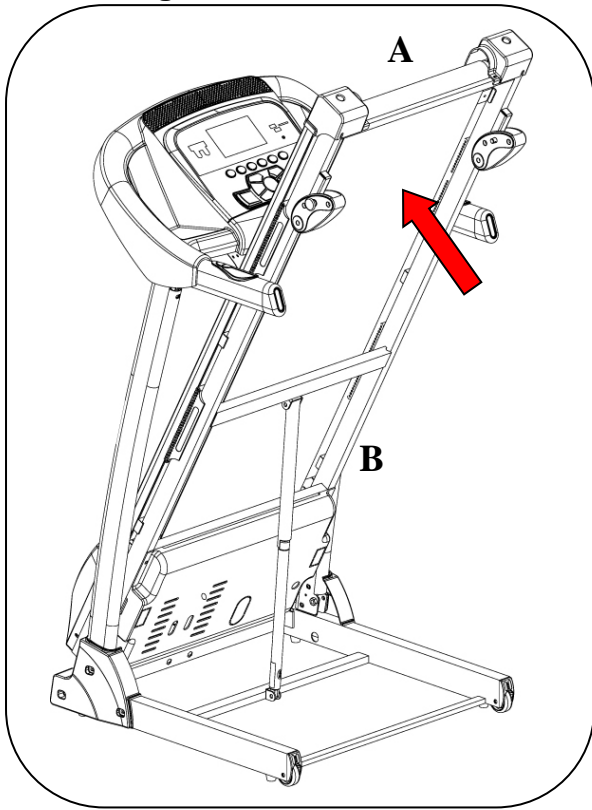

Place your hand on position (A), then pull up the base frame until you hear the click sound emitted when the air pressure bar (B) is locked into the round tube.

Unfolding:

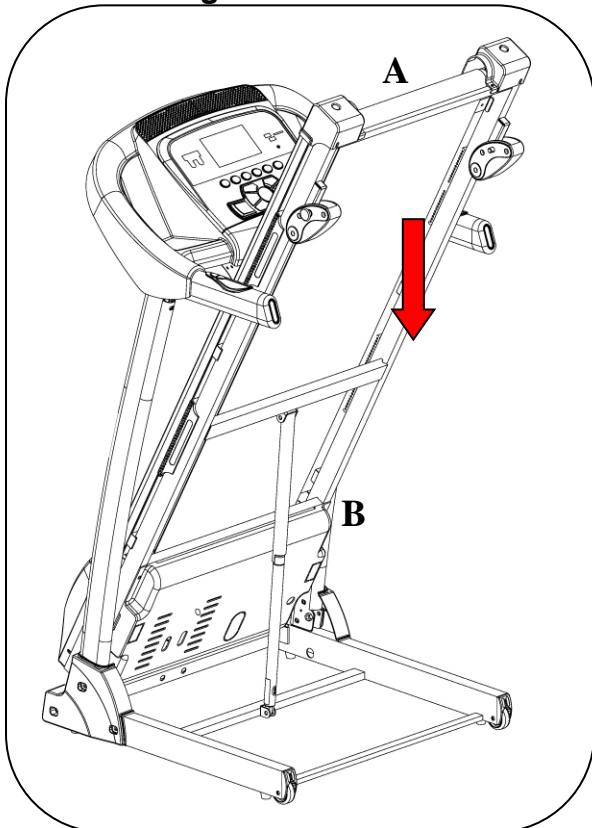


Whilst supporting position (A) with our hand, gently push position (B), the marked area on the air pressure bar, with your foot. The base frame will descend automatically. (Please keep people and any pets away from the machine during descent)

Video Tutorial Available at:
<http://youtu.be/TcuPbJ7KuxQ>

Lifespan Fitness YouTube Channel:
<http://www.youtube.com/user/treadmillsvideos>

6. OPERATION GUIDE

1. OVERVIEW

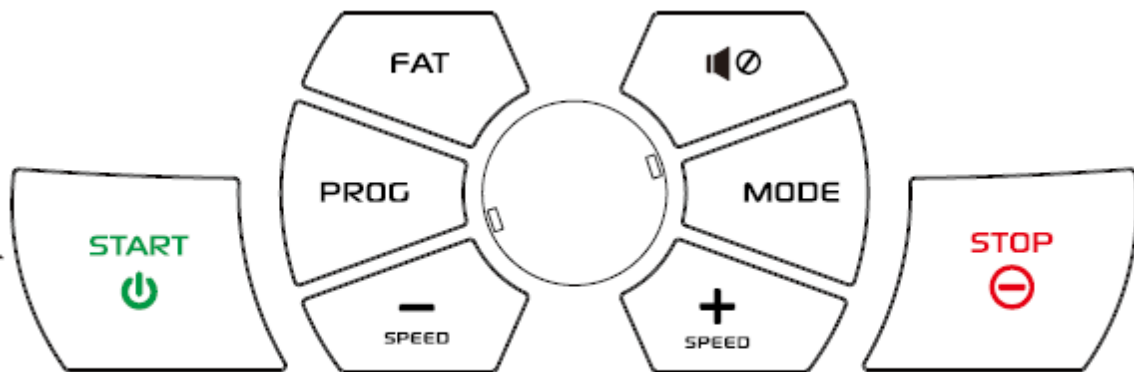


2. LCD WINDOW DISPLAY

1. **SPEED:** Shows speed. The speed range is 0.8 – 14km/h.
2. **TIME:** displays total running time.
 - a. Counts from 0:00 to 99:59 (hr:min). After reaching 99:59 the machine will stop smoothly and show 'End'. It will then enter into start mode after 5 seconds.
 - b. In countdown mode the machine will count down from the pre-set time to 0:00. After reaching 0:00 , the machine will stop smoothly and show 'End'. It will then enter into start mode.
3. **DISTANCE/PULSE:** shows the running distance and pulse.

- a. Counts from 00.0 to 99.9 (km). After reaching 99.9 the machine will start counting again from 00.0.
 - b. In countdown mode the machine will count down from the pre-set distance to 00.0. After reaching 00.0, the machine will stop smoothly and show 'End'. It will then enter into start mode after 5 seconds.
 - c. Pulse displays the users estimated heart rate. Holding the hand pulse sensors with both hands will allow the system to estimate heart rate. The range is between 50-200 beats/min (this data is for reference only and must not be used as medical data).
4. **CALORIES:** shows calories burnt. This is an estimate only. This is not intended to be used as medical data.
- a. Counts from 000 to 999 (CAL). After reaching 999 the machine will start counting again from 000.
 - b. In countdown mode the machine will count down from the pre-set calories to 000. After reaching 000, the machine will stop smoothly and show 'End'. It will then enter into start mode after 5 seconds.
5. **STEPS:** displays the total number of steps the user has walked on the machine, ranges from 0 to 99,999 steps.
6. **MATRIX WINDOW:** during operation, the display will show a 400m running track. The machine will beep after every lap is completed.

3. BUTTON FUNCTIONS

1. **"PROG":** choose the program, cycles between manual mode and "P01 – P9".
2. **"MODE":** mode selection button. Press this button to cycle through the modes: "0.0" (manual mode), "10:00" (time countdown mode), "1.0" (distance countdown mode), "50" (calories countdown mode). When selecting the mode, use the speed buttons (+/-) to set the data for the mode and the START button to start the workout.
3. **"START":** begins workout. When the power is on and safety key correctly placed on the computer, press this button to start the treadmill after a 3 second countdown.

4. **“STOP”**: press button to stop the motor running and to stop the machine. Pressing STOP once during your workout will pause the workout and data on the LCD will remain. Press the START button to resume your workout. Instead of pressing START, you may clear the workout data by pressing the STOP button a second time.
5. **SPEED+ \ SPEED-**: Increase or decrease speed when exercising. Sets parameter when stopped.
6. **“SPEED: 2, 4, 6, 8, 10, 12”** Speed adjustment quick buttons. Use these buttons to jump to a specific speed
7. **“FAT”**: press this button to enter body fat mode test.
8.  : mute button (if applicable)

4. MAIN FUNCTIONS

4.1. Quick Start-up (Manual):

Ensure the safety key is attached. After a 3 second countdown, the treadmill will starting and running from the lowest speed, add and subtract to the speed using the SPEED +/- button.

4.2. Countdown mode:

Press the MODE button to cycle options: timer countdown, distance countdown, calories countdown. The default value corresponds to the window and flashing display. At this point the SPEED buttons serve as a plus and minus functions to adjust to the desired value. Press the START, add and subtract speed by using SPEED buttons once again. When the countdown reaches 0, the machine will stop. You can also directly press the STOP button or disconnect safety lock to stop.

4.3. Preset programs:

Press the program button; programs from P1 to P9 are built-in programs. The time window displays the default value of TIME. When flashing, press the SPEED buttons to adjust to your desired time. Built-in program are divided into 10 equal segments. After pressing the START button, the treadmill will automatically cycle through the time segments. Speed will automatically adjust to the preset value for the segment. Upon completion of the segments, the program will end, slowing the treadmill down to a stop. During the operation speed can be adjusted but the next segment will be automatically adjusted to the program defaults. Built-in program data is listed on the table.

Program Chart

		EACH TIME INTERVAL= 1/10 th OF THE TOTAL SET TIME									
		1	2	3	4	5	6	7	8	9	10
P1	SPEED	3	3	6	5	5	5	4	4	4	3
P2	SPEED	3	3	4	4	5	5	5	6	6	4
P3	SPEED	3	3	5	6	7	8	6	4	3	3
P4	SPEED	3	6	6	6	8	8	8	3	3	3
P5	SPEED	2	5	6	7	8	8	7	7	3	3
P6	SPEED	2	10	10	8	8	7	6	3	2	2
P7	SPEED	3	4	5	6	7	8	7	6	4	3
P8	SPEED	3	8	6	9	8	8	8	3	10	3
P9	SPEED	2	4	6	8	8	8	7	7	3	3

4.4. Heart Rate:

When holding the hand pulse with two hands, the pulse window will show your heart rate after 5 seconds.

To increase accuracy please check heart rate with the machine stopped and after keeping your hands on the sensors for more than 30 seconds.

The heart rate data is for reference purposes ONLY and should not be used for medical purposes.

4.5. Sleep function:

The treadmill automatically enters sleep mode after 10 minutes of inactivity. Press any key on the display to wake the treadmill.

4.6. Data display and set range:

	Initial	Initial Data	Set Range	Display Range
TIME(MIN:SECOND)	0:00	10:00	5:00-99:00	0:00—99:59
SPEED(km/h)	0.8	0.8	0.8-14	0.8-14
DISTANCE(km)	0.00	1.00	0.50-99.9	0.00—99.9
PULSE(beats/min)	P	N/A	N/A	50-200
CALORIES	0	50	10-999	0—999

4.7. Body Fat Test Function

1. Press the “PROGRAM” button under ready condition until the letters “FAT” show in the speed window. “FAT” is body fat test mode.
2. Press the “MODE” button to input data into parameters “GENDER / AGE / HEIGHT / WEIGHT”. The “TIME/DIST” window will show “-1-”, “-2-”, “-3-”, “-4-“, which corresponds to “GENDER / AGE / HEIGHT / WEIGHT” respectively. 01 is MALE, whilst 02 is FEMALE.
3. When setting each parameter, press SPEED ▲/▼ to adjust the data, and CAL/PULSE window will show the data. Press the “MODE” button to finish, and the window will show“-5-” and “-” then it will enter into ready condition. Hold the hand pulse sensors with both hands and it will show your BMI data after 5 seconds.

F-1	Gender	01MALE	02FEMALE
F-2	Age	10-----99	
F-3	Height	100----200	
F-4	Weight	20-----150	
F-5	FAT	≤19	Underweight
	FAT	=(20---25)	Healthy
	FAT	=(25---29)	Overweight
	FAT	≥30	Obese

4.8. Safety Key Function (if applicable)

Pulling out the safety key during operation will make the treadmill stop immediately. All windows will display “-” and the machine will beep 3 times. Reconnecting the magnet will allow the treadmill to operate again.

4.9. MP3 Function (if applicable)

Plug the 3.5mm jack audio cable into any 3.5mm headphone jack slot. Music can be controlled via the MP3 device.

Please keep the volume at appropriate levels to prevent the speakers from damage

7. EXERCISE GUIDE

PLEASE NOTE: Before beginning any exercise program, consult your physician. This is important especially if you are over the age of 45 or individuals with pre-existing health problems.

The pulse sensors are not medical devices. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensors are intended only as an exercise aid in determining heart rate trends in general.


Exercising is great way to control your weight, improving your fitness and reduce the effect of aging and stress. The key to success is to make exercise a regular and enjoyable part of your everyday life.

The condition of your heart and lungs and how efficient they are in delivering oxygen via your blood to your muscles is an important factor to your fitness. Your muscles use this oxygen to provide enough energy for daily activity. This is called aerobic activity. When you are fit, your heart will not have to work so hard. It will pump a lot fewer times per minute, reducing the wear and tear of your heart.

So as you can see, the fitter you are, the healthier and greater you will feel.

Warm-up

Start each workout with 5 to 10 minutes of stretching and some light exercises. A proper warm-up increases your body temperature, heart rate and circulation in preparation for exercise. Ease into your exercise.

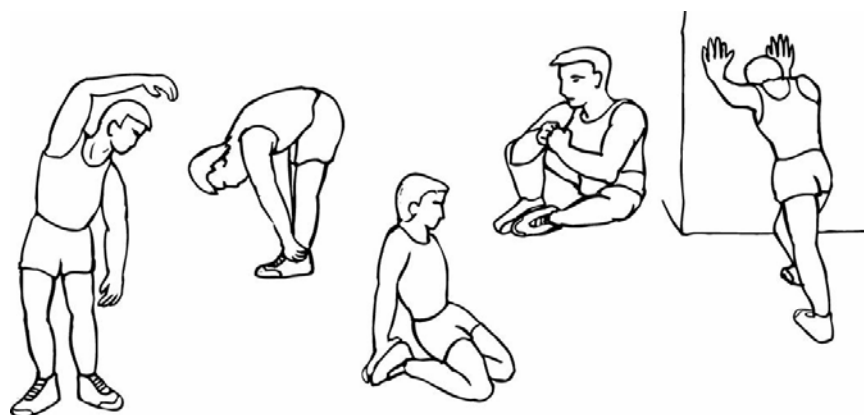

Training Zone Exercise


After warming up, increase the intensity to your desired exercise program. Be sure to maintain your intensity for maximum performance. Breathe regularly and deeply as you exercise.

Cool Down

Finish each workout with a light jog or walk for at least 1 minute. Then complete 5 to 10 minutes of stretching to cool down. This will increase the flexibility of your muscles and will help prevent post-exercise problems.

Workout Guidelines

TARGET ZONE

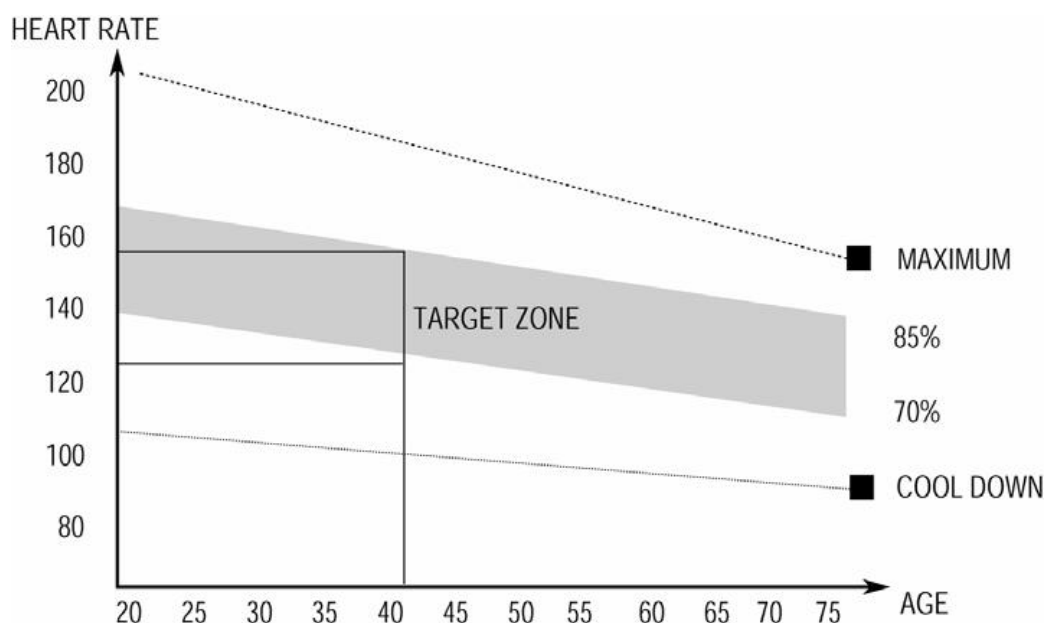

THIS IS HOW YOUR PULSE SHOULD BEHAVE DURING GENERAL FITNESS EXERCISE.

REMEMBER TO WARM UP AND COOL DOWN FOR A FEW MINUTES.

The most important factor here is the amount of effort you put in. The harder and longer you work, the more calories you will burn. Effectively this is the same as if you were training to improve your fitness, the difference is the goal.

8. MAINTENANCE INSTRUCTIONS

Reasonable cleaning/lubricating should be made to extend the life time of this unit. Performance is maximized when the belt and mat are kept as clean as possible.

WARNING: THE MAT/DECK FRICTION MAY PLAY A MAJOR ROLE IN THE FUNCTION AND LIFE OF YOUR TREADMILL AND THAT IS WHY WE RECOMMEND YOU CONSTANTLY LUBRICATE THIS FRICTION POINT TO PROLONG THE USEFUL LIFE OF YOUR TREADMILL. FAILING TO DO THIS MAY VOID YOUR WARRANTY.

WARNING: UNPLUG POWER CORD BEFORE MAINTENANCE

WARNING: STOP TREADMILL BEFORE FOLDING

1. General Cleaning

- Use a soft, damp cloth to wipe the edge of the belt and the area between the belt edge and frame. A mild soap and water solution along with a nylon scrub brush will clean the top of the textured belt. This task should be done once a month. Allow to dry before using.
- On a monthly basis, vacuum underneath your treadmill to prevent dust build up. Once a year, you should remove the black motor shield and vacuum out dirt that may accumulate.

2. General Care

- Check parts for wear before use.
- Pay particular attention to the fixing knobs and make sure they are tight.
- Always replace the mat if worn and any other defective parts.

- If in doubt do not use the treadmill and contact us.

TAKE CARE TO PROTECT CARPETS AND FLOOR in case of leakages. This product is a machine that contains moving parts which have been greased / lubricated and could leak.


3. Belt/Deck/Roller Lubrication

The mat/deck friction may play a major role in the function and life of your treadmill and that is why we recommend you constantly lubricate this friction point to prolong the useful life of your treadmill. You should apply lubrication after approximately the first 30 hours of operation. We recommend lubrication of the deck according to the following timetable:

- Light use (less than 3 hours per week) every 6 months
- Medium use (3-5 hours a week) every 3 months
- Heavy use (more than 5 hours per week) every 6-8 weeks

See below procedures for lubricating:

1. Use a soft, dry cloth to wipe the area between the belt and deck.
2. Spread lubricant onto the inside surface of belt and deck evenly (make sure the machine is turned off and power is disconnected).

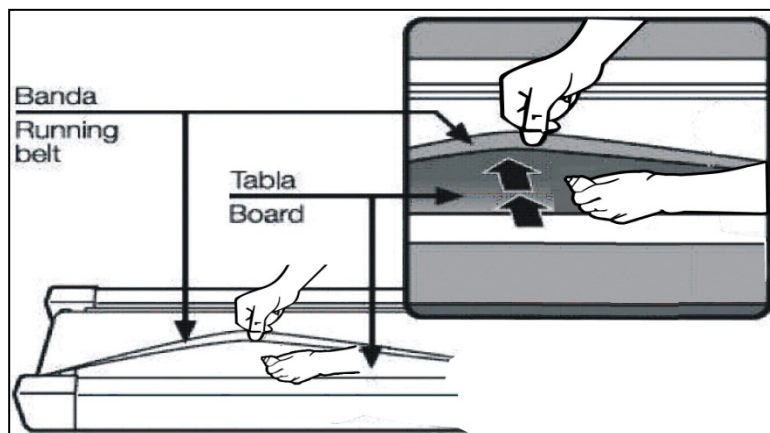

3. Periodically lubricate the front and rear rollers to keep them at their peak performance. If the treadmill belt/deck/roller is kept reasonably clean it is possible to expect over 1200 hours before relubricating is necessary.

Video Tutorial Available at:
<http://youtu.be/cP9NtFHfWlc>

Lifespan Fitness Channel:
<http://www.youtube.com/user/treadmillsvideos>

4. How to check the running mat for proper lubrication:

1. Disconnect the main power supply.
2. Fold the treadmill up into the storage position.
3. Feel the underside surface of the running mat.

If the surface is slick when touched, then no further lubrication is needed.

If the surface is dry to the touch, apply a suitable silicone lubricant.

We recommend that you use a silicone based spray to lubricate your Lifespan treadmill. This can be purchased directly from us or any hardware store.

5. Adjusting the Running Belt

Place treadmill on a level surface. Run treadmill at approximately 4km/h, checking the running condition.

If the belt has drifted to the **right**:

Whilst the treadmill is running at 4km/h, carefully turn the **right** adjusting bolt 1/4 turn **clockwise**. Then monitor treadmill until the belt centers. Repeat until the belt correctly centers.

See *Picture A*

If you have over adjusted the belt and it drifts to the right, carefully turn the **right** adjusting bolt **anticlockwise** until the belt centers.

If the belt has drifted to the **left**:

Whilst the treadmill is running at 4km/h, carefully turn the **left** adjusting bolt 1/4 turn **clockwise**. Then monitor treadmill until the belt centers. Repeat until the belt correctly centers.

See *Picture B*




If you have over adjusted it, carefully turn the **left** adjusting bolt **anticlockwise** and until the belt centers.

To adjust the **tightness** of the belt:

Turn the treadmill off. Turn both the left and right adjusting bolts 1/4 turn clockwise. Repeat until the belt correctly tightens.


See *Picture C*

If the belt is over tightened, simply do the opposite to loosen.

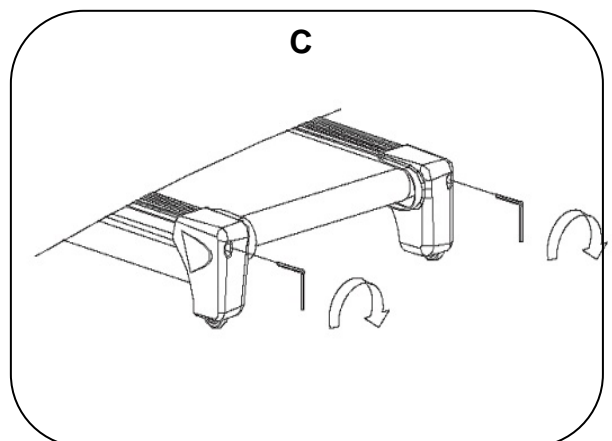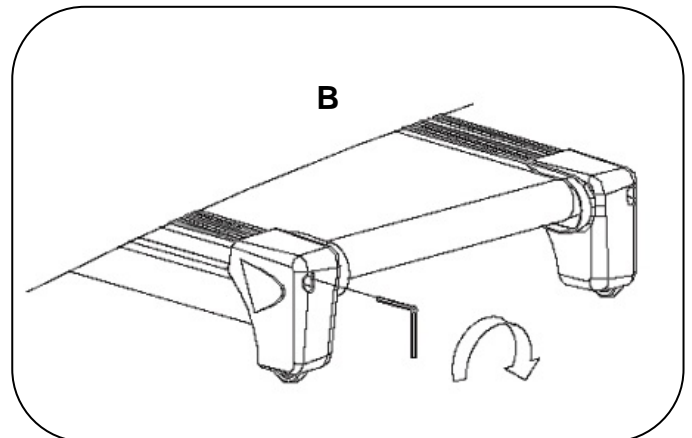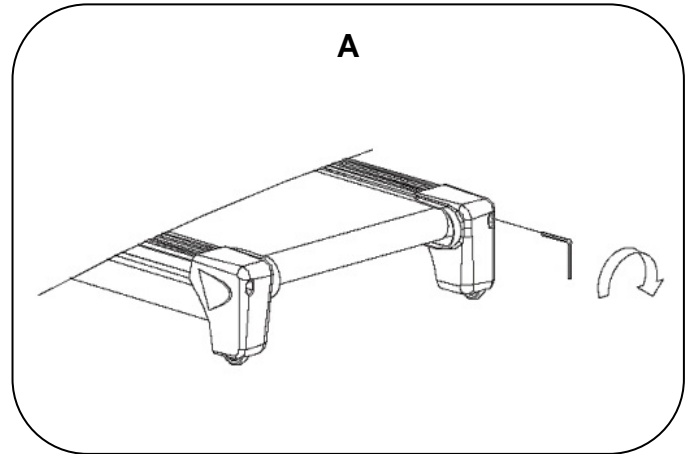

NOTE: When properly tightened, you should be able to peel the very edge of the side of the belt up approximately 2 inches. However this is a rough reference and not all treadmills are the same. Some treadmills that have longer belts may give different measurements for correct belt tightness.

Simply, if the belt begins to slip during use, this is an indication that the belt still needs tightening.

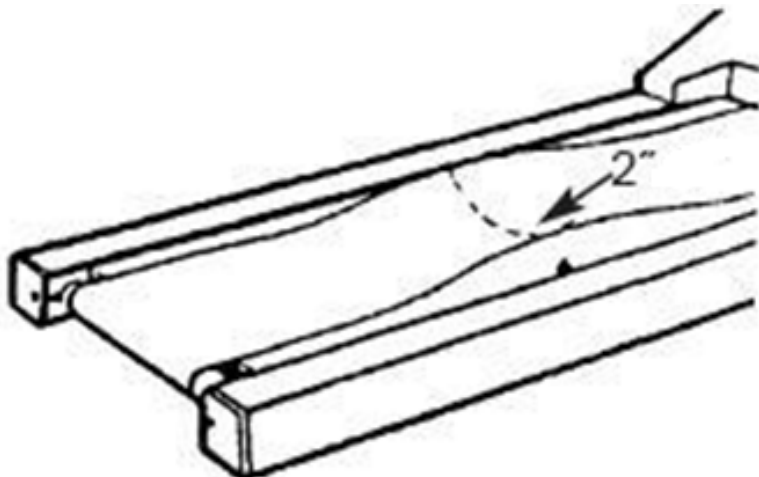


Video Tutorial Available at:
<http://youtu.be/vllsamTSvA>

Lifespan Fitness Channel:
<http://www.youtube.com/user/treadmillsvideos>


5. Replacing Motor Brushes

After extended use, the motor brushes in your treadmill motor will wear down, and this can lead to motor failure. It is important that you maintain your motor by replacing the brushes on either side of the motor when they are worn down. We recommend that you check your motor every 1000 hours of usage.


IMPORTANT: Before beginning the replacement of your motor brush, ensure that the treadmill is off and unplugged from the electrical socket.

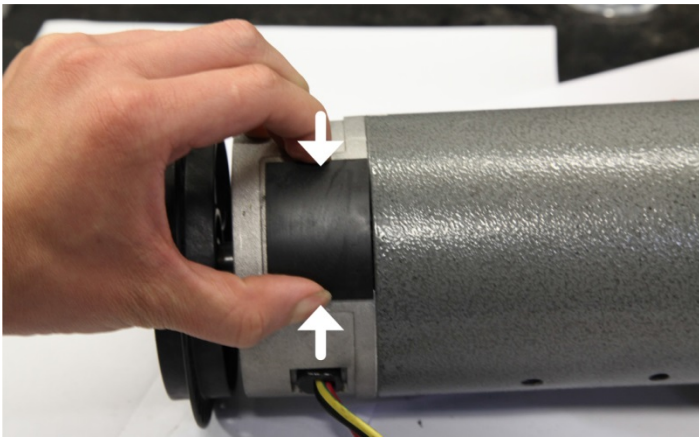


1. Remove the cover from the motor by squeezing it from the sides.

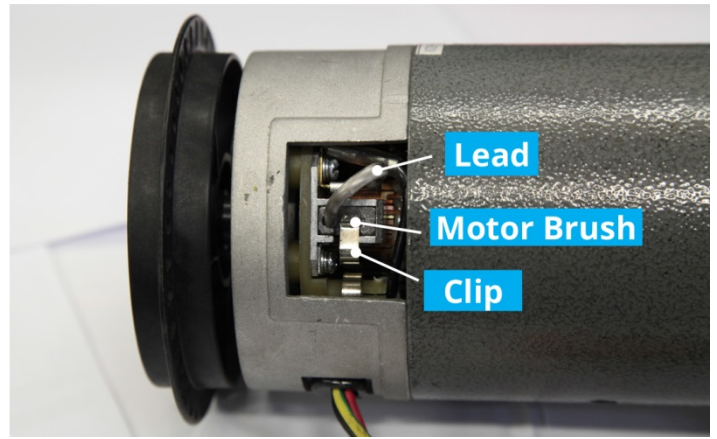


2. You'll find the motor brush held in with a clip, with the lead plugged in.

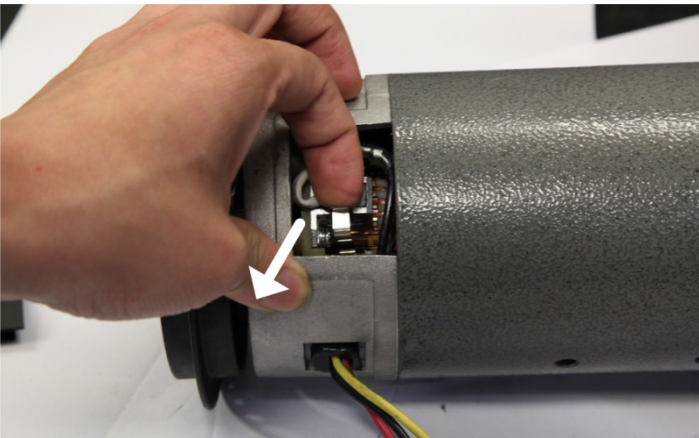


3. Pull the clip out from its position.

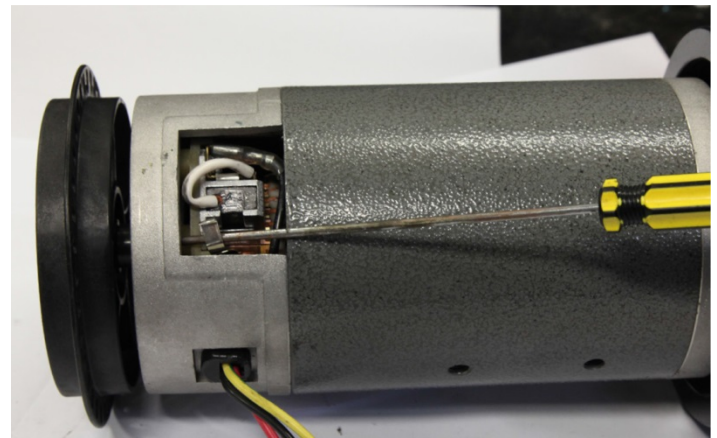


4. Hold the clip out of the way with a screwdriver or similar object.

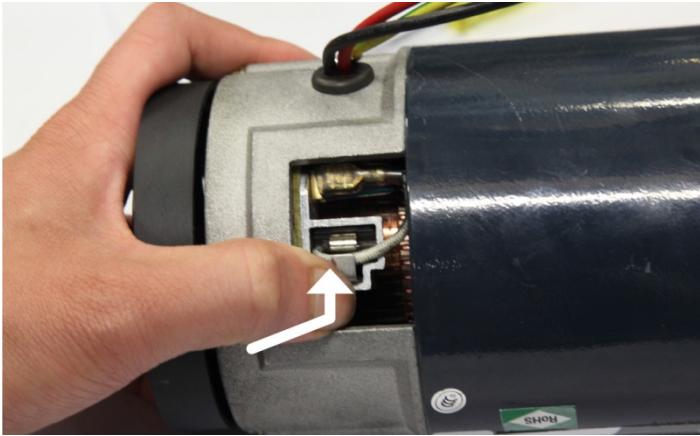


5. Some treadmill motors may use a push clip instead. In this case, gently push the clip down and then up to release it from its latch.

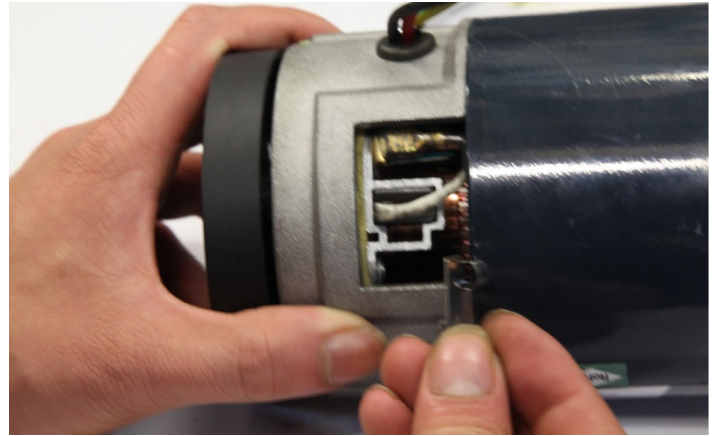


6. Remove the clip, noting the direction in which it was originally placed, and put it safely aside.

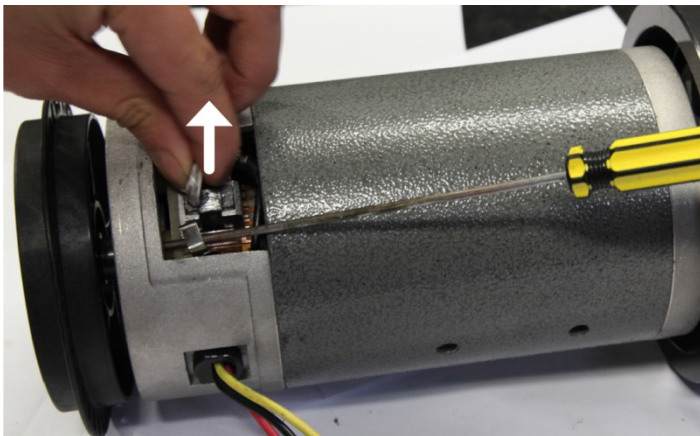


7. Slide the motor brush out from its slot. If the brush is shorter than 2cm on the longest side, you will need to replace both brushes.

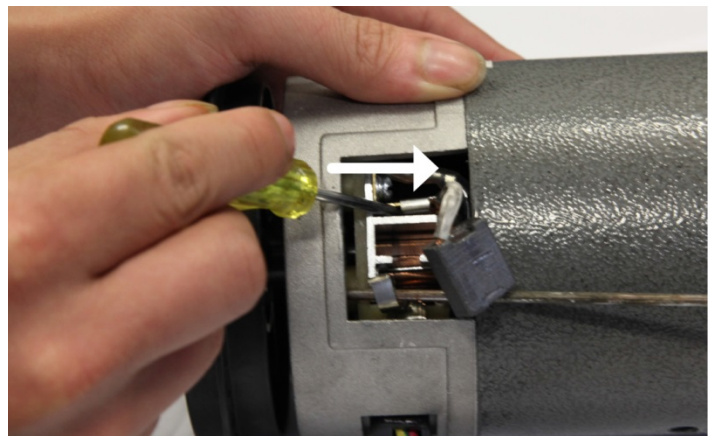


8. Slide the motor brush lead off the terminal using a small screwdriver or needle-nosed pliers.

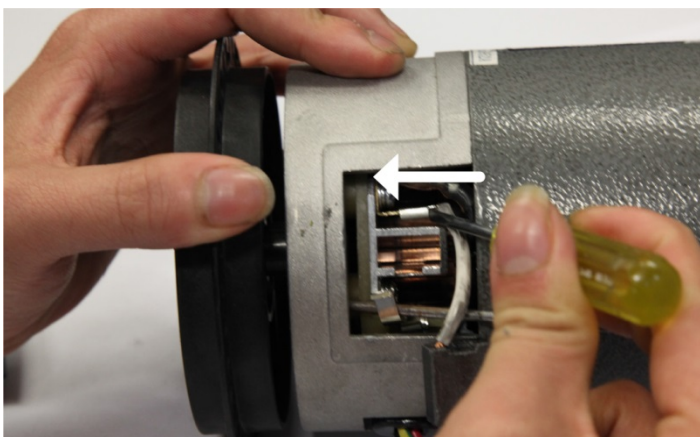


9. Slide the motor brush out from its slot. If the brush is shorter than 2cm on the longest side, you will need to replace both brushes.

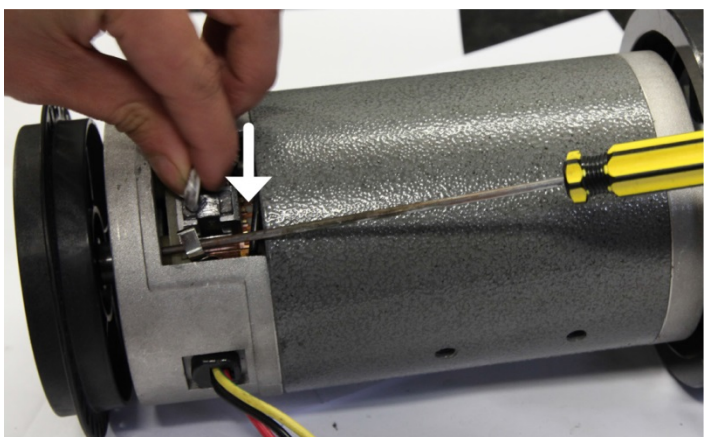


10. Slide the motor brush out from its slot. If the brush is shorter than 2cm on the longest side, you will need to replace both brushes.

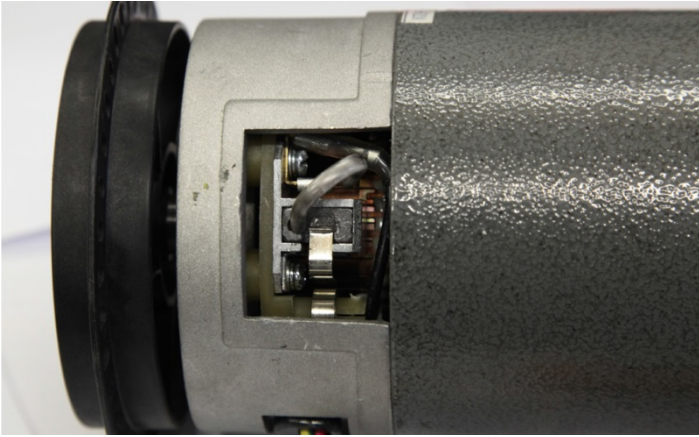


11. Release the clip back into its position.

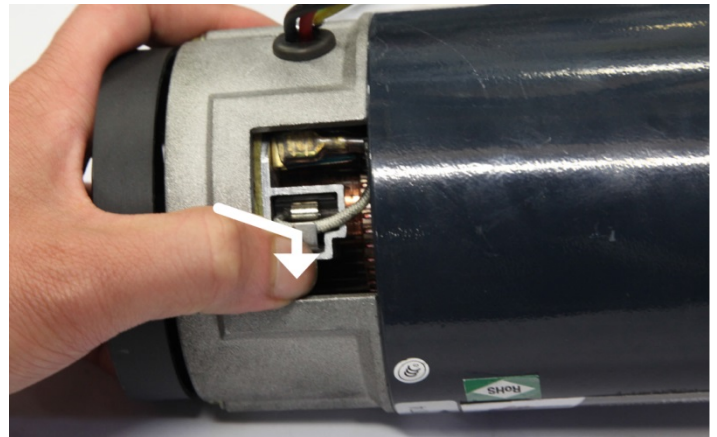

12. If your motor uses a push clip, replace the push clip by pushing it inwards and then down so that it engages the catch.

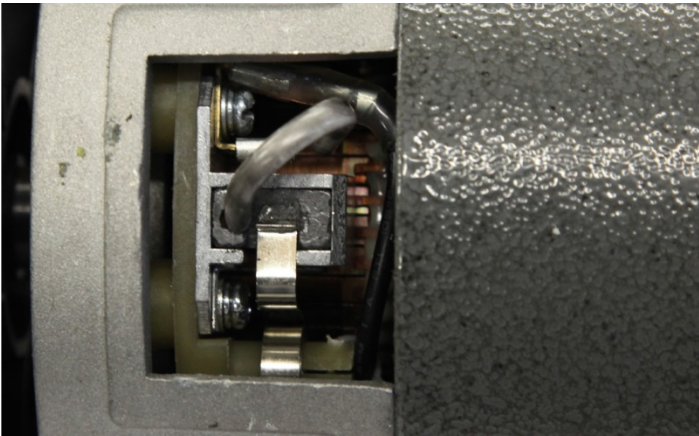


13. Check that the motor brush is held firmly in place by the spring, and that the lead is plugged securely onto the terminal.

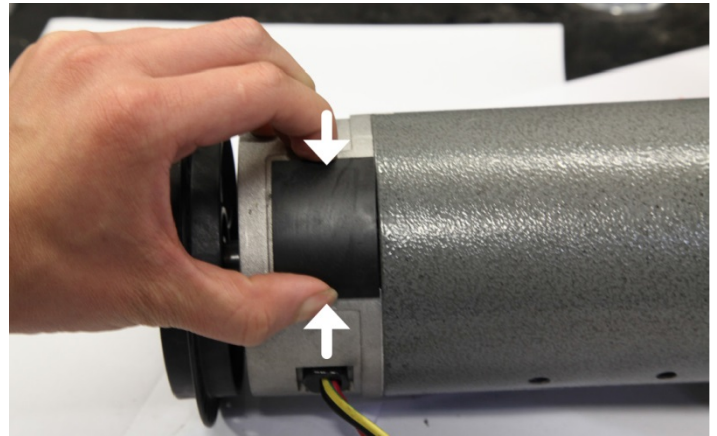

14. Replace the motor cover. Repeat steps 1-15 for the second brush located on the opposing side of the motor.

15. You have now successfully replaced the motor brushes. We also recommend that you remove any dirt and dust from your treadmill motor fan using a vacuum cleaner before replacing the cover.

9. EXPLODED DIAGRAM

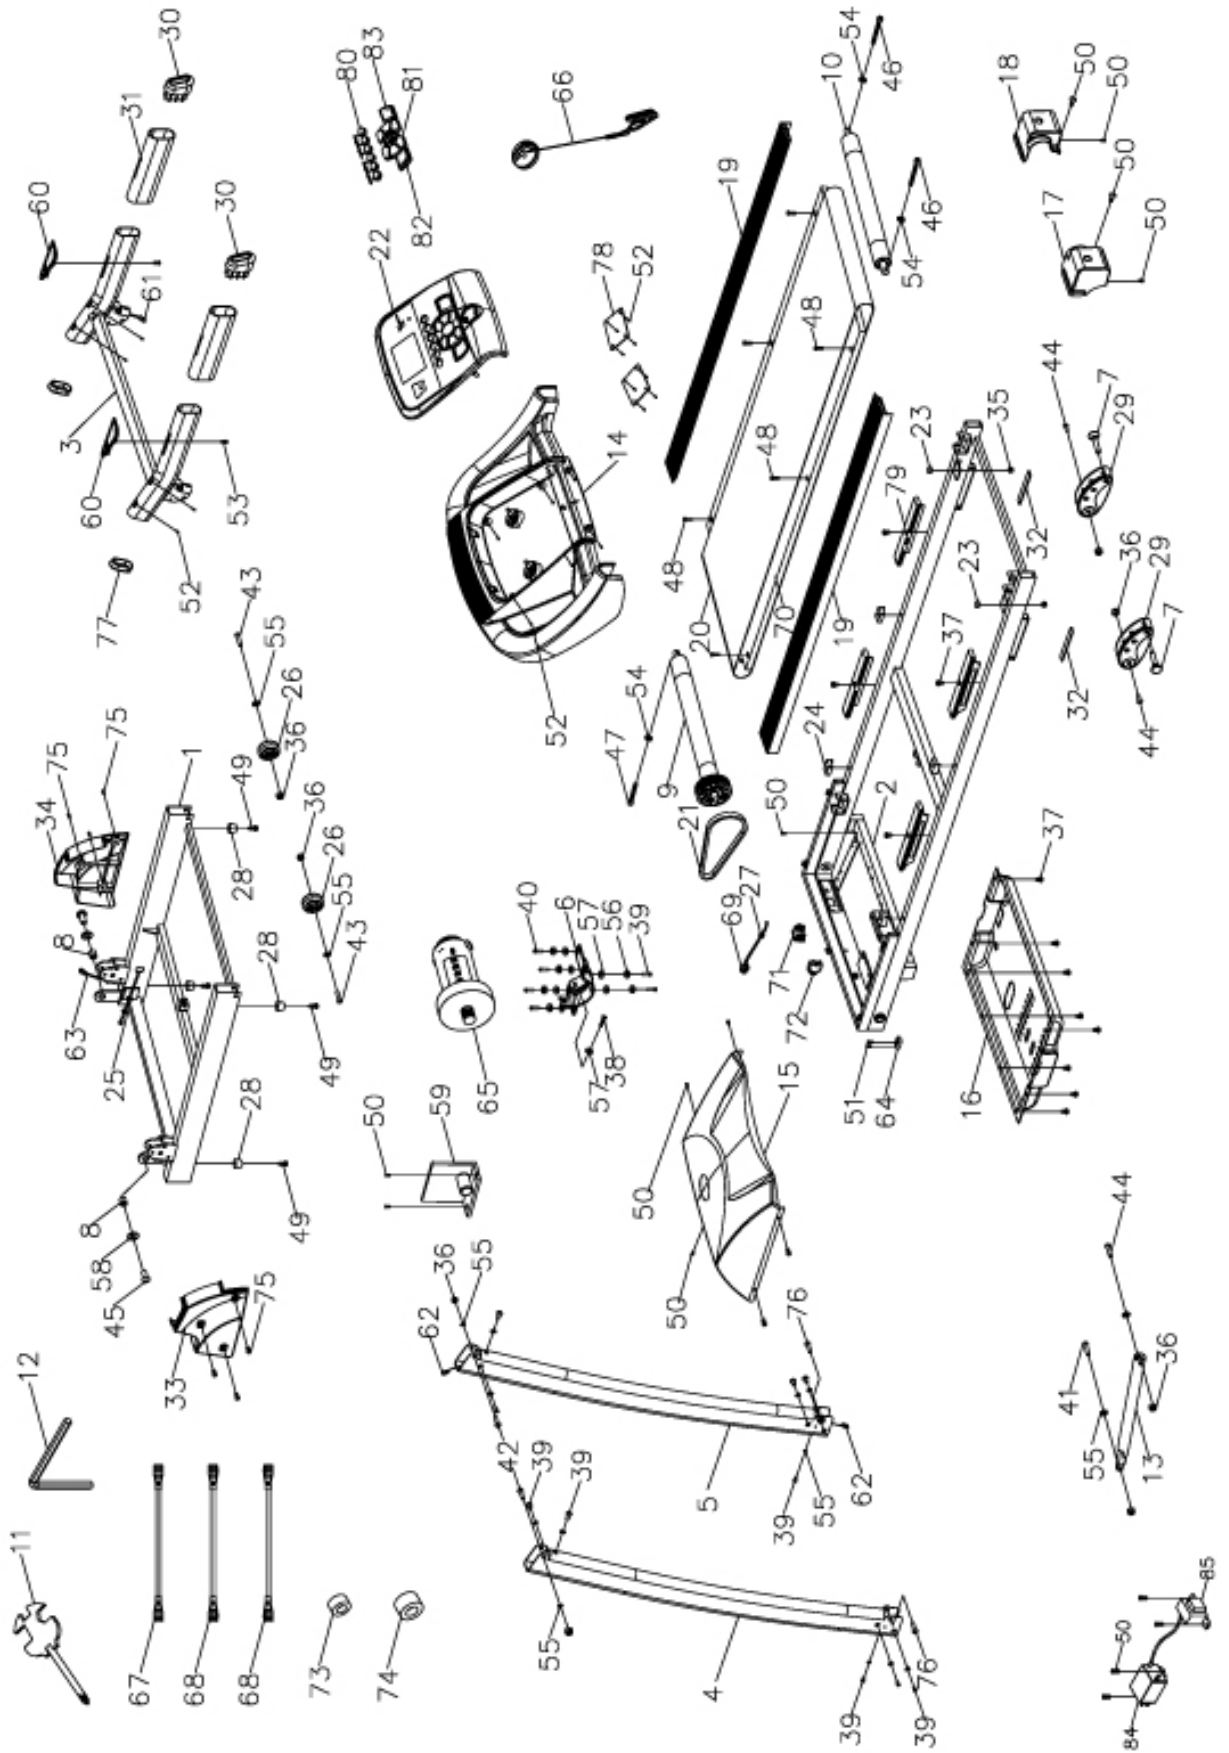

10. PARTS LIST

1	Base Frame		1	44	Bolt	M8*45	3
2	Main Frame		1	45	Bolt	M10*30	2
3	Computer Bracket		1	46	Bolt	M6*55	2
4	Left Upright		1	47	Bolt	M6*45	1
5	Right Upright		1	48	Bolt	M6*35	6
6	Motor Bracket		1	49	Screw	ST4.2*20	4
7	Fixing pin		2	50	Screw	M5*8	14
8	Turning Bushing		2	51	Screw	S T2.9*8	2
9	Front Roller		1	52	Screw	ST4.2*12	8
10	Rear Roller		1	53	Screw	ST4.2*25	2
11	Wrench w/ screw driver	S=13、14、15	1	54	Washer	6	3
12	5# Allen Wrench	5mm	1	55	Washer	8	12
13	Cylinder		1	56	Washer	8	6
14	Console top cover		1	57	Washer C	8	7
15	Motor top cover		1	58	Washer C	φ10*φ26*2.0	2
16	Motor bottom cover		1	59	Control board		1
17	Lefe rear cover		1	60	Handpulse		2
18	Right rear cover		1	61	Console upper wire		1
19	Side rail		2	62	Console middle wire		1
20	Running belt		1	63	Console lower wire		1
21	Motor belt		1	64	Speed sensor		1
22	Computer board		1	65	DC Motor		1
23	Blue cushion		2	66	Safety accessory		1
24	Square cushion		4	67	AC single line	Blue	1
25	Ring protecting wire plug		2	68	AC single line	Brown	2
26	Moving wheel		2	69	Power wire		1
27	Power wire buckle		1	70	Running board		1
28	Foot pad		4	71	Square switch		1
29	Adjustable foot pad		2	72	Overload Protector		1
30	End cap		2	73	Magnetic ring		1
31	Foam		2	74	Magnetic core		1
32	EVA cushion		3	75	Bolt	M5*12	6
33	Left upright tube cover		1	76	Bolt	M8*35	2
34	Right upright tube cover		1	77	Inner cap		2
35	Bolt	M6	2	78	Speaker net		2
36	Bolt	M8	8	79	Silica gel pad		4
37	Bolt	ST4.2*12	12	80	Oval button		2
38	Bolt	M8*35	1	81	Function button		1
39	Bolt	M8*15	15	82	Start button		1
40	Bolt	M8*20	4	83	Stop button		1
41	Bolt	M8*30	1	84	Fliter	Optional	1
42	Bolt	M8*40	2	85	Inductance	Optional	1
43	Bolt	M8*40	2				

11. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au

Please visit our website to view our full warranty terms and conditions:

<http://www.lifespanonline.com.au/Warranty-Policy>

Please email us through support@lifespanfitness.com.au for all warranty or support issues.

TROUBLE SHOOTING

CODE	REASON	SOLUTION
E01	Message failure between computer and bottom control board	<ol style="list-style-type: none"> 1. Check the computer and bottom control board wire connection; 2. Check if IC on bottom control board is loose, reset the IC 3. Power on bottom control board, if there is an error, change the bottom control board
E02	Burst clash	<ol style="list-style-type: none"> 1. Check that the power voltage is suitable, if not, use correct power voltage; 2. Check if the bottom control is burnt out; if yes - replace; then reconnect the motor wire.
E03	No sensor signal	<ol style="list-style-type: none"> 1. Check that all sensor wires are in good condition, replace if damaged 2. Check the speed sensor, replace if damaged 3. Check the motor condition and wiring
E05	Current overload protection	<ol style="list-style-type: none"> 1. Over rated loaded or the motor is stuck, causing excessive current, machine will start self-protection system. Adjust the machine and restart; 2. Check if there is irregular noise coming from the motor or if the motor / bottom control board is burnt out; if burnt out, change to a good motor and bottom control; remember to use the correct voltage.
	Motor not starting after pressing START	Probable Issues: <ol style="list-style-type: none"> 1. Broken motor 2. Damaged safety wire 3. Motor wiring not connected well 4. IGBT on bottom control board is burnt out

Hand Pulse Technology

Lifespan Fitness Treadmills come equipped with hand pulse sensors which are used to pick up tiny EKG/ECG signals that run through the body when your heart beats. These electrical EKG/ECG signals are very small and that they must be amplified 1000 times to make the signal useful for the computer to display your pulse.

To ensure proper operation:

- The user must maintain good, consistent contact on all four sensors
- The users skin cannot be too dry or too wet

Other factors that could affect the reading:

- Change of grip on the sensors (during slow pace walking and up to running)
- Tightening of hand muscles will produce small electrical signals
- Static electricity charges from the air or from walking on the treadmill

EKG/ECG Sensors may filter through actual EKG/ECG signals and “Noise” factors that may affect the reading. This will cause the pulse reading to be delayed and will take longer to update the display as the heart rate changes. Too much noise will create an incorrect reading. Medical conditions or having no electrical signal in the hands are other factors that may affect pulse readings as well.

These are limitations of hand pulse technology and even the most expensive systems (which can cost upwards of \$3,000) used in hospitals have the same problems. The difference is that a patient in a hospital is not running on a treadmill. Hand pulse technology works well on stationary exercise machines like bikes and even elliptical cross trainers but are not perfect on a treadmill. We offer treadmills with a wireless heart rate receiver which may be a more accurate option.

To test if your hand pulse sensors are working up to specification, hold them while standing on the side step rails, not walking, and see if the reading is more in line with what you would expect. This will eliminate the movement and static electricity factors. If your hands are dry, then wet them slightly (saliva works as a great conductor if this doesn't bother you).

For more information, please contact our Lifespan Technical Support Department

www.lifespanfitness.com.au

support@lifespanfitness.com.au