


ACTIVEGO

STRIKER FOOSBALL SOCCER TABLE (140CM)

USER MANUAL

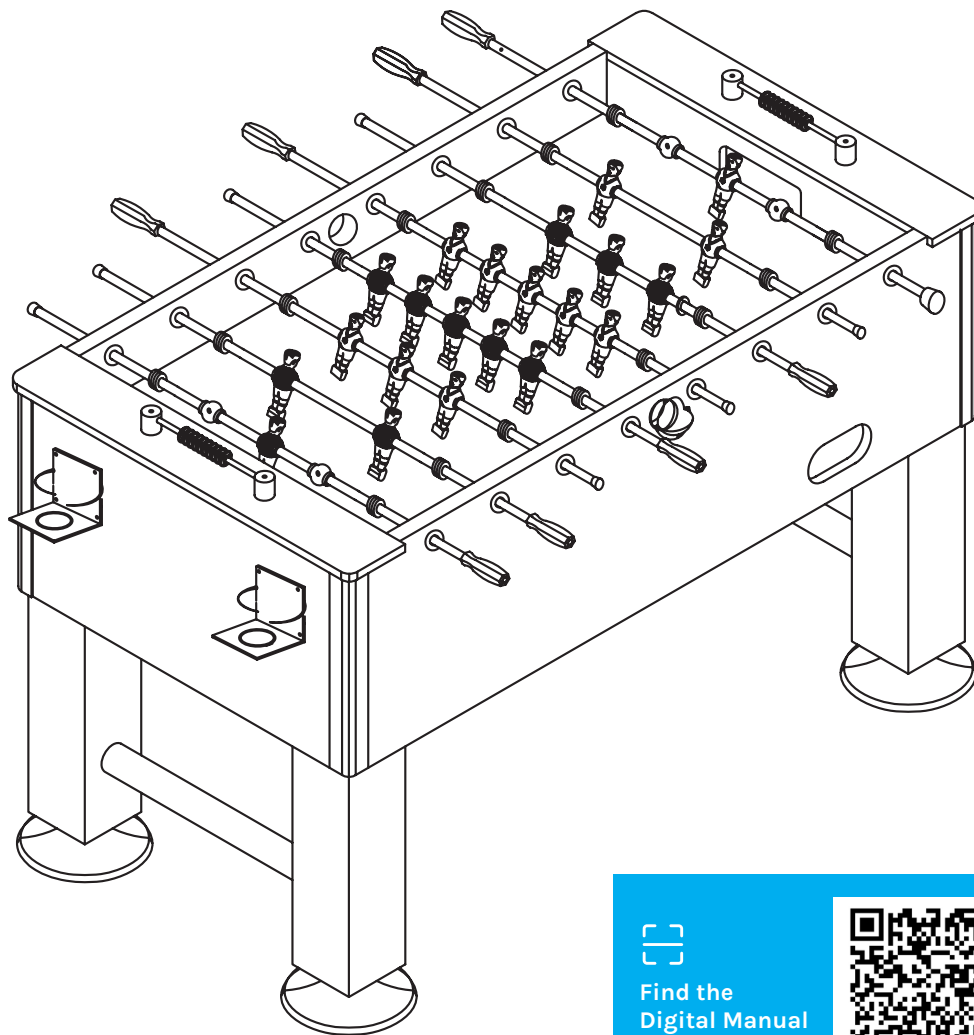

Find the
Digital Manual
Online



Product may vary slightly from the item pictured due to model upgrades.



**Read all instructions carefully before using this product.
Retain this owner's manual for future reference.**

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespanfitness.com.au



TABLE OF CONTENTS

I. Safety Instructions	03
II. Parts List	04
III. Assembly Instructions	05
IV. Maintenance	13
V. Storage	13
VI. Troubleshooting	13
VII. Warranty	14

I. SAFETY INSTRUCTIONS

Please read this manual carefully before assembly and retain for future use.

To ensure safe use of your foosball table, please follow these guidelines:

- This product is intended for indoor use in a climate-controlled environment only. Excessive temperatures and humidity may have an influence on the play quality and durability of this table.
- This table should be used by adults or under the supervision of adults.
- Ensure the table is fully assembled and tightened before play.
- Do not sit, climb, or place heavy objects on the table.
- Check that all rods, handles, and hardware are secure to prevent injury.
- Be cautious of fast-moving rods; keep hands, face, and small objects away from rod ends during play.
- Keep packaging, balls, and hardware away from young children to avoid choking hazards.
- Always lift the table with two or more people to prevent back injuries or table damage.
- Do not place any food or drinks on the table or play field.
- Only use the table for its intended purpose.

Assembly Notes


- Assemble the table on a flat surface.
- Use the included instruction sheet and hardware pack.
- When installing parts that have more than one screw or bolt, hand tighten all screws or bolts in place before tightening with screwdriver or Allen key.
- Ensure all screws and bolts are tightened securely before use. Avoid over tightening.
- After assembly, double-check that rods spin smoothly and players are aligned correctly.

Playing Guidelines

- Use only the provided foosballs or regulation replacements.
- Do not slam, kick, or lean on rods.
- Rotate rods with controlled motion to prevent wear and damage.


II. PARTS LIST

P1

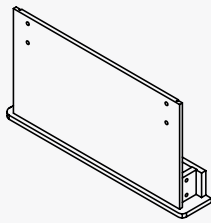


End panel
2 pcs

P2

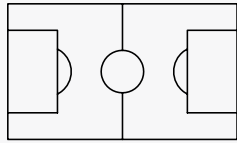


Playing field
1 pc

P3

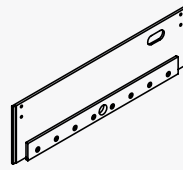

Side panel
2 pcs

P4

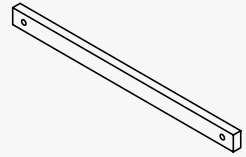

Playfield support brace
2 pcs

P5



R Leg
2 pcs

P6




L Leg
2 pcs

F1




Corner
4 pcs

F2

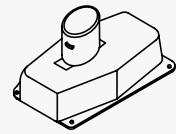

Ball catcher
2 pcs

F3

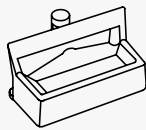

Goal box
2 pcs

F4



Ball runner
2 pcs

F5



Leg leveller
4 pcs

F6




Rod bumpers
16 pcs

F7



Bushings
4 pcs

F8

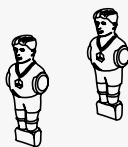

Player
11+11 pcs

F9




Rod handle
8 pcs

F10



Rod end cap
8 pcs

F11

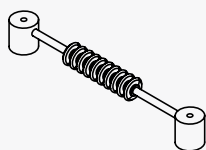


Slide scorer
2 pcs

F12



Ball entry cup
2 pcs

F13

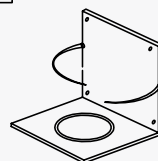

Drink holder
4 pcs

A1



Soccer ball
2 pcs

(H1)




T3.5X1/2" Screw
36 pcs

(H2)



T3.5X1" Screw
16 pcs

(H3)



1/4"*2" Bolt
4 pcs

(H4)




1/4"*16mm Washer
12 pcs

(H5)




1/4" Lock nut
4 pcs

(H6)




1/4"*2-1/4" Bolt
8 pcs

(H7)



Cross bar
2 pcs

(H8)




5/16"*1-1/2" Bolt
16 pcs

(H9)




5/16"*19mm Washer
16 pcs

(H10)

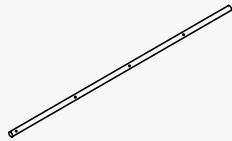


3-Men rod
4 pcs

(H11)

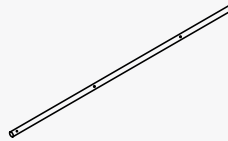


2-Men rod
2 pcs

(H12)

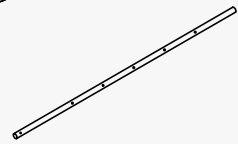

5-Men rod
2 pcs

(H13)



#8*1-1/8" Bolt
26 pcs

(H14)



#8 Nut
26 pcs

(H15)



F3.5X1-1/2" Screw
4 pcs

(H16)



F3.5X5/8" Screw
2 pcs

(T1)



III. ASSEMBLY INSTRUCTIONS

Figure 1

(H1) 
8x screws T3.5x1/2"



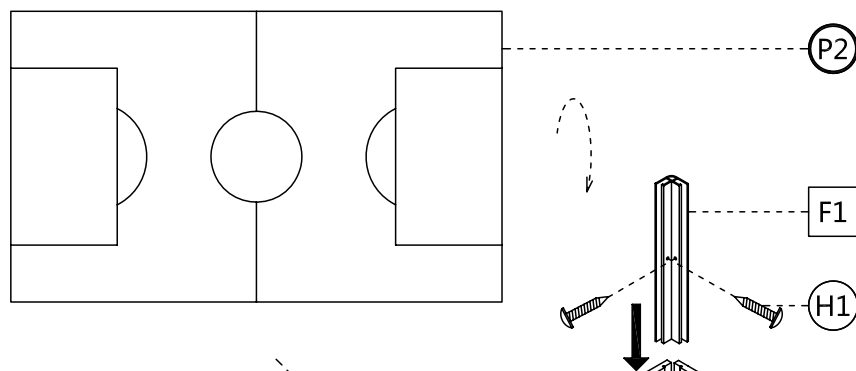


Figure 2

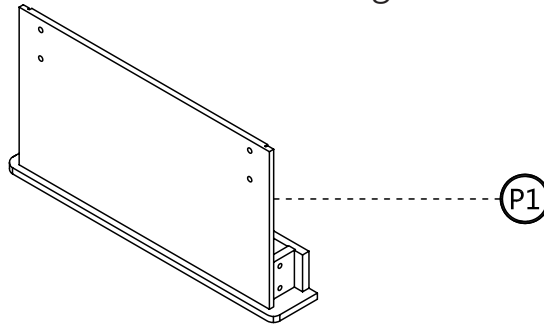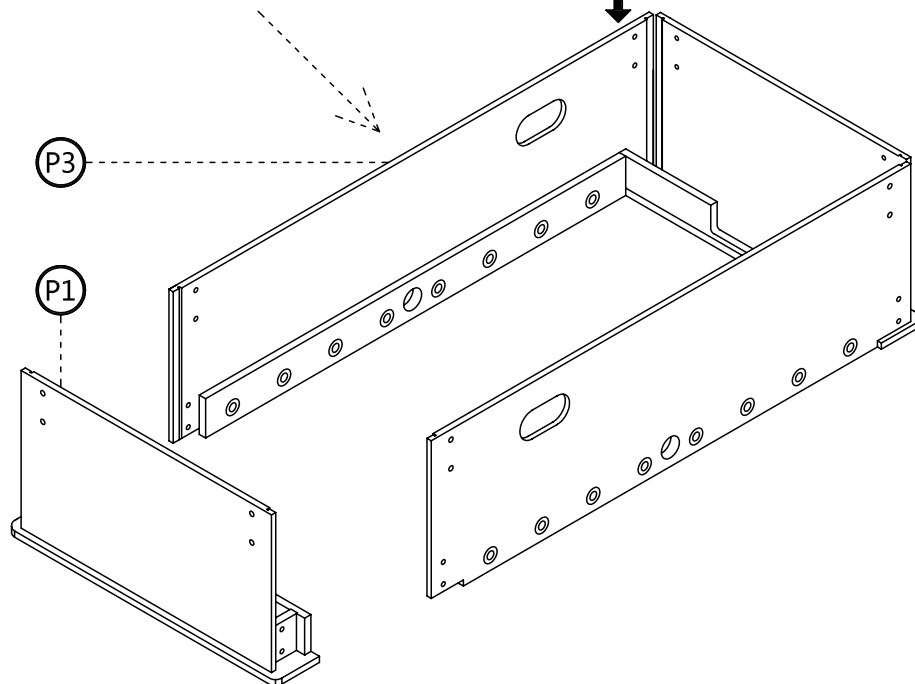

STEP 1

1. Lay out all parts and hardware on a flat surface.
2. Identify parts P1 (2x), P3 (2x) and F1 (4x), then lay it out as shown in Figure 2.
3. Use 8x screws T3.5x1/2" (H1) to secure the corner pieces F1 to the boards.
4. Lay down P2 upside down on the assembled frame (in Fig. 3) with the field facing down.



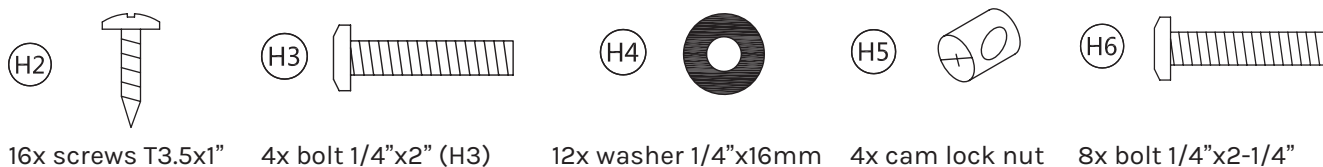


Figure 3

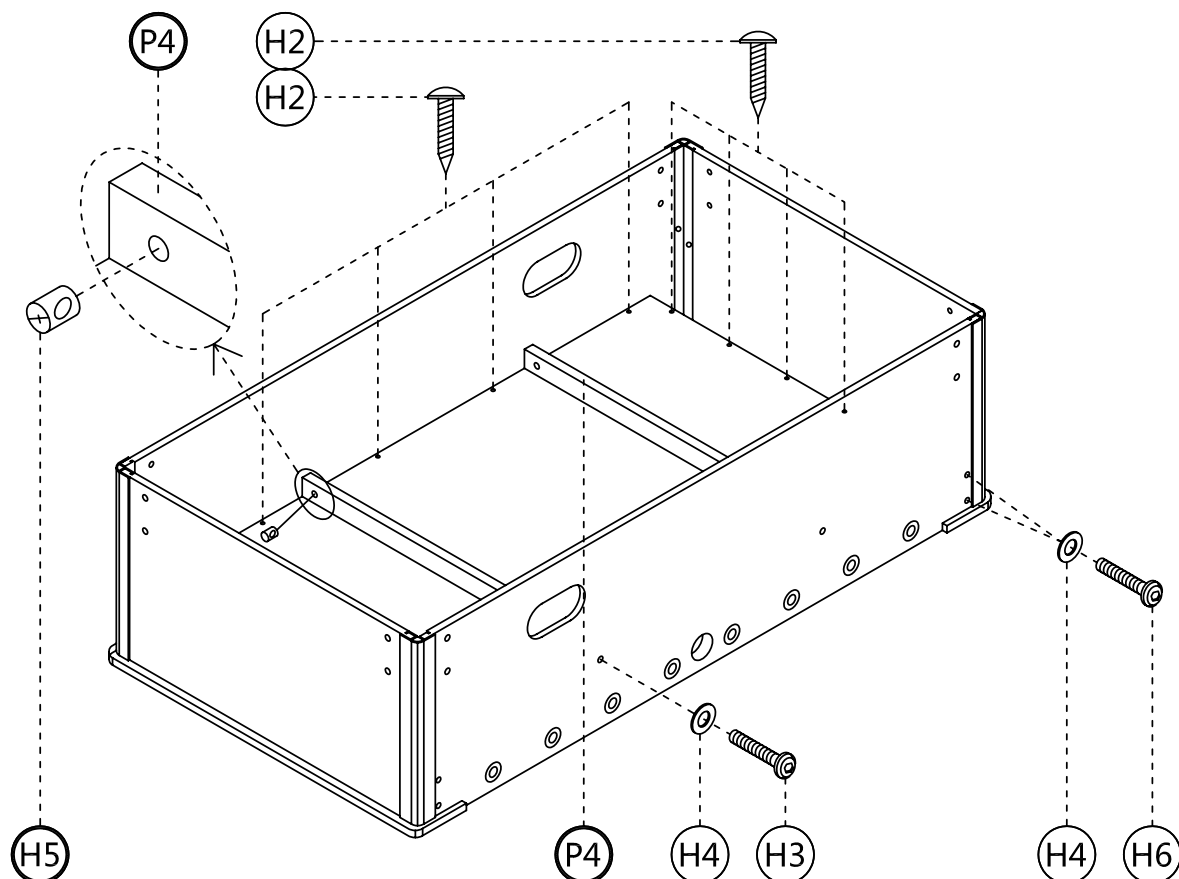


STEP 2

1. Secure P2 to the frame using 16x screws T3.5x1"(H2).
2. Insert 4x lock nut (H5) into the hole on P4, with the slot on the lock facing outward toward the screw hole (this allows the nut to grip the screw properly).
3. Position P4 against the cabinet, aligning the holes, see Figure 3.
4. Screw in 4x bolt 1/4"x2" (H3) with 4x washer 1/4"x16mm (H4) through the side panel into P4.
5. Secure 8x washer 1/4"x16mm (H4) and 8x bolt 1/4"x2-1/4" (H6) to the sides of the panels.




12x screws T3.5x1/2"

Figure 4

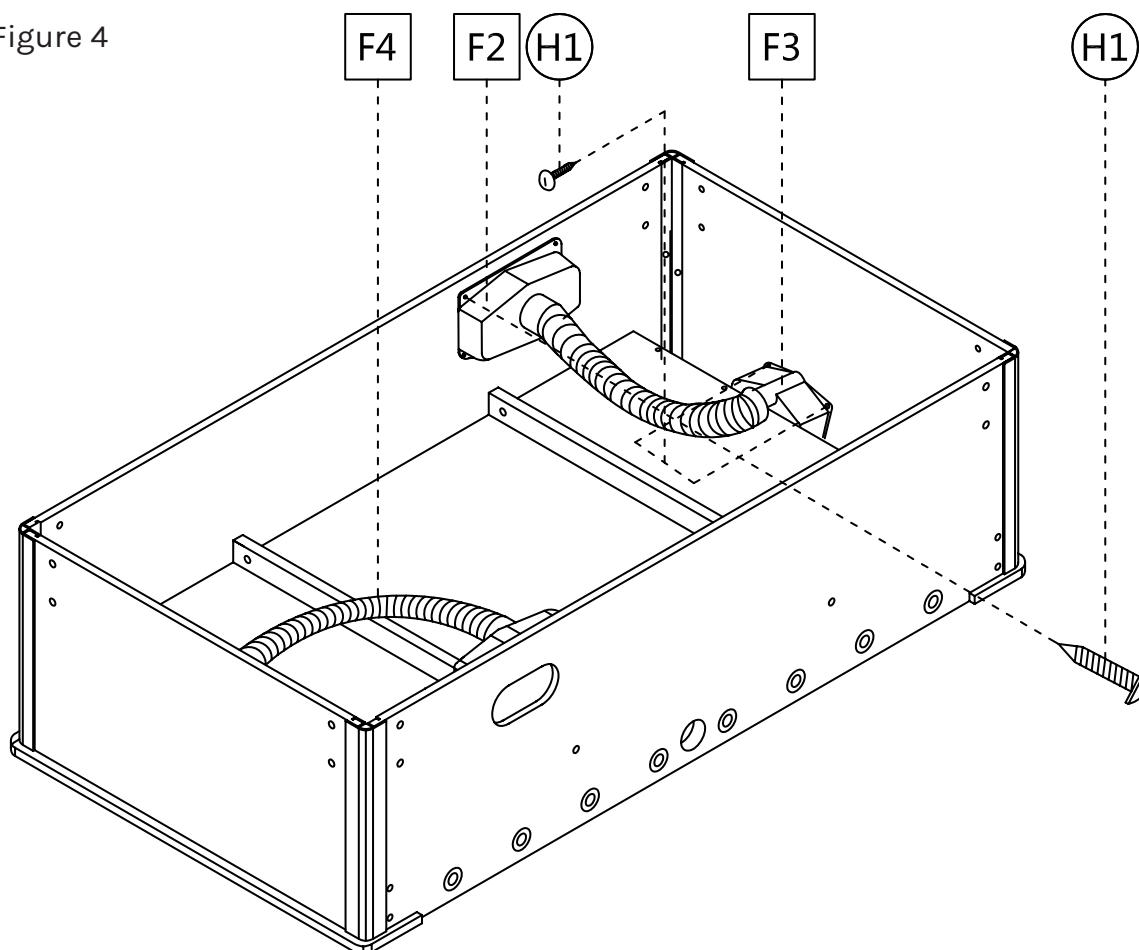

STEP 3

1. Place the 2x ball catcher (F2) onto the open slots of the side panels and secure using 8x screws T3.5x1/2" (H1).
2. Slide the 2x goal box (F3) into the openings on each end of the table, upside down. Make sure the goal box is facing the correct way, then secure with 4x screws T3.5x1/2" (H1).
3. Connect the ball runner from the ball catcher (F2) to the goal box (F3), see Figure 4.




16x bolt 5/16"x1-1/2"



16x washer 5/16"x19mm

Figure 5

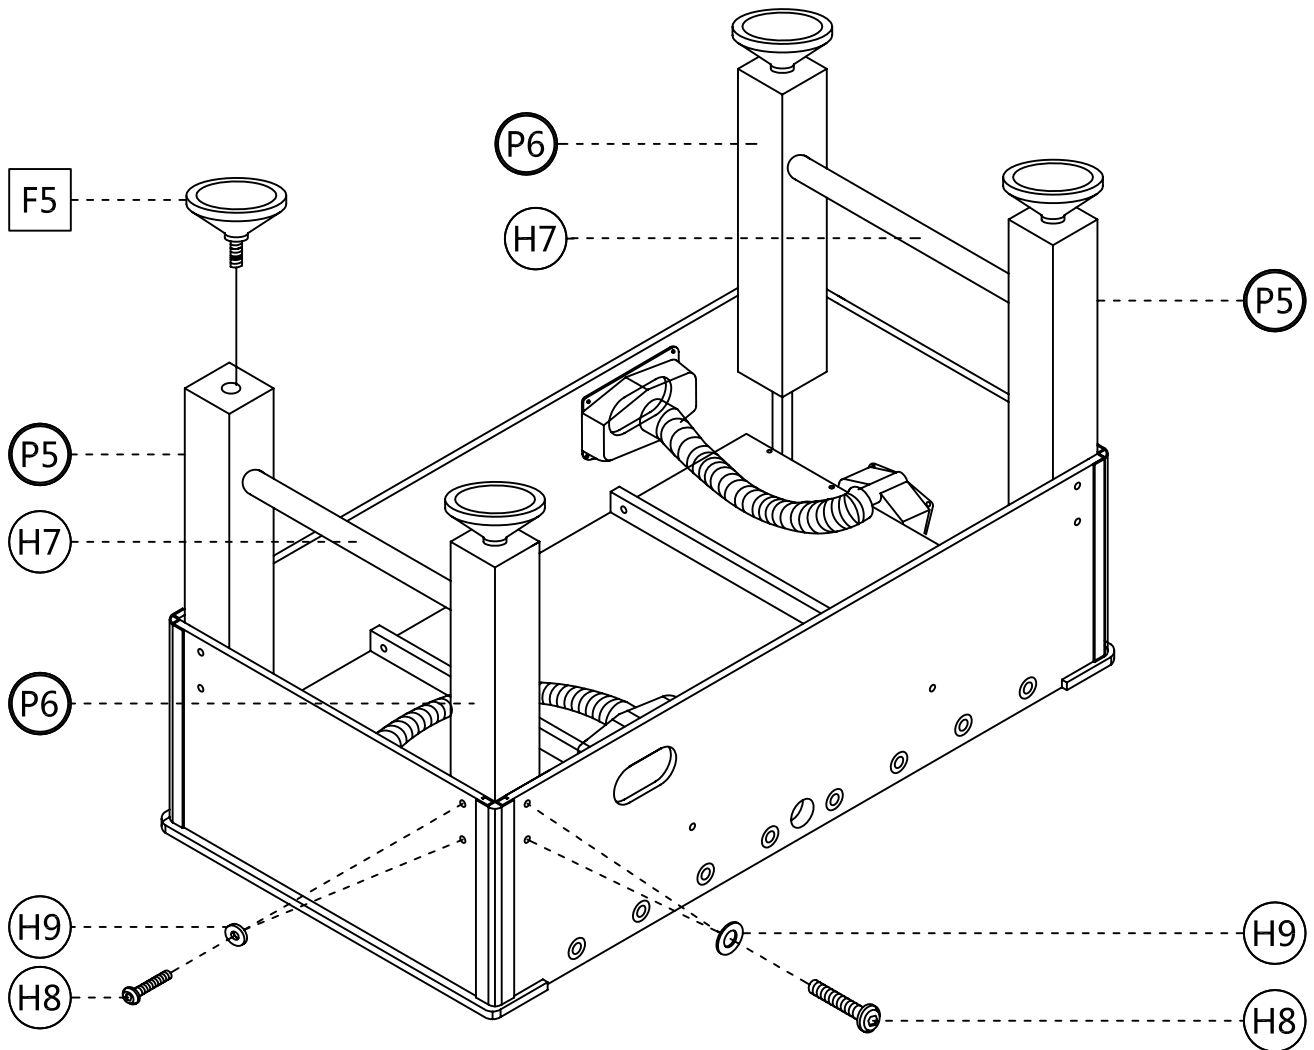

STEP 4

1. Place cross bars (H7) between the right leg (P5) and left leg (P6). Place the legs in the corners, as shown in Figure 5. The bolt holes should align.
2. Secure using 16x bolt 5/16"x1-1/2" (H8) and 16x washer 5/16"x19mm (H9) as pictured.
3. Secure the leg levellers (F5) to the 4x legs.
4. Turn the table over and adjust the floor levellers until table is stable.

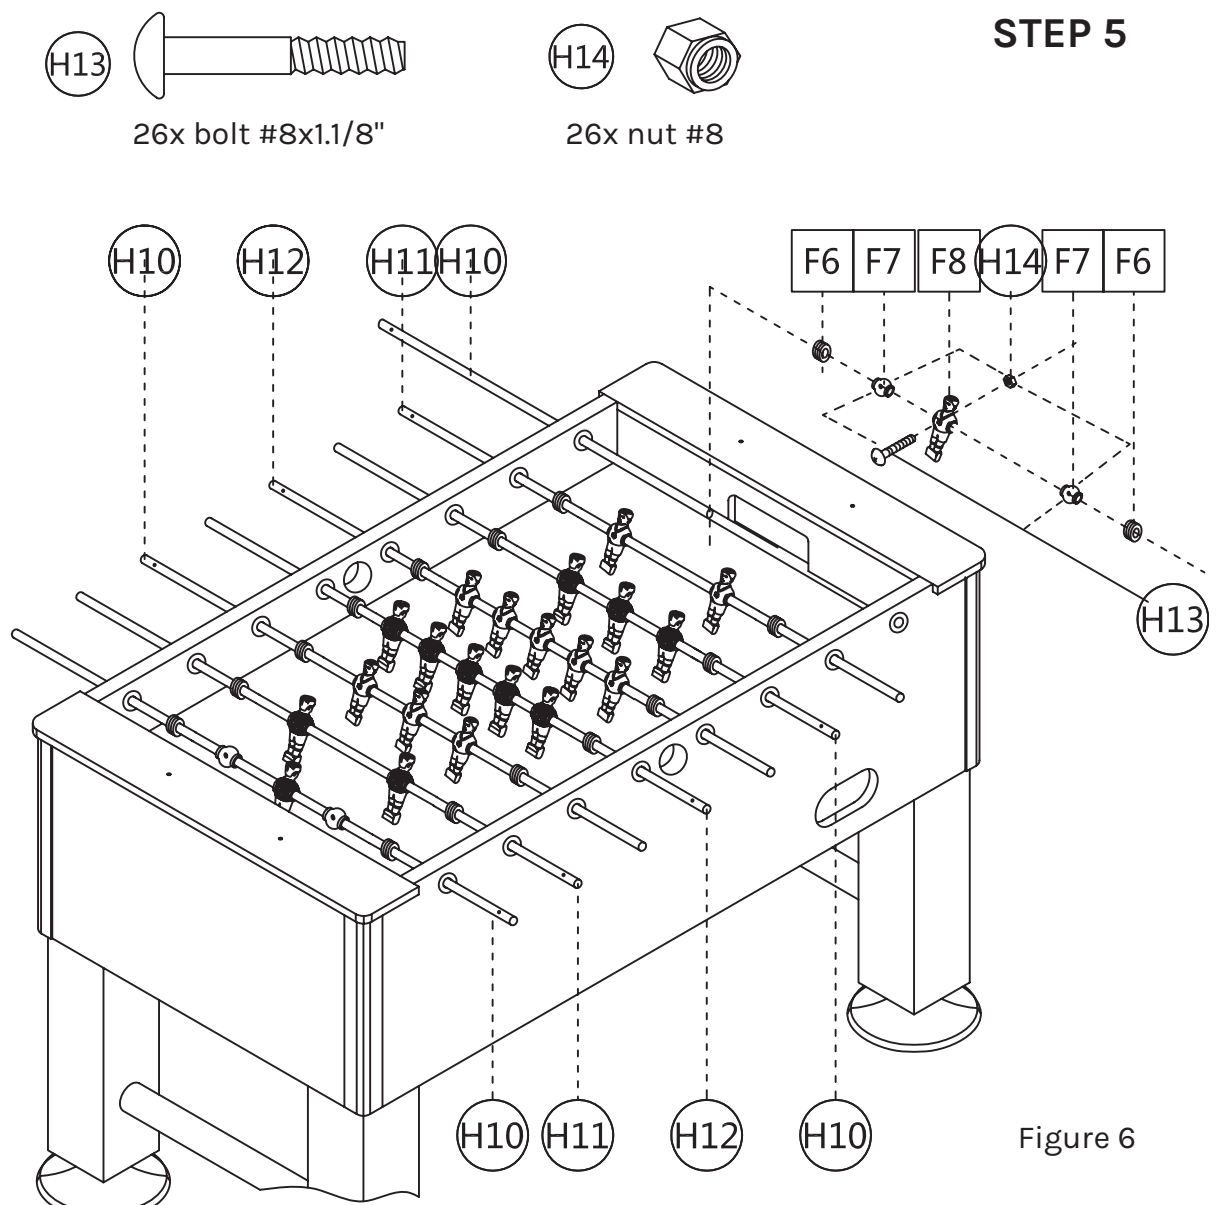


Figure 6

Refer to Figure 6.

- Alternate the player colours as pictured.
- Ensure the players are facing the right way during installation.

One man (Goalie)

1. Place a 3-man rod (H10) into one end of the rod holder, but do not feed it all the way.
2. Then place a rod bumper (F6) followed by a bushing (F7). Secure the bushing (F7) using 1x bolt #8x1.1/8" (H13) and 1x nut #8 (H14).
3. Add a player (F8) in the middle bolt hole of the rod and secure using 1x bolt #8x1.1/8" (H13) and 1x nut #8 (H14).
4. Next, place a bushing (F7) and secure using 1x bolt #8x1.1/8" (H13) and 1x nut #8 (H14). After this, add the rod bumper (F6).
5. Place the rod to the rod holder.
6. Repeat for the other side.

Two Man

1. Place a 2-man rod into the rod holder, but do not feed it all the way.
2. Then place a rod bumper (F6).
3. Secure 2 players into the 2 middle bolt holes using 2x bolt #8x1.1/8" (H13) and 2x nut #8 (H14).
4. Next place a rod bumper (F6).
5. Place the rod to the rod holder.
6. Repeat for the other side.

Three man

1. Place a 3-man rod (H10) into one end of the rod holder, but do not feed it all the way.
2. Then place a rod bumper (F6).
3. Add 3x player (F8) to the rod and secure using 3x bolt #8x1.1/8" (H13) and 3x nut #8 (H14).
4. Next place a rod bumper (F6).
5. Place the rod to the rod holder.
6. Repeat for the other side.

Four Man

1. Place a 5-man rod (H12) into one end of the rod holder, but do not feed it all the way.
2. Then place a rod bumper (F6).
3. Add 5x player (F8) to the rod and secure using 5x bolt #8x1.1/8" (H13) and 5x nut #8 (H14).
4. Next place a rod bumper (F6).
5. Place the rod to the rod holder.
6. Repeat for the other side.

H1



16x screws T3.5x1/2"

H15




4x F3.5x1-1/2"

H16



2x screws F3.5x5/8"

Figure 7

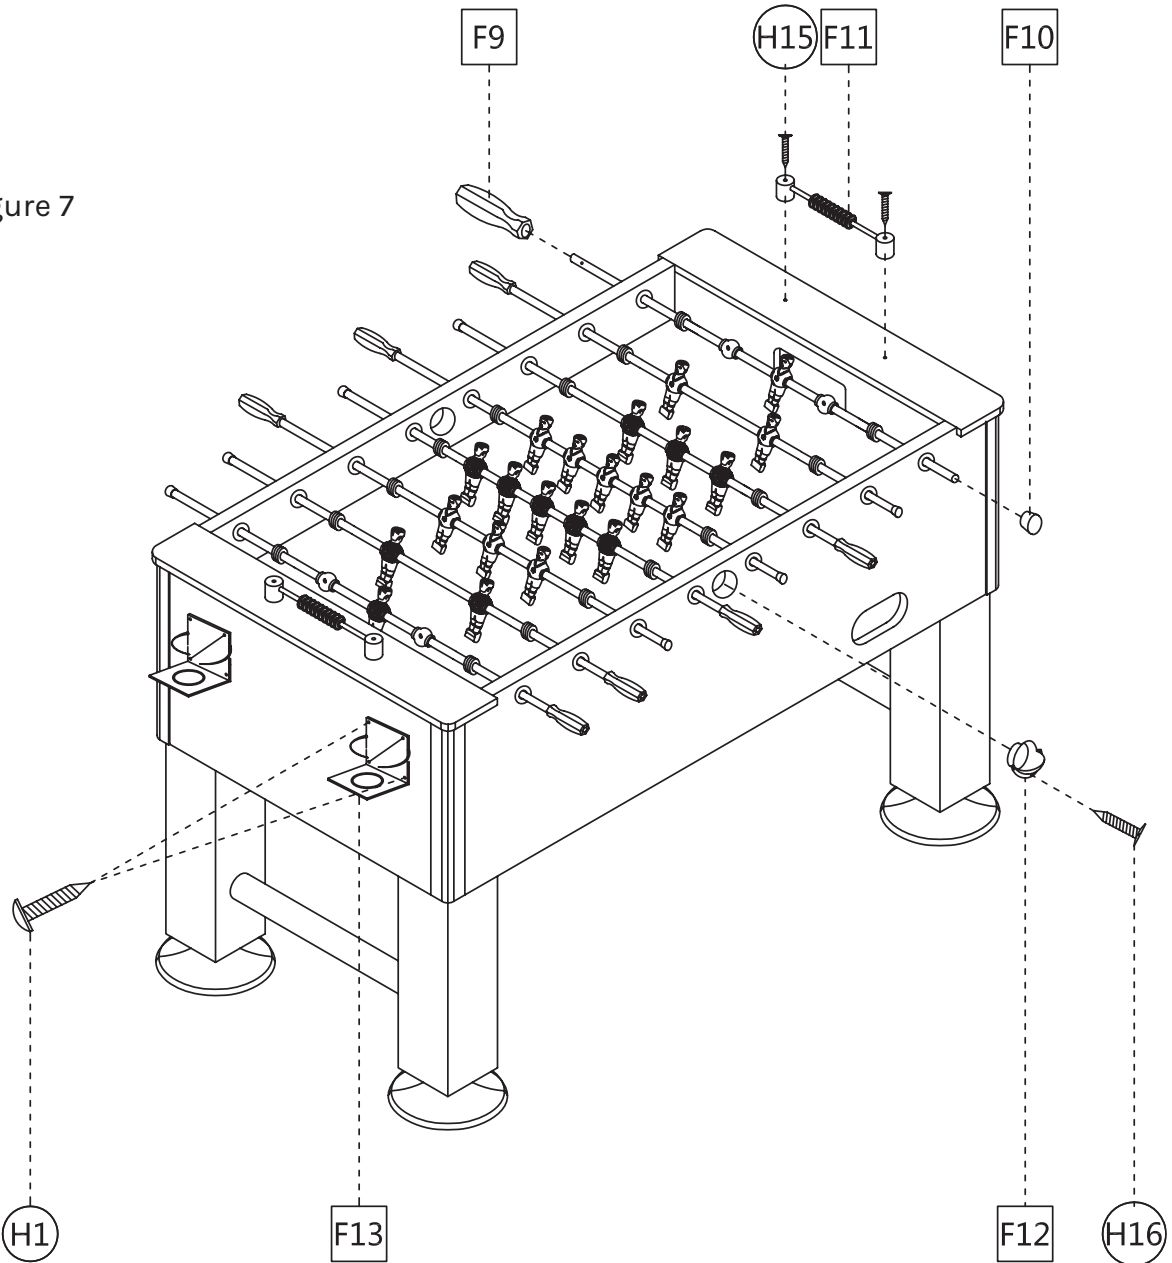

STEP 6

1. Place the rod handles (F9) and the rod end cap (F10) onto the rods as pictured.
2. Secure the drink holders (F13) using 16x screws T3.5x1/2" (H1).
3. Secure the 2x slide scorer (F11) using 4x F3.5x1-1/2" (H15).
4. Secure the 2x ball entry cup (F12) using 2x screws F3.5x5/8" (H16).

IV. MAINTENANCE

Proper care extends the life of your foosball table:

- **Cleaning Surface:** Wipe the playfield regularly with a soft, dry or slightly damp cloth. Avoid harsh chemicals.
- **Lubrication:** Apply a light silicone lubricant to the rods as needed to ensure smooth operation.
- **Rod Care:** Wipe down rods and handles to remove sweat and dust after play.
- **Hardware Check:** Periodically check and re-tighten bolts, screws, and leg levellers.
- **Player Figures:** Inspect for cracks or looseness. Replace or tighten as required.
- **Ball Condition:** Replace damaged or chipped balls to maintain smooth play.

V. STORAGE

If the table will not be used for an extended period:

- **Indoor Storage:** Store indoors in a cool, dry location away from direct sunlight or moisture.
- **Covering:** Use a dust cover to protect the playfield and rods from dirt and scratches.
- **Transportation:** Always transport upright and with assistance. Avoid dragging the table to prevent damage to the legs or playfield.

VI. TROUBLESHOOTING

Problem	Solution
Loose Rods	Tighten rod bearings or handles.
Stiff Rods	Clean and lubricate rods as per maintenance instructions.
Wobbly Table	Adjust leg levellers or retighten bolts.
Uneven Play	Ensure the table is placed on a flat, level surface.

VII. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au.

Please visit our website to view our full warranty terms and conditions:
<http://www.lifespanfitness.com.au/warranty-repairs>

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed.

If you have purchased this product from the Official Lifespan Fitness website, please visit <https://lifespanfitness.com.au/warranty-form>

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit <https://lifespanfitness.com.au/warranty-form> and fill in our Repair/Service Request Form or Parts Purchase Form.

Scan this QR code with your device to go to lifespanfitness.com.au/warranty-form



ACTIVEGO

WWW.ACTIVEGO.COM.AU