




EXER-65 Upright Exercise Bike

USER MANUAL

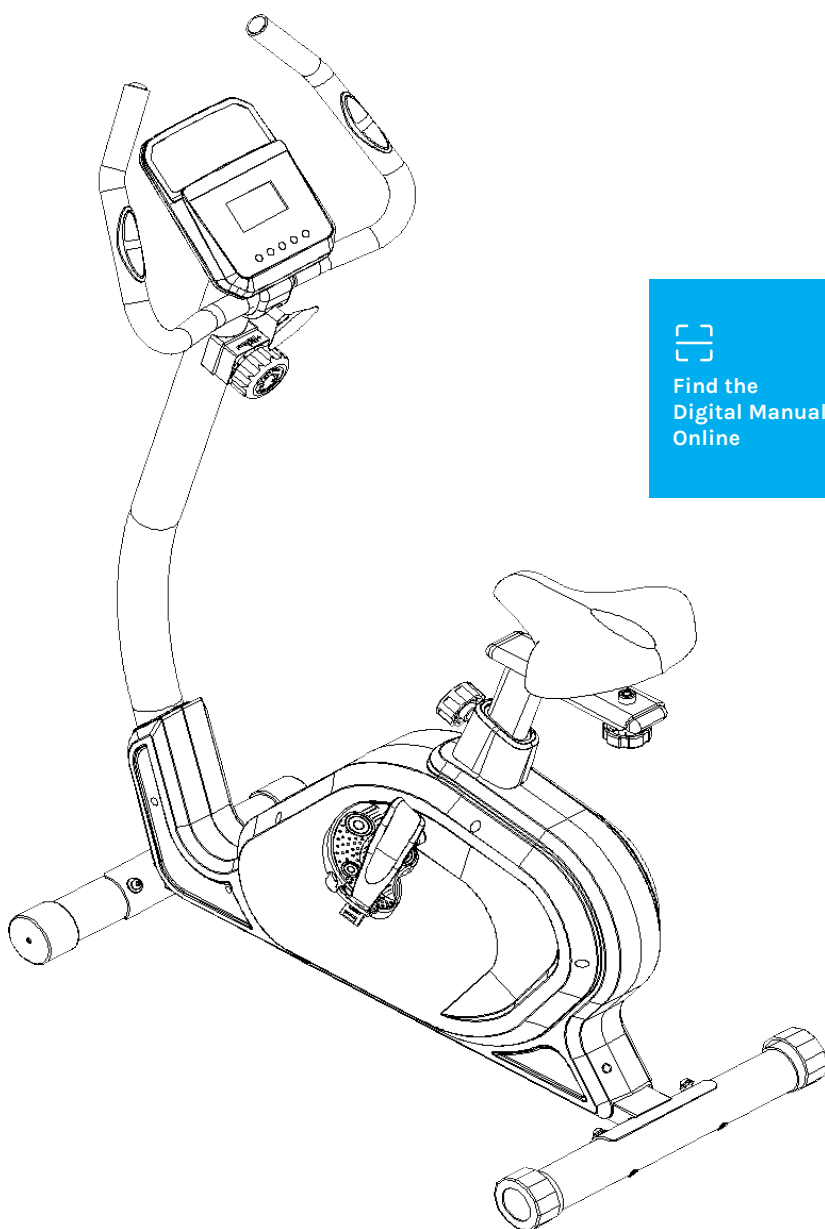

Find the
Digital Manual
Online



Product may vary slightly from the item pictured due to model upgrades.

**Read all instructions carefully before using this product.
Retain this owner's manual for future reference.**

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespanfitness.com.au



TABLE OF CONTENTS

- I. Important Safety Instructions 03
- II. Care Instructions 04
- III. Exploded Diagram 05
- IV. Parts List 07
- V. Assembly Instructions 09
- VI. Adjustments Guide 14
- VII. Operation Guide 15
- VIII. Exercise Guide 20
- IX. Warranty 21
- X. Security Support Information 22

I. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all instructions before using this machine.

It is important your machine receives regular maintenance to prolong its useful life. Failing to regularly maintain your machine may void your warranty.

Please always keep this manual with you.

- It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. **PLEASE NOTE:** It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.
- Before starting any exercise program, you should consult your doctor to determine if you have any medical or physical conditions that could put your health and safety at risk, or prevent you from using the equipment properly. Your doctor's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
- Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, and extreme shortness of breath, lightheadedness, dizziness, or feelings of nausea. If you do experience any of these symptoms, you should consult your doctor before continuing with your exercise program.
- Keep children and pets away from the equipment. This equipment is designed for adult use only.
- Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 2 meters of free space around it.
- Before using the equipment, check that the nuts and bolts are securely tightened. If you hear any unusual noises coming from the equipment during use and assembly, stop immediately. Do not use the equipment until the problem has been rectified.
- Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may get caught in the equipment or that may restrict or prevent movement.
- This equipment is designed for indoor and family use only.
- Care must be taken when lifting or moving the equipment so as not to injure your back.

- Always keep this instruction manual and assembly tools at hand for reference.
- The equipment is not suitable for therapeutic use.
- The pulse or heart rate sensors are not medical devices. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensors are intended only as exercise aids in determining heart rate trends in general.


II. CARE INSTRUCTIONS

IMPORTANT


- All nuts and bolts are to be checked and tightened on a regular basis. This includes pedals and other moving parts. **Failure to do so may cause damage to your threads and void your warranty.**
 - Lubricate moving joints after periods of usage.
 - Be careful not to damage plastic or metal parts of the machine with heavy or sharp objects.
 - The machine can be kept clean by wiping it down using dry cloth.
-


BATTERY USAGE

- Batteries are to be installed or replaced by adult only.
- Do not use rechargeable batteries. Do not mix different battery types. Do not mix old and new batteries. Do not mix alkaline, standard (Carbon Zinc), or rechargeable (Nickel-Cadmium) batteries.
- Remove batteries when product is not in use.
- Remove exhausted batteries from product and dispose of in accordance with the manufacturer's recommendation.
- Do not attempt to recharge non-rechargeable batteries.
- Batteries are to be inserted with correct polarity.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire, batteries may explode or leak.

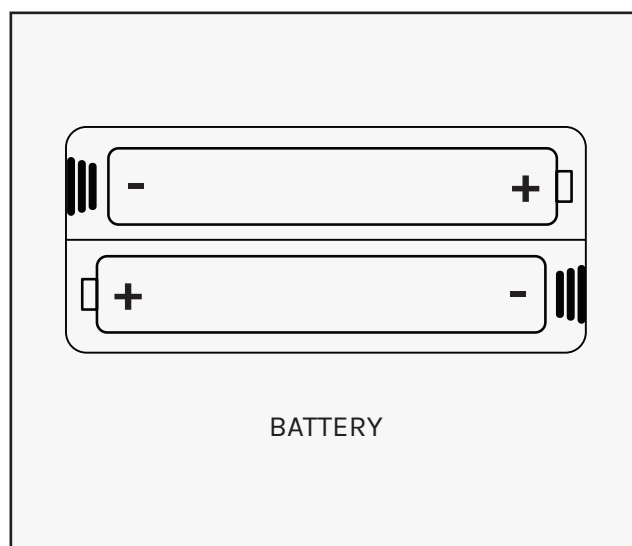

III. EXPLODED DIAGRAM

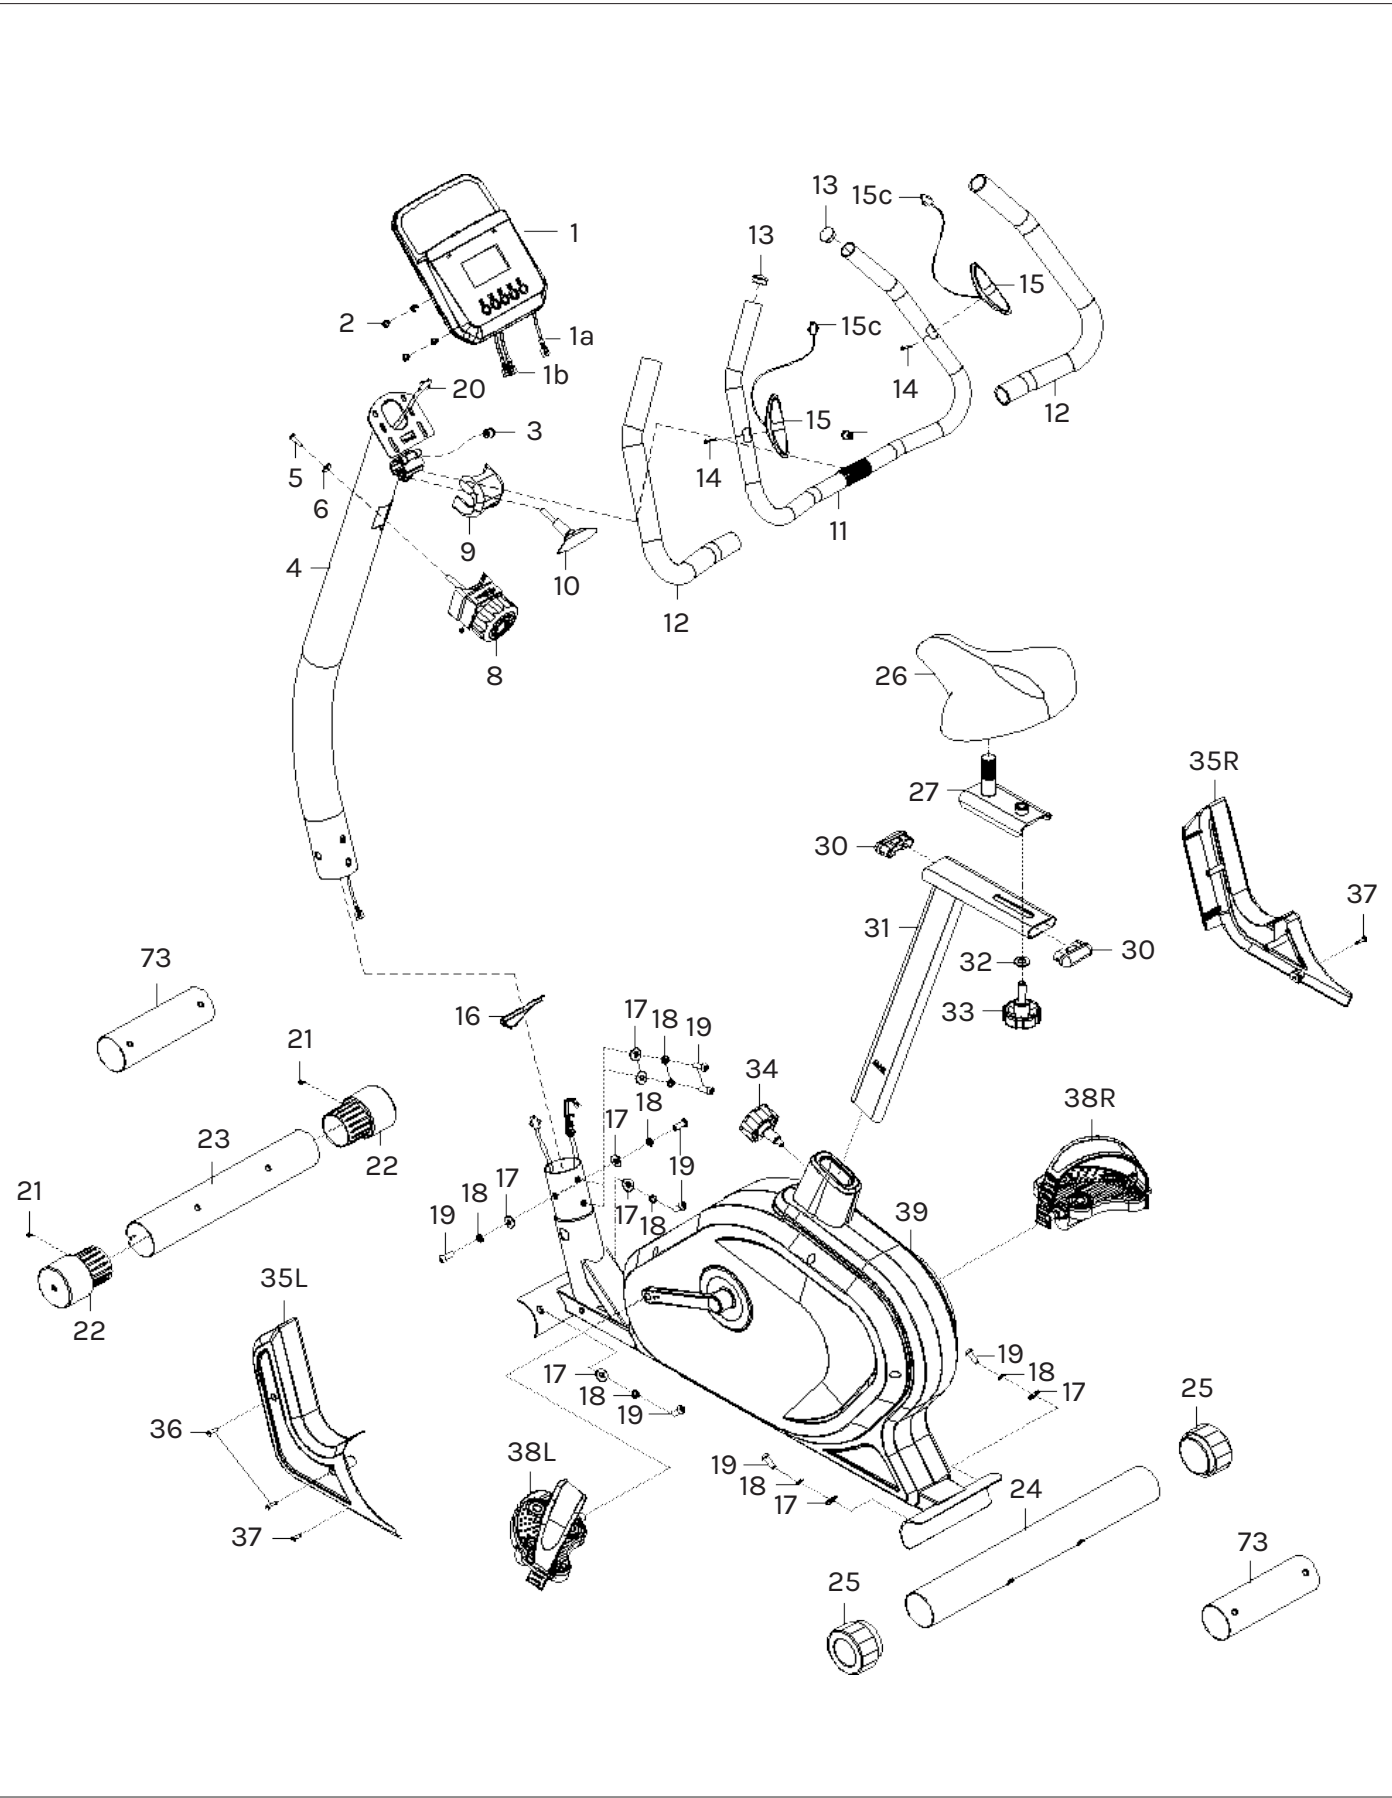

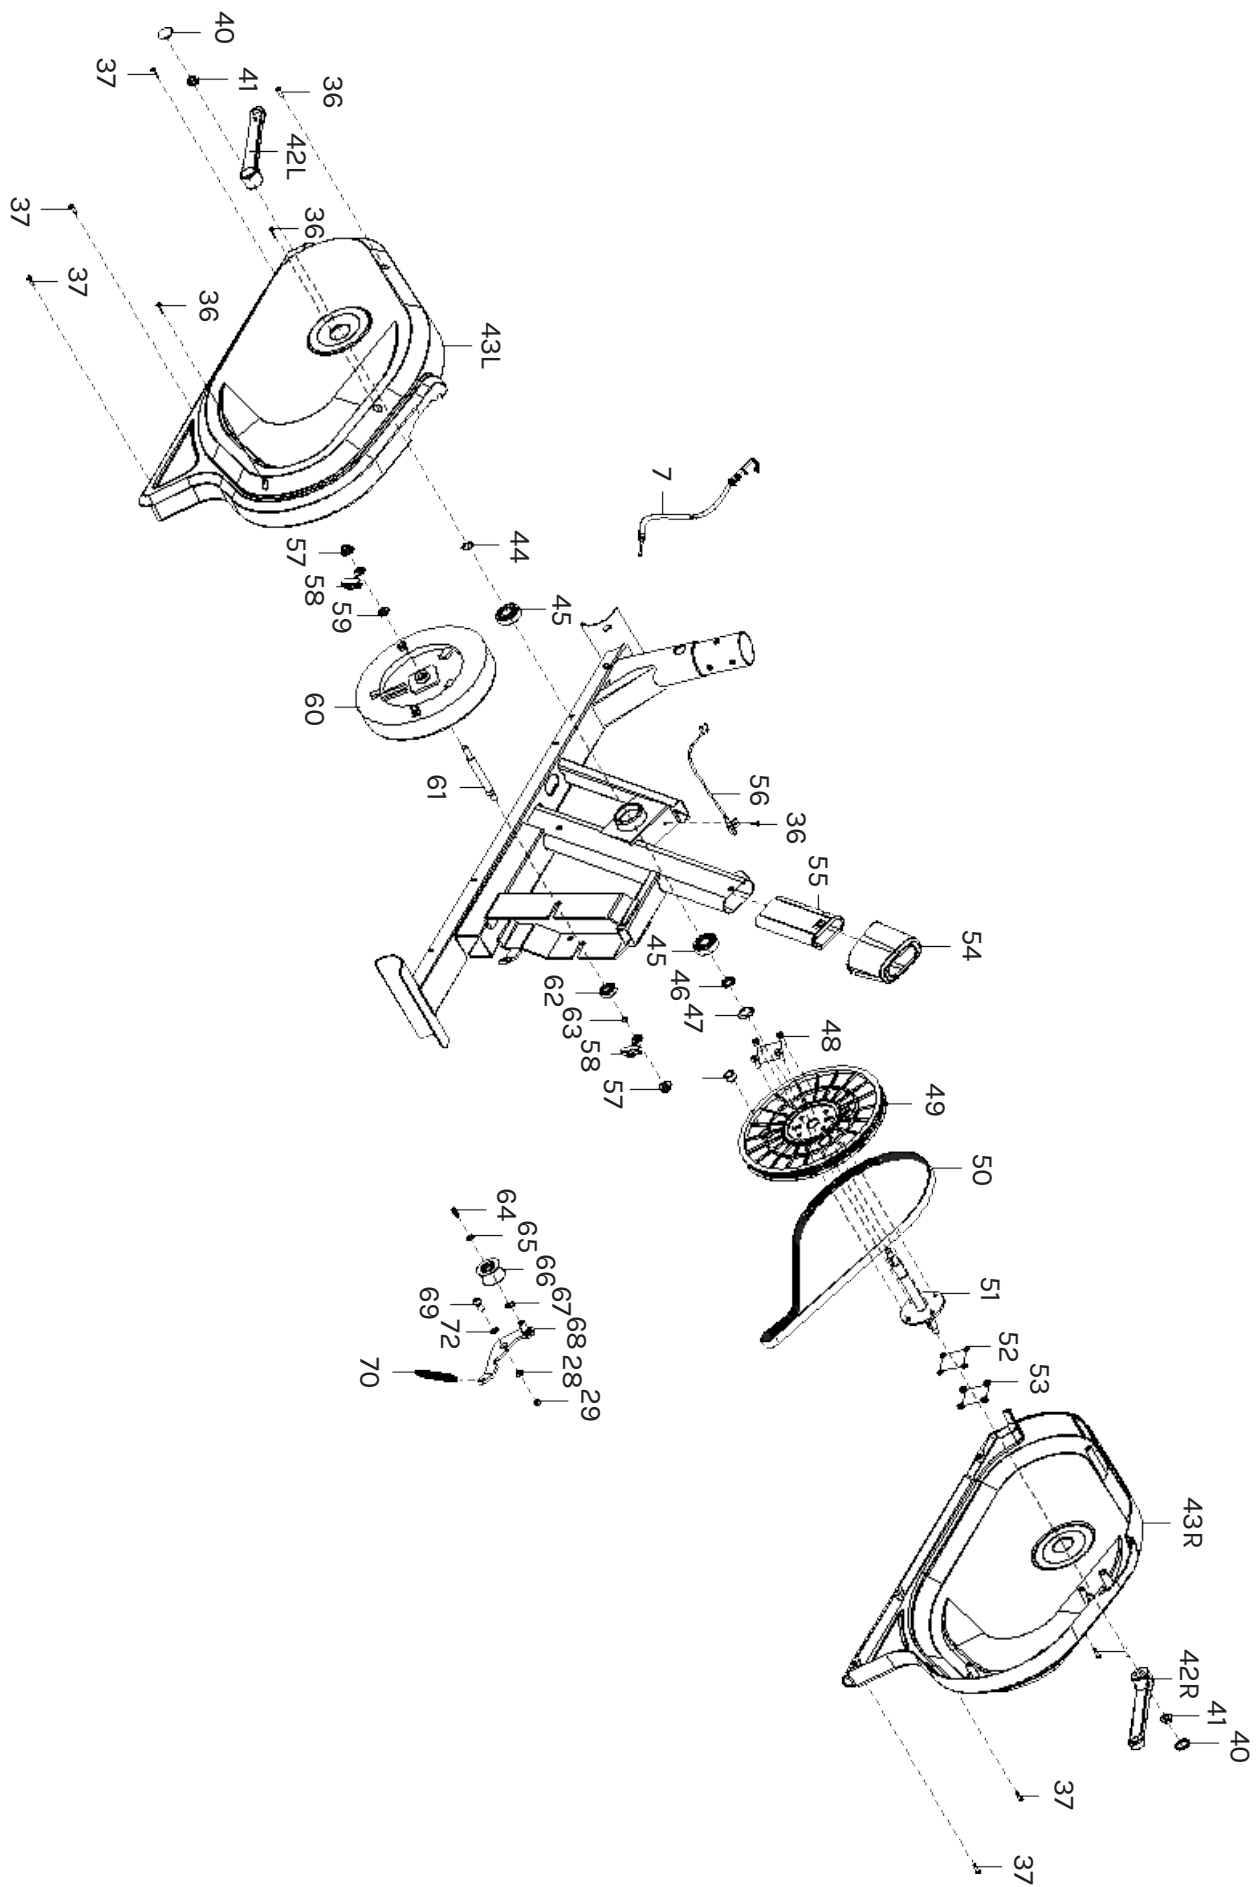

IV. PARTS LIST

NOTE: Some parts are pre-fitted to the machine.

Part No.	Description	Qty	Part No.	Description	Qty
1	Computer	1	28	Washer d8*Φ20*2	1
2	Bolt M5*10*φ10	1	29	Nylon Nut M8*H7.5*S13	1
3	Hole Plug	2	30	End Cap	2
4	Handlebar Post	1	31	Seat Tube	1
5	Bolt M5*55	1	32	Washer d12*Φ24*2	1
6	Arc washer d5*Φ16*1.5*R30	1	33	Nut Knob M12	1
7	Tension Wire	1	34	Knob M16*1.5*22*φ56	1
8	Tension Knob	1	35L/R	Handlebar Post Cover	2
9	Cover	1	36	Screw ST4.2*16*Φ8	6
10	Knob	1	37	Screw ST4.2*16*Φ8	8
11	Middle Handlebar	1	38 L/R	Pedal	2
12	Foam Grip	2	39	Main Frame	1
13	Round Cap Φ25	2	40	Crank Cover	2
14	Screw ST4.0*19*Φ11	2	41	Nut M10*1.25*H7.5*S14	2
15	Handle Pulse Cover	2	42 L/R	Crank	2
16	Shrouding	1	43 L/R	Chain Cover	2
17	Arc washer d8*Φ20*2.0*R30	8	44	Washer D17*1.0	1
18	Spring Washer d8	8	45	Bearing 6203	2
19	Bolt M8*20*S5	8	46	Spacer φ22*φ18*4	1
20	Trunk Wire 1	1	47	Wave Washer d17*Φ22*0.3	1
21	Screw ST3*10*Φ5.6	2	48	Bolt M6*15*S5	4
22	End Cap	2	49	Belt Plate	1
23	Front Stabilizer	1	50	Belt	1
24	Rear Stabilizer	1	51	Shaft	1
25	End XCap	2	52	Spring Washer d6	4
26	Seat	1	53	Nylon Nut M6*H6*S10	4
27	Seat Holder	1	54	Seat Cover	1

Part No.	Description	Qty	Part No.	Description	Qty
55	Bushing	1	66	Idler	1
56	Sensor	1	67	Wave Washer d12*Φ15.5*0.3	1
57	Nut M10*1*H8*S15	2	68	Idler Rod	1
58	Chain Bolt	2	69	Bolt M8*12*Φ10*5.5*S5	1
59	Nut M10*1*H5*S17	1	70	Tension Spring	1
60	Flywheel	1	71	Magnet	1
61	Axle	1	72	Washer d12*Φ17*0.5	1
62	Bearing 6001	1	73	Packing Tube	2
63	Washer D12*1.0	1	A	Spanner S5	1
64	Bolt M6*10*S10	1	B	Wrench S13-14-15	1
65	Washer d6*Φ13*1.5	1			

HARDWARE:











#32 d12*Φ24*21pc

#36 ST4.2*16*Φ82pcs

#37 ST4.2*16*Φ82pcs

#10 M81pc

#33 M121pc

#34 M161pc


#91pc

#38L/R1pc

#A S51pc

#B S13-14-151pc

V. ASSEMBLY INSTRUCTIONS

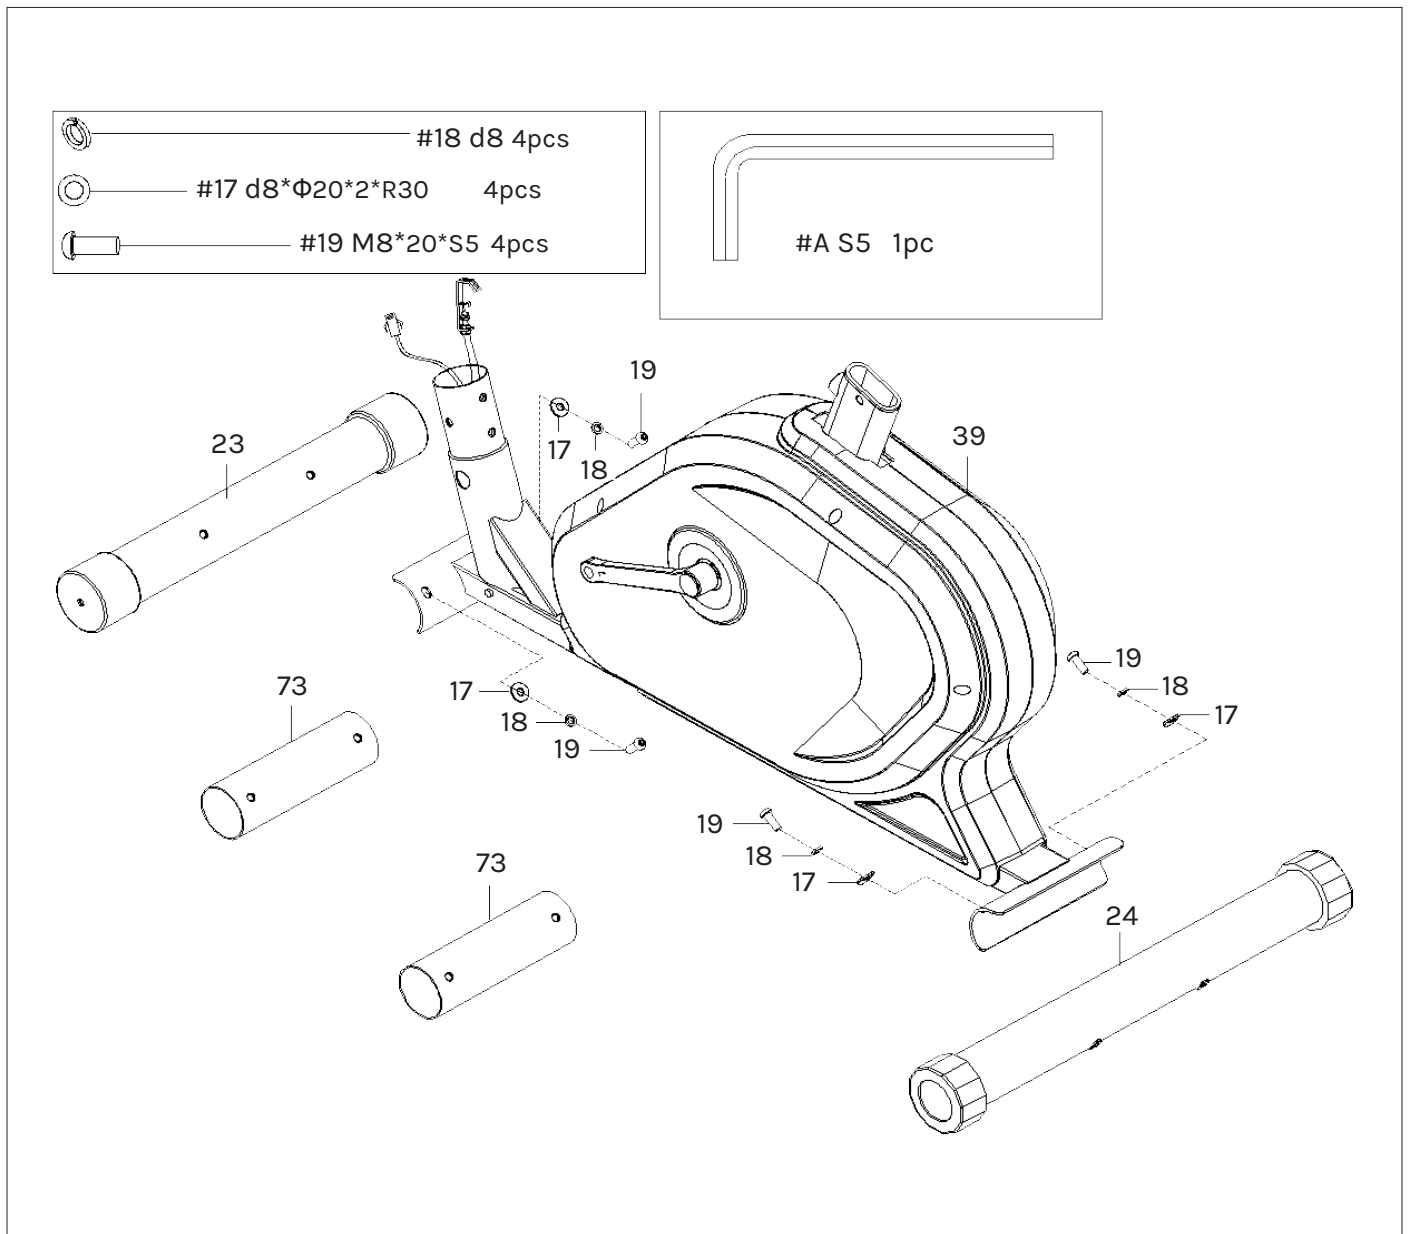

STEP 1 - Install the Front and Rear Stabilisers


NOTE: The packing tubes (73) are used for transport only and can be disposed of once removed.

1. Using Allen Key (A), remove the pre-installed bolts (19), spring washers (18) and arc washers (17) from the main frame (39).
2. Remove the packing tubes (73) from the main frame.
3. Position the front stabiliser (23) and rear stabiliser (24) against the mounting points on the main frame (39).
4. Secure both stabilisers using the bolts (19), spring washers (18) and arc washers (17) removed earlier.
5. Tighten all bolts securely using Allen Key (A).

! CAUTION: Support the main frame while removing the packing tubes to prevent the bike from tipping. Ensure both stabilisers are correctly positioned and firmly secured before continuing.




TENSION CABLE
INSTALLATION

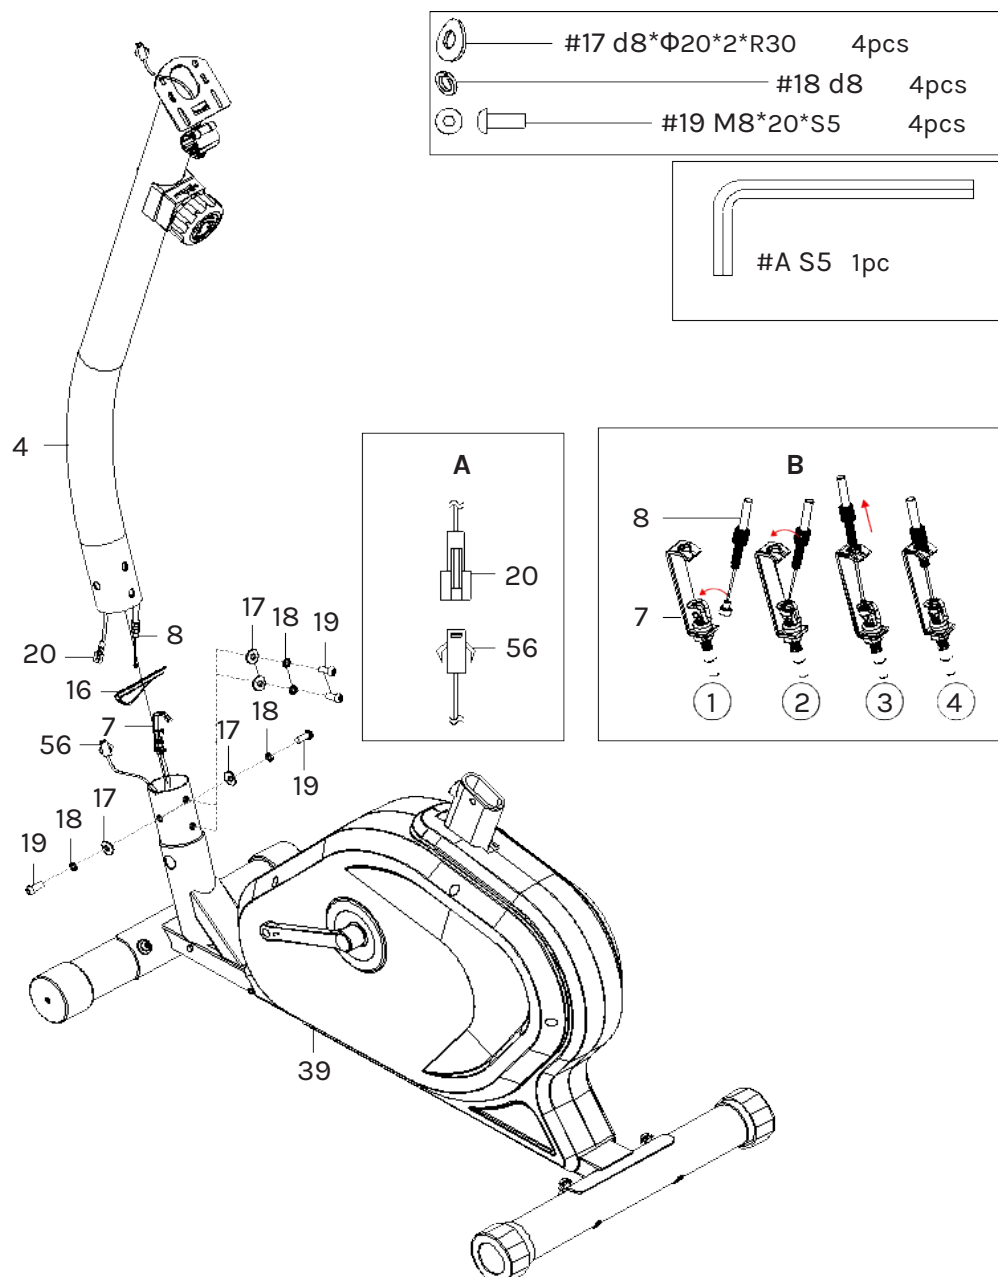

STEP 2 - Install the Handlebar Post

1. Slide the ring/cover (16) onto the handlebar post (4).
2. Connect the trunk wire (20) to the sensor wire (56) as shown in Diagram A.
3. Connect the cable from the tension knob (8) to the tension wire (7) by following the sequence shown in Diagram B. Make sure the cable is correctly hooked and seated before proceeding.
4. Using Allen Key (A), remove the pre-installed bolts (19), spring washers (18) and arc washers (17) from the main frame (39).
5. Carefully insert the handlebar post (4) into the main frame (39).
6. Align the mounting holes and secure the handlebar post using the bolts (19), spring washers (18) and arc washers (17).
7. Tighten all bolts securely using Allen Key (A).

! CAUTION: Do not pull, twist or pinch the wires or tension cable while inserting the handlebar post. Check that all connections are secure before fastening the post.

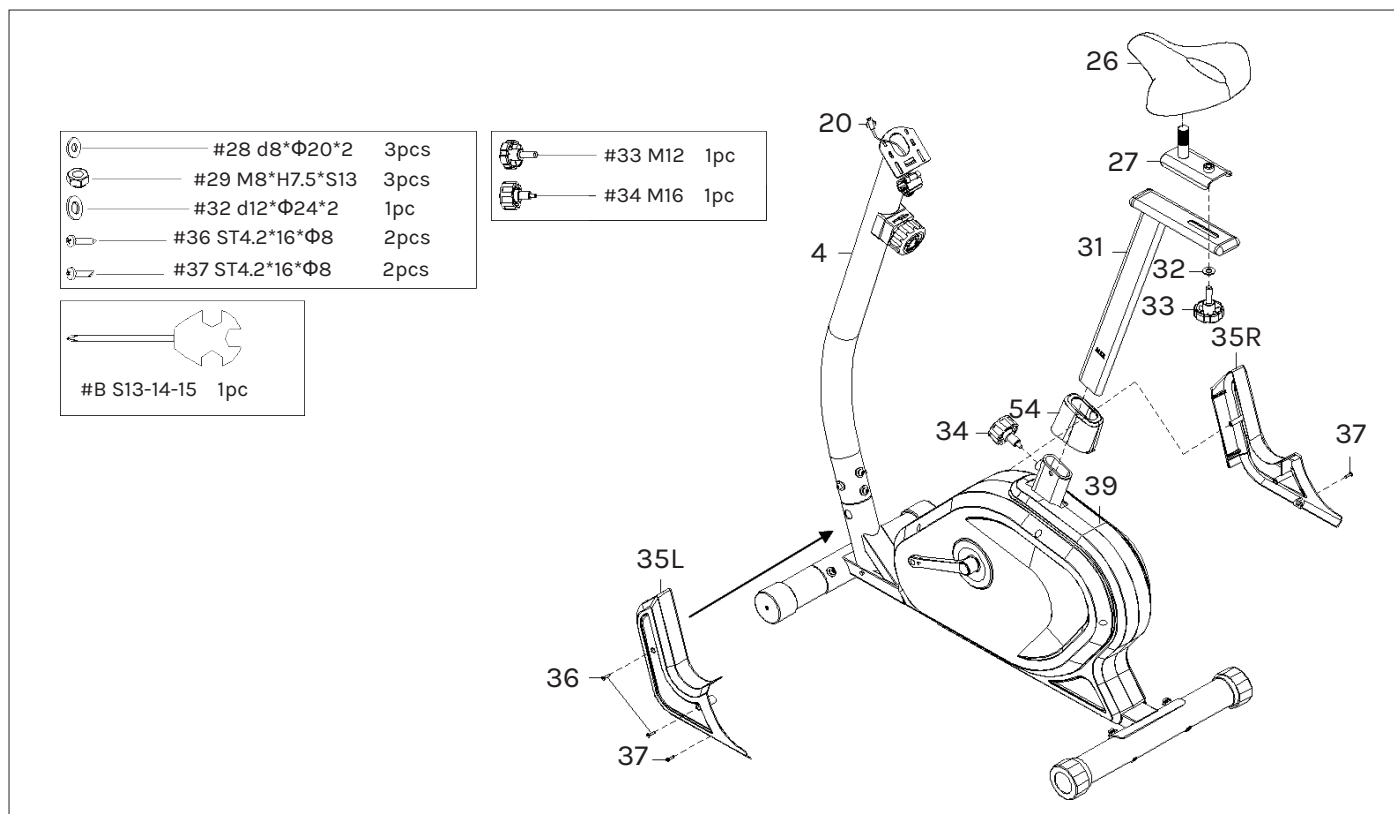

STEP 3 - Install the Covers and Seat

A. Install the Side Covers

1. Position the left and right covers (35L/35R) onto the main frame (39).
2. Ensure the edges of each cover are correctly inserted into the corresponding grooves in the main shroud.
3. Secure the covers using screws (36) and (37) with Tool (B).

! **CAUTION:** Check that the covers are correctly aligned before tightening the screws. Do not overtighten, as this may damage the plastic covers.

B. Install the Seat Tube


1. Place the seat post cover (54) over the seat post opening on the main frame (39).
2. Insert the seat tube (31) into the main frame.
3. Select the required seat height and align an adjustment hole in the seat tube with the locking knob.
4. Install and tighten the seat adjustment knob (34) clockwise to secure the seat tube.

! **WARNING:** Never adjust the seat tube above its marked minimum insertion/MAX height line. Ensure the adjustment knob is fully engaged in an adjustment hole before using the bike.

C. Install the Seat

1. Secure the seat (26) to the seat holder (27) using the supplied washers (28) and nuts (29). Tighten evenly using Tool (B).
2. Position the seat holder (27) on the top of the seat tube (31).
3. Install the washer (32) and adjustment knob (33) as shown.
4. Adjust the seat to the desired position, then tighten knob (33) securely.

! **CAUTION:** Before use, check that the seat and seat tube are firmly secured and do not move when pressure is applied.

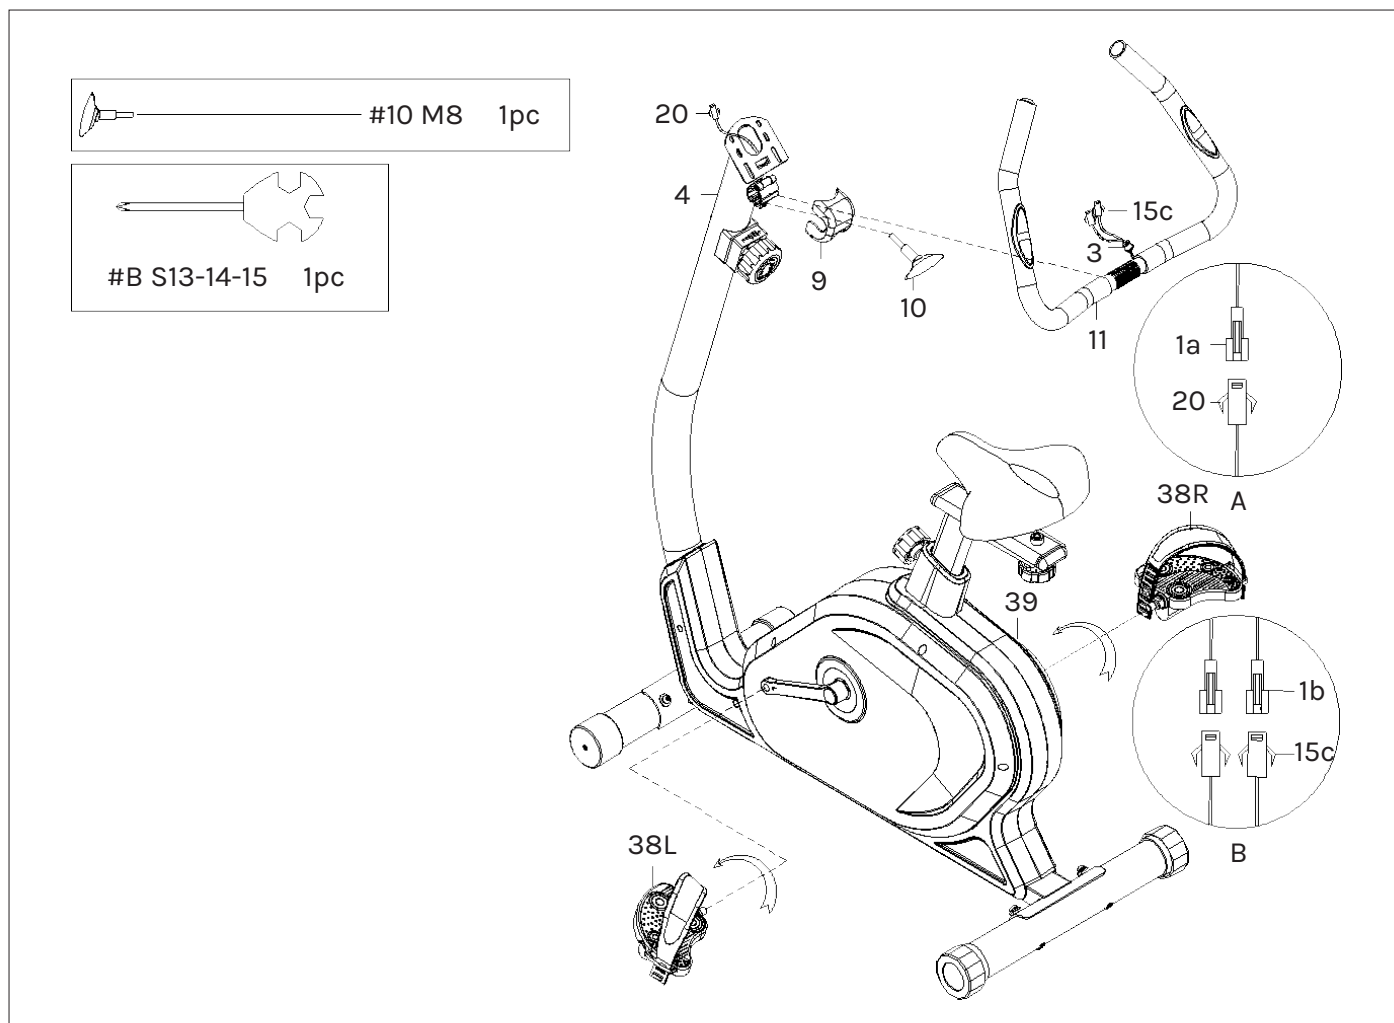

STEP 4 - Install the Handlebar and Pedals

A. Install the Handlebar

1. Position the handlebar (11) in the mounting bracket on the handlebar post (4).
2. Fit the handlebar cover (9) into position.
3. Insert the handlebar adjustment knob (10) and tighten securely to lock the handlebar in position.

B. Route the Pulse Wire


1. Carefully pass the hand pulse wire (15C) through the opening in the handlebar post (4) as shown.
2. Fit the hole plug (3) into the opening once the wire has been routed.

! CAUTION: Take care not to pinch, cut or damage the pulse wire during installation.

C. Install the Pedals

1. Identify the pedals marked **L (Left)** and **R (Right)**.
2. Attach the right pedal (38R) to the right crank. Tighten clockwise using Tool (B).
3. Attach the left pedal (38L) to the left crank. The left pedal has a reverse thread and must be tightened counterclockwise using Tool (B).
4. Ensure both pedals are fully threaded and securely tightened.

! WARNING: Installing a pedal on the wrong side or threading it in the wrong direction can damage the crank threads. Start each pedal by hand to prevent cross-threading before tightening with the tool.

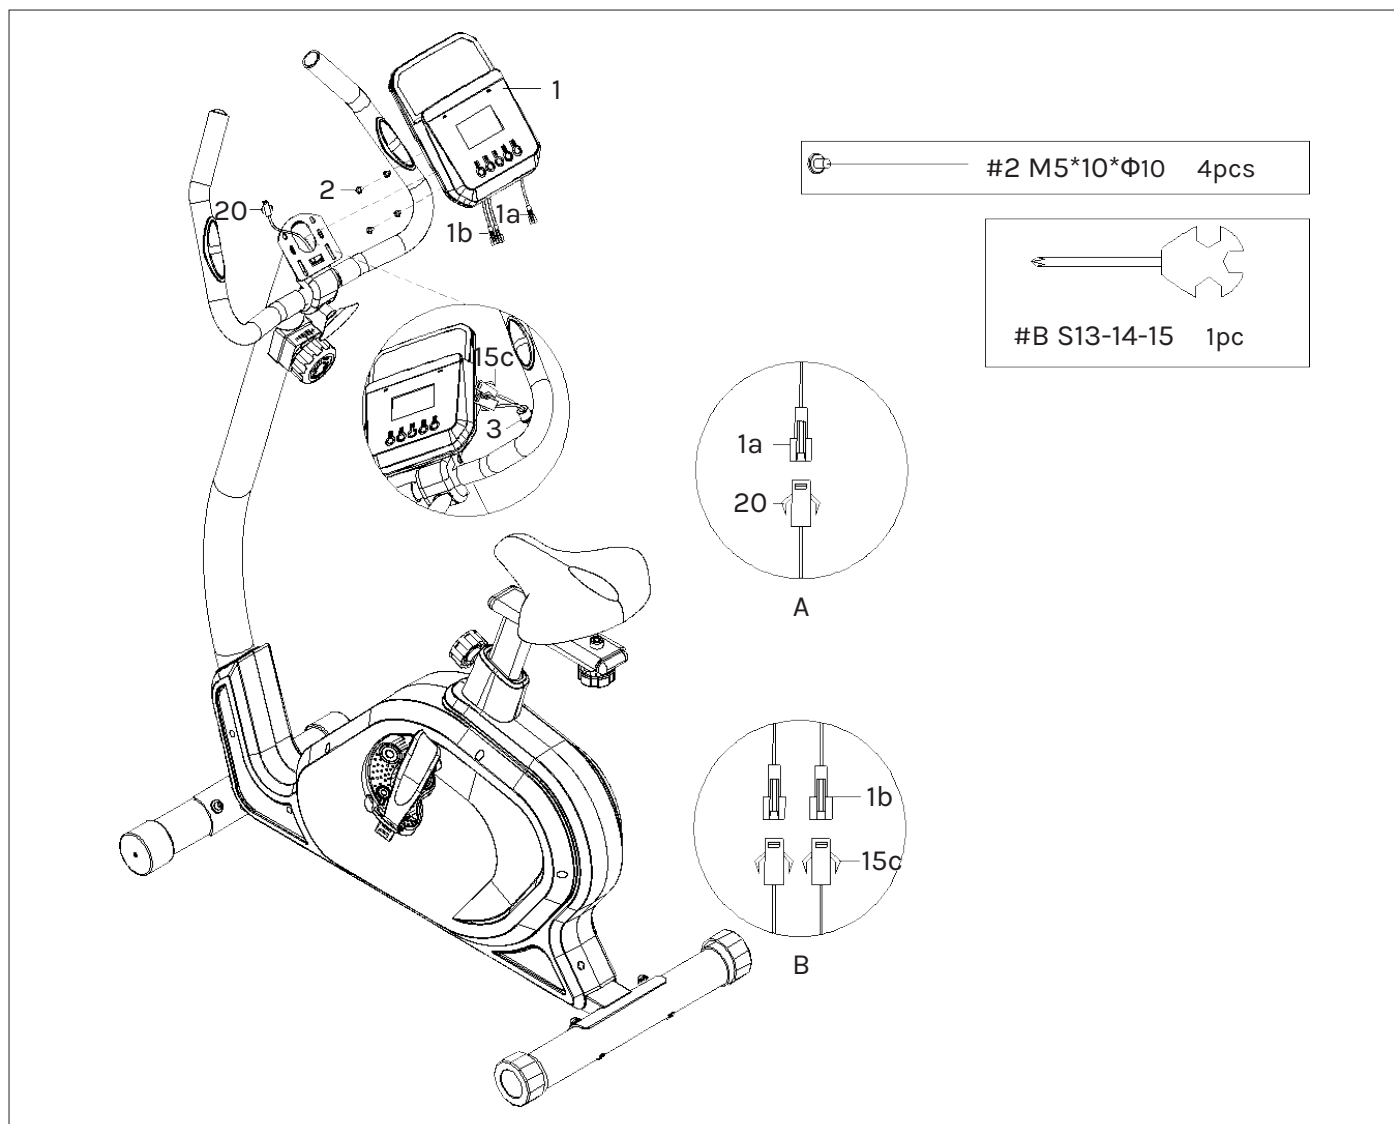

STEP 5 - Install the Computer

A. Install the Handlebar

1. Remove the pre-installed bolts (2) from the rear of the computer (1).
2. Connect the computer wire (1A) to the trunk wire (20).
3. Connect the computer pulse wire (1B) to the hand pulse wire (15C).
4. Carefully position the computer (1) onto the mounting bracket on the handlebar post (4).
5. Secure the computer using the bolts (2) removed earlier and tighten with Tool (B).

! CAUTION: Ensure all plugs are fully connected and take care not to pinch the wires between the computer and mounting bracket. Do not overtighten the bolts into the computer housing.

Assembly Complete

Before using:

- Check that all bolts, nuts, knobs and pedals are securely tightened.
- Confirm that the seat and handlebar adjustment mechanisms are fully locked.
- Ensure the bike is positioned on a stable, level surface.
- Check that the pedals rotate freely and that no wires or covers interfere with moving components.

! WARNING: Do not use the exercise bike if any component is loose, incorrectly installed or damaged. Recheck all fasteners periodically as part of normal maintenance.



VI. ADJUSTMENTS GUIDE

1. MOVING THE MACHINE

1. To move the bike, stand behind it and hold the handlebar (11) firmly. Carefully tilt the bike forward until the transport wheels (22) on the front stabiliser contact the floor.
2. Once the wheels are on the ground, carefully roll the bike to the desired location. Slowly lower the bike back onto the floor when in position.

! CAUTION:

- Do not attempt to move the bike while anyone is seated on it.
- Take care when tilting or lowering the bike to avoid injury or damage.
- Use additional assistance if you are unable to safely move the bike on your own.

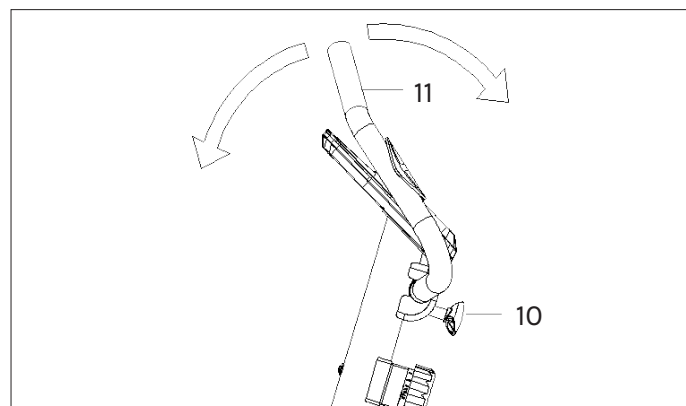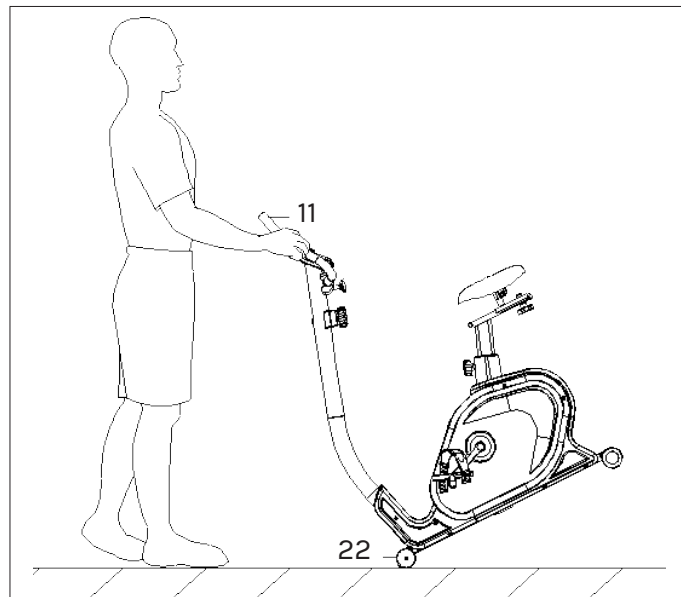

2. ADJUSTING THE HANDLEBAR

1. Loosen the handlebar adjustment knob (10).
2. Rotate the handlebar (11) forward or backward to your preferred position.
3. Tighten the adjustment knob (10) securely to lock the handlebar in place.

! **WARNING:** Always ensure the handlebar adjustment knob is fully tightened before using the bike. Do not adjust the handlebar while exercising.

3. ADJUSTING THE SADDLE

Seat Height


1. Loosen the seat adjustment knob (34) by turning it counterclockwise.
2. Adjust the seat tube (31) up or down until the desired height is reached.
3. Align one of the adjustment holes in the seat tube with the locking pin.
4. Tighten the adjustment knob (34) clockwise until the seat tube is securely locked in position.

! **WARNING:** Do not raise the seat tube beyond the marked minimum insertion/MAX height line. Ensure the adjustment knob is fully engaged in an adjustment hole before using the bike.

Horizontal Seat Position

1. Loosen the seat adjustment knob (33) by turning it counterclockwise.
2. Slide the seat holder (27) forward or backward to your preferred position.
3. Tighten the adjustment knob (33) clockwise to securely lock the seat in place.

! **CAUTION:** Check that the seat is firmly secured and does not move before exercising. Do not make seat adjustments while sitting on or using the bike.

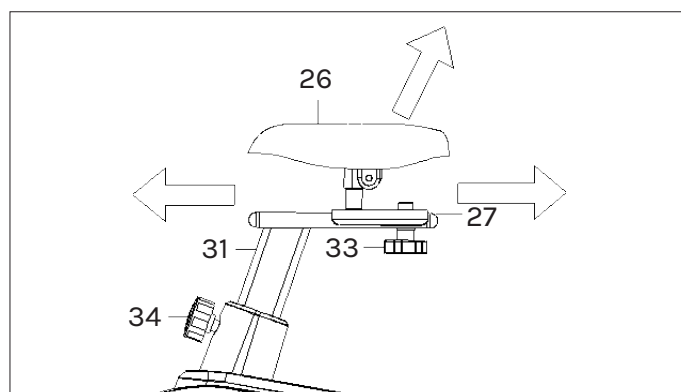

VII. OPERATION GUIDE

BUTTON FUNCTIONS

1. MODE

- Press MODE to switch between display functions or select a value for adjustment.
- During exercise, press MODE to cycle between SPEED, RPM and ODO, or select the automatic scan function where available.

2. RECOVERY / UP

- During setup, press RECOVERY / UP to increase the selected value for TIME, DISTANCE, CALORIES or other adjustable settings.
- Press and hold to increase values more quickly.
- When not exercising or adjusting settings, press RECOVERY / UP to enter or exit the Pulse Recovery function.

3. DOWN

- During setup, press DOWN to decrease the selected value for TIME, DISTANCE, CALORIES or other adjustable settings.
- Press and hold to decrease values more quickly.

4. RESET / GO

- During setup, press RESET / GO to clear the selected TIME, DISTANCE or CALORIES value.
- In Body Fat mode, press RESET / GO after entering your personal information to begin the Body Fat test.
- From the normal display, press and hold RESET / GO for approximately 3 seconds to reset the exercise values.

5. BODY FAT

- When the bike is not being used, press BODY FAT to enter or exit the Body Fat, BMI and BMR function.

DISPLAY FUNCTIONS

1. SPEED / BODY FAT % / RPM

SPEED: Displays your current exercise speed.

- Metric range: 0.0–99.9 km/h
- Imperial range: 0.0–99.9 mph.

RPM: Displays your current pedalling cadence in revolutions per minute (RPM).

BODY FAT %: Displays the calculated body fat percentage when using the Body Fat function.

2. TIME / BMI

TIME: Displays the elapsed exercise time.

- Range: 00:00–99:59

A target exercise time can also be preset. When the preset target is reached, the console will sound an alarm for approximately 10 seconds.

- Maximum preset time: 99 minutes

BMI: Displays the calculated Body Mass Index (BMI) when using the Body Fat function.

3. DISTANCE / BMR / ODO

DISTANCE: Displays the distance travelled during the current workout.

- Metric range: up to 99.9 km
- Imperial range: up to 99.9 miles

A target distance can be preset. When the target distance is reached, the console will sound an alarm for approximately 10 seconds.

BMR: Displays the calculated Basal Metabolic Rate (BMR) when using the Body Fat function.

ODO: Displays the bike's accumulated total distance.

- Range: 0-9999 km or equivalent imperial measurement where applicable.

4. CALORIES / TEMPERATURE

CALORIES: Displays the estimated calories burned during the current workout.

- Range: 0-999 kcal

A target distance can be preset. When the target distance is reached, the console will sound an alarm for approximately 10 seconds.

TEMPERATURE: Displays the approximate room temperature in °C or °F, depending on the selected setting.

NOTE: Calorie values are estimates only and should be used as a general guide.

5. PULSE

Hold both hand pulse sensors to display your estimated heart rate.

- Display range: 40-240 BPM

Keep both hands in contact with the sensors and remain as still as possible for the most consistent reading. If no pulse signal is detected for approximately 60 seconds, "P" may appear on the display. Press UP or DOWN, then hold the pulse sensors again to restart the reading.

 **WARNING:** The pulse sensor is intended as an exercise reference only and is not a medical device. Readings may vary and should not be used for medical diagnosis or treatment.

6. BUTTON ALARM

The console will sound a short **beep** when the **MODE, RECOVERY / UP, DOWN, RESET / GO** or **BODY FAT** buttons are pressed.

7. AUTO ON / OFF

Automatic Start

The console will automatically turn on when:

- Pedalling begins; or
- A console button is pressed.

Automatic Sleep

If no exercise or button activity is detected for approximately 8 minutes, the console will automatically enter sleep mode.

Exercise data may be cleared when the console enters sleep mode. Stored Body Fat settings and temperature information may remain available.

OPERATION

1. SETTING WORKOUT TARGETS

Targets can be set for **TIME**, **DISTANCE** and **CALORIES**.

1. Press MODE until the value you want to set begins flashing.
2. Press RECOVERY / UP to increase the value.
3. Press DOWN to decrease the value.
4. Press and hold UP or DOWN to adjust the value more quickly.
5. Press RESET / GO while the selected value is flashing to clear it.

Begin exercising after setting your desired target. The console will alert you when the preset value is reached.

2. PULSE RECOVERY

The Pulse Recovery function provides an indication of how quickly your heart rate decreases after exercise.

1. Finish exercising and remain stationary.
2. Hold both hand pulse sensors until a heart rate reading is displayed.
3. Press RECOVERY / UP.
4. Continue holding both pulse sensors during the 60-second countdown.
5. At the end of the countdown, the console will display a recovery rating from F1 to F6.

Recovery Rating

- F1 – Fastest recovery
- F2–F5 – Intermediate recovery levels
- F6 – Slowest recovery

A lower F-number indicates a faster heart rate recovery.

Press RECOVERY / UP again to exit the function.

NOTE: Pulse Recovery results are intended only as a general fitness reference. They are not a medical assessment.

BODY FAT, BMI & BMR

The console can calculate estimated Body Fat Percentage, BMI and BMR using the personal information entered. The Body Fat function can only be used while the bike is stationary.

Entering Your Personal Information

1. Press BODY FAT.
2. Enter the following information in sequence:
 - User Number: 1–8
 - Weight
 - Height
 - Age
 - Gender
3. Press MODE to confirm each setting and move to the next parameter.
4. Press RECOVERY / UP to increase a value.
5. Press DOWN to decrease a value.

Metric models display weight in kg and height in cm. When imperial units are selected, weight may be displayed in lb and height in inches.

Performing the Body Fat Test

- 1. After entering your personal information, place both hands firmly on the hand pulse sensors.
- 2. Press RESET / GO.
- 3. Continue holding the sensors while the measurement is taken.
- 4. Your calculated result will appear after approximately 6 seconds.
- 5. Press BODY FAT again to exit.

Error Messages

- If no button is pressed during parameter setup for approximately 10 seconds, the console may automatically exit Body Fat mode.
- If the console cannot obtain a valid measurement within approximately 10 seconds, "Er.1" may appear.

! **IMPORTANT:** Body Fat, BMI and BMR results provided by the console are estimates only. They should not be used for medical diagnosis, treatment or determining an appropriate health or weight-management program.

BODY FAT REFERENCE TABLE

Gender / Age	Underweight	Healthy	Slightly Overweight	Overweight	Obese
Male, 30 or under	Below 14%	14–20%	20.1–25%	25.1–35%	Above 35%
Male, over 30	Below 17%	17–23%	23.1–28%	28.1–38%	Above 38%
Female, 30 or under	Below 17%	17–24%	24.1–30%	30.1–40%	Above 40%
Female, over 30	Below 20%	20–27%	27.1–33%	33.1–43%	Above 43%

Note: This table and the console’s Body Fat readings provide general estimates only. Body composition can vary significantly between individuals.

BLUETOOTH & FITNESS APPS

The console supports Bluetooth connectivity and the FTMS Bluetooth protocol for use with compatible fitness applications. Compatible applications may include:

- Fitlink
- Zwift
- Kinomap
- Other compatible Bluetooth FTMS applications

Connecting to an App

- 1. Download and install a compatible fitness app on your smart device.
- 2. Turn on Bluetooth on your phone or tablet.
- 3. Enable any permissions required by the app, such as Bluetooth or location access.
- 4. Turn on the exercise bike console.
- 5. Open the fitness app and follow its instructions to search for and connect to the bike.
- 6. Select the EXER-65 when it appears in the app’s available device list.

When the console is connected to a compatible Bluetooth application, the console display may turn off while workout information is displayed through the app. When the Bluetooth connection is disconnected, the console display will automatically resume normal operation.

NOTE: Bluetooth connection procedures and available functions may vary between apps and smart devices. Users will still need to manually adjust the tension for the resistance.

BATTERY REPLACEMENT

If the display becomes dim, difficult to read or stops operating correctly:

1. Remove the battery compartment cover.
2. Remove the existing batteries.
3. Install new AAA / UM-4 / R03 batteries, ensuring the positive (+) and negative (-) terminals are correctly aligned.
4. Refit the battery compartment cover.



CAUTION:

- Replace all batteries at the same time.
- Do not mix old and new batteries or different battery types.
- Remove batteries if the console will not be used for an extended period.
- Dispose of used batteries in accordance with local regulations.

VIII. EXERCISE GUIDE

! PLEASE NOTE:

Before beginning any exercise program, consult your physician. This is important especially if you are over the age of 45 or individuals with pre-existing health problems.

The pulse sensors are not medical devices. Various factors, including the user’s movement, may affect the accuracy of heart rate readings. The pulse sensors are intended only as an exercise aid in determining heart rate trends in general.

Exercising is great way to control your weight, improving your fitness and reduce the effect of aging and stress. The key to success is to make exercise a regular and enjoyable part of your everyday life.


The condition of your heart and lungs and how efficient they are in delivering oxygen via your blood to your muscles is an important factor to your fitness. Your muscles use this oxygen to provide enough energy for daily activity. This is called aerobic activity. When you are fit, your heart will not have to work so hard. It will pump a lot fewer times per minute, reducing the wear and tear of your heart.

So as you can see, the fitter you are, the healthier and greater you will feel.

WARM UP


Start each workout with 5 to 10 minutes of stretching and some light exercises. A proper warm-up increases your body temperature, heart rate and circulation in preparation for exercise. Ease into your exercise.

After warming up, increase the intensity to your desired exercise program. Be sure to maintain your intensity for maximum performance. Breathe regularly and deeply as you exercise.

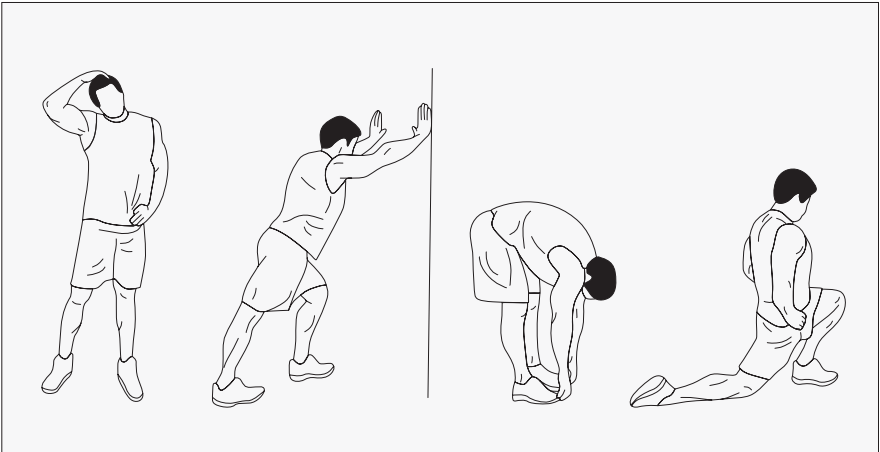

COOL DOWN

Finish each workout with a light jog or walk for at least 1 minute. Then complete 5 to 10 minutes of stretching to cool down. This will increase the flexibility of your muscles and will help prevent post-exercise problems.

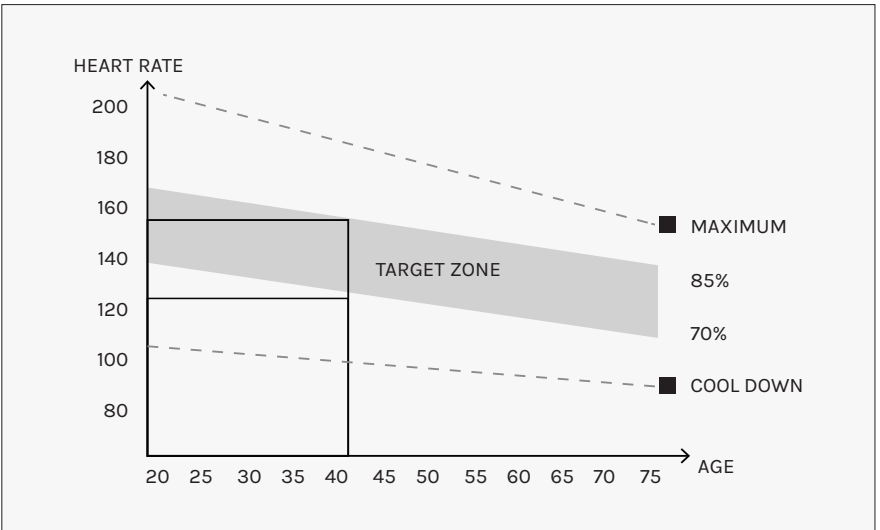

WORKOUT GUIDELINES

! This is how your pulse should behave during general fitness exercise. Remember to warm up and cool down for a few minutes.

IX. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au.

Please visit our website to view our full warranty terms and conditions:
<http://www.lifespanfitness.com.au/warranty-repairs>

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed.

If you have purchased this product from the Official Lifespan Fitness website, please visit <https://lifespanfitness.com.au/warranty-form>

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit <https://lifespanfitness.com.au/warranty-form> and fill in our Repair/Service Request Form or Parts Purchase Form.

Scan this QR code with your device to go to lifespanfitness.com.au/warranty-form



X. SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email support@gflgroup.com.au with product details and a description of the issue.

We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.



WWW.LIFESPANFITNESS.COM.AU