
LIFESPAN KIDS

USER MANUAL

Heathmont Play Centre with 3m Slide

Find the Digital Manual Online

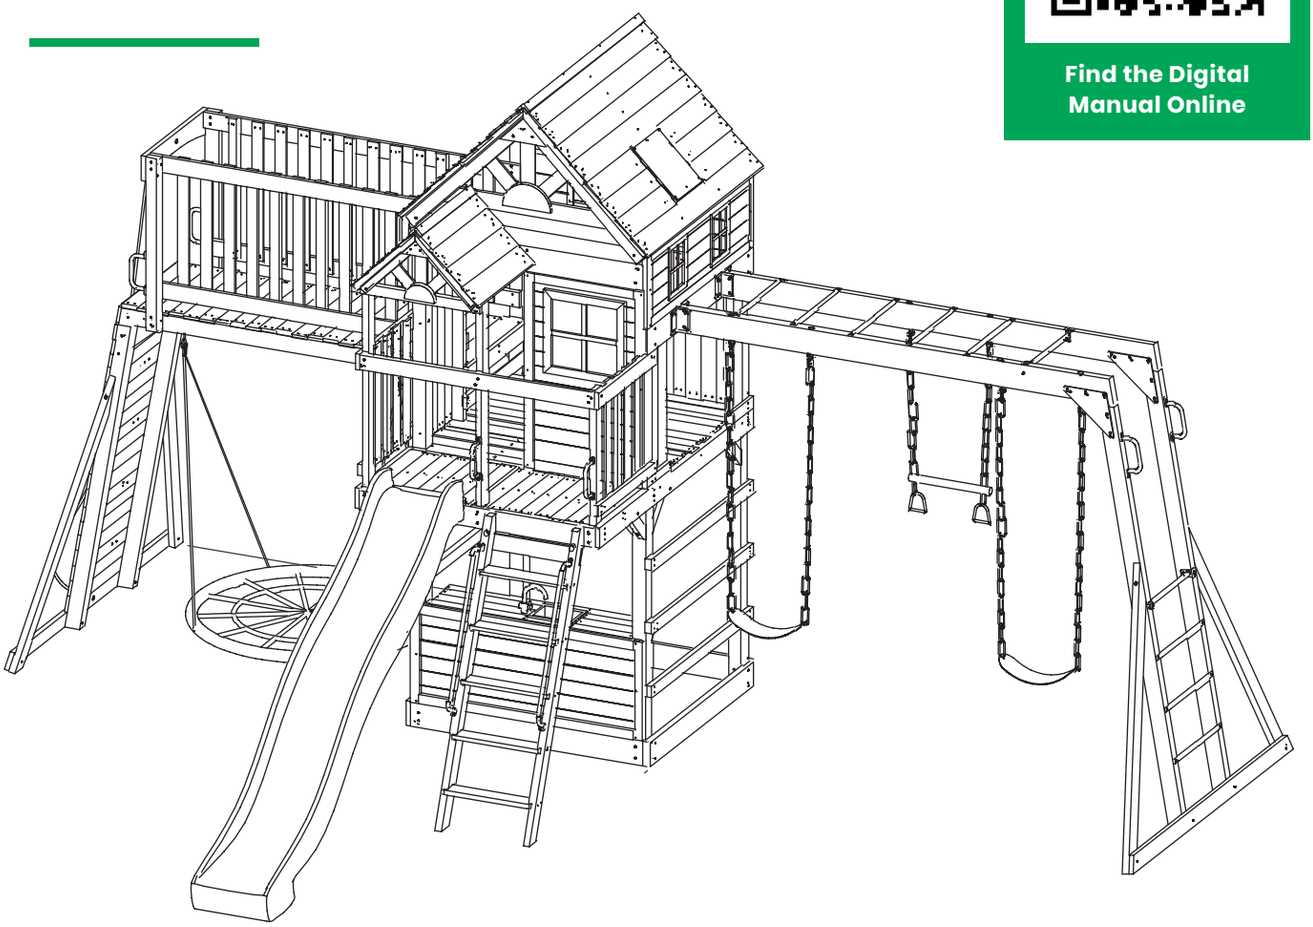

WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:
This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:
This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at ***www.lifespankids.com.au.***

TABLE OF CONTENTS

I. GENERAL SAFETY INSTRUCTIONS 3

1.1 Danger for Children 3

1.2 Risk of Injuries 3

1.3 Product Damage 3

1.4 Assembly Advice 4

II. SAFETY INSTRUCTIONS 5

III. PARTS LIST 7

IV. ASSEMBLY INSTRUCTIONS 11

V. PLAY SET ASSEMBLY FAQS 85

VI. WOOD ADVICE 86

VII. WARRANTY 89

VIII. SECURITY SUPPORT INFORMATION 90

I. GENERAL SAFETY INSTRUCTIONS

NOTE: This product is intended for outdoor domestic use only.

- This product must be assembled by an adult.
- Children must not use the product until properly installed.
- Small parts can pose a Choking Hazard.
- Age: 3 years and over.
- Max. Users: 9 Children, One user at a tie for each function.
- A maximum of 68 kgs. per child is recommended for play activities designed for individual use.
- A maximum of 54 kgs. per child is recommended for play activities designed for multiple child use.
- Max. Fall Height: 2.0m.

ATTENTION: Please keep assembly and installation instructions for further reference.

1.1 DANGER FOR CHILDREN



WARNING: No eating while using the product at the same time.

- Children do not recognize potential dangers from this product. The unassembled product must be stored out of reach of children and pets.
- This product may only be used with adult supervision at all times.
- The packaging material is not suitable for children due to choking and suffocation hazards.

1.2 RISK OF INJURIES

- Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician.
- Check the product before each use. Defective parts must be changed immediately as they can impair the function and the safety of the product.
- No more than one person to use the product at the same time.
- Use the product only on even and non-slipping surfaces. Never use it near water and keep sufficient space around for safety.
- Beware of moving parts such as the springs or elastics, which could catch your arms and legs. Do not place any objects or body parts in the product's openings.
- Do not lean, sit, stand or place body weight on any window ledge, play fence, play kitchen ledge, door or similar accessory feature. These components are not designed to support user weight and may break, detach or cause the equipment to become unstable.

- Children must not swing, hang or pull on window doors, cubby doors or any other doors attached to the play equipment. Misuse may result in damage to the product and could cause serious injury.

1.3 PRODUCT DAMAGE

- Do not make alterations to the product. Only use original spare parts. Qualified technicians should only carry out repairs – improper repairs can lead to danger for the user. Use this product only as described in this manual.

1.4 ASSEMBLY ADVICE

- The product should not be installed over concrete, asphalt or any hard surface. We recommend installing on grass area or dirt ground with playground wood-chips (mulch) or other impact absorbing ground cover on top (see page 6).
- The assembly of the product must be done carefully and by an able-bodied adult. If in any doubt, ask a technically qualified person.
- Before you start with the assembly, read the instructions carefully.
- Remove all packaging materials and lay down all parts on an open space. This gives you an overview and simplifies the assembly procedure.
- Check with the parts list that all parts are available. Dispose of the packaging material when the assembly is completed.
- Beware that when using tools or doing technical work, there is always a risk of injuries. Assemble the product with care.
- Create a danger free environment; for example, do not let tools lay around the workspace. Store the packaging material in a way that cannot cause any danger.
- After installing the product according to the instruction manual, ensure all screws, bolts and nuts are correctly installed and tightened and that all joints are secure.
- Reasonable space must be kept between the product and possible sources of danger, such as other equipment swimming pools and fences.
- The product must be assembled correctly before use.
- Your play structure must be installed on a flat horizontal surface with a minimum of 2m between it and any structure or obstacle such as a fence, garage house, tree branches, cloths lines, or electric cables.
- Modifications made to the original product shall be carried out according to the instructions of the manufacturer.
- The product must always be used in a well-lit area.
- Do not place anything under the product.
- Use gloves during assembly and disassembly.
- Outdoor products should be equipped with a device that in strong wind conditions avoid displacement due to wind (e.g. steel bars in the ground or loads like sandbag or water bags).
- In certain areas during winter, snow buildup and the low temperatures can damage the product. It is recommended to remove snow buildup and to store the product indoor.
- We strongly recommend visual inspections every 3 months to ensure the integrity of the entire product. Replace any parts as necessary.

II. SAFETY INSTRUCTIONS

- The safety instructions of the product should always be considered and obeyed.
- No clothes with hooks or lose parts should be worn or carried during product usage in order to avoid hooks getting caught and causing injury.
- Strong winds can result in the product being blown away or damaged. If strong winds are predicted the product must be disassembled and moved to a sheltered area or sufficiently anchored down.
- Moving the product whilst assembled may affect the integrity of the frame. Should it be necessary to move the product, please consider the following:

    1. Force to be evenly spaced around the frame to lift the product off the ground.
    2. The product must be carried horizontally.
    3. Use caution whilst moving as it could bend the product frame.

- Users should be familiar with the assembly manual. This manual contains assembly guidance; selected precautionary measures as well as recommendations for servicing and maintenance of the product, in order to ensure a secured and fun use of the product.
- It is the responsibility of the owner or the supervisor to guarantee that all users of the product are informed sufficiently of all warning references and safety instructions.

For the supervisor

The supervisor's role is to make sure users are aware of all safety precautions and that these precautions are enforced. When a supervisor is not available, the product may be disassembled or covered to limit access.

- The product can be only used if it is in good condition, worn or damaged parts should be replaced.
- Objects, which could be dangerous to the user, should be away from the product.
- Avoid unauthorized and unsupervised use of the product.
- Do not use the product under influence of alcohol or drugs (incl. medicines).
- Do not use the product as a jumping platform for other articles.

Consumer Information Sheet for Playground Surfacing Materials

The US Consumer Product Safety Commission (CPSC) estimates that about 100 000 playground equipment-related injuries resulting from falls to the ground surface are treated annually in US hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall on to a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces, such as concrete or asphalt, and while grass may appear to be acceptable, it may quickly turn to hard-packed earth in areas of high traffic. Shredded bark mulch, wood chips, tine sand or the gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table B.1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall on to four different loose-fill surfacing materials if they are Installed and maintained at depths of 150 mm, 225 mm and 300 mm.

TABLE B.1: Fall height in millimetres from which a life-threatening head injury would not be expected.


TYPE OF MATERIAL	DEPTH OF SURFACING MATERIAL		
	150mm	225mm	300mm
Double Shredded Bark Mulch	1800	3000	3300
Wood Chips	1800	2100	3600
Fine Sand	1500	1500	2700
Fine Gravel	1800	2100	3000

However, it should be recognised that all injuries due to falls cannot be prevented, no matter what surfacing material is used.


It is recommended that a shock absorbing material extend a minimum of 1800mm in all directions from the perimeter of stationary equipment such as climbing frames and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of twice the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for the equipment in question. The choice of a material depends on the type and height of the playground equipment, the availability of the material in a particular area, and its cost.


III. PARTS LIST

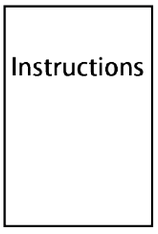


(1) 230090

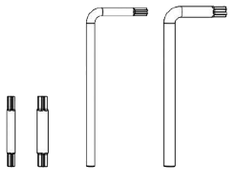

Star Bit (S)
Star Bit (L)
Allen Wrench (S)
Allen Wrench (L)

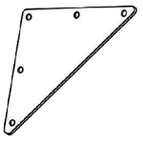


(6) 651007-L

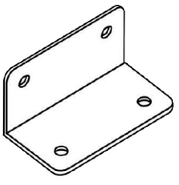

(4) 651003-L




(6) 230003

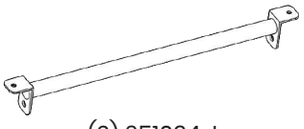

(2) 651034-L



(8) 651006-L




(6) 650007




(2) 650019



(7) 139070

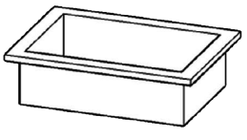


(1) 139007

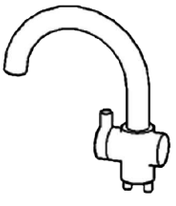


(1) 139008




(10) 230004




(2) 651029-L

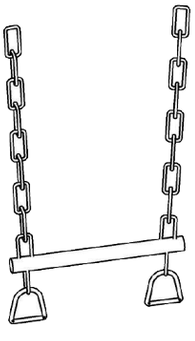


(1) 108002

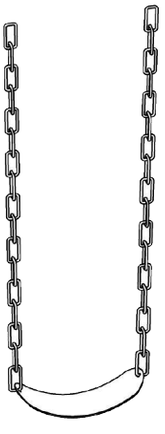


(2) 108001



(1) 230YKL-1
Roof Window

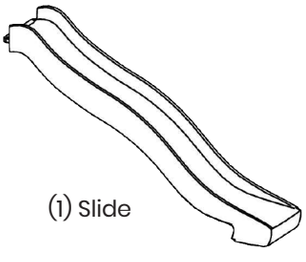

(1) Slide

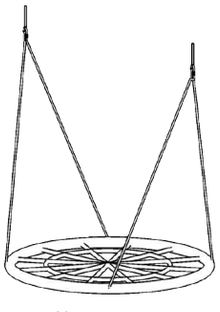

(1) 150008



(1) 650009

BM615
B-NUT x 20



BM818
B-NUT x 36



AN8
A-NUT8mm x 8



N815
NUT x 127



W10/18
Washer x 119



W8/15
Washer x 24




W12/28
Washer x 8




N615
NUT x 4




M8125
Bolt x 6




M8107
Bolt x 4




M896
Bolt x 63



M880
Bolt x 8



M855
Bolt x 28




M845
Bolt x 38




M821
Bolt x 8



M625
Bolt x 20



M655
Bolt x 4



S328
Screw x 6



S321
Screw x 10



S315
Screw x 8



SW16
Screw x 2



SW28
Screw x 16



SW35
Screw x 668



SW40
Screw x 27



SW45
Screw x 8



SW50
Screw x 84

SW60
Screw x 32



M8SW35
Screw x 6



M8SW60
Screw x 2



M6SW35
Screw x 44



M6SW55
Screw x 16



BOARD LIST

C1=1



C2=1



C3=1



C4=1



C5=1



C6=1



C7=1

C8=1



C9=2




C10=1

D2=1



D3=1



D5=1



D7=2



D8=2



D21=2



D22=2



K1=1

K2=10



K4=1



K5=2



K6=1



K7=2



K8=1

K9=1



K11=4




K18=4



F3=1



F4=1



F6=1



F7=2



F8=1



F9A=1



F9B=1



F10=1



F11=4



F12=1



F13=2



F14=2



F15=2



F16=1

F17=1

F19=1

F20=1

F21=5

F22=1

F23=1

F24=1

F25=1

F26=1

F27=1

F28=2

F29=2

F33=2

F34=2

F35=2

F41=1

F42=2

BOARD LIST

H1=16

H2=1

H3=24

H4=8

H5=3

H6=1

H8=1

H9=9

H10=1

H11=1

H12=2

H13=12

H14=1

H15=1

H16=21

H17=1

H18=10

H19=9

H21=1

H22=1

H23=2

H24=2

H25=4

H26=2

H27=1

H28=1

H29=1

H30=1

H32=1

H33=1

H34=1

H35=1

H36=1

H37=2

H38=1

H39=1

H40=1

O1=1

O2=1

O3=1

B1=1

B2=1


B3=1

B4=1


B5=2

B6=2


WP1=1

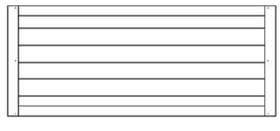


WP2=1




WP3=1

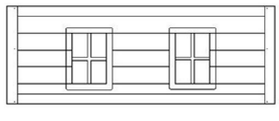


WP4=1

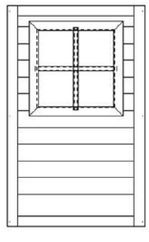


FP1=2

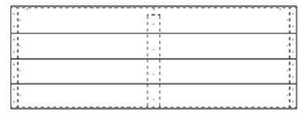


FP4=1

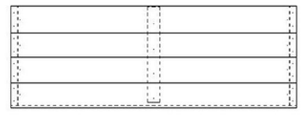


FP5=1

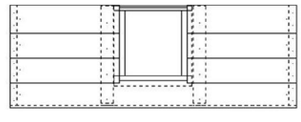

FP2=1

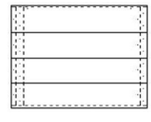


FP3=1

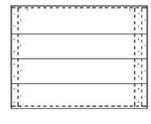


IV. ASSEMBLY INSTRUCTIONS

STEP 1


IMPORTANT:
- Do not over tighten the screws as this can cause the wood to split.
- Assemble the equipment on flat and levelled ground.
- Measuring tape and leveller will be required.

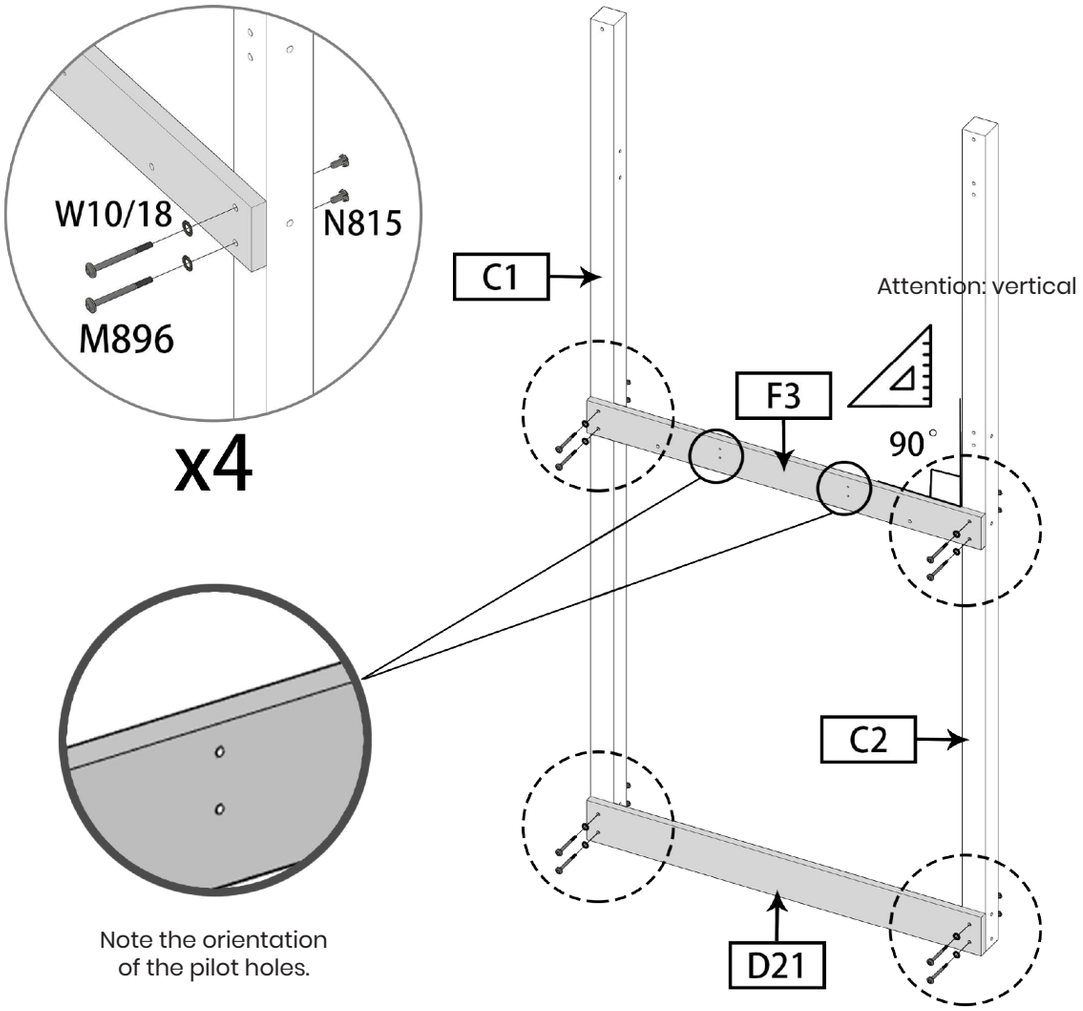

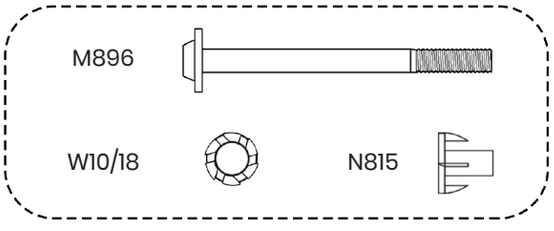


List	
Part NO.	Qty
C1	1
C2	1
D21	1
F3	1
M896	8
W10/18	8
N815	8


STEP 2

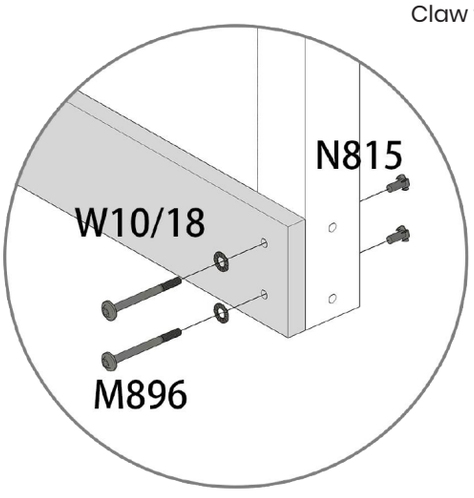


x6

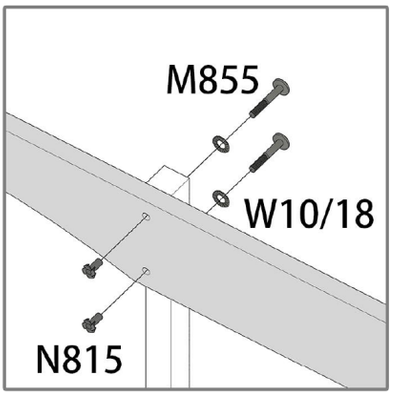


x2

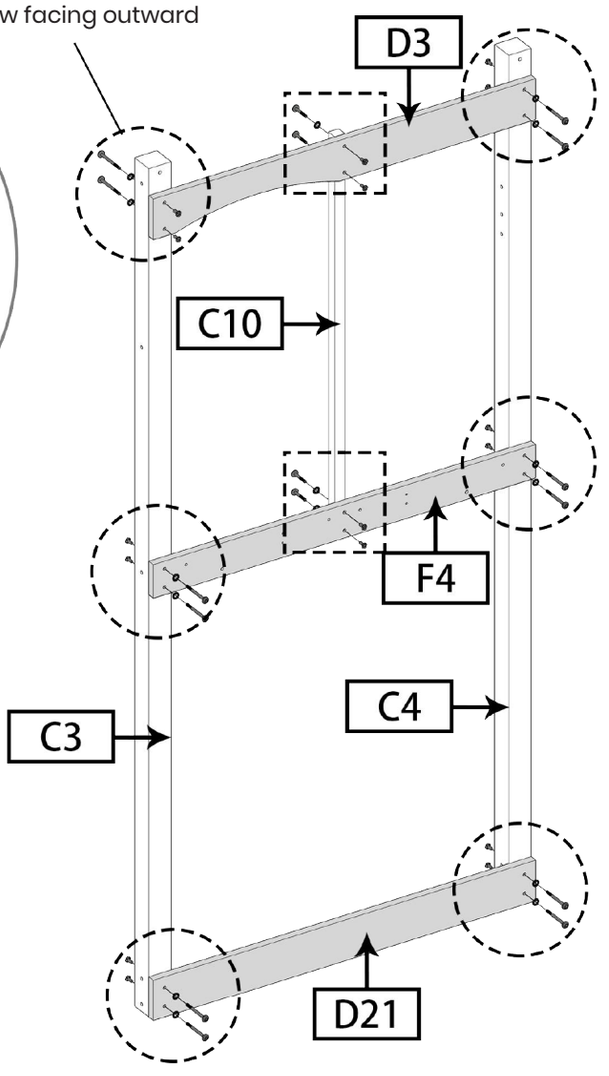

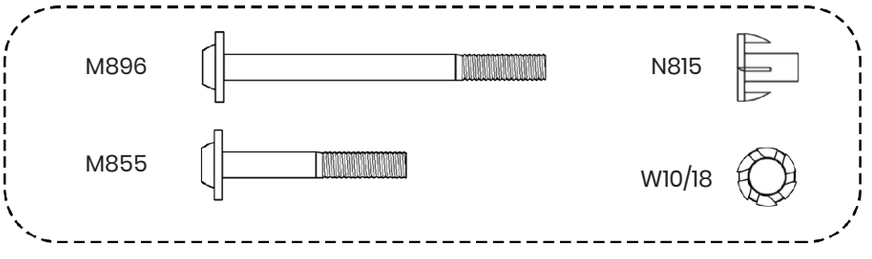



List	
Part NO.	Qty
C3	1
C4	1
C10	1
D3	1
D21	1
F4	1
N815	16
W10/18	16
M896	12
M855	4

STEP 3

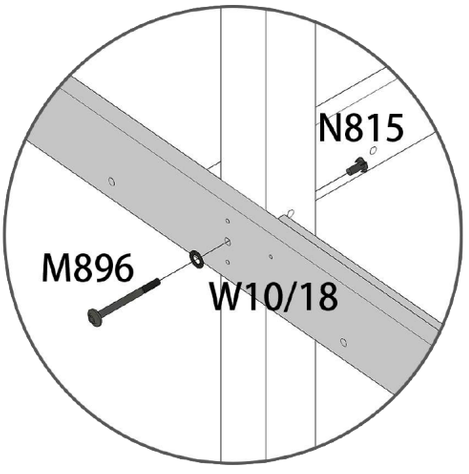


x10

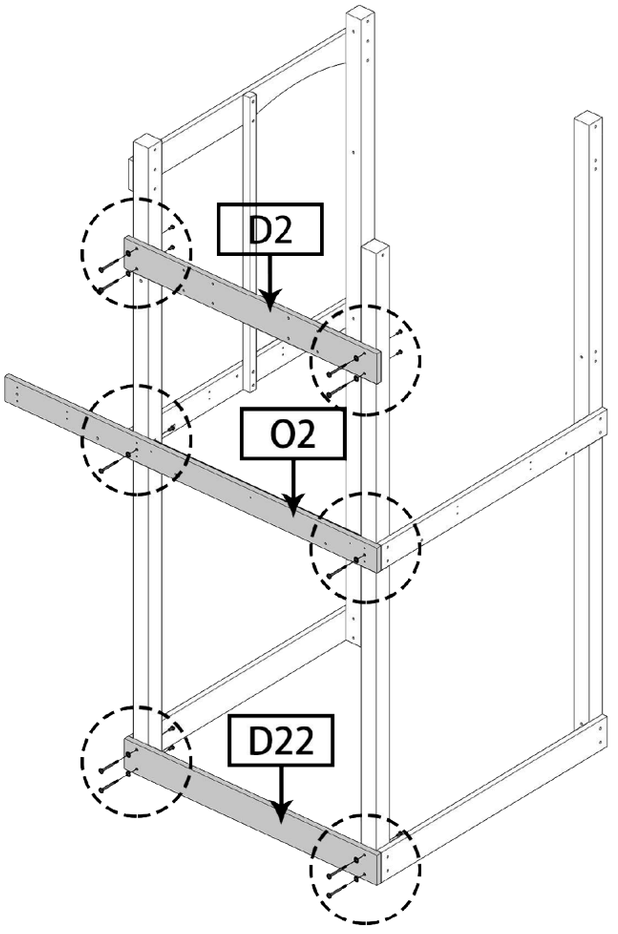


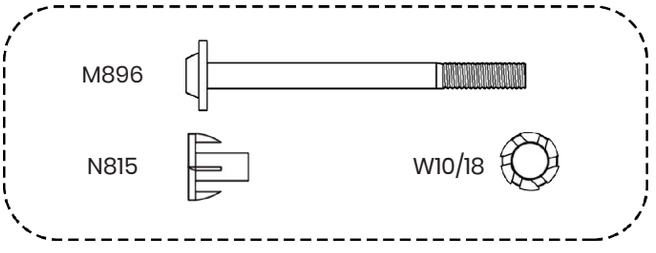


List	
Part NO.	Qty
D2	1
O2	1
D22	1
N815	10
W10/18	10
M896	10

STEP 4

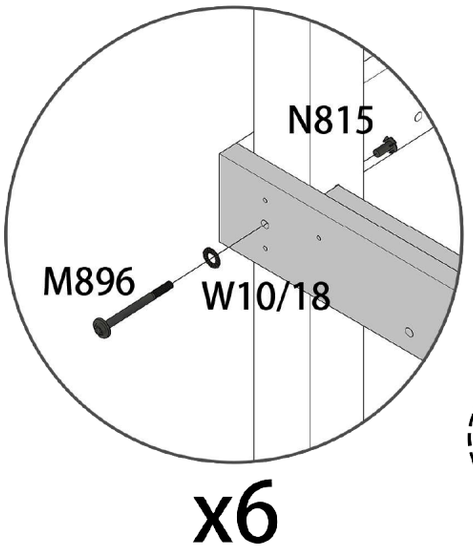

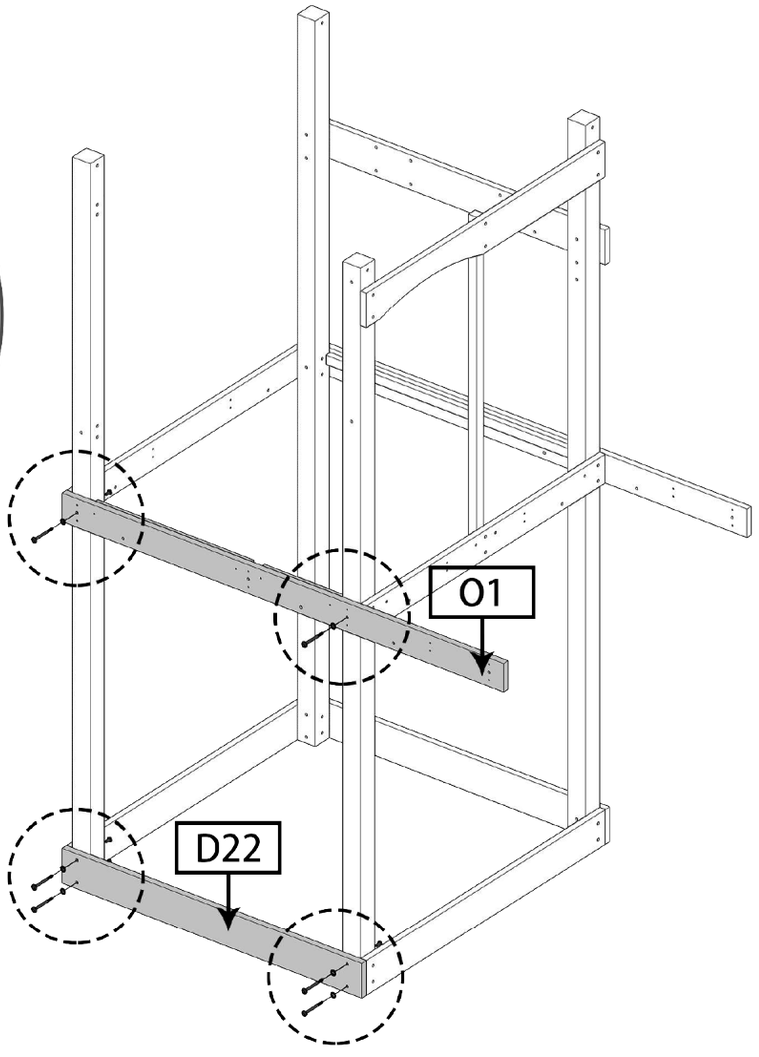


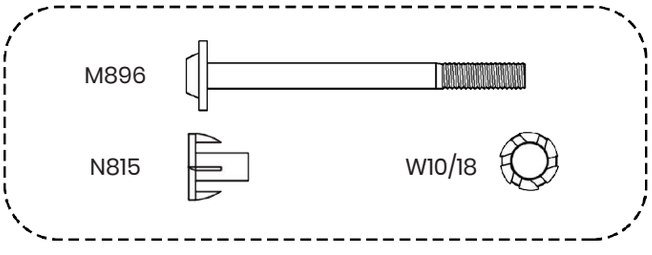


List	
Part NO.	Qty
O1	1
D22	1
N815	6
W10/18	6
M896	6

STEP 5


TIP: Take note of the spacing.

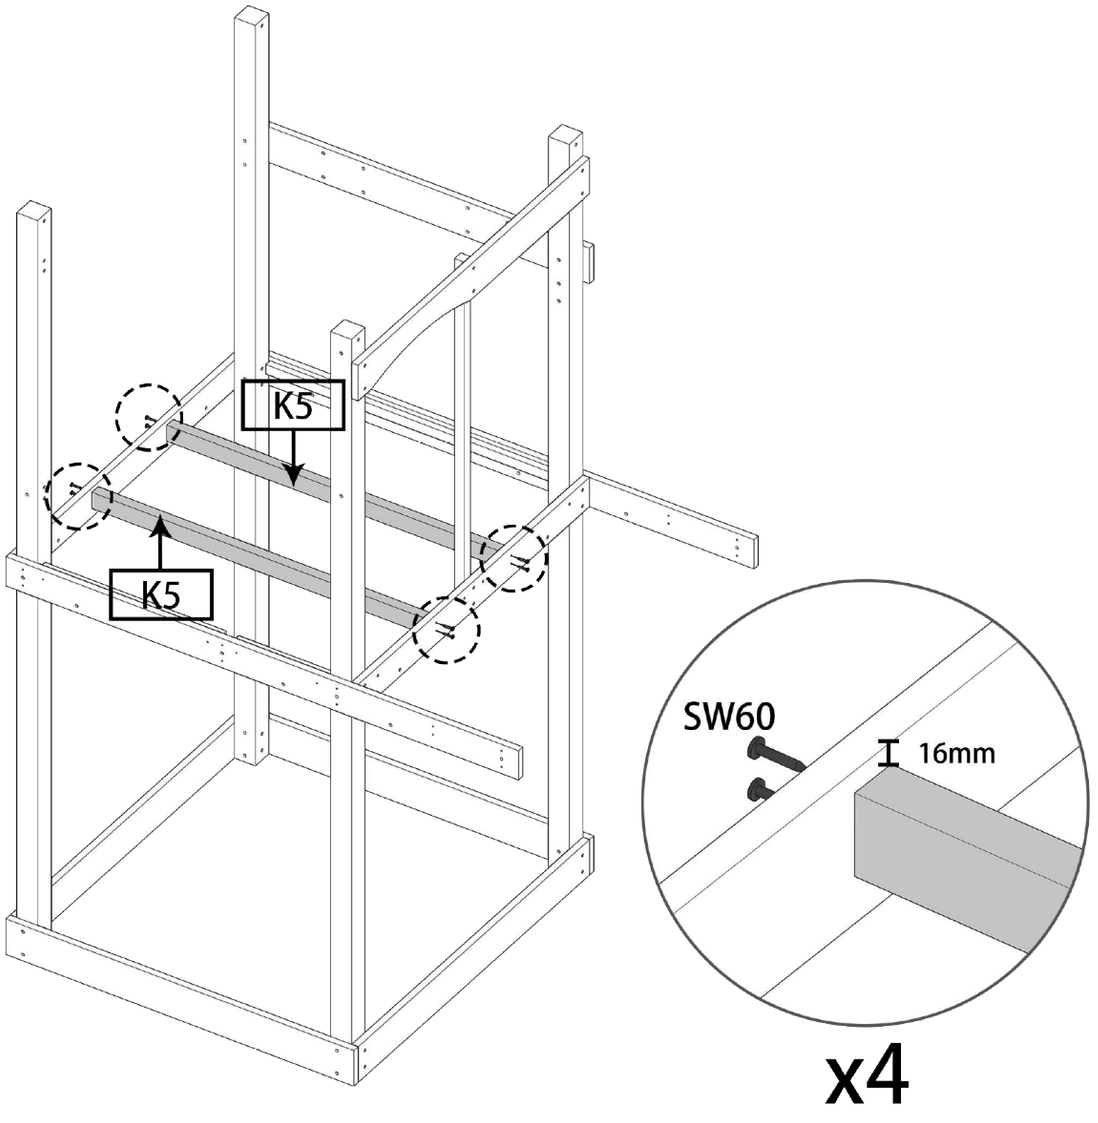

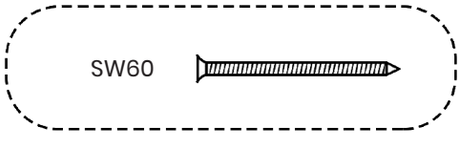


List	
Part NO.	Qty
K5	2
SW60	8


STEP 6

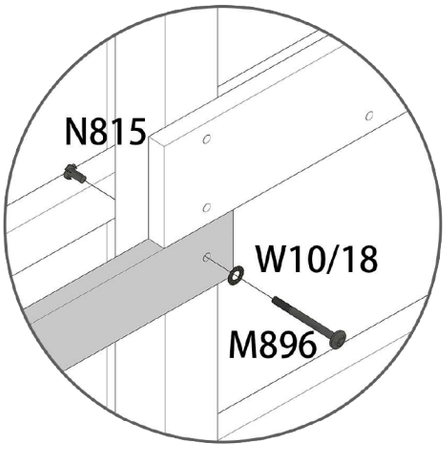


x2

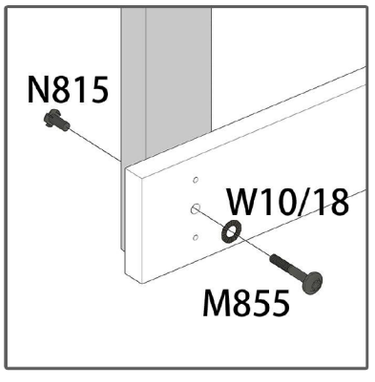


x4

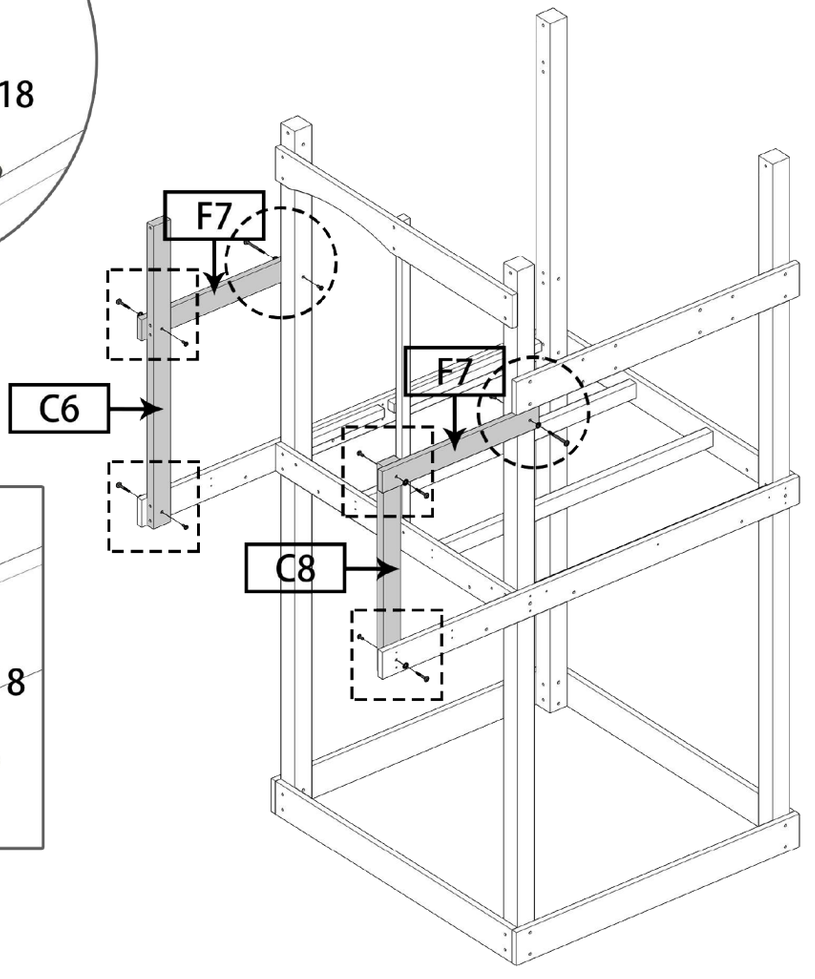


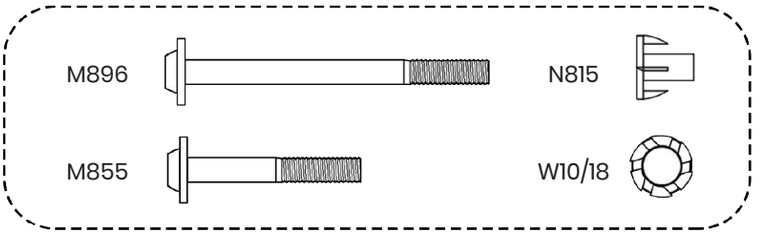

List	
Part NO.	Qty
F7	2
C6	1
C8	1
N815	6
W10/18	6
M896	2
M855	4


STEP 7

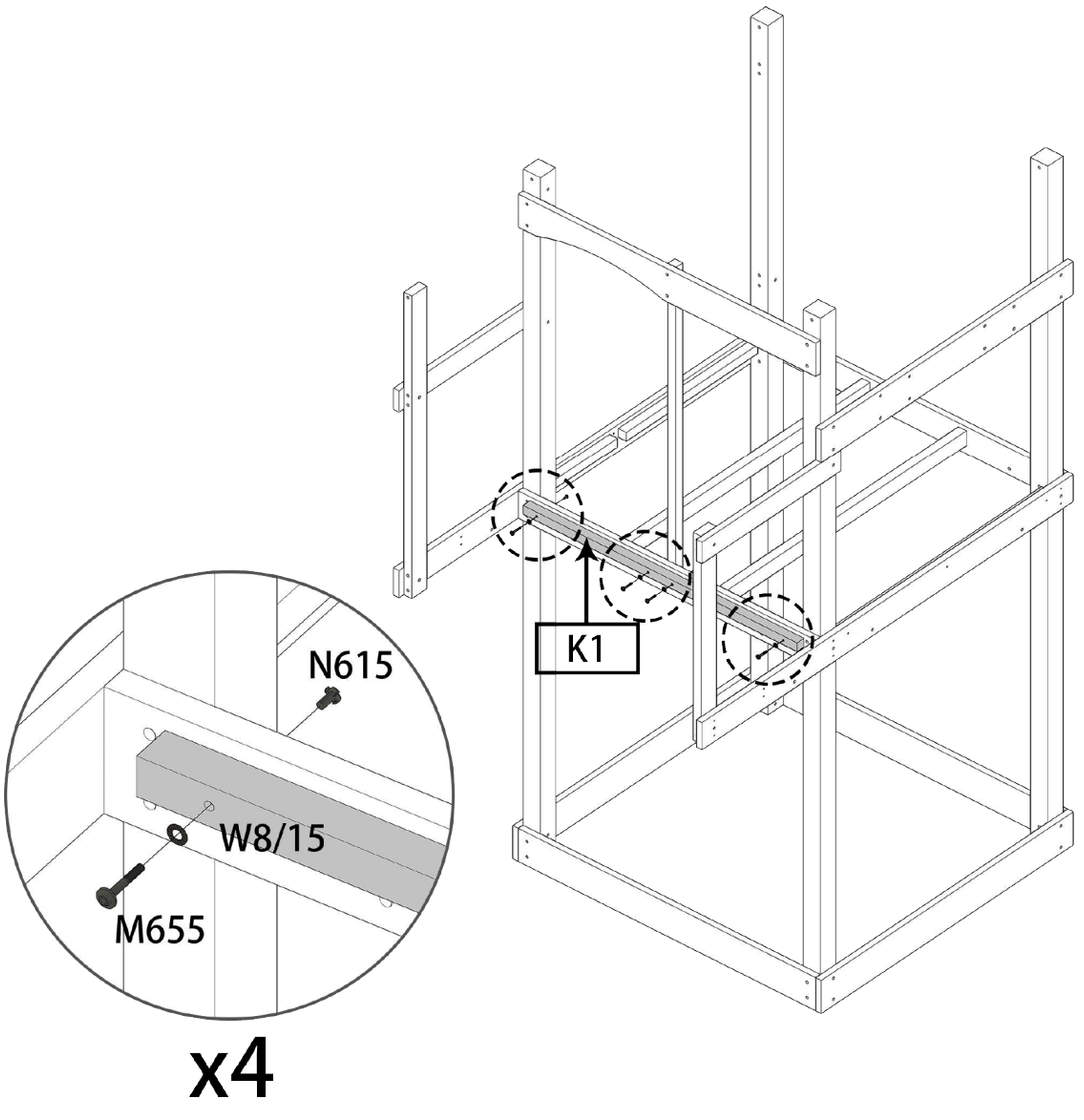

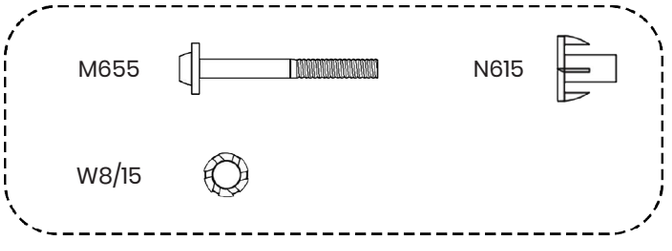



List	
Part NO.	Qty
K1	1
N615	4
W8/15	4
M655	4

STEP 8

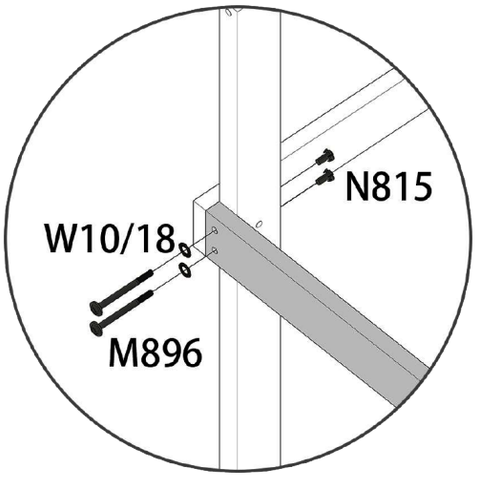


x4

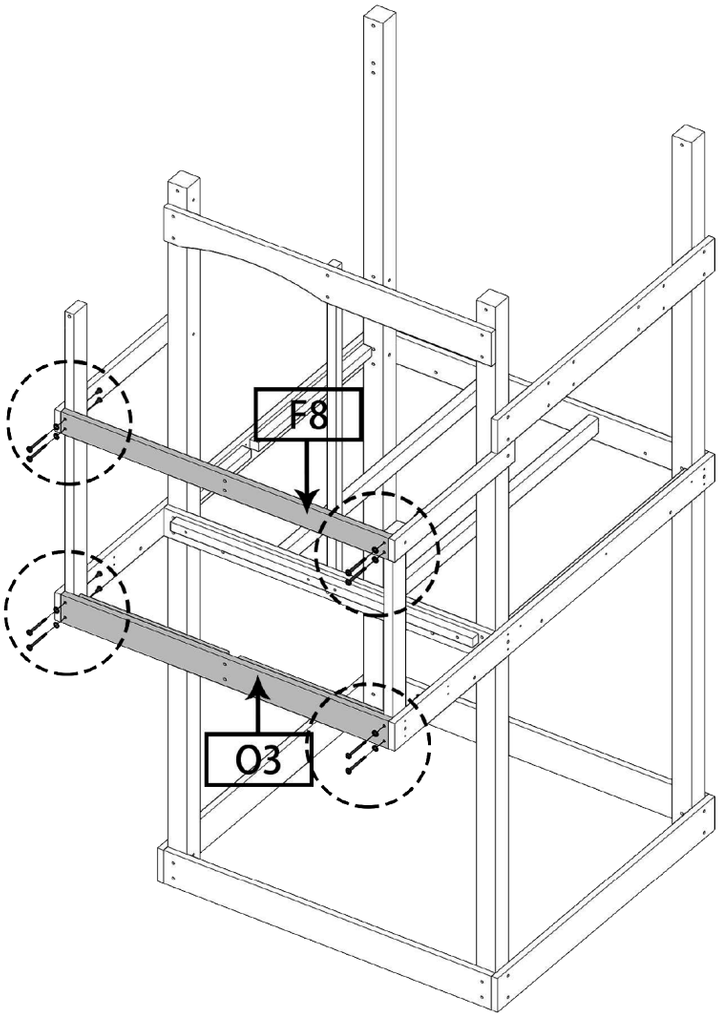

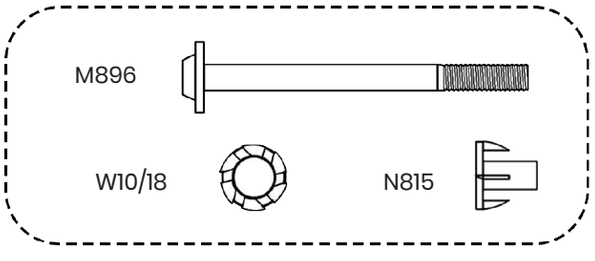



List	
Part NO.	Qty
F8	1
03	1
N815	8
W10/18	8
M896	8

STEP 9

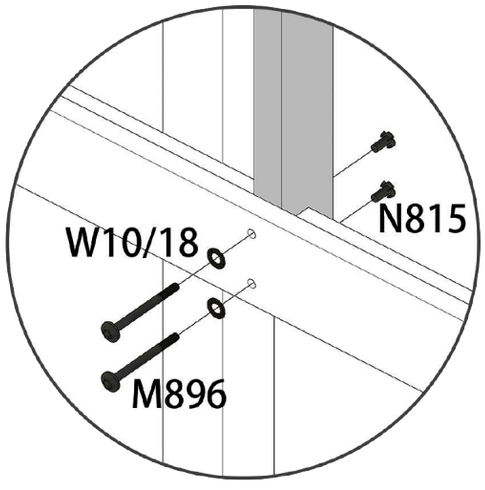

x2

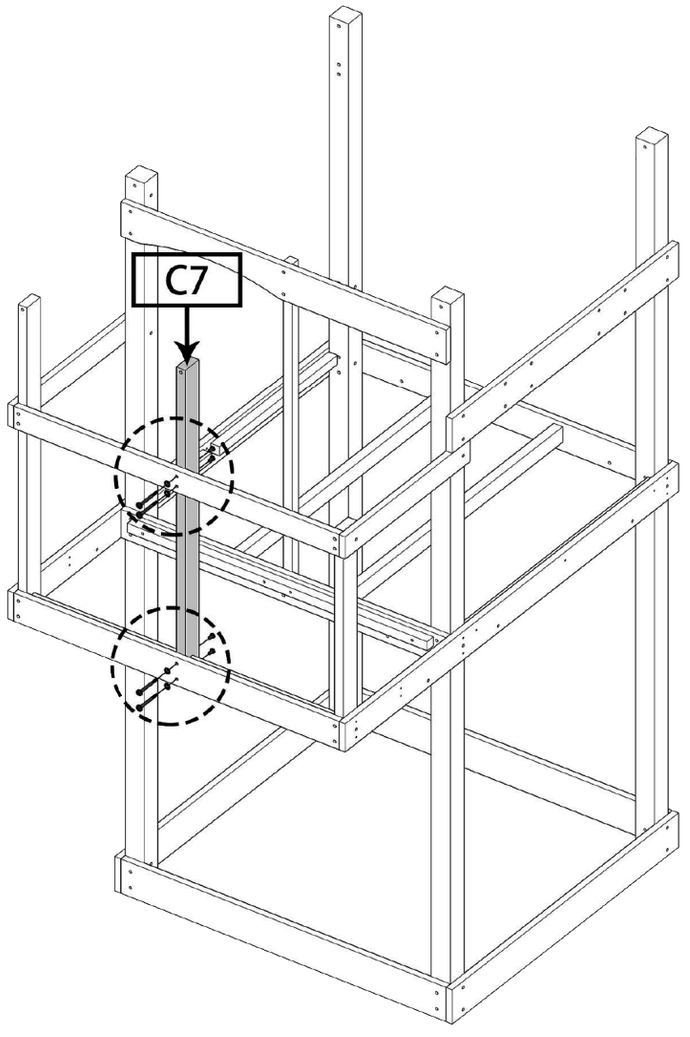


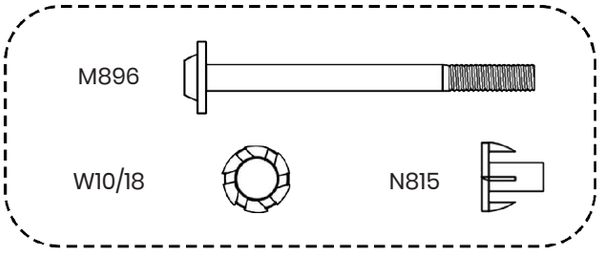


List	
Part NO.	Qty
C7	1
N815	4
W10/18	4
M896	4


STEP 10

TIP: Take note of the spacing.

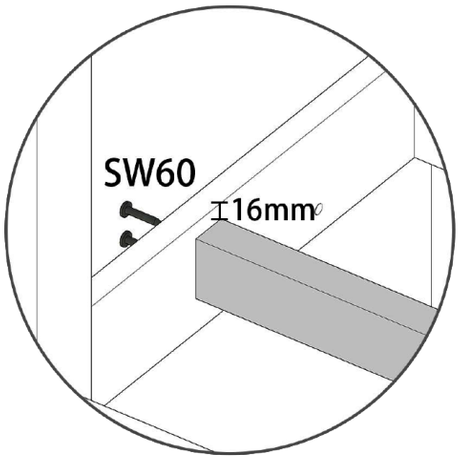

x2

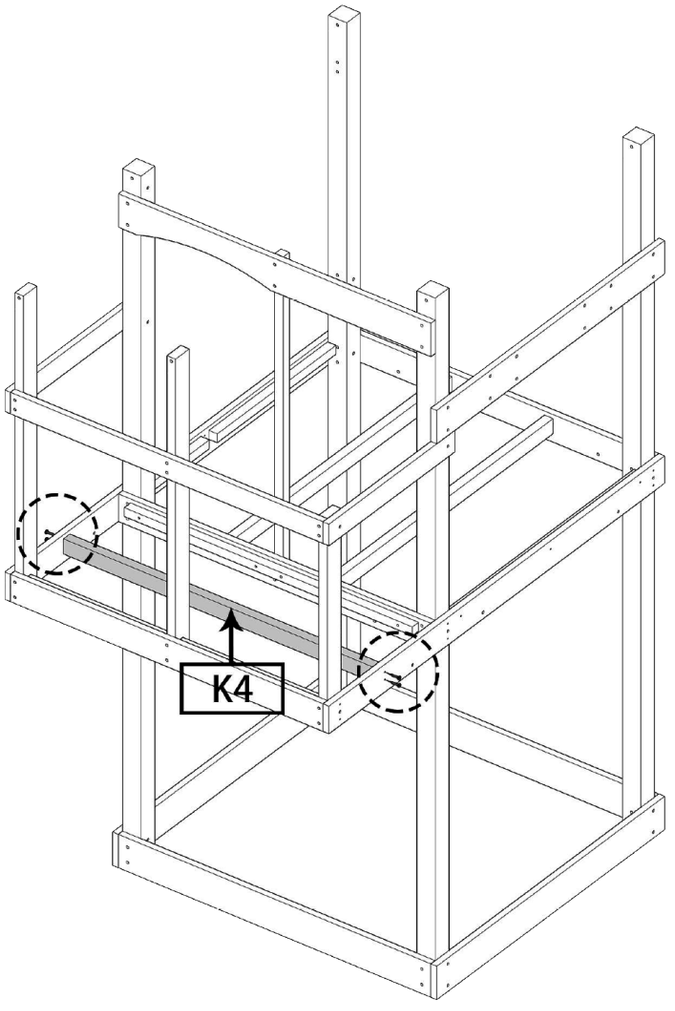


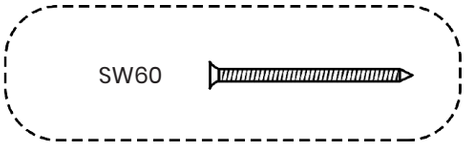


List	
Part NO.	Qty
K4	1
SW60	4

STEP 11


TIP: Take note of the spacing.

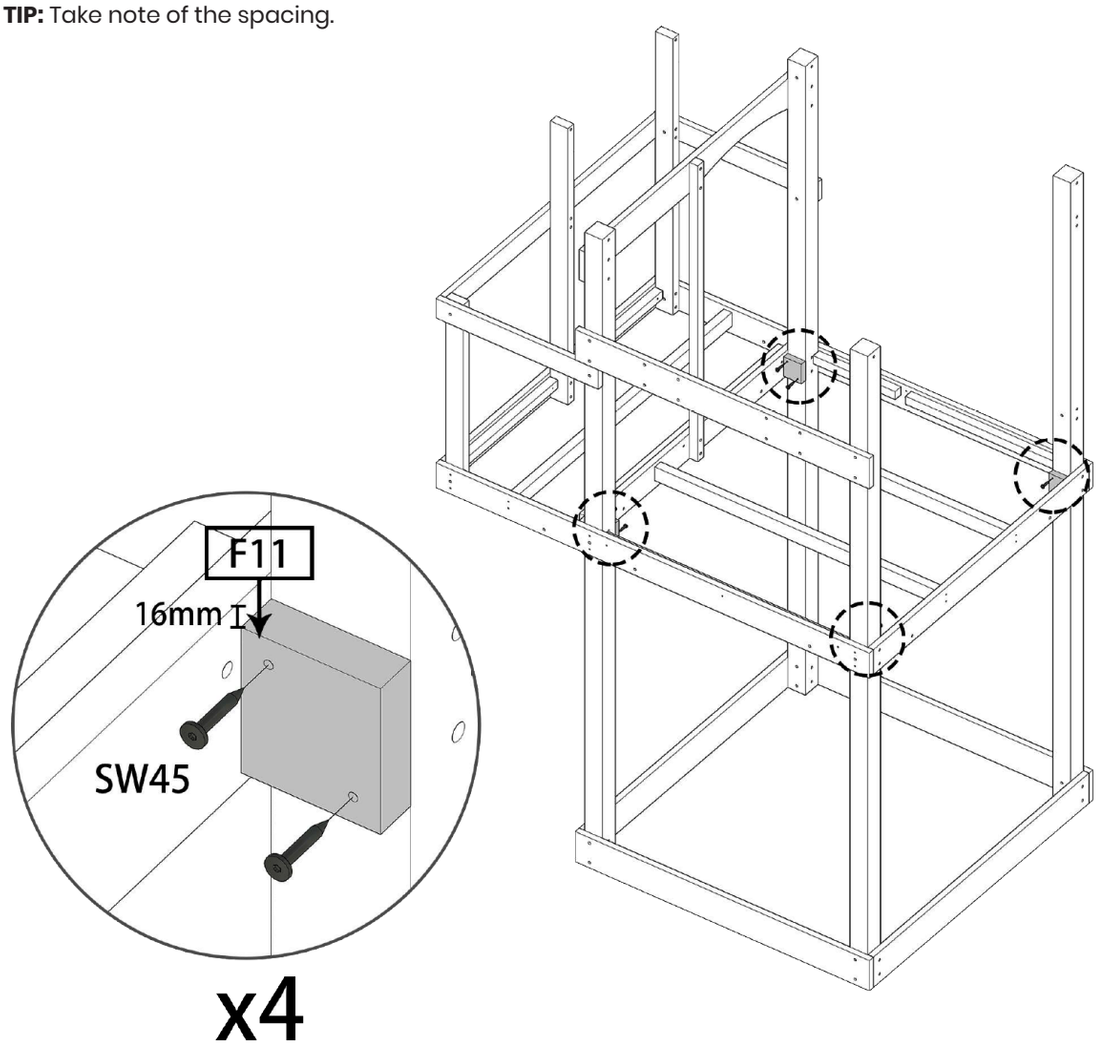


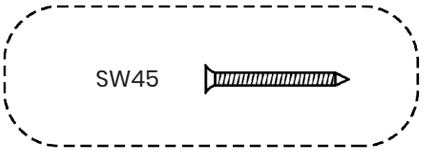

List	
Part NO.	Qty
F11	4
SW45	8


STEP 12

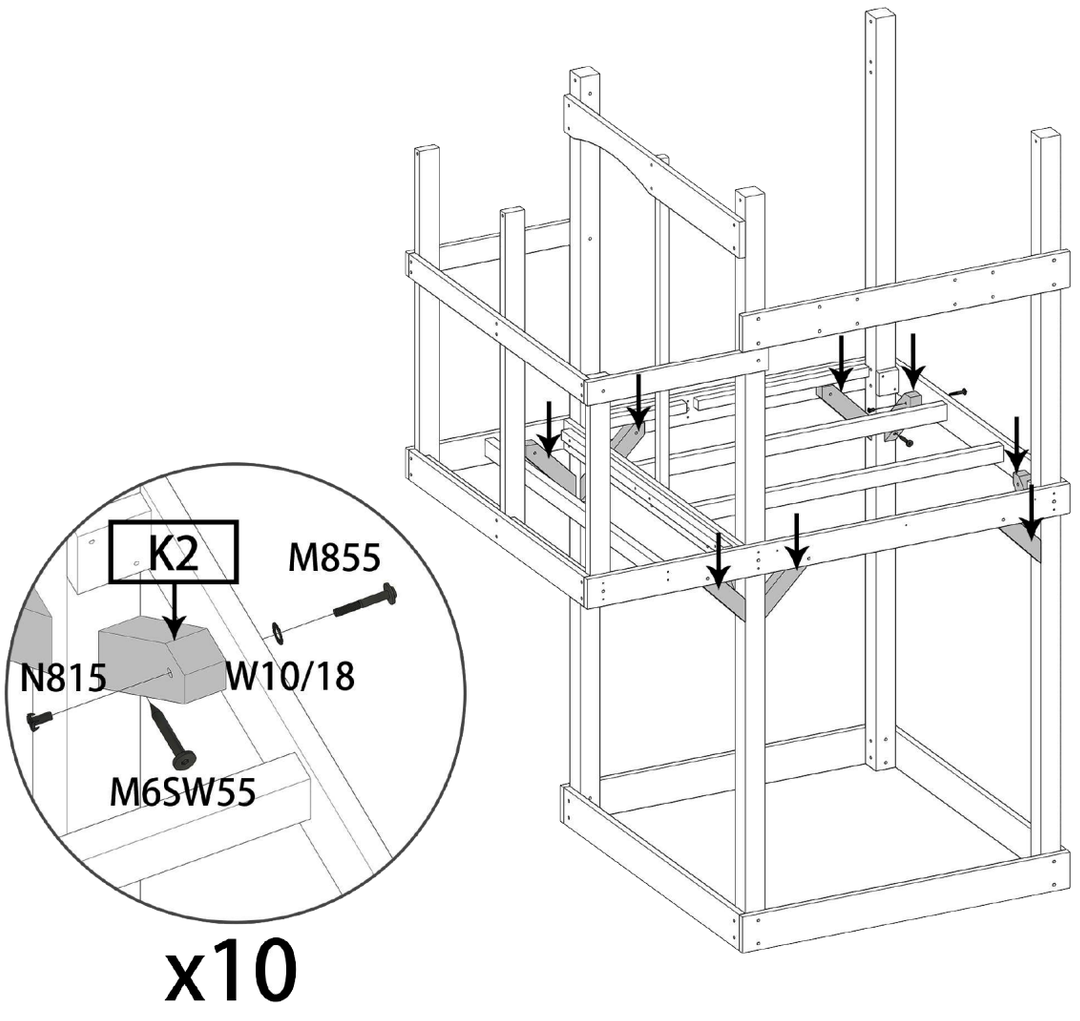

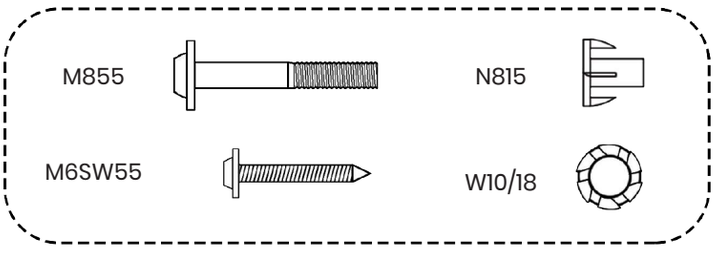


List	
Part NO.	Qty
K2	10
N815	10
W10/18	10
M855	10
M6SW55	10

STEP 13

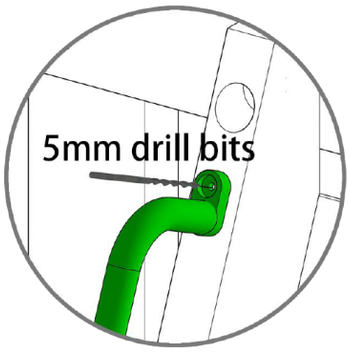



Pre-drill pilot holes before attaching the screw.

X4

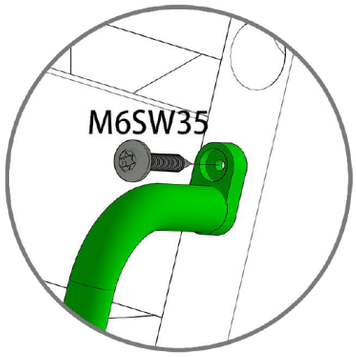


X4

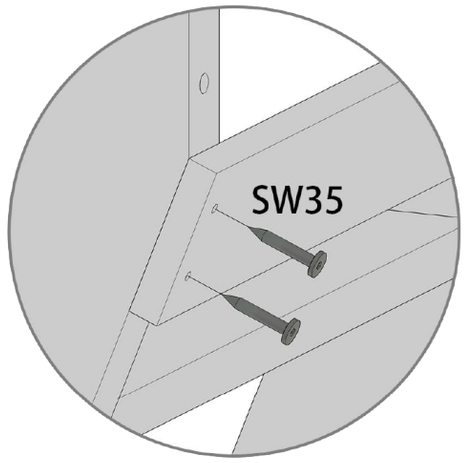

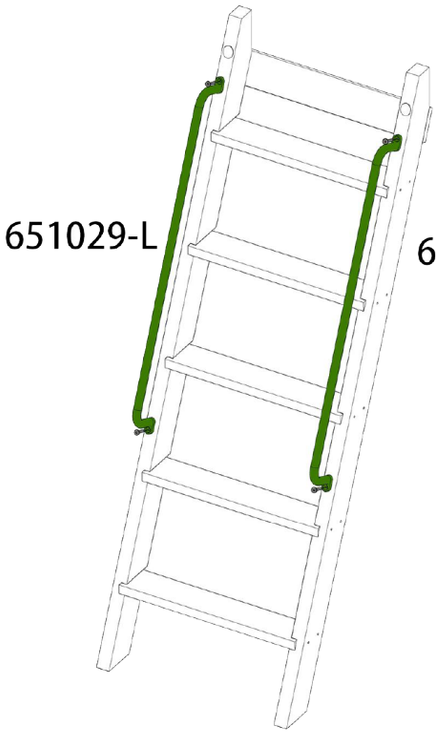

651029-L


x2

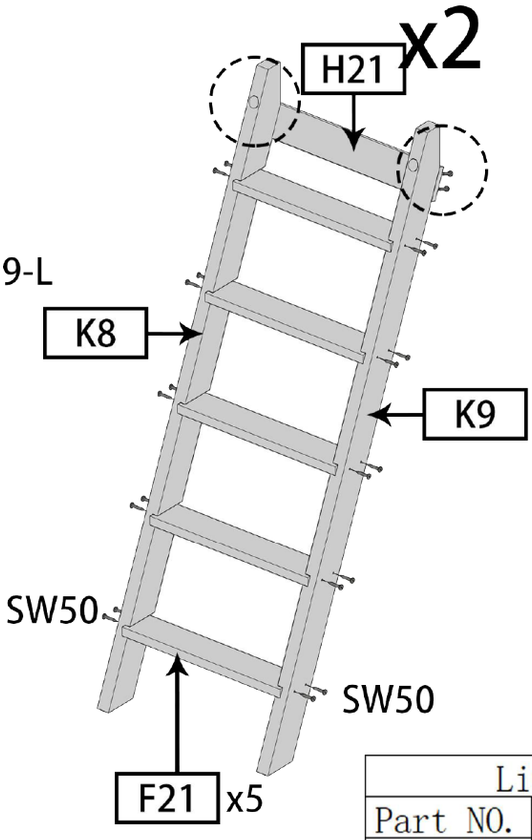




List	
Part NO.	Qty
651029-L	2
H21	1
F21	5
K8	1
K9	1
SW50	20
SW35	4
M6SW35	4


STEP 14

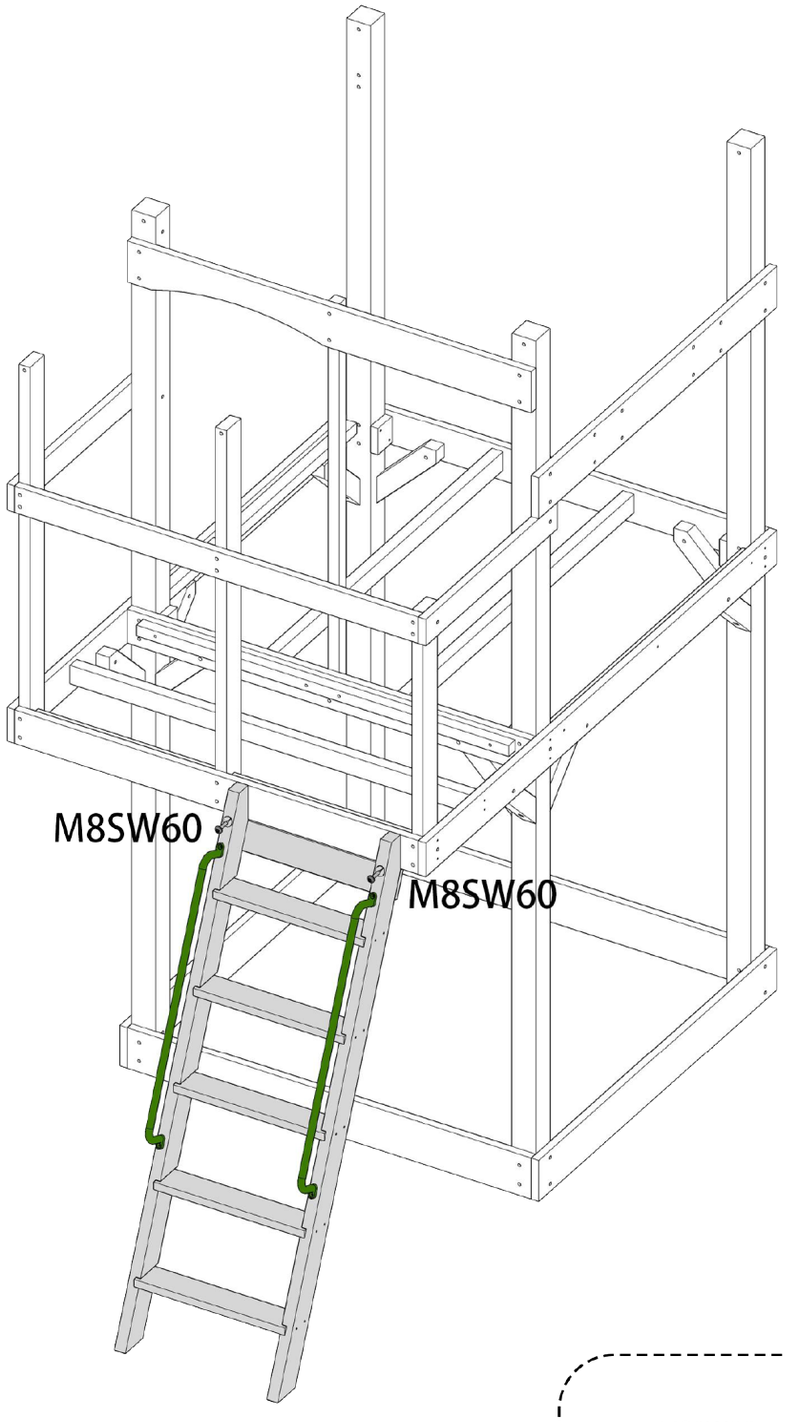

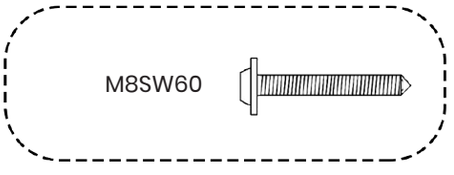

List	
Part NO.	Qty
M8SW60	2

STEP 15

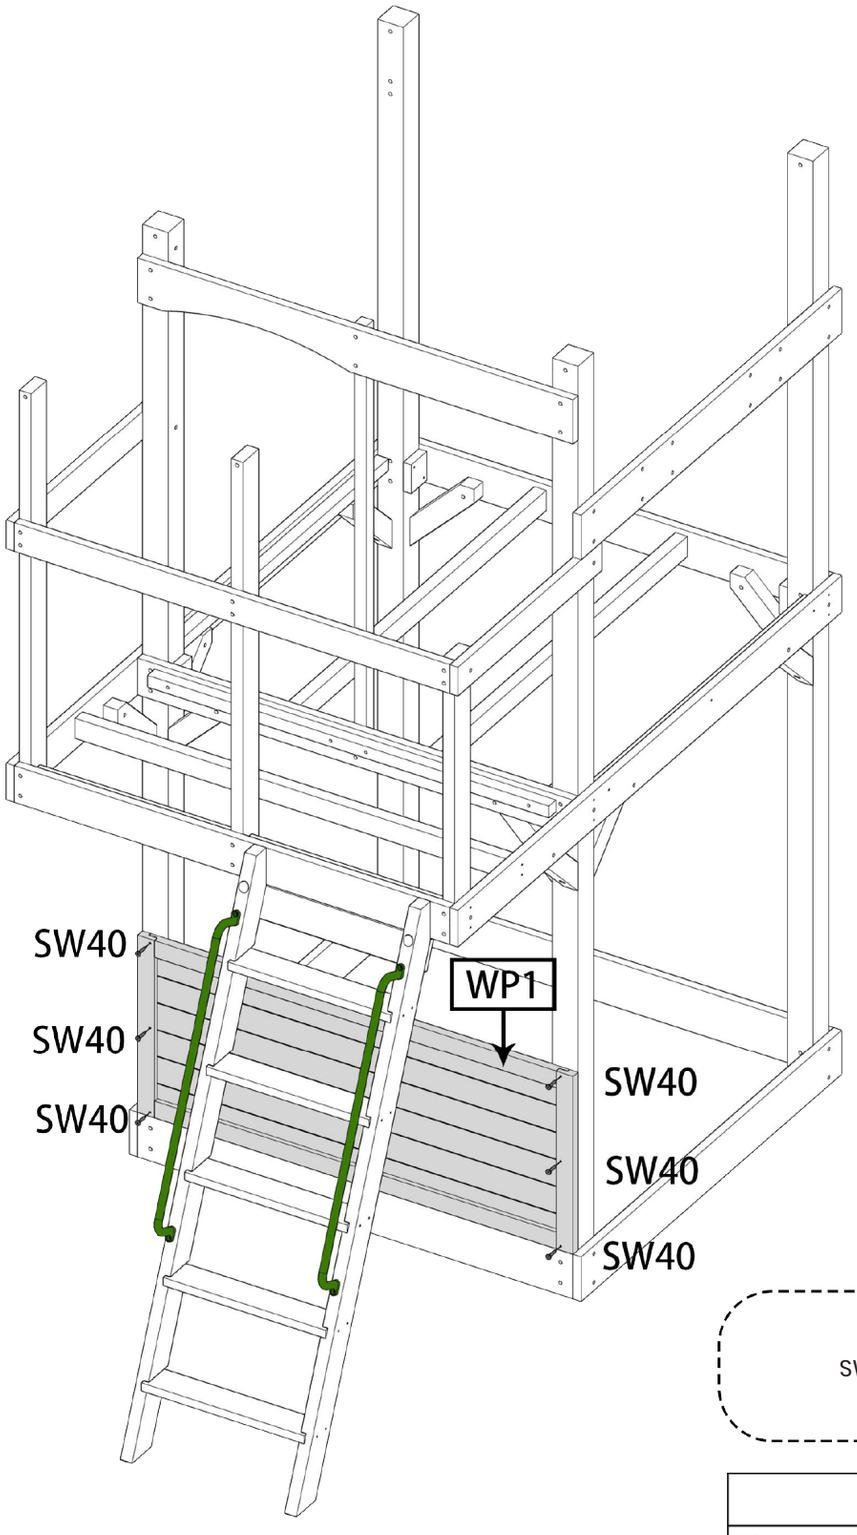






List	
Part NO.	Qty
WP1	1
SW40	6

STEP 16

TIP: Take note of the spacing.

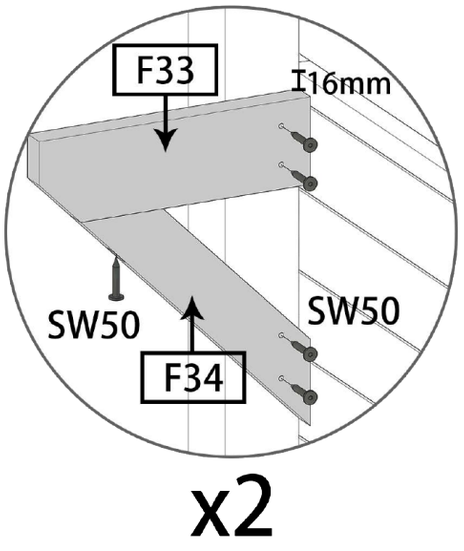

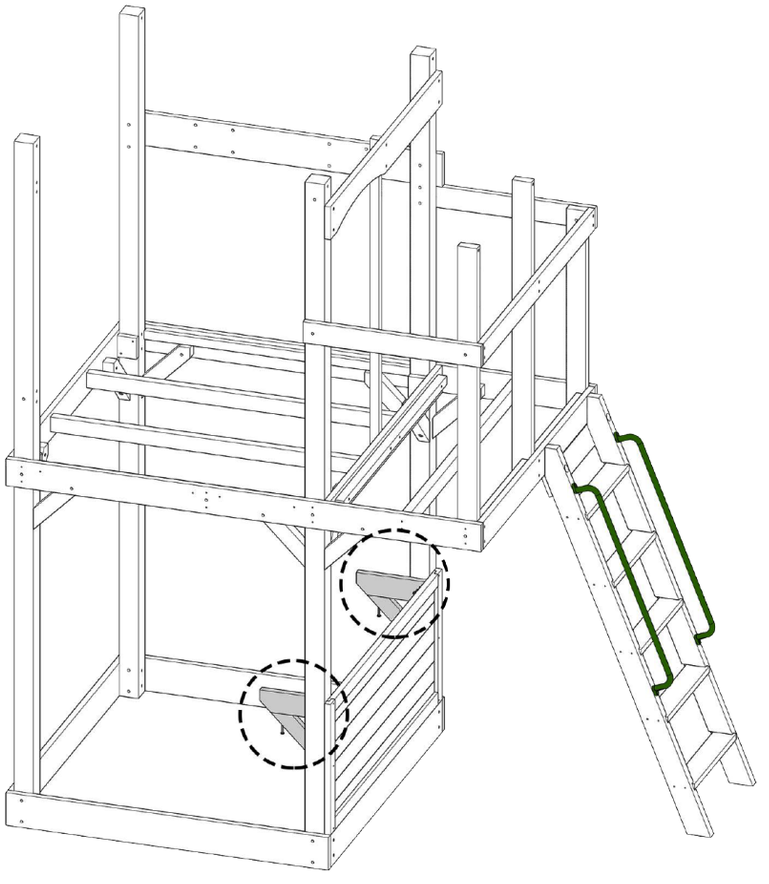


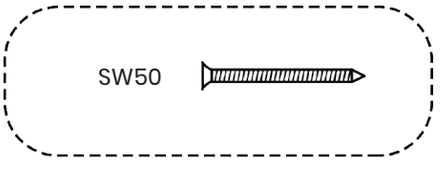

List	
Part NO.	Qty
F33	2
F34	2
SW50	10

STEP 17


TIP: Take note of the spacing.

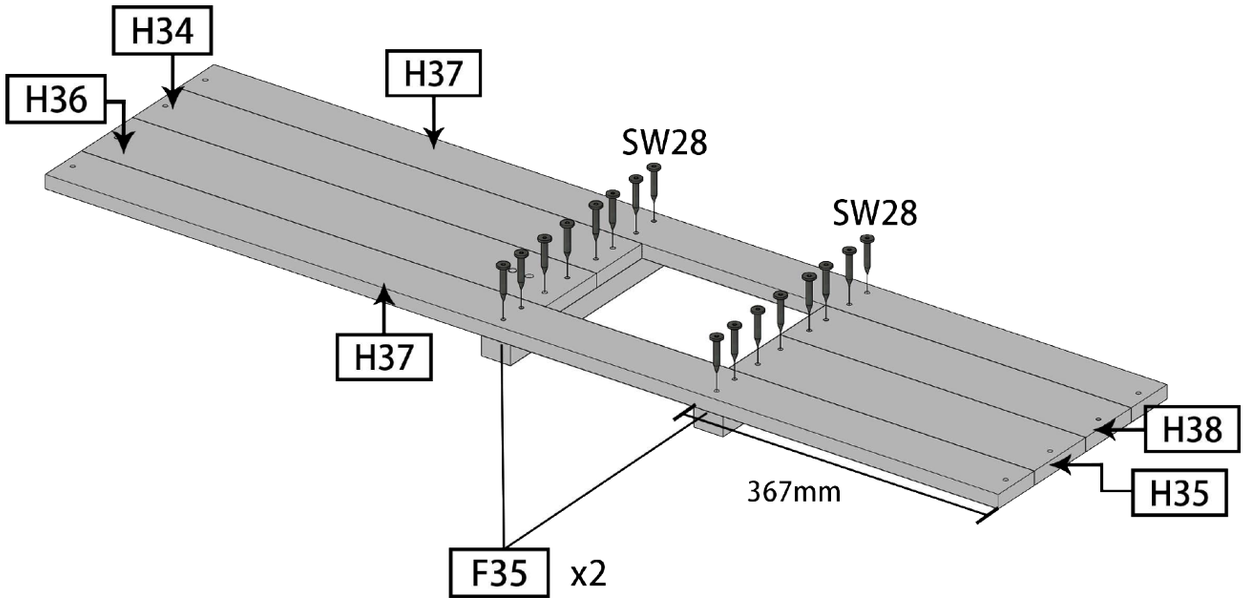




List	
Part NO.	Qty
F35	2
H34	1
H35	1
H36	1
H37	2
H38	1
SW28	16


STEP 18

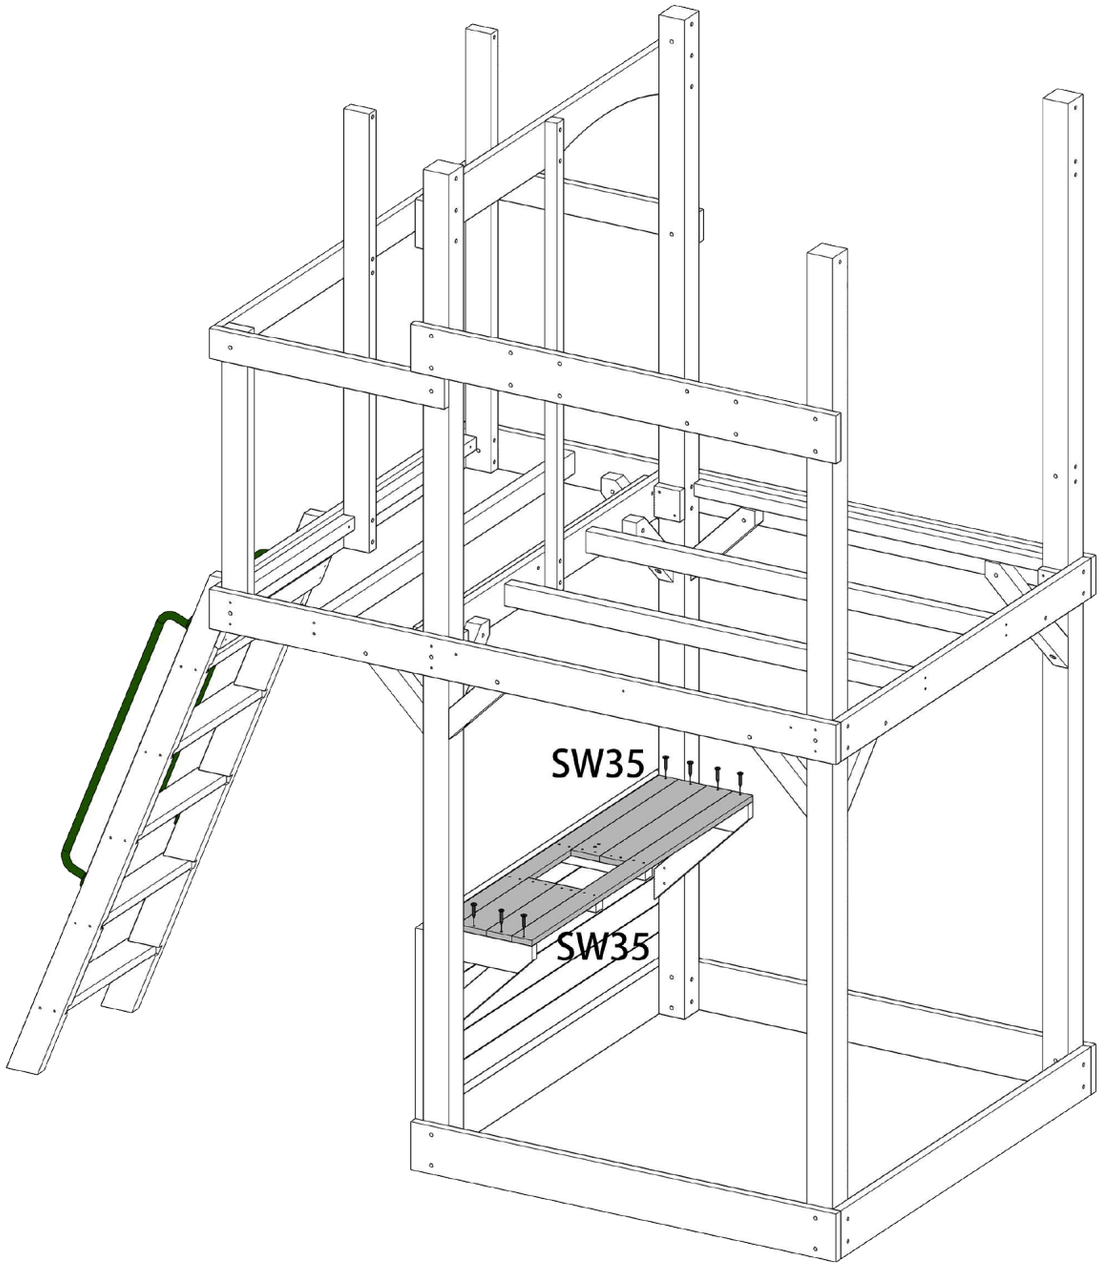


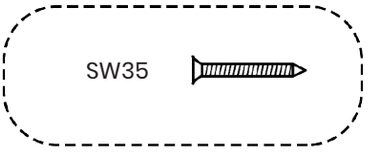

List	
Part NO.	Qty
SW35	8


STEP 19

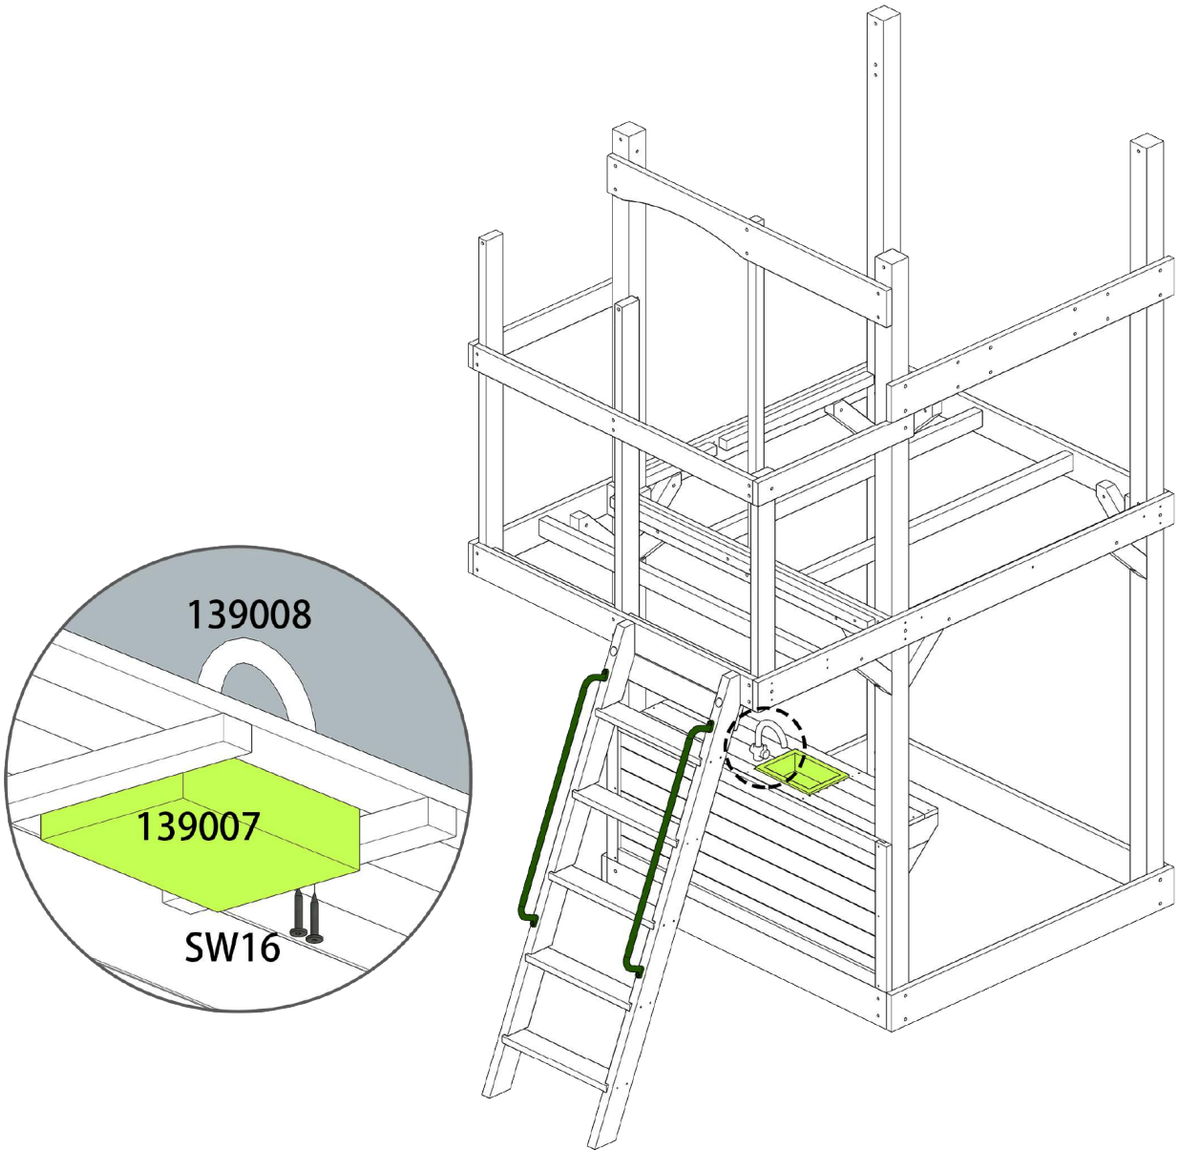


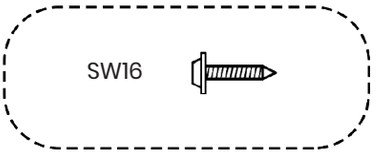

List	
Part NO.	Qty
139008	1
139007	1
SW16	2


STEP 20

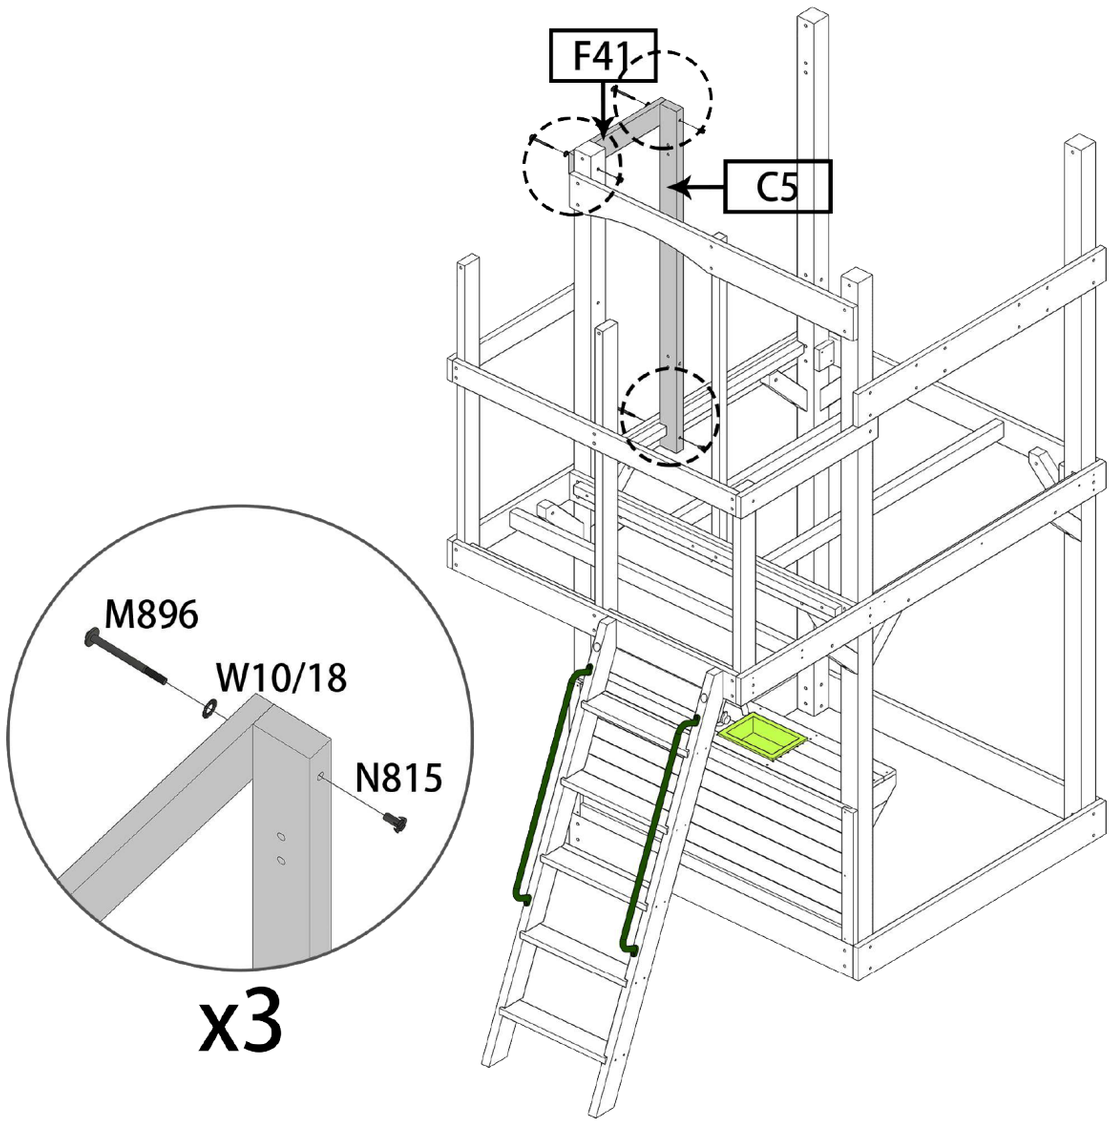


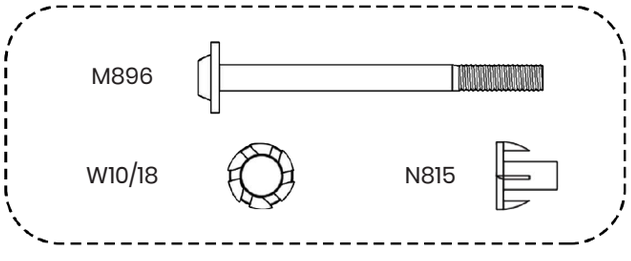

List	
Part NO.	Qty
F41	1
C5	1
N815	3
W10/18	3
M896	3


STEP 21

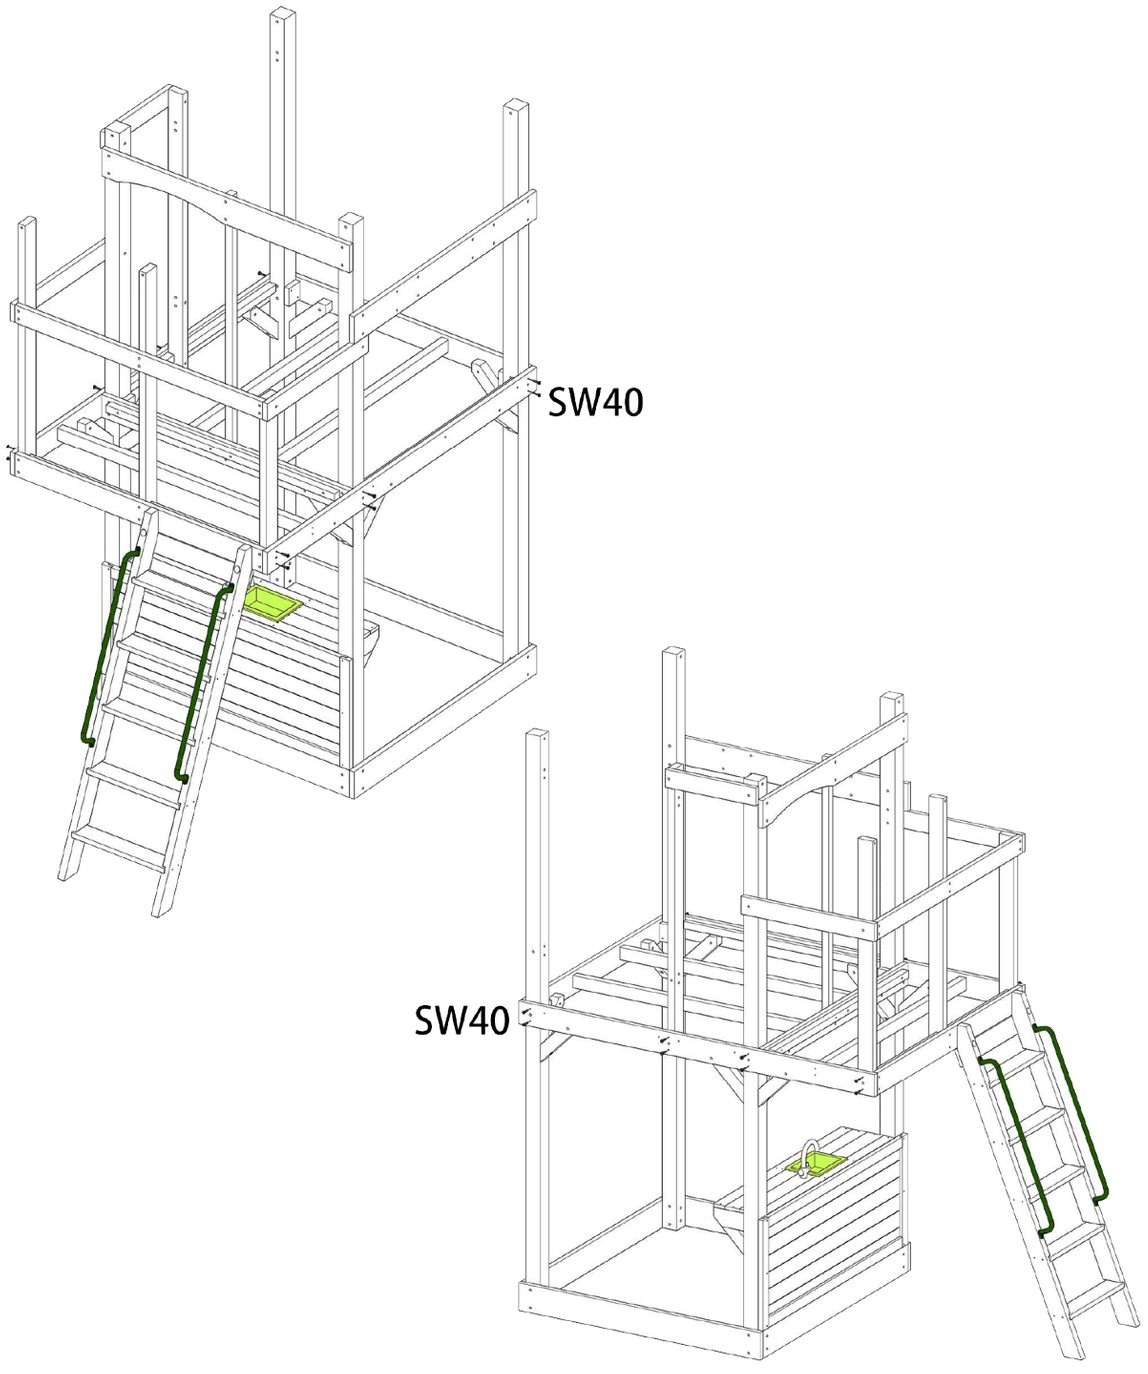


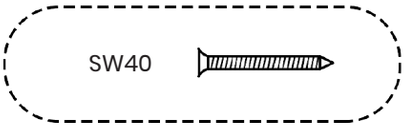

List	
Part NO.	Qty
SW40	14

STEP 22

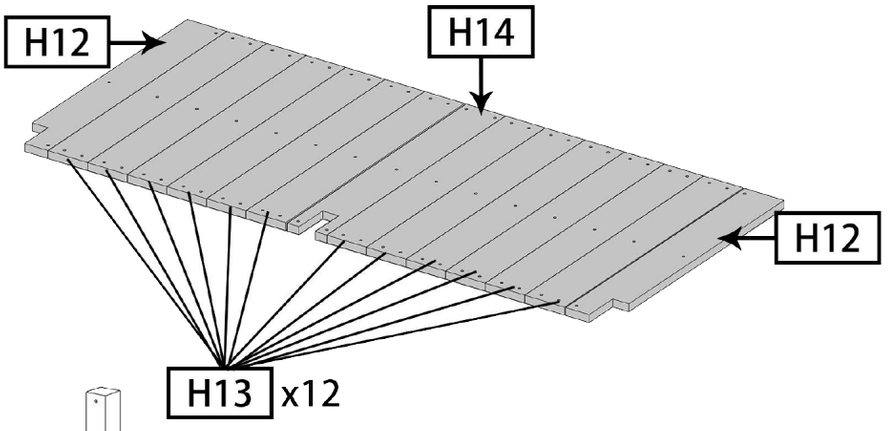


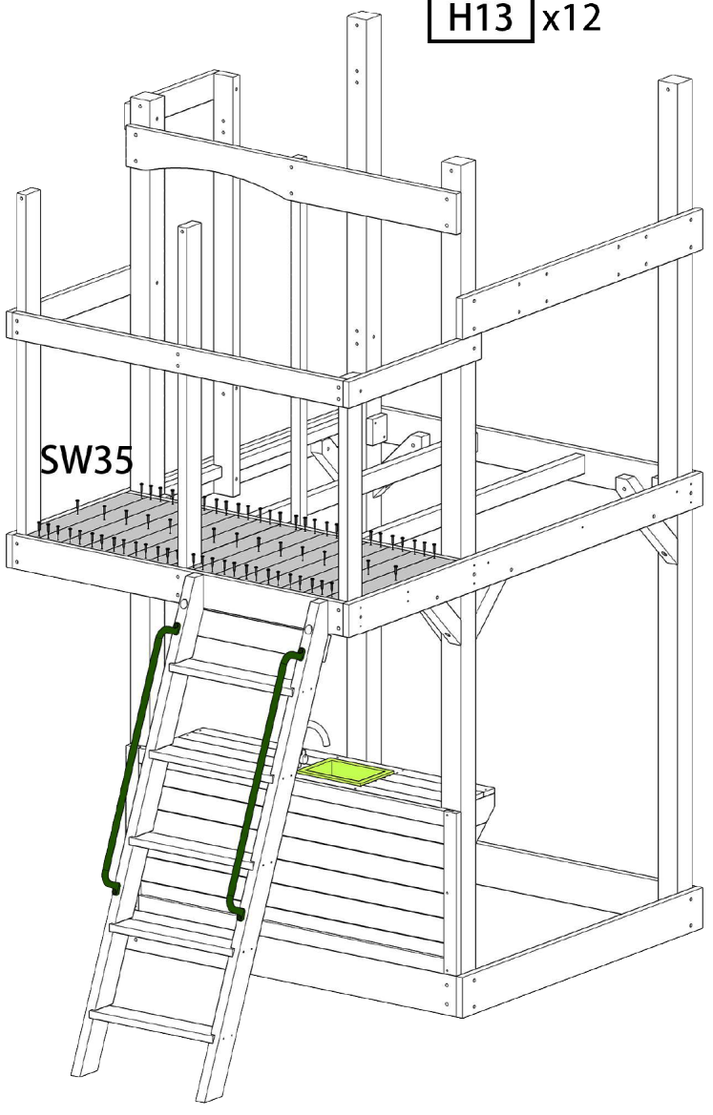




List	
Part NO.	Qty
H12	2
H13	12
H14	1
SW35	71

STEP 23

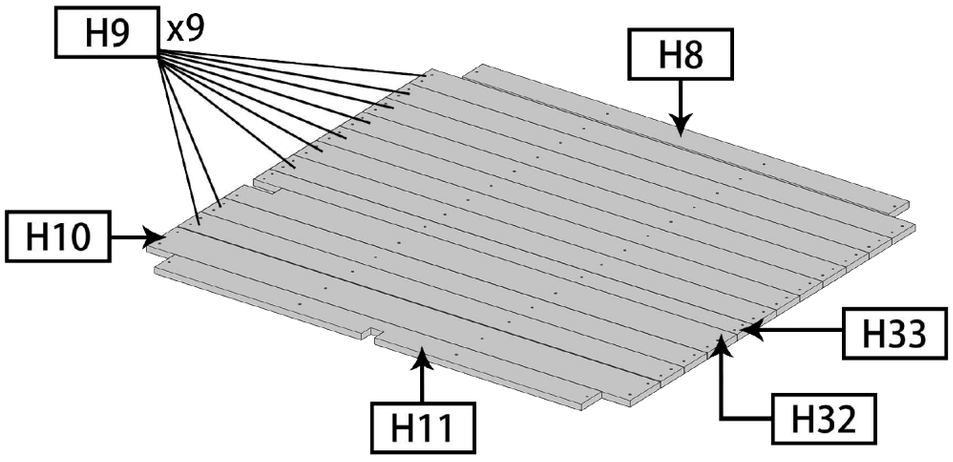

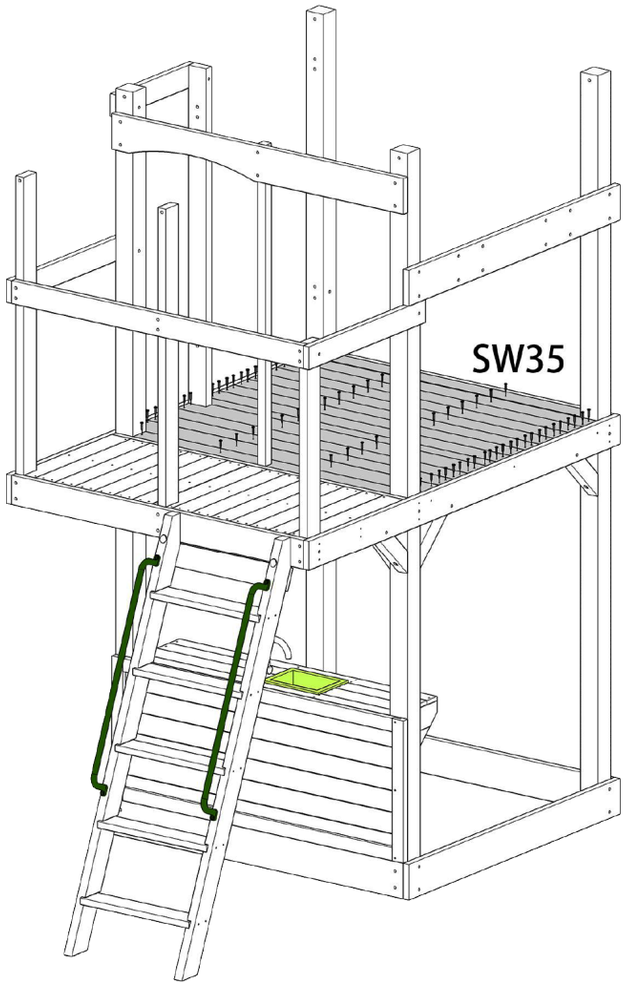





List	
Part NO.	Qty
H8	1
H9	9
H10	1
H11	1
H32	1
H33	1
SW35	79

STEP 24


TIP: Take note of the spacing.

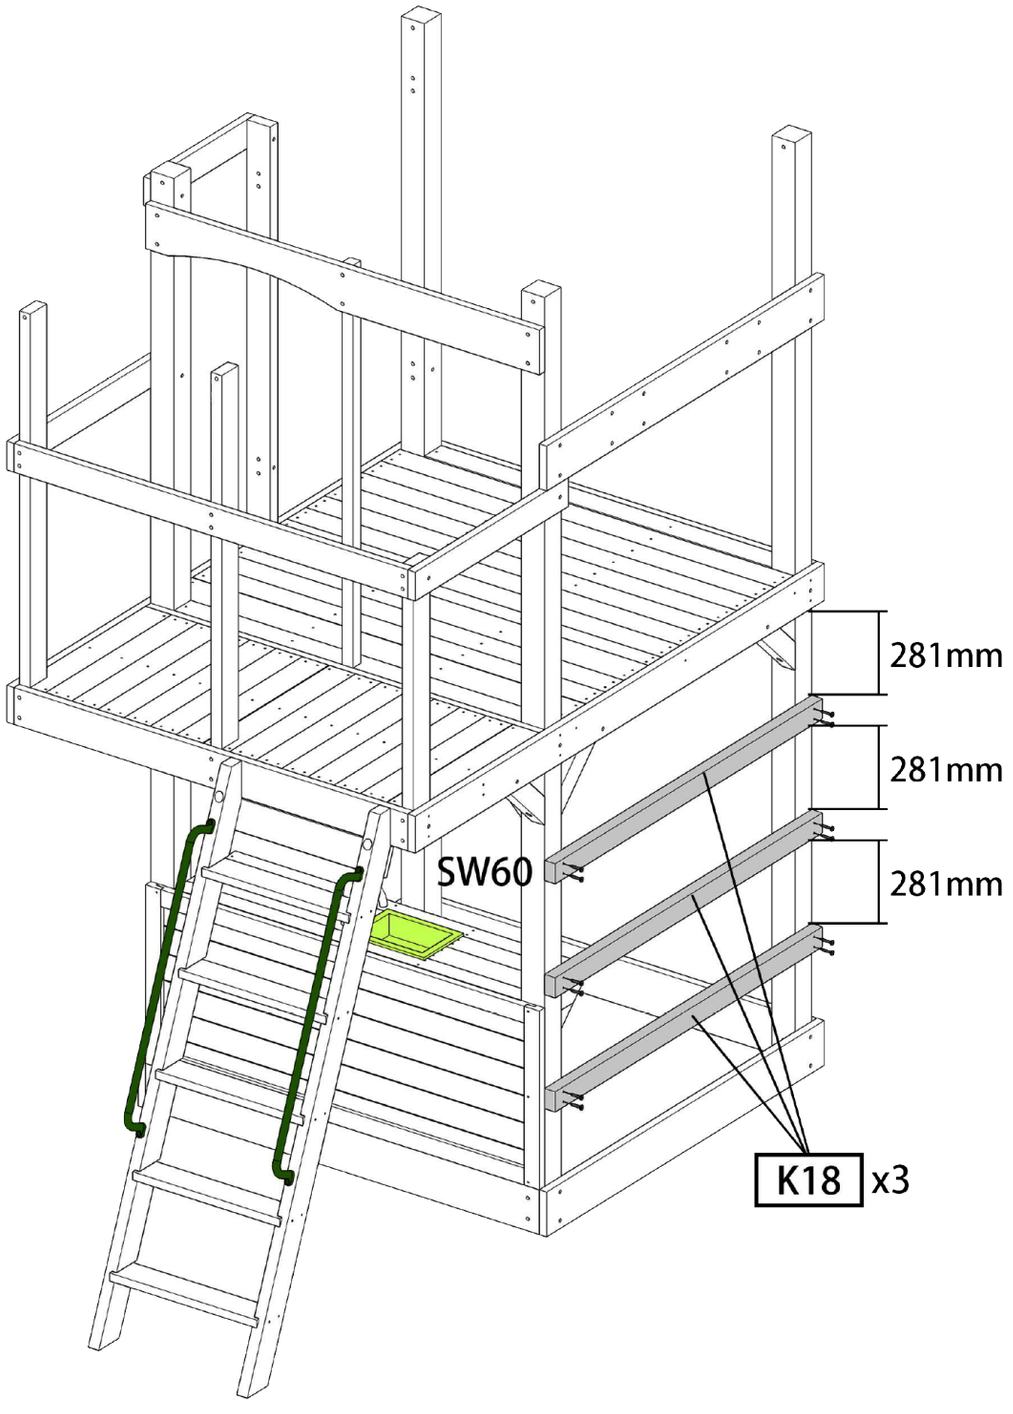


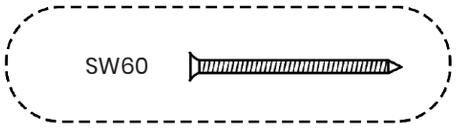

List	
Part NO.	Qty
K18	3
SW60	12


STEP 25

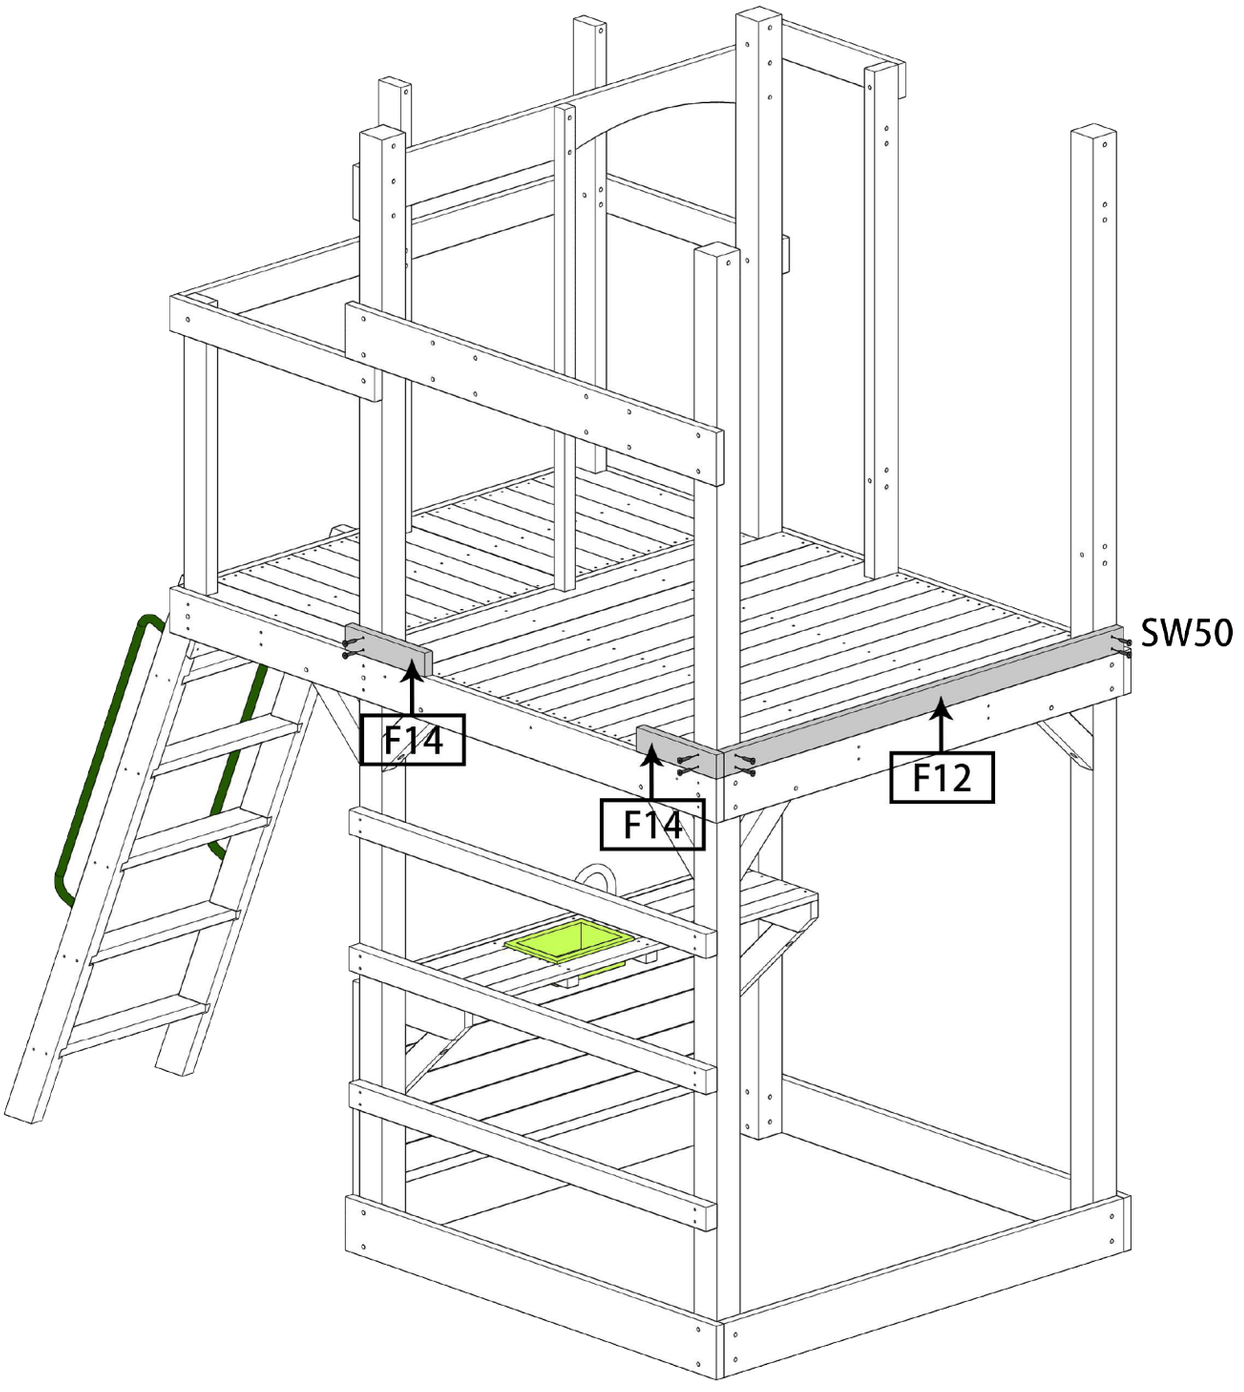

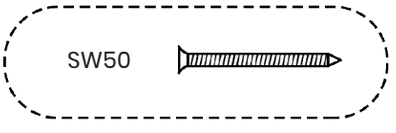

List	
Part NO.	Qty
F12	1
F14	2
SW50	8

STEP 26

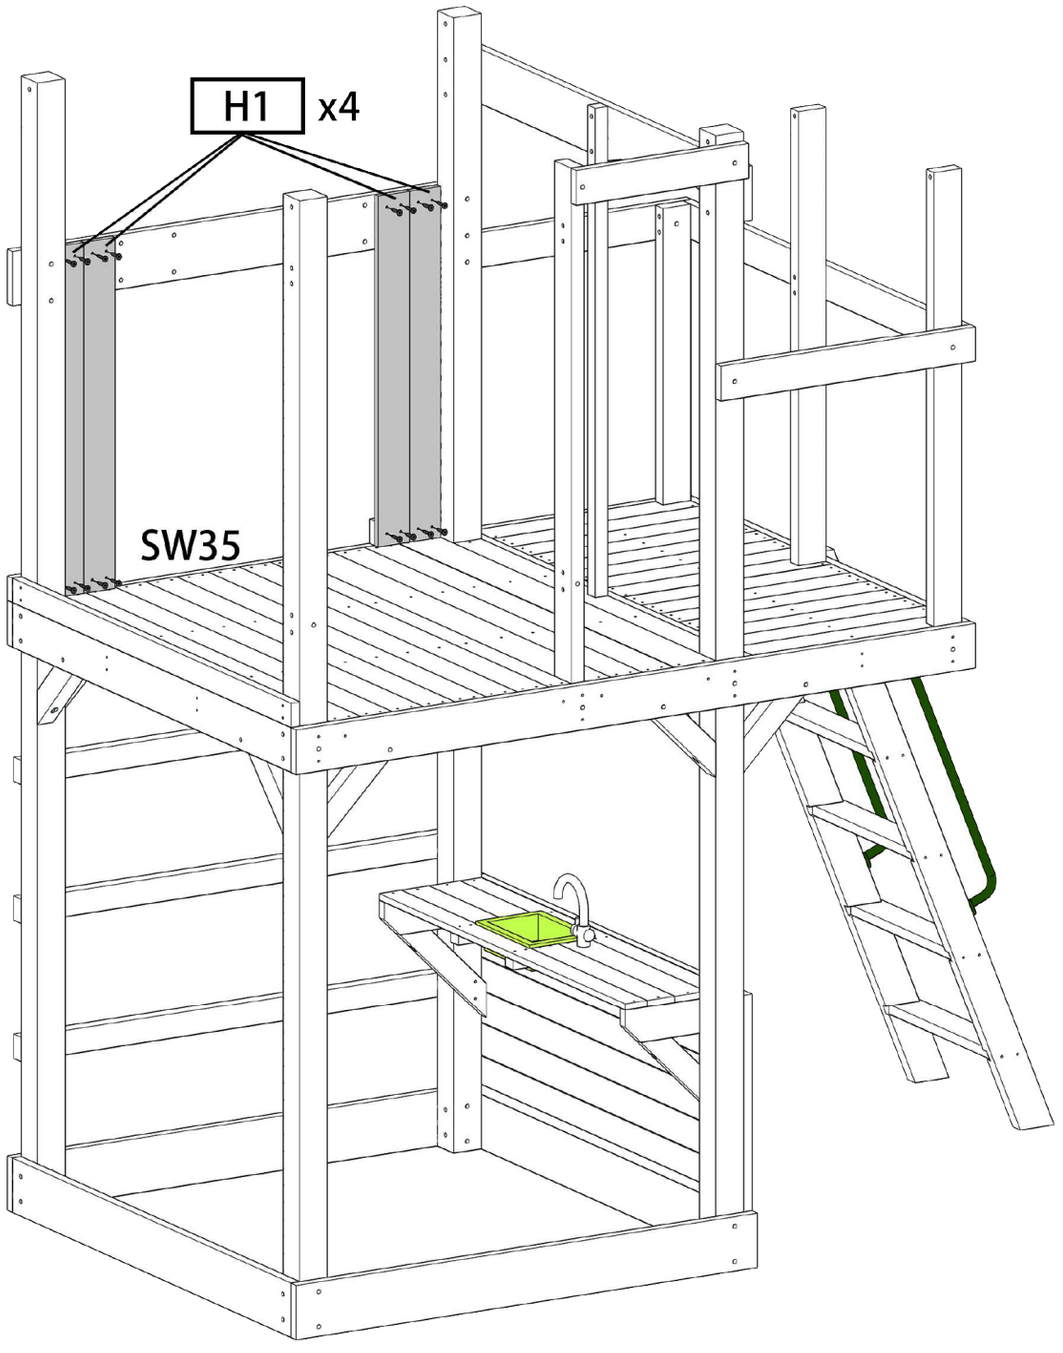





List	
Part NO.	Qty
H1	4
SW35	16

STEP 27


TIP: Take note of the spacing.

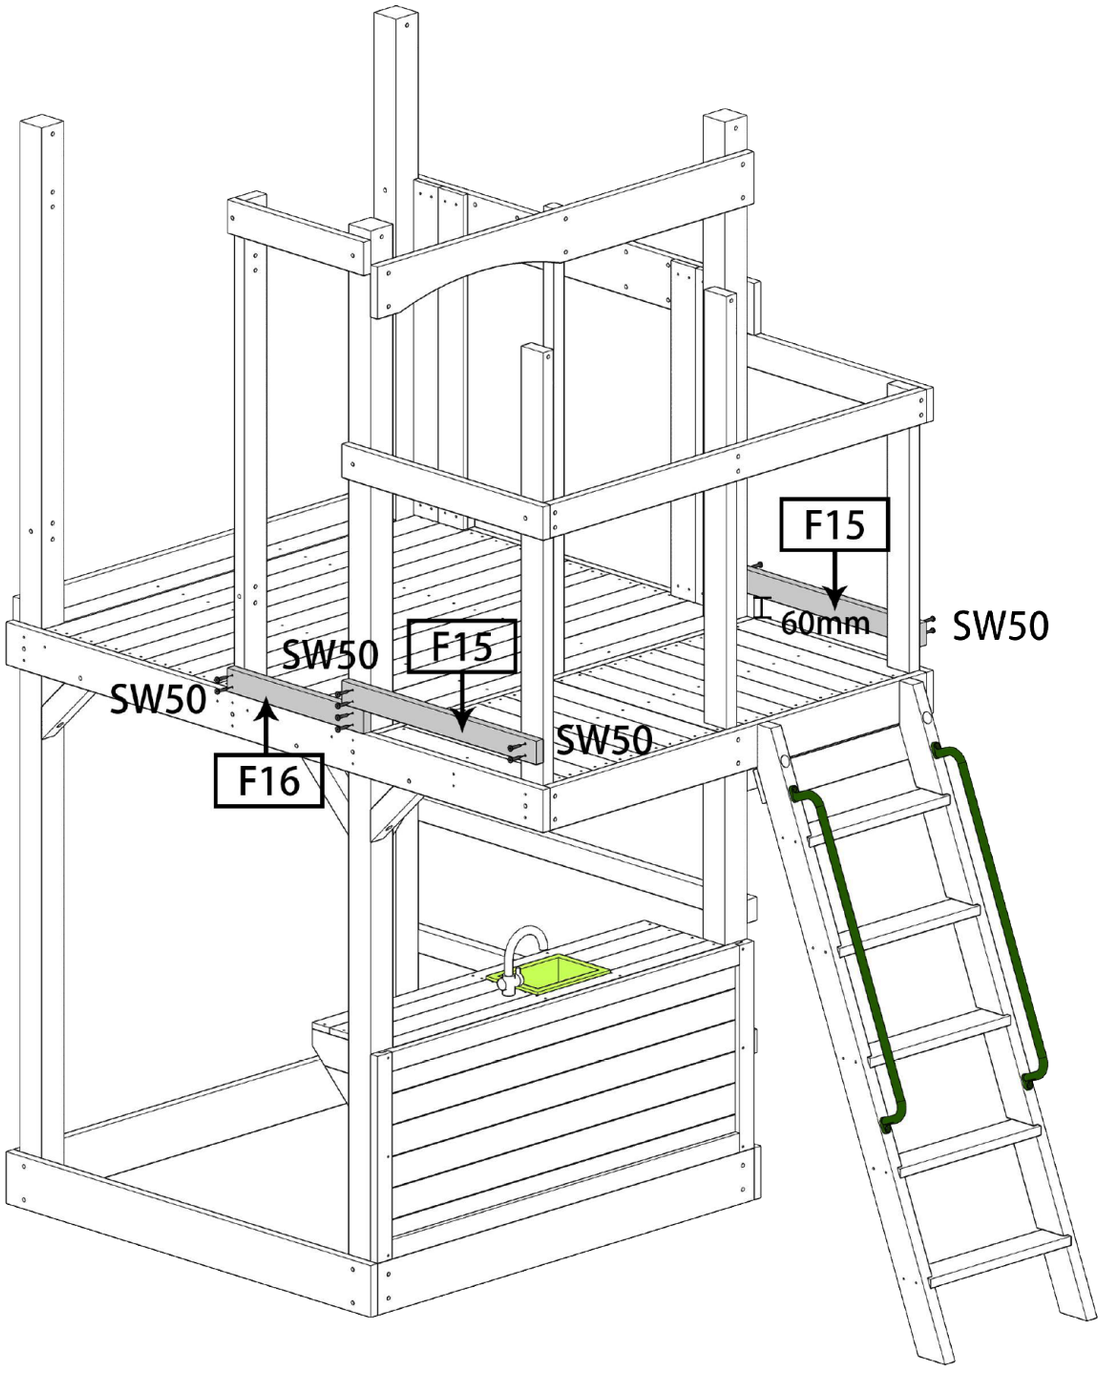

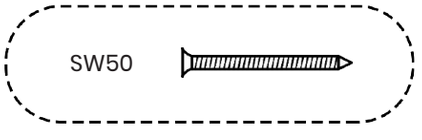



List	
Part NO.	Qty
F15	2
F16	1
SW50	12

STEP 28

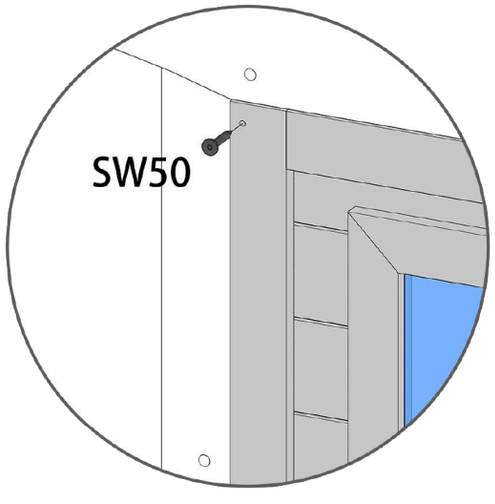

x6

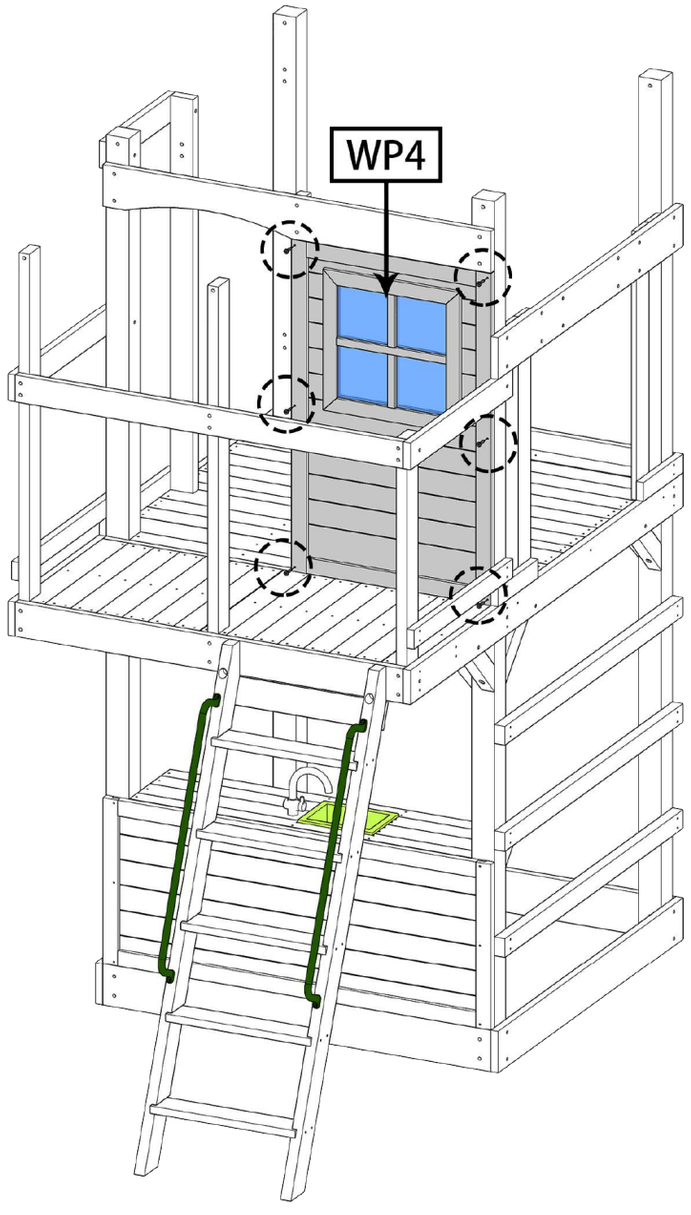


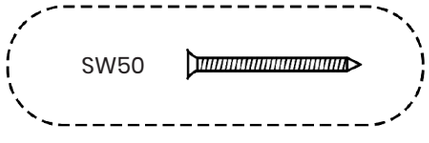



List	
Part NO.	Qty
WP4	1
SW50	6

STEP 29

TIP: Take note of the spacing.

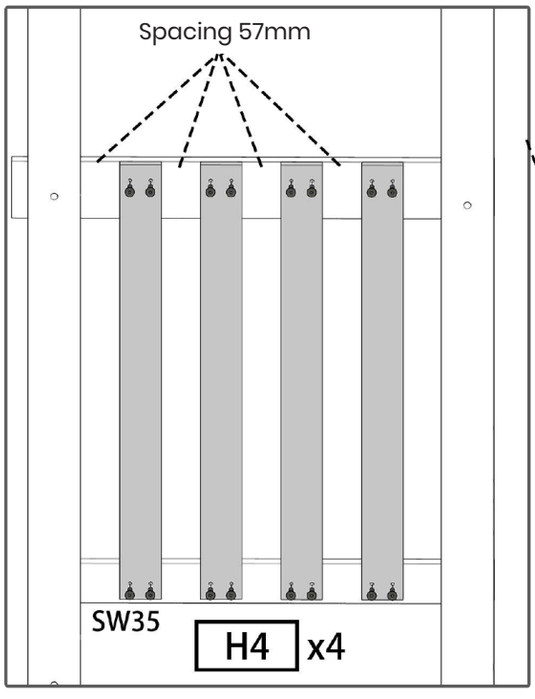

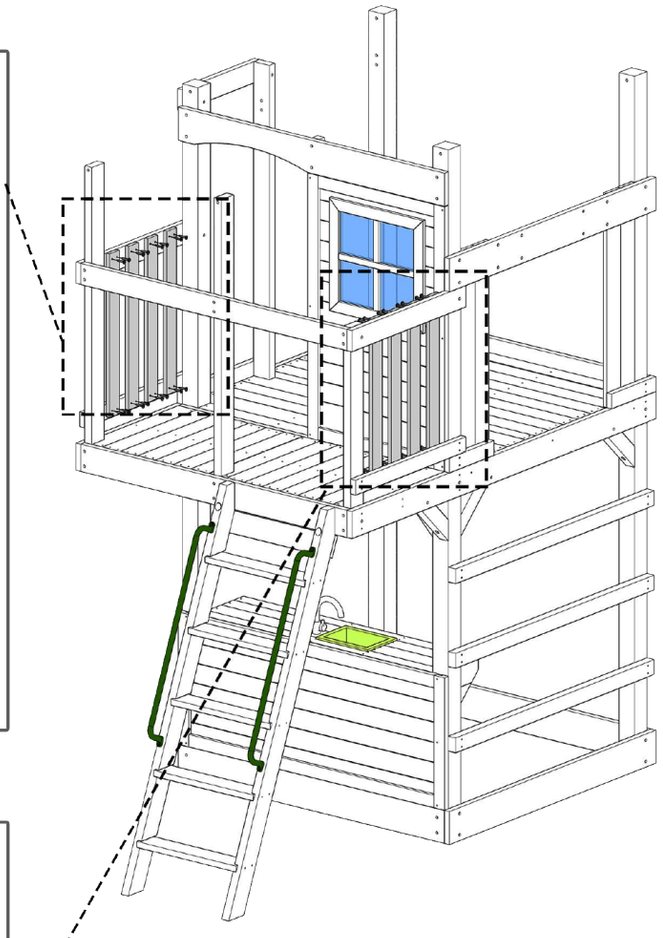


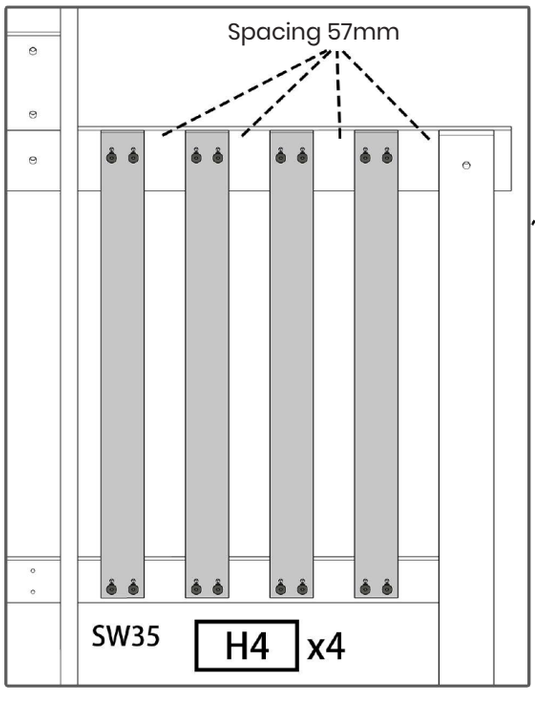




List	
Part NO.	Qty
H4	8
SW35	32

STEP 30

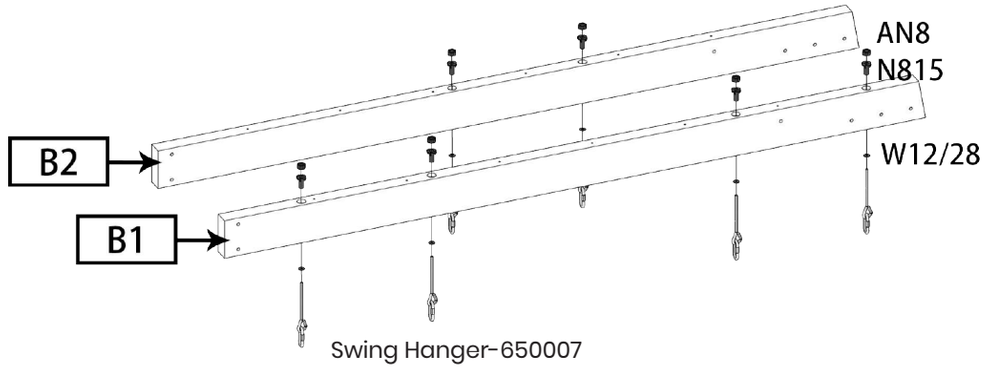

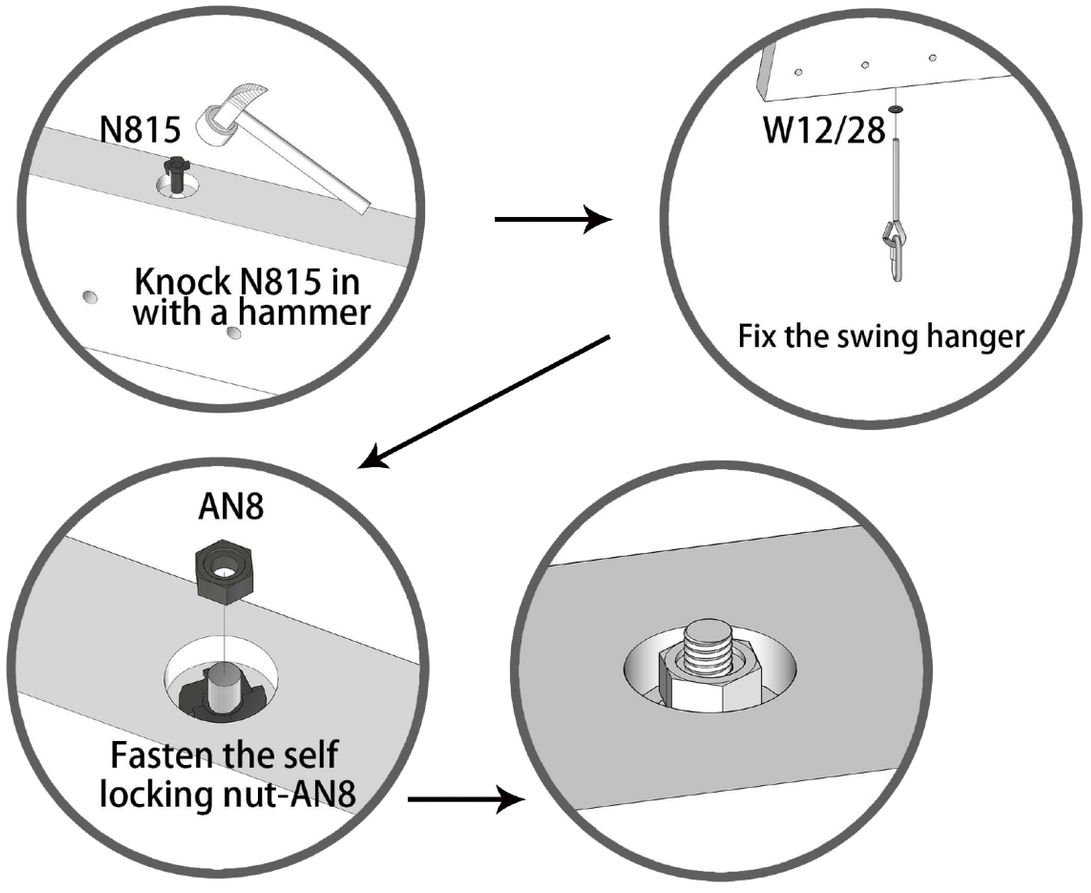



WARNING: Tighten AN8 securely and ensure the hanger passes completely through the nut. Do not use the swing seat until all AN8 nuts are fully tightened.



List	
Part NO.	Qty
B1	1
B2	1
650007	6
AN8	6
N815	6
W12/28	6


STEP 31

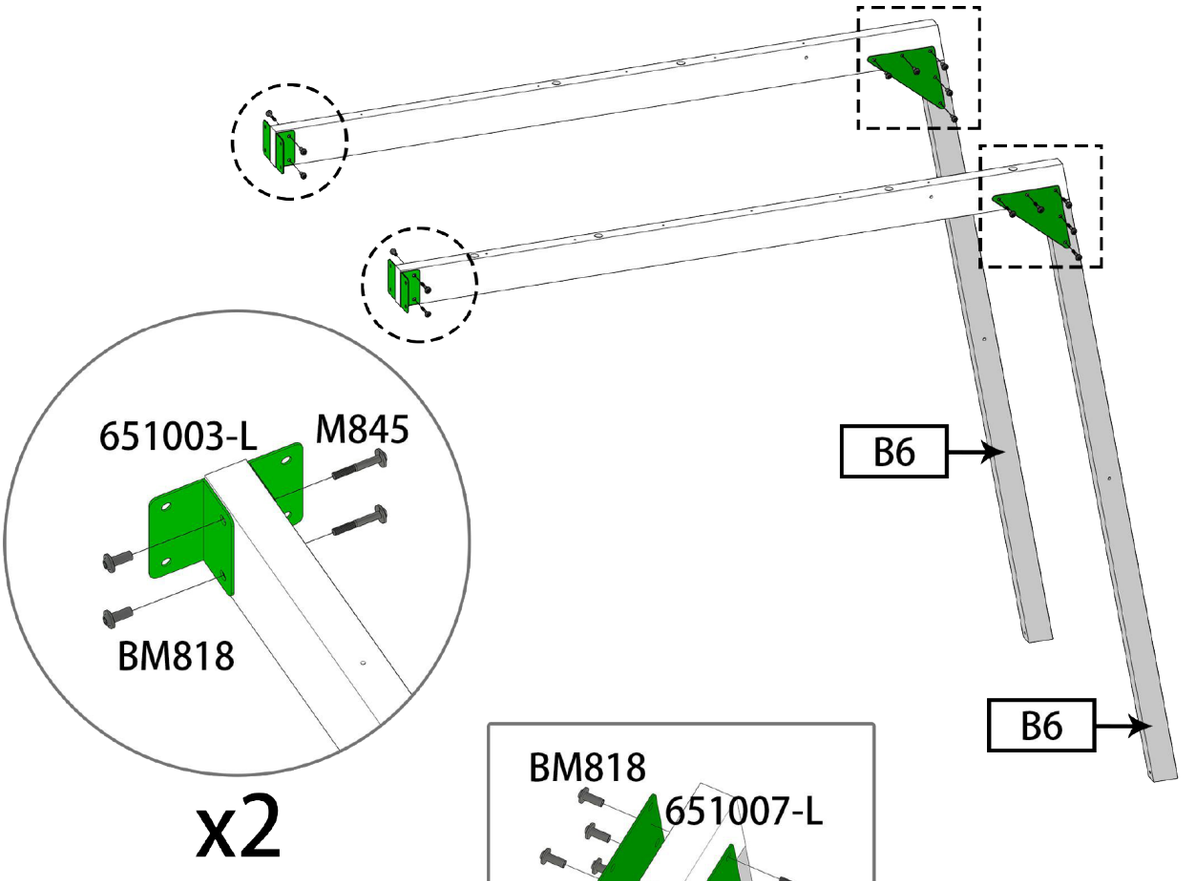

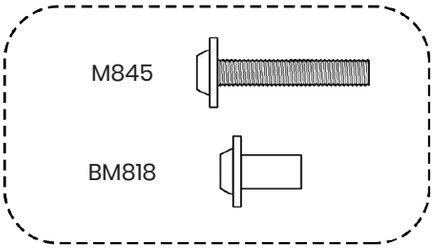


List	
Part NO.	Qty
B6	2
651003-L	4
651007-L	4
M845	14
BM818	14

STEP 32

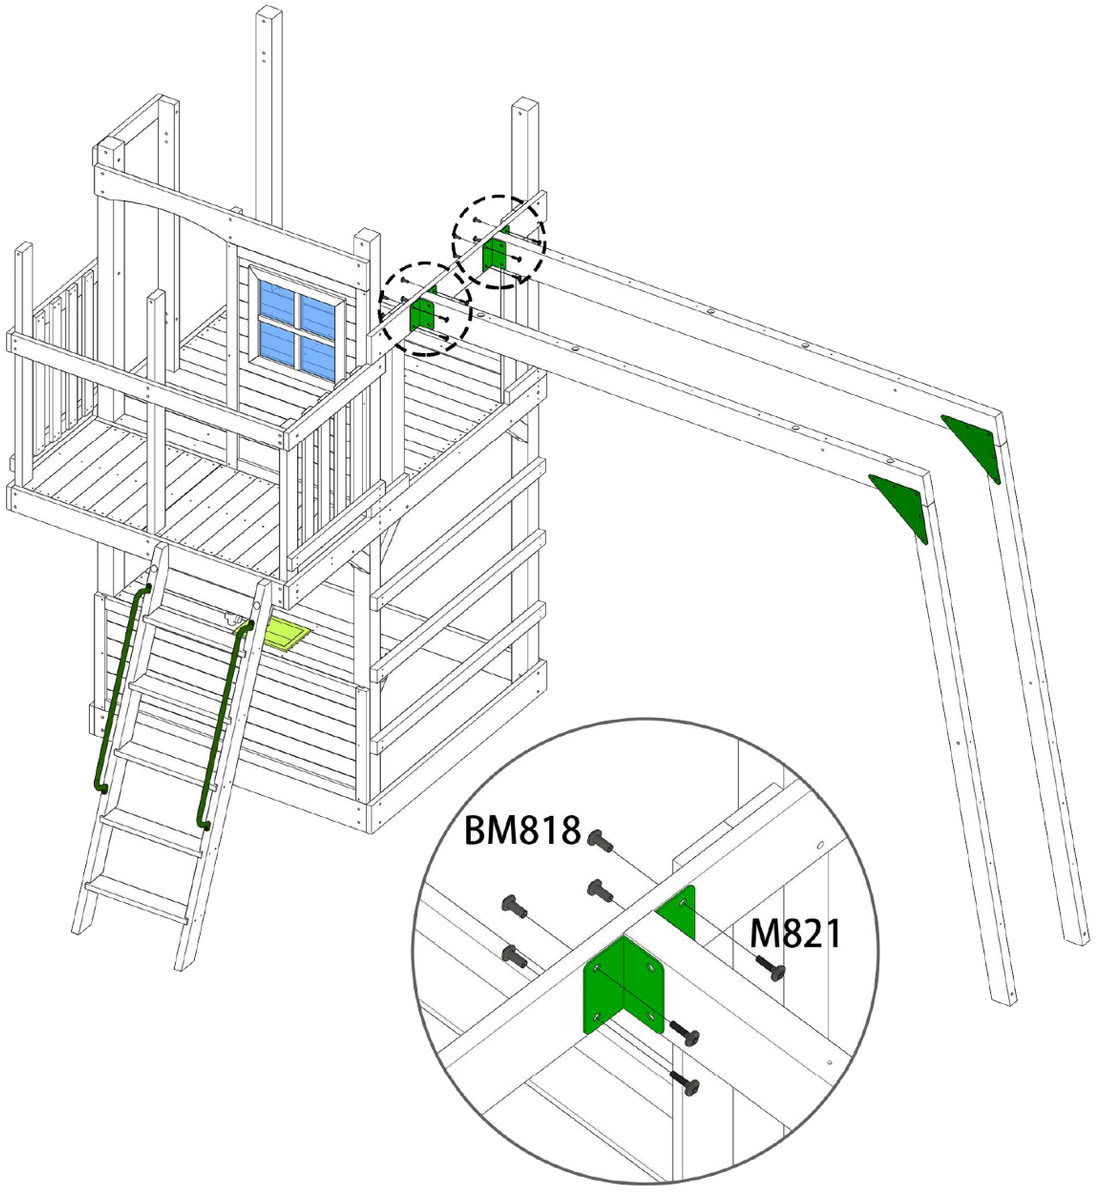



x2

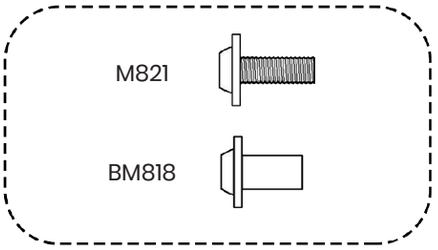


List	
Part NO.	Qty
M821	8
BM818	8

STEP 33

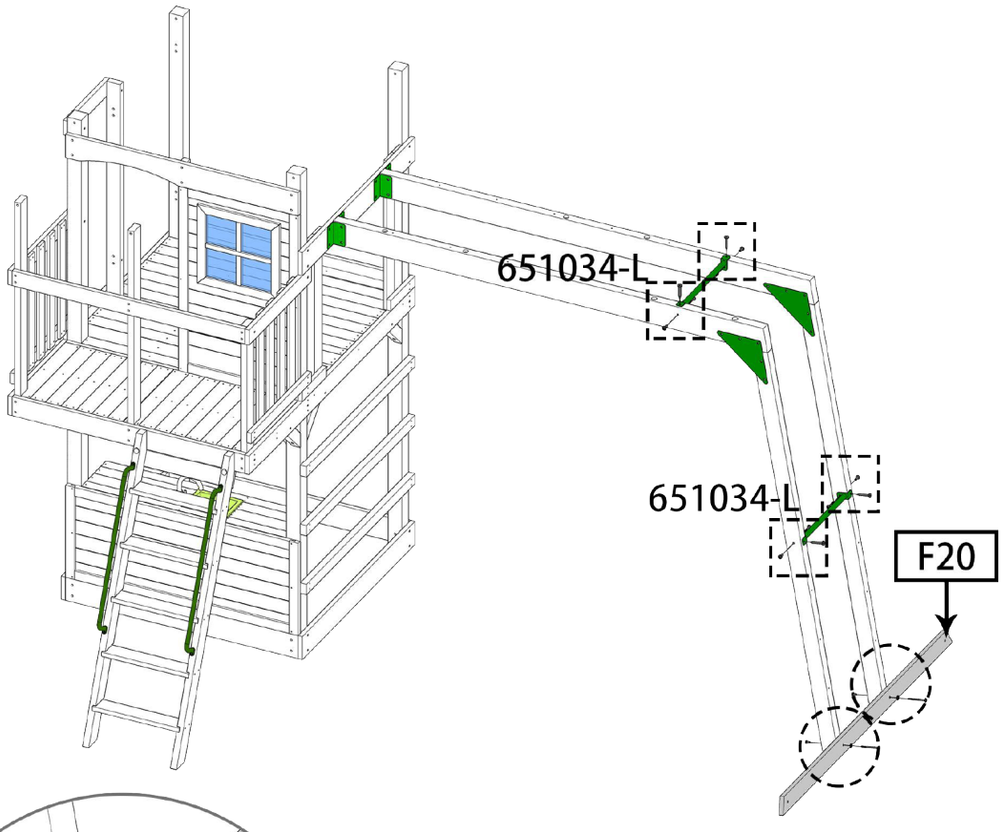


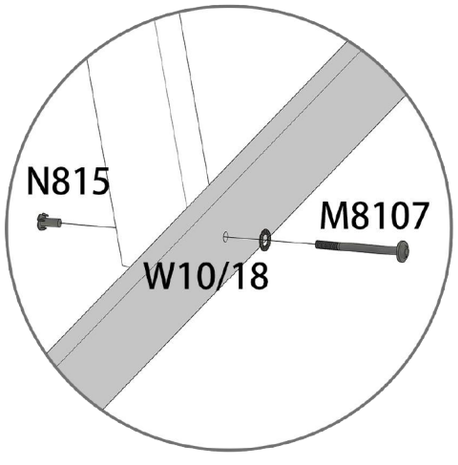

x2

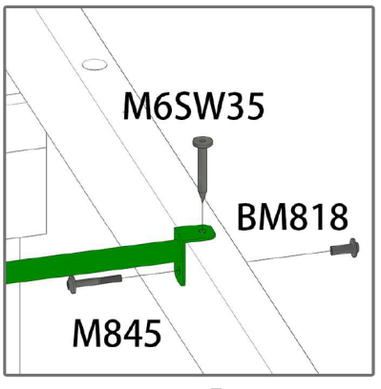



x4

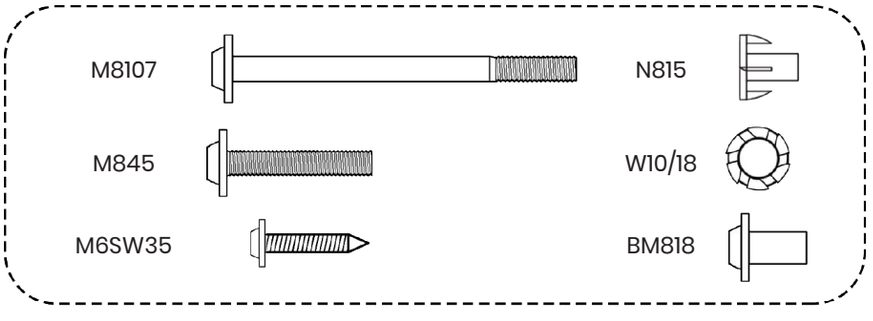


List	
Part NO.	Qty
F20	1
651034-L	2
N815	2
W10/18	2
M8107	2
M845	4
M6SW35	4
BM818	4

STEP 34

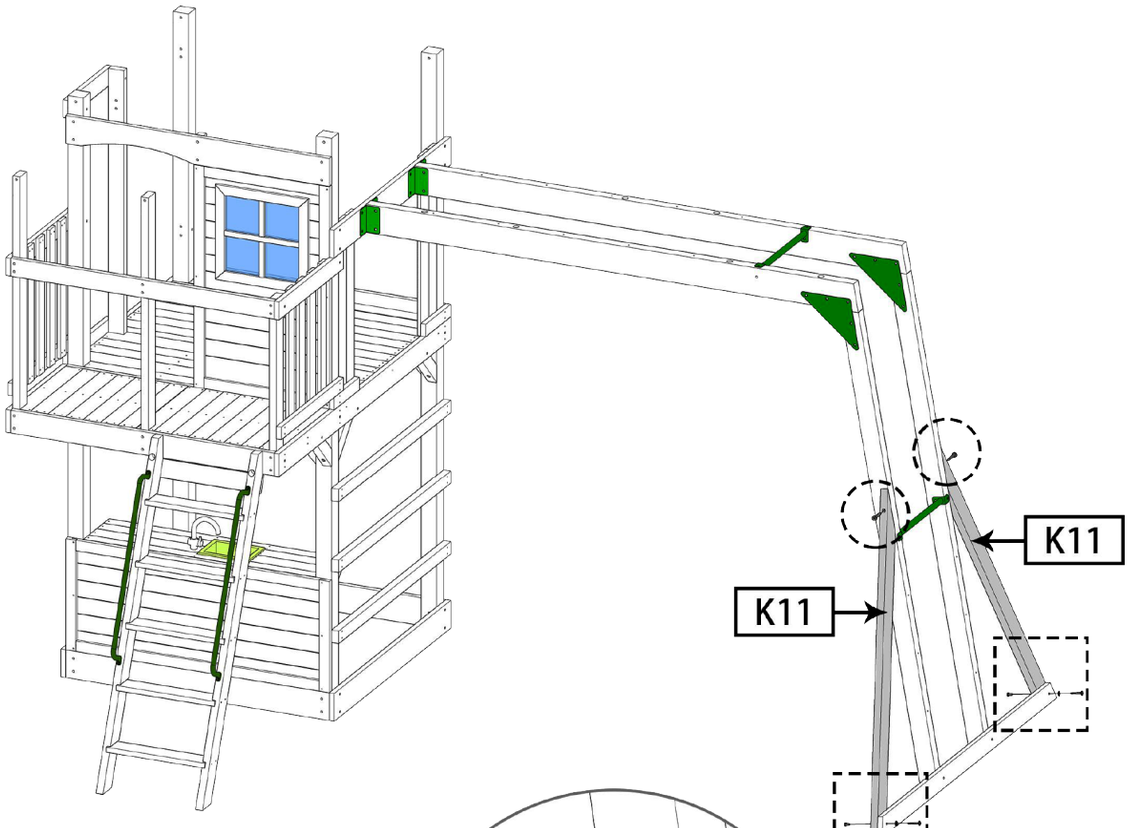


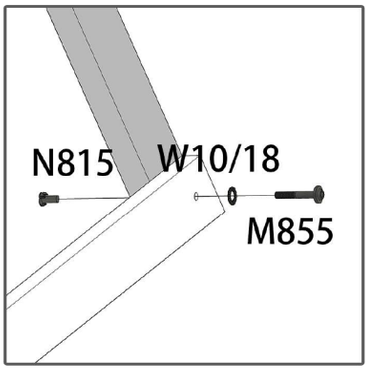

x2

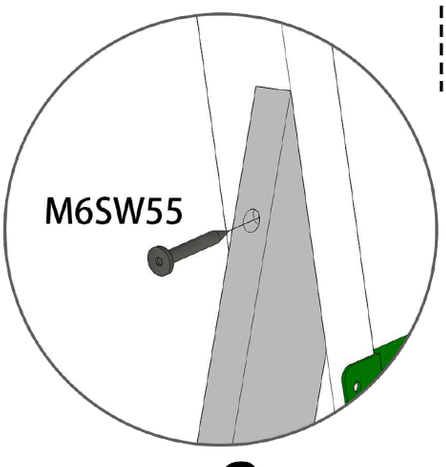



x2

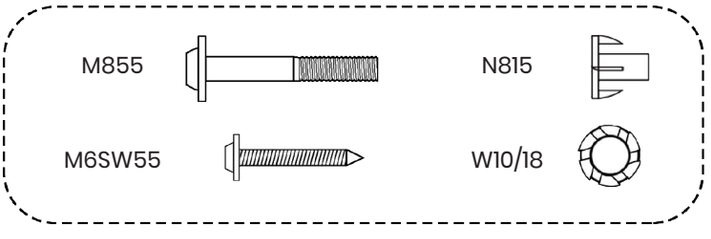

List	
Part NO.	Qty
K11	2
N815	2
W10/18	2
M855	2
M6SW55	2


STEP 35

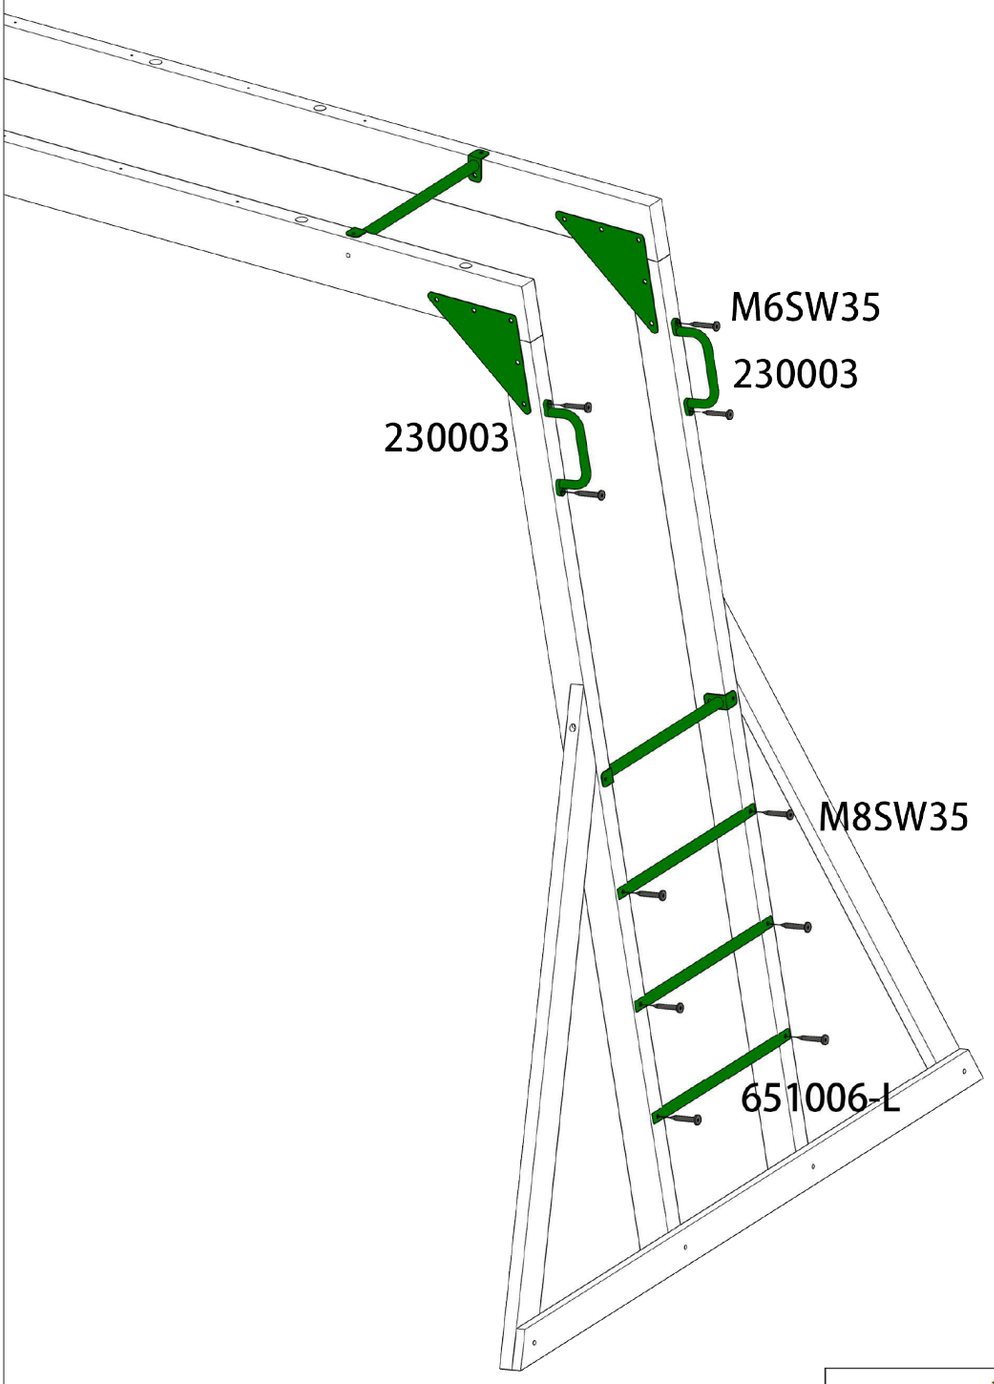


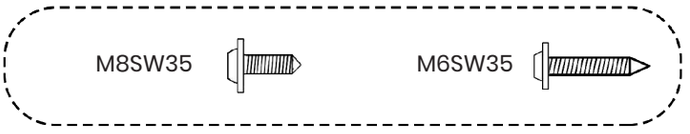

List	
Part NO.	Qty
651006-L	3
230003	2
M8SW35	6
M6SW35	4


STEP 36

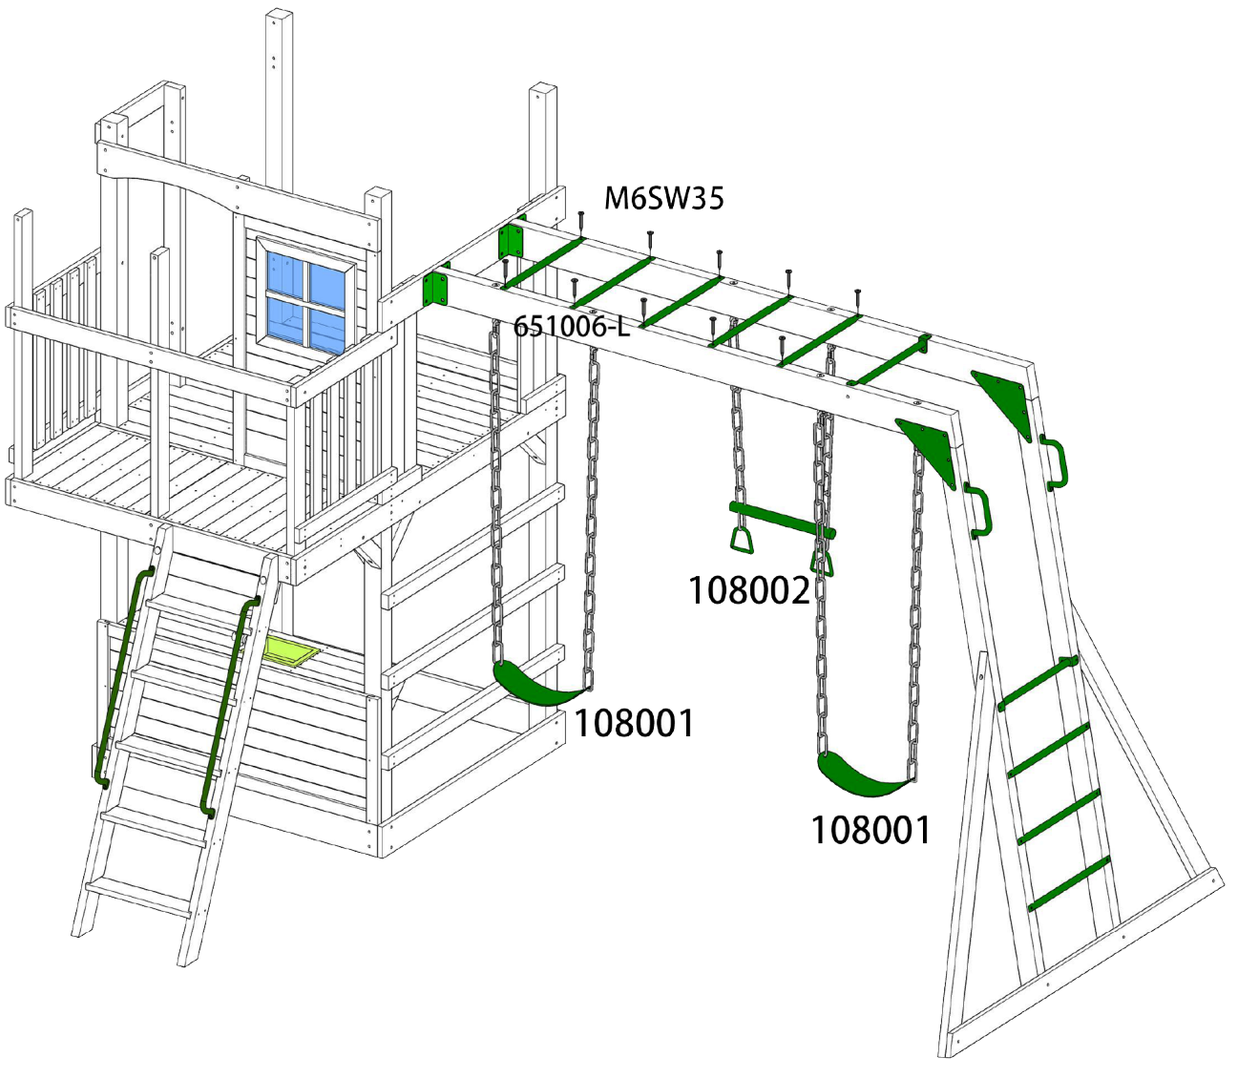

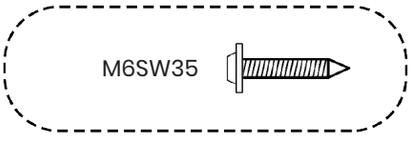


List	
Part NO.	Qty
651006-L	5
108001	2
108002	1
M6SW35	10

STEP 37

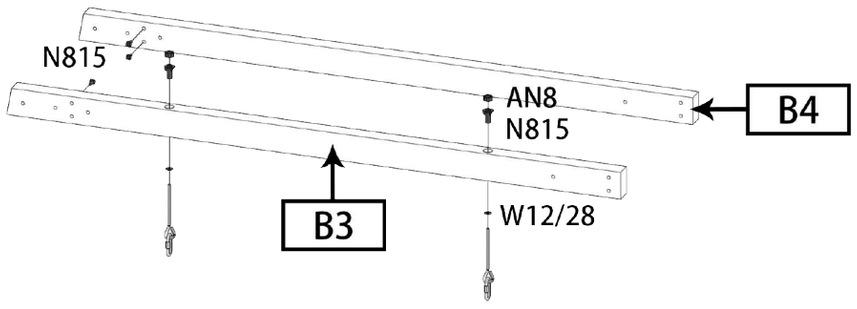

Swing Hanger-650019

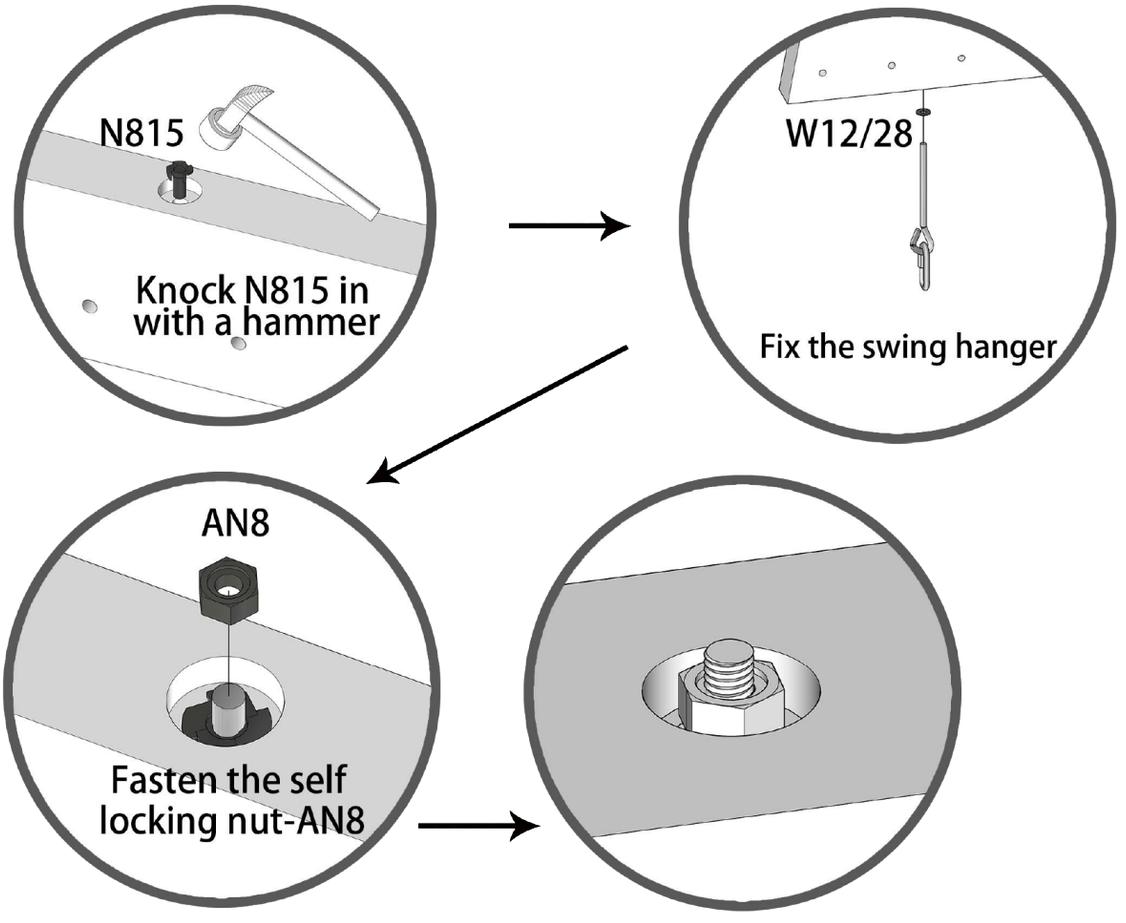



WARNING: Tighten AN8 securely and ensure the hanger passes completely through the nut. Do not use the swing seat until all AN8 nuts are fully tightened.



List	
Part NO.	Qty
B3	1
B4	1
650019	2
AN8	2
N815	6
W12/28	2


STEP 38

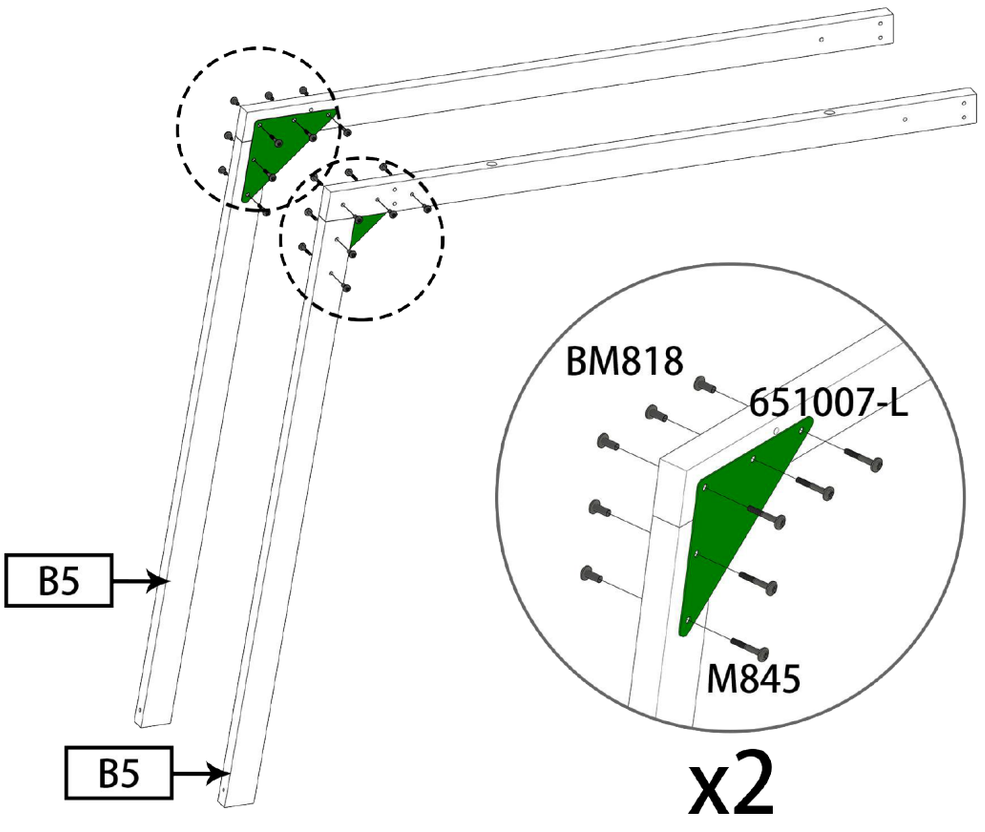


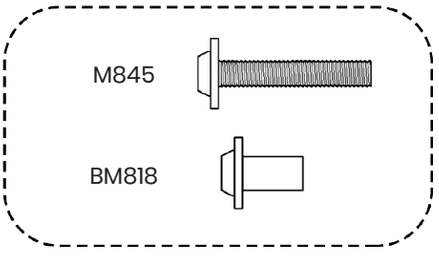



List	
Part NO.	Qty
651007-L	2
B5	2
M845	10
BM818	10

STEP 39

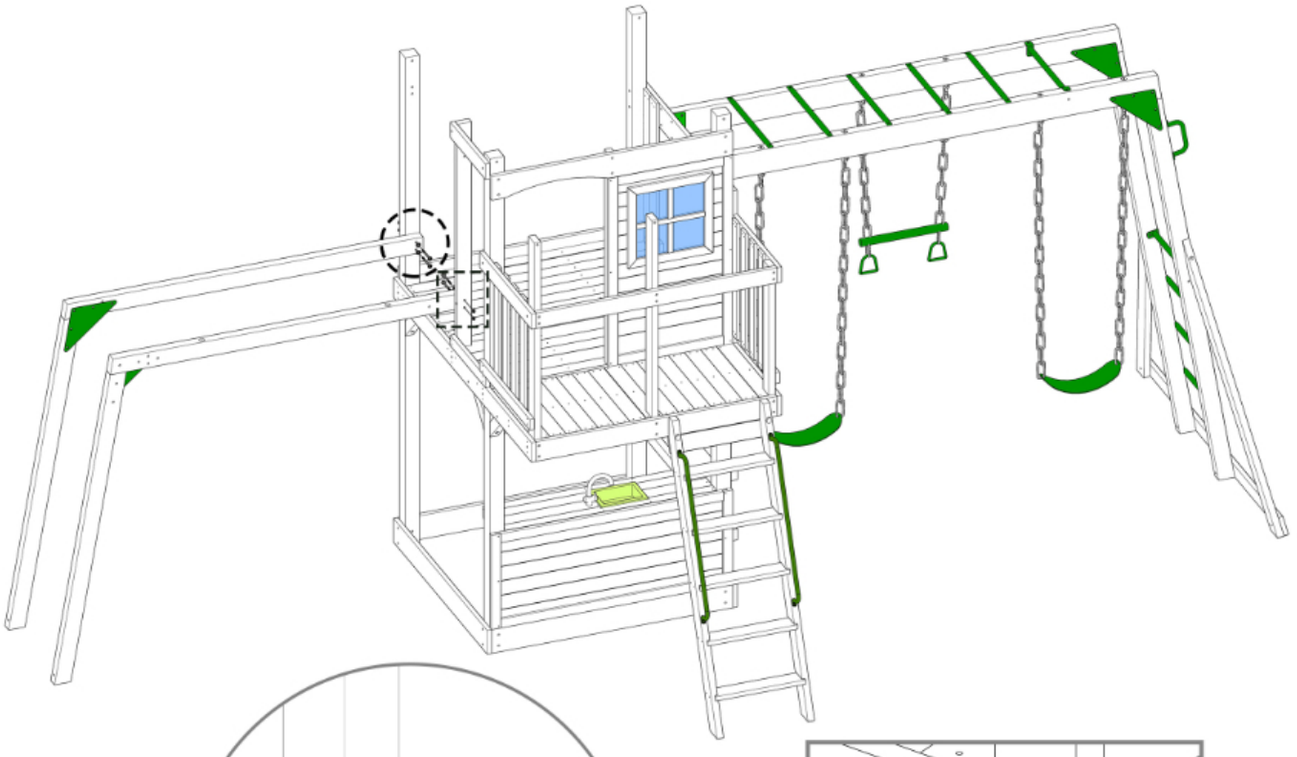

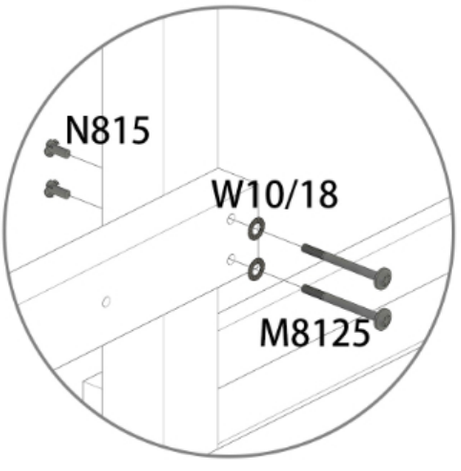


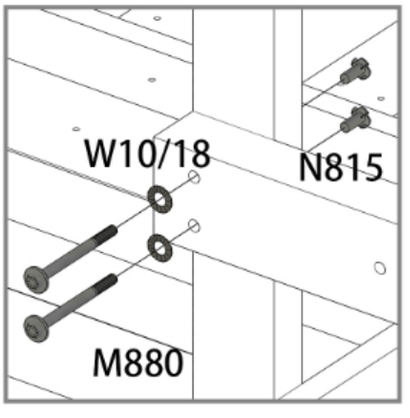


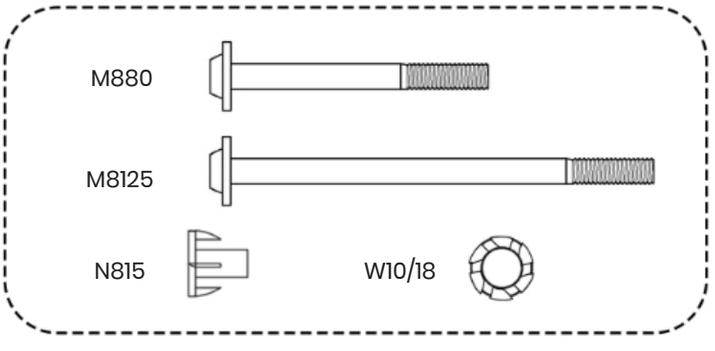


List	
Part NO.	Qty
M8125	2
N815	4
M880	2
W10/18	4

STEP 40

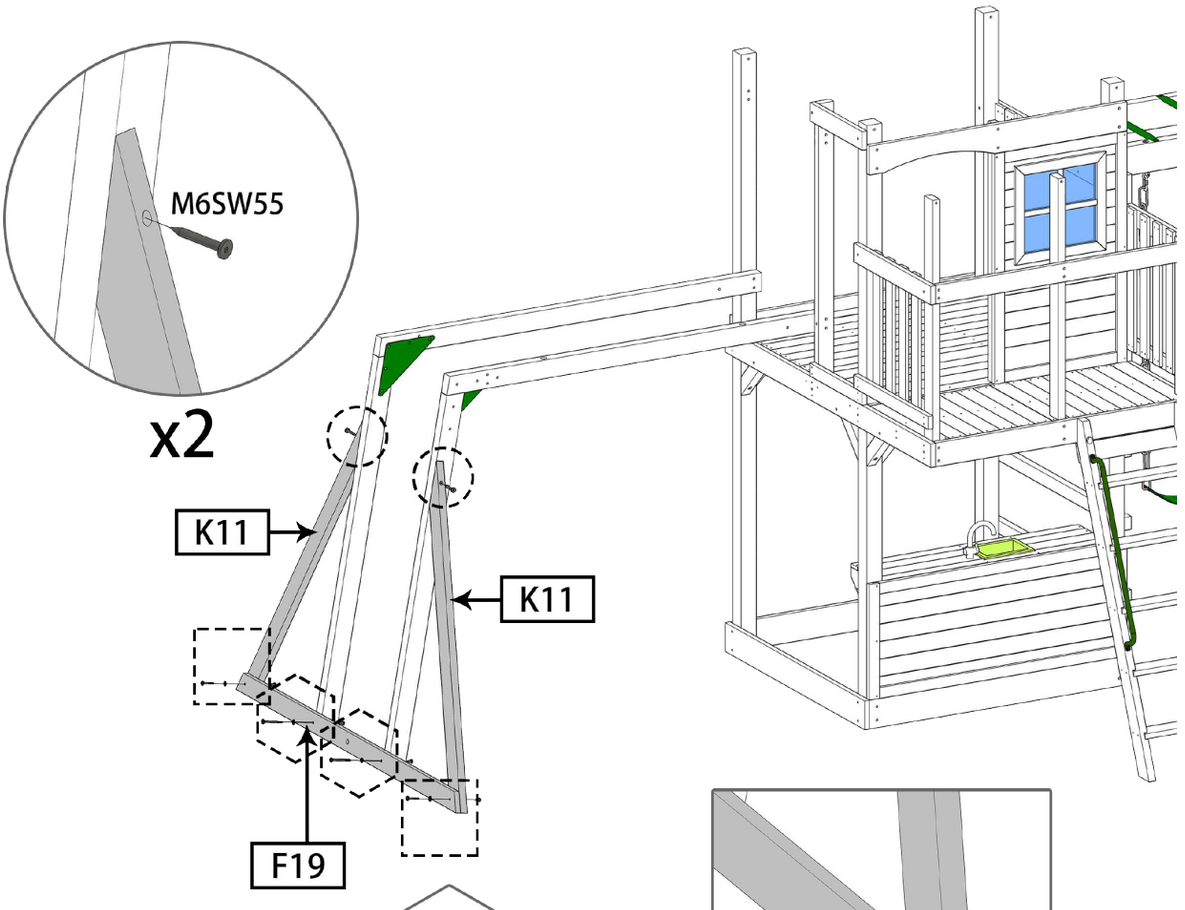


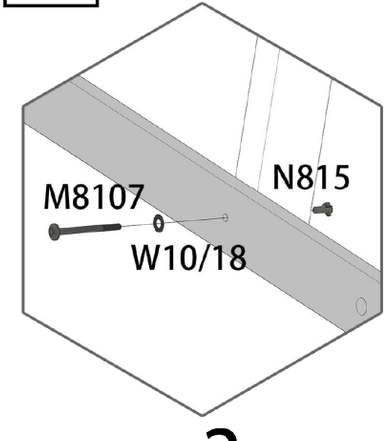

x2

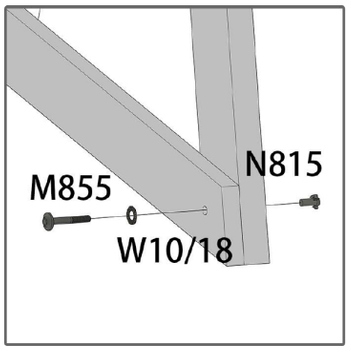


x2

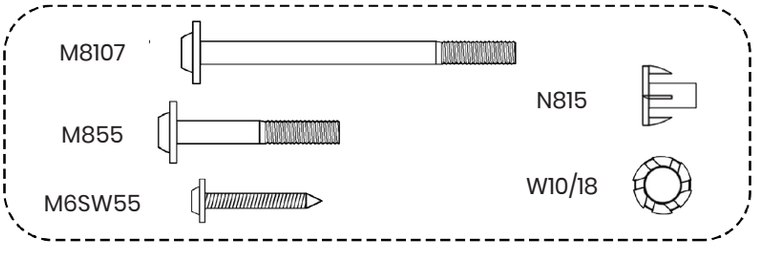

List	
Part NO.	Qty
K11	2
F19	1
N815	4
W10/18	4
M8107	2
M855	2
M6SW55	2


STEP 41

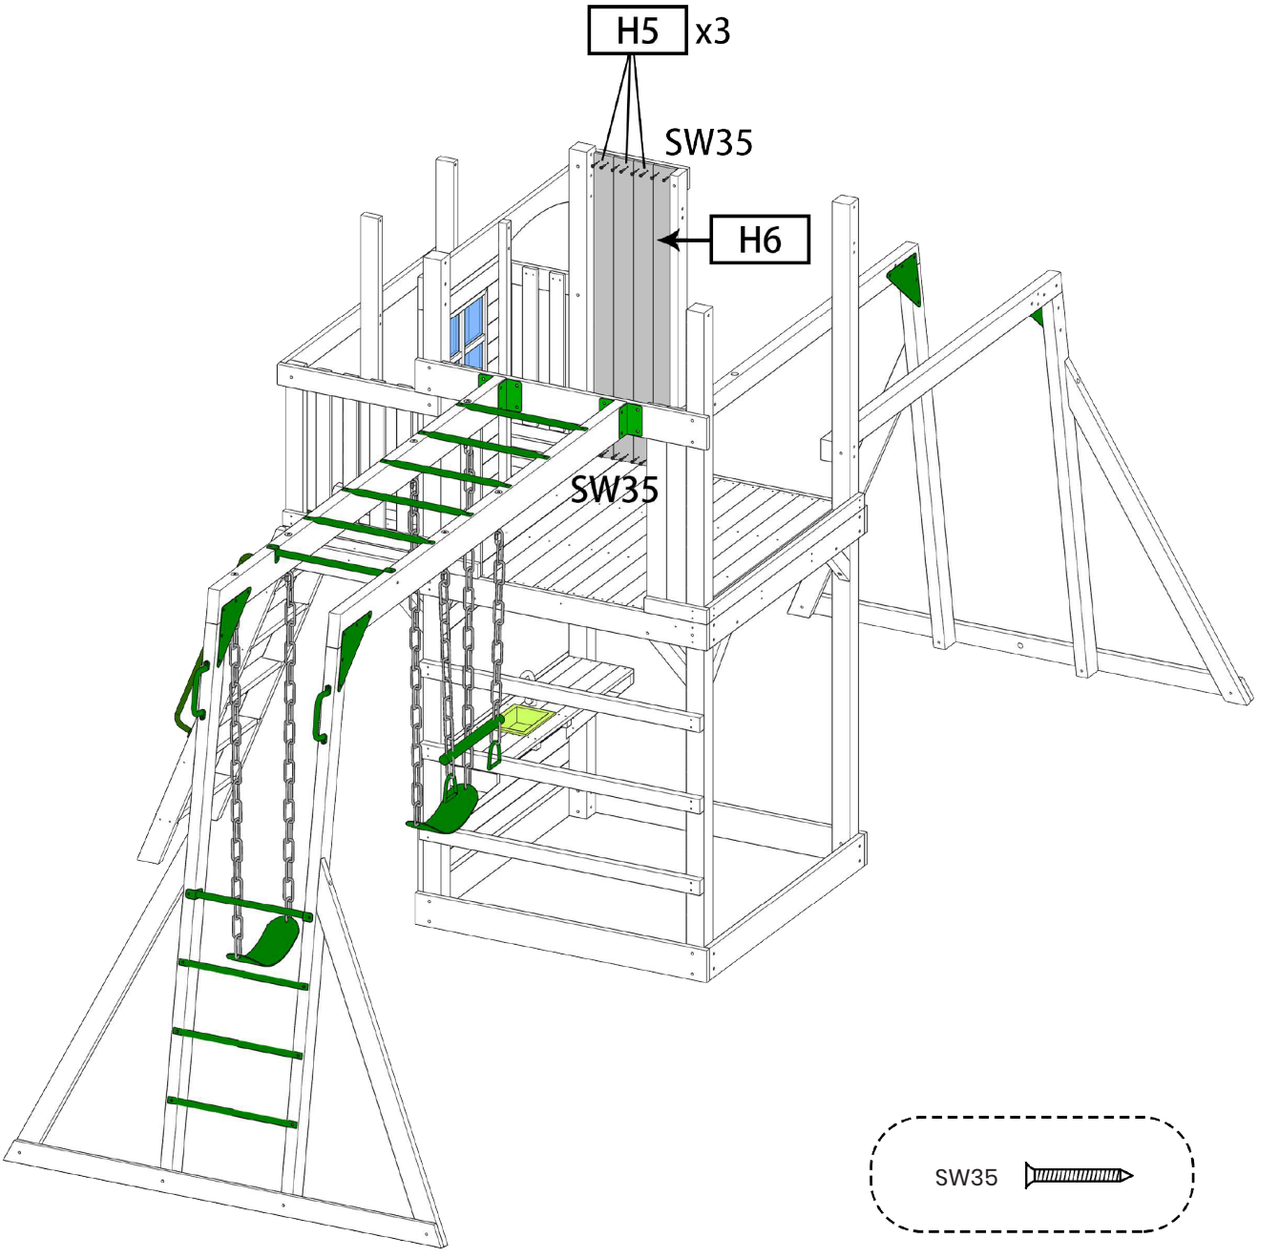


List	
Part NO.	Qty
H5	3
H6	1
SW35	16

STEP 42


TIP: Take note of the spacing.

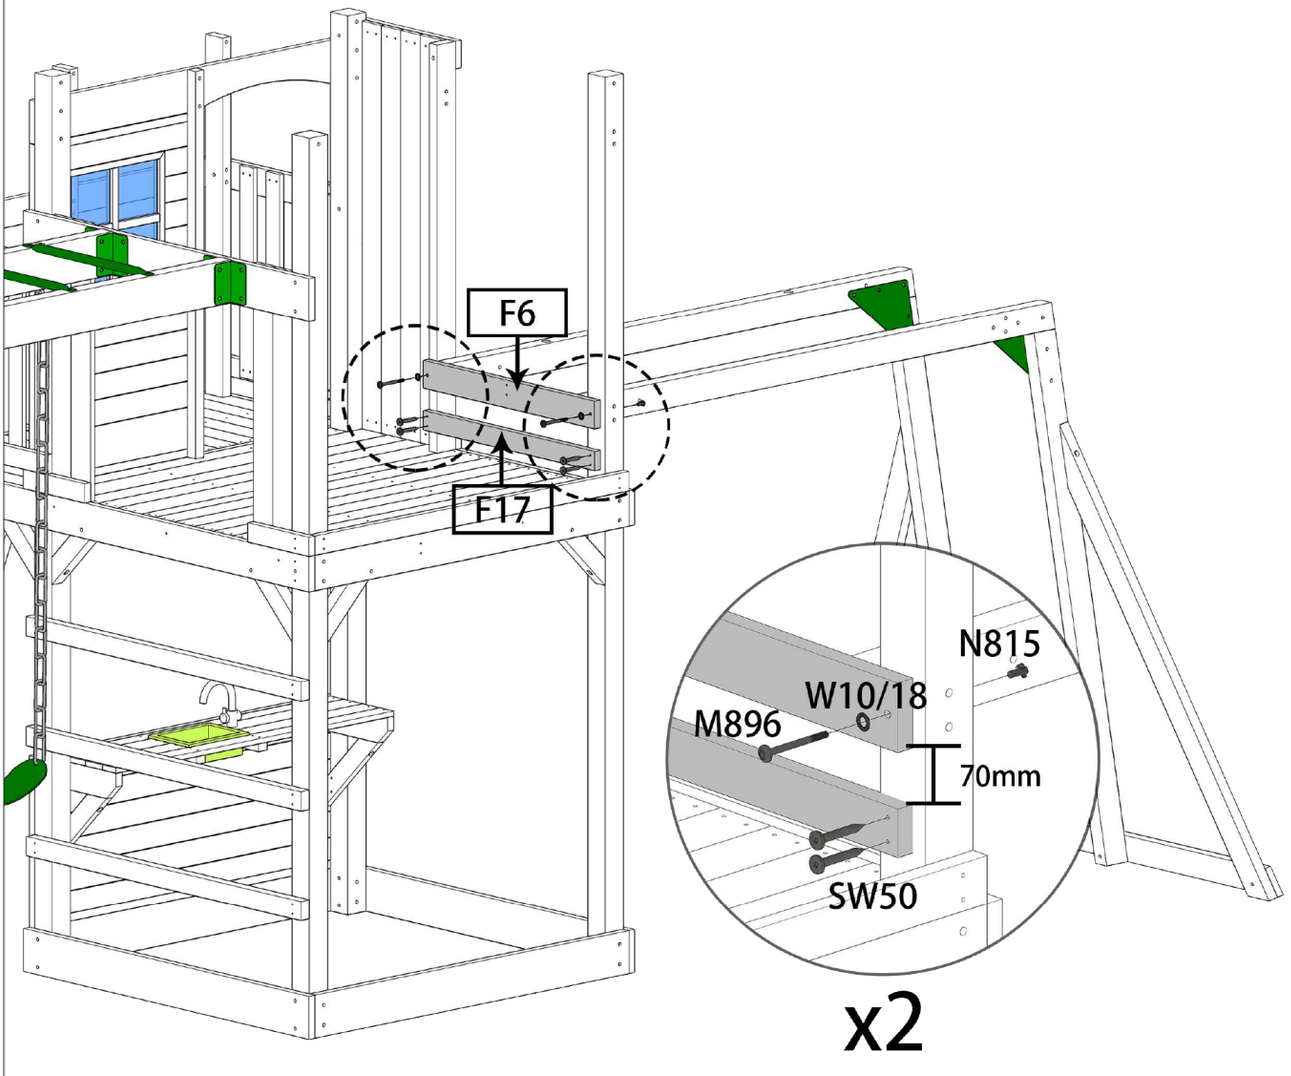

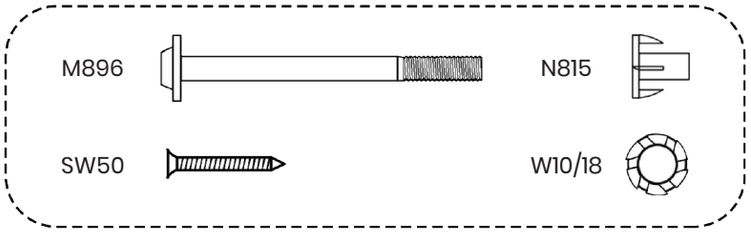

List	
Part NO.	Qty
F6	1
F17	1
N815	2
W10/18	2
M896	2
SW50	4


STEP 43

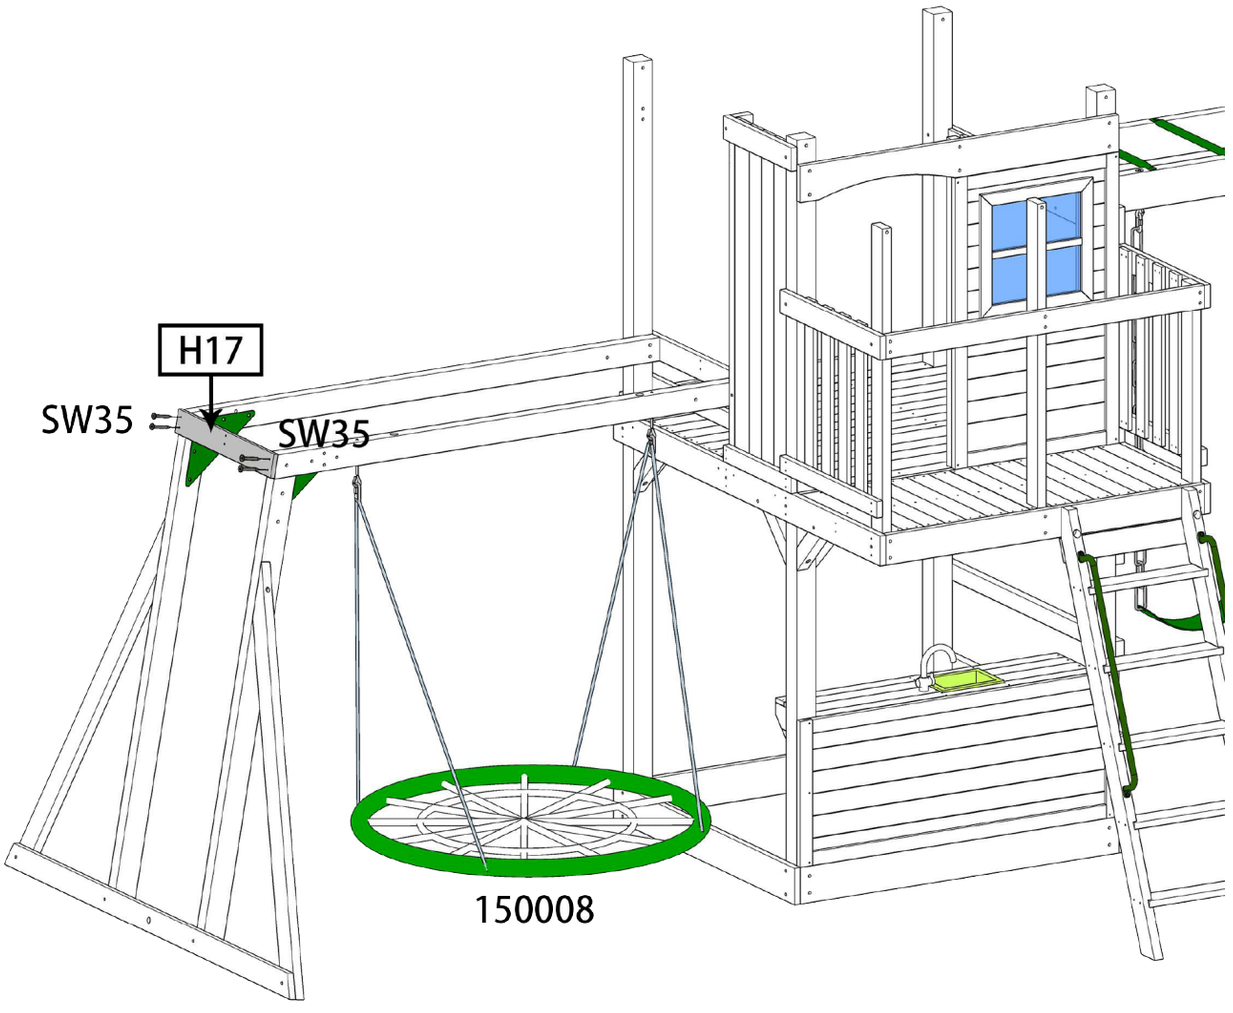




List	
Part NO.	Qty
150008	1
H17	1
SW35	4


STEP 44

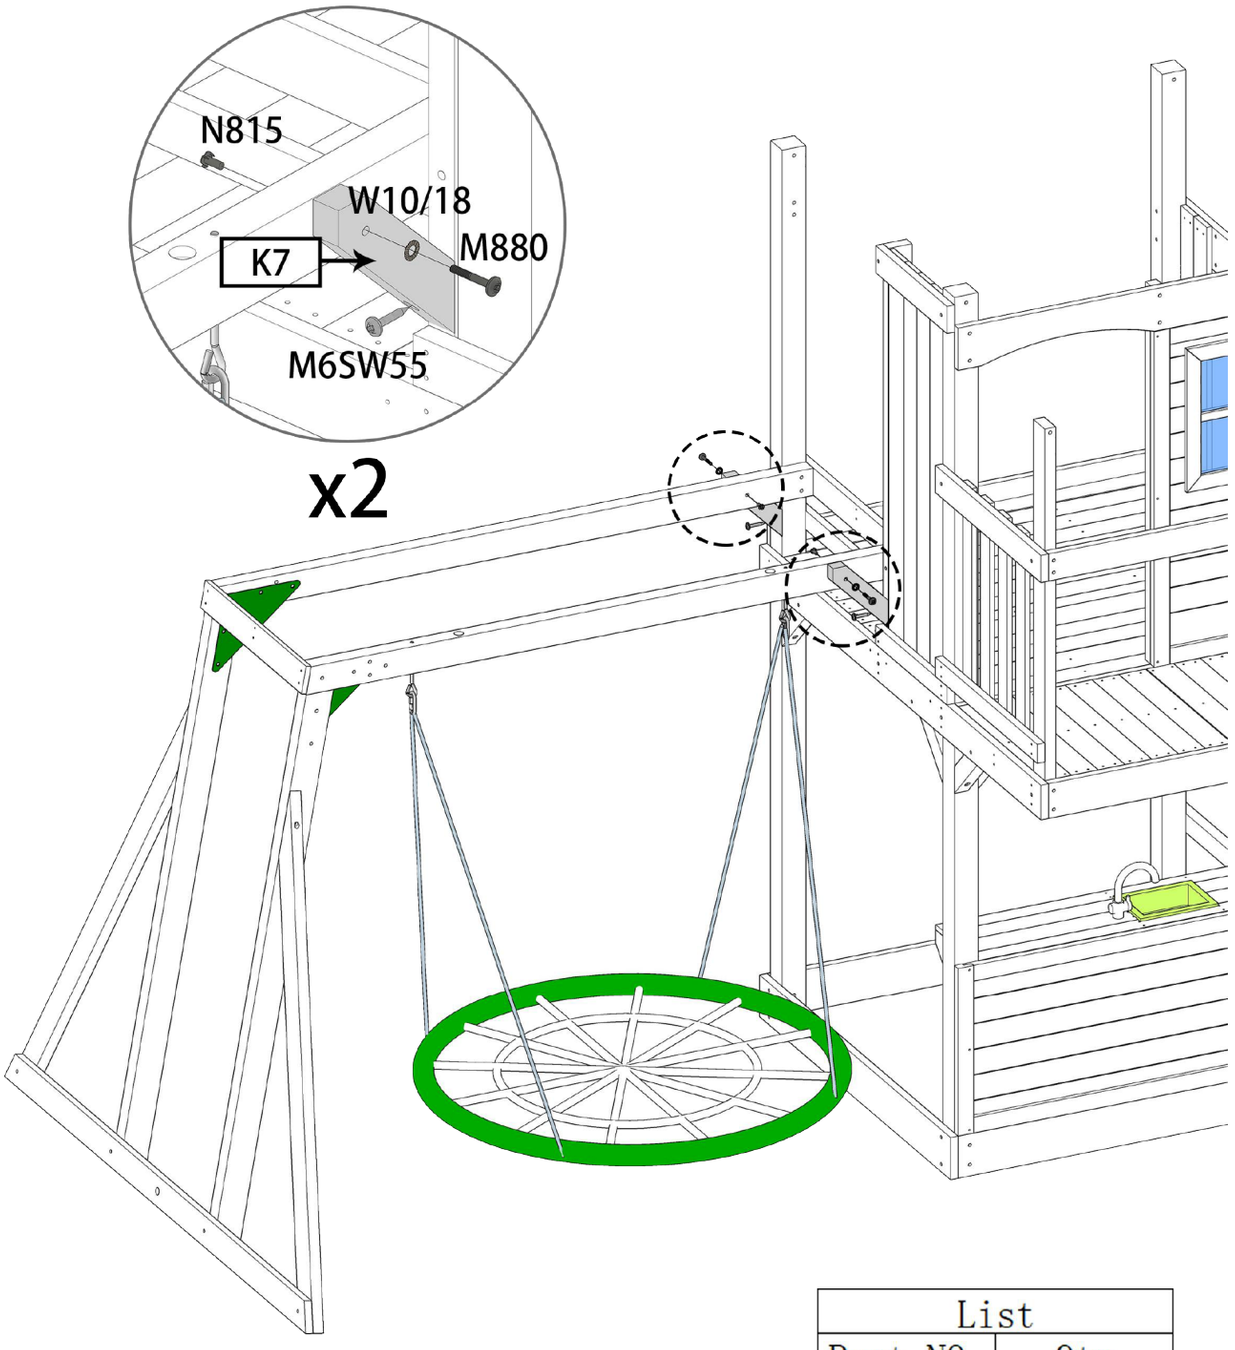


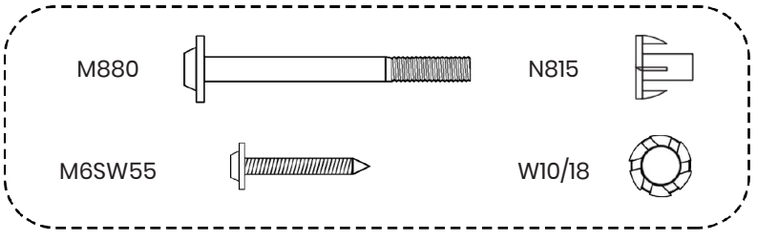

List	
Part NO.	Qty
K7	2
N815	2
W10/18	2
M880	2
M6SW55	2


STEP 45

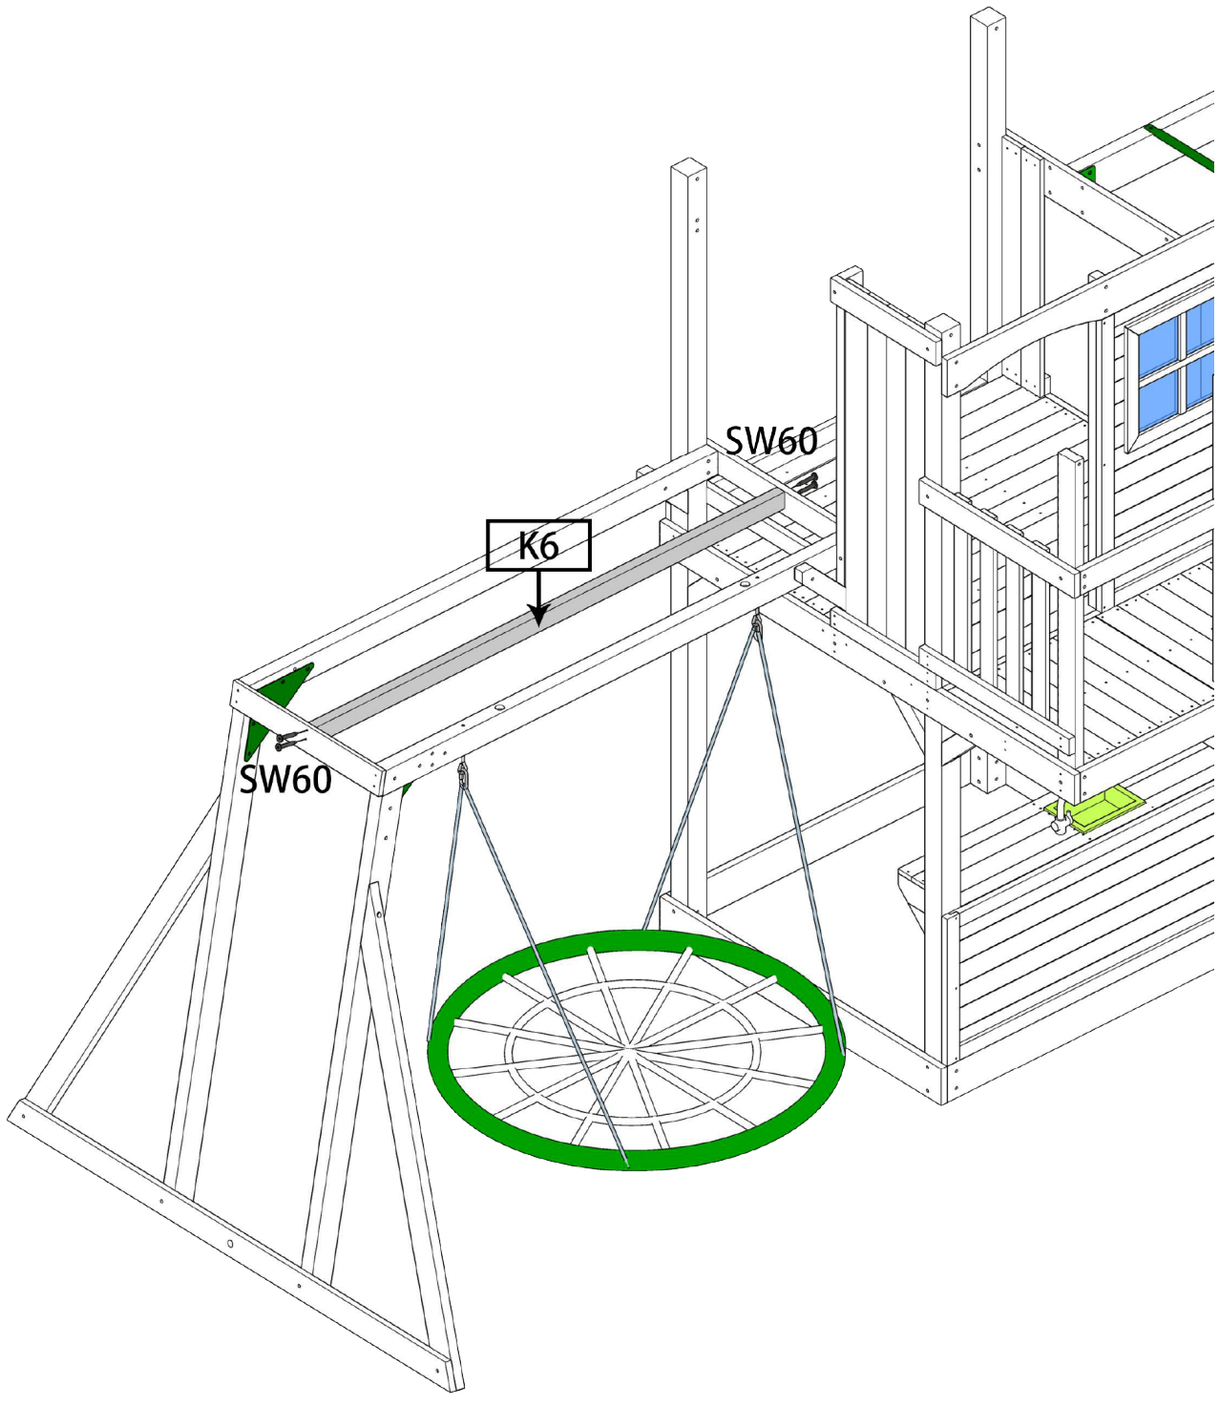


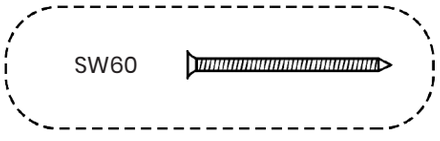


List	
Part NO.	Qty
K6	1
SW60	4

STEP 46

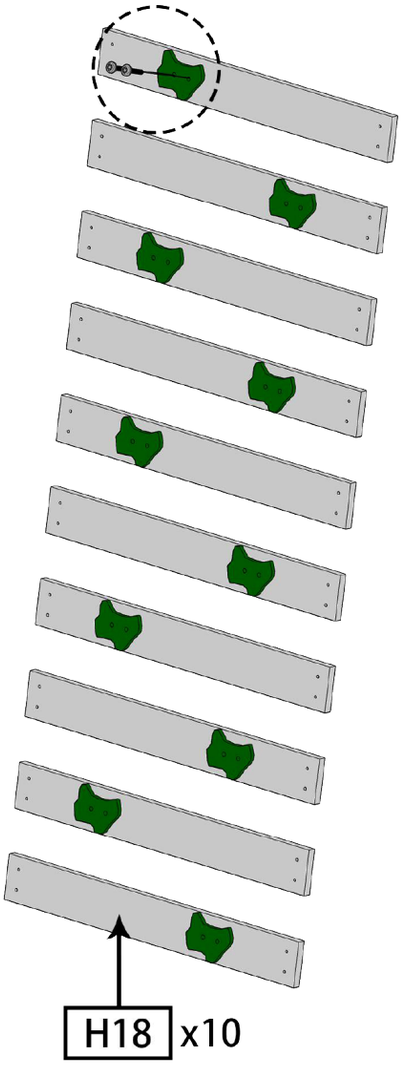


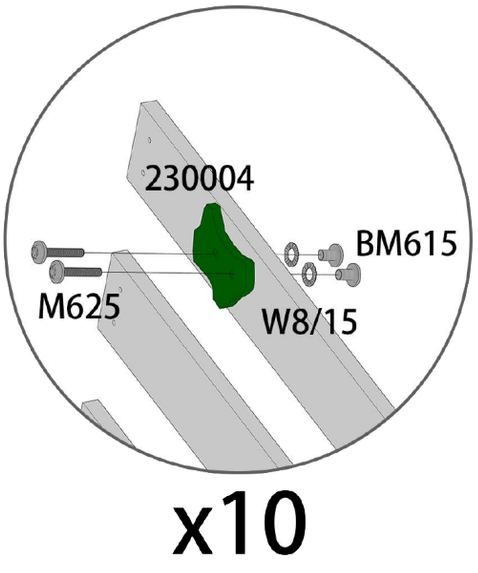

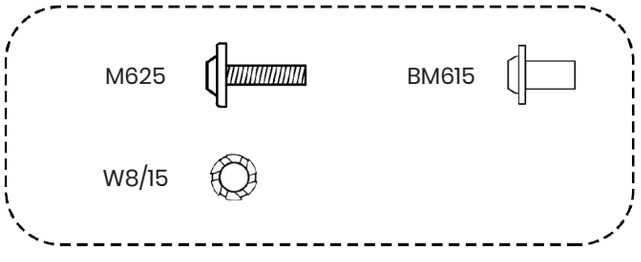

List	
Part NO.	Qty
230004	10
H18	10
M625	20
BM615	20
W8/15	20


STEP 47

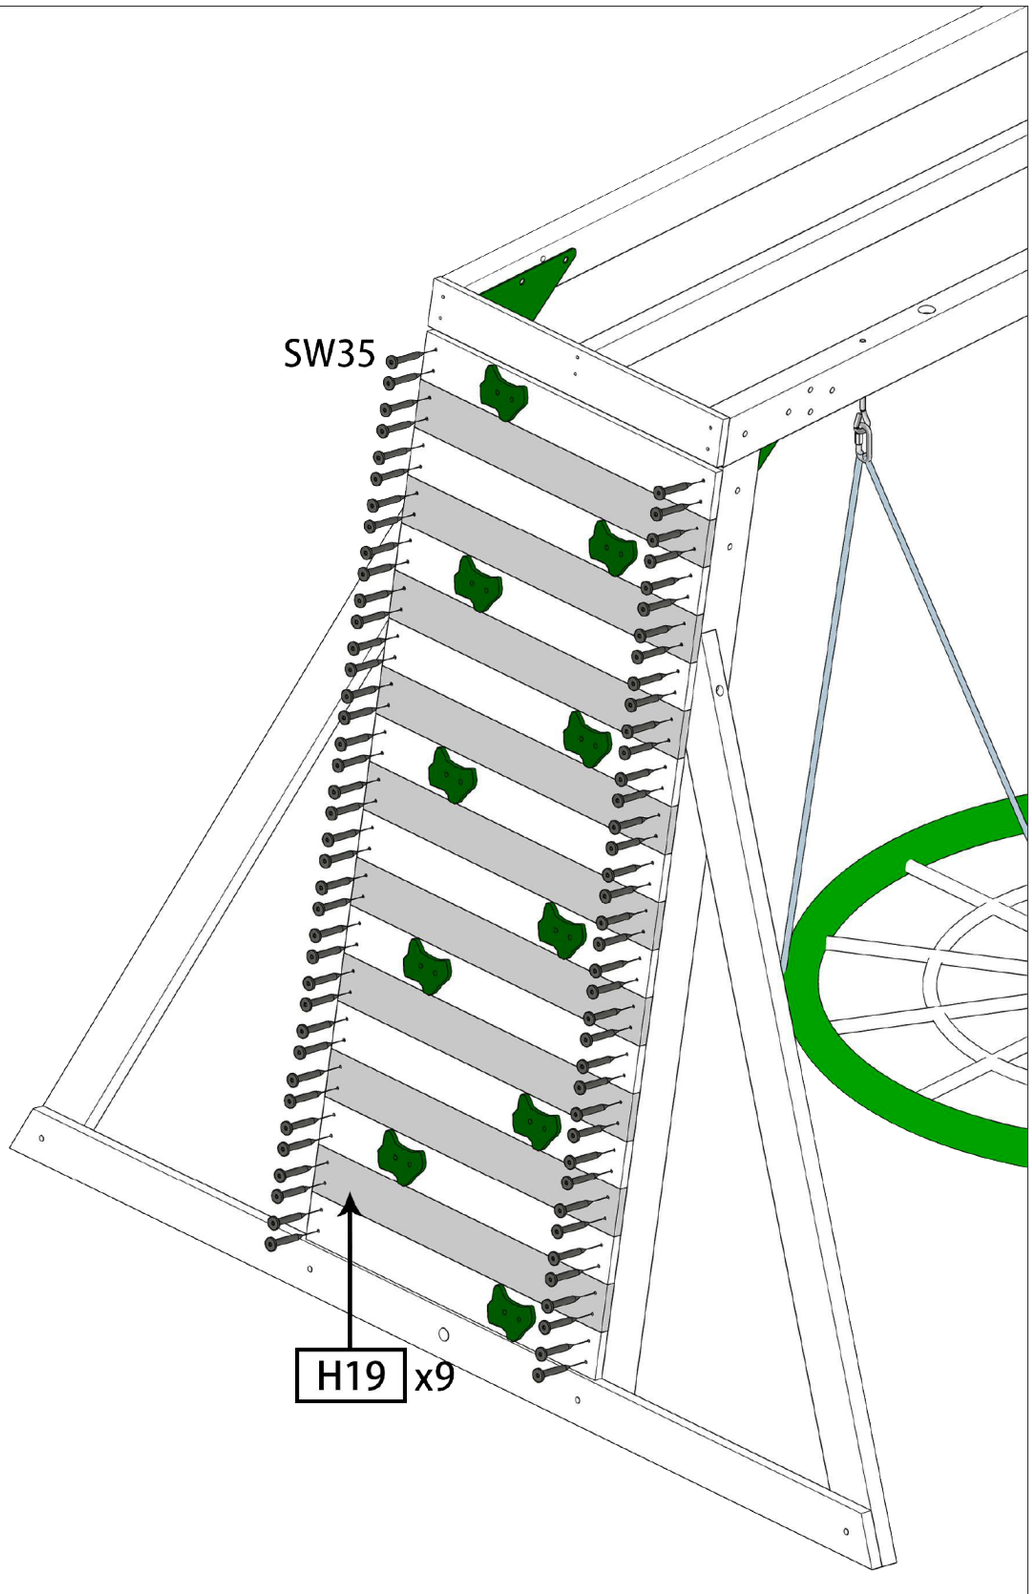

SW35

List	
Part NO.	Qty
H19	9
SW35	76

STEP 48

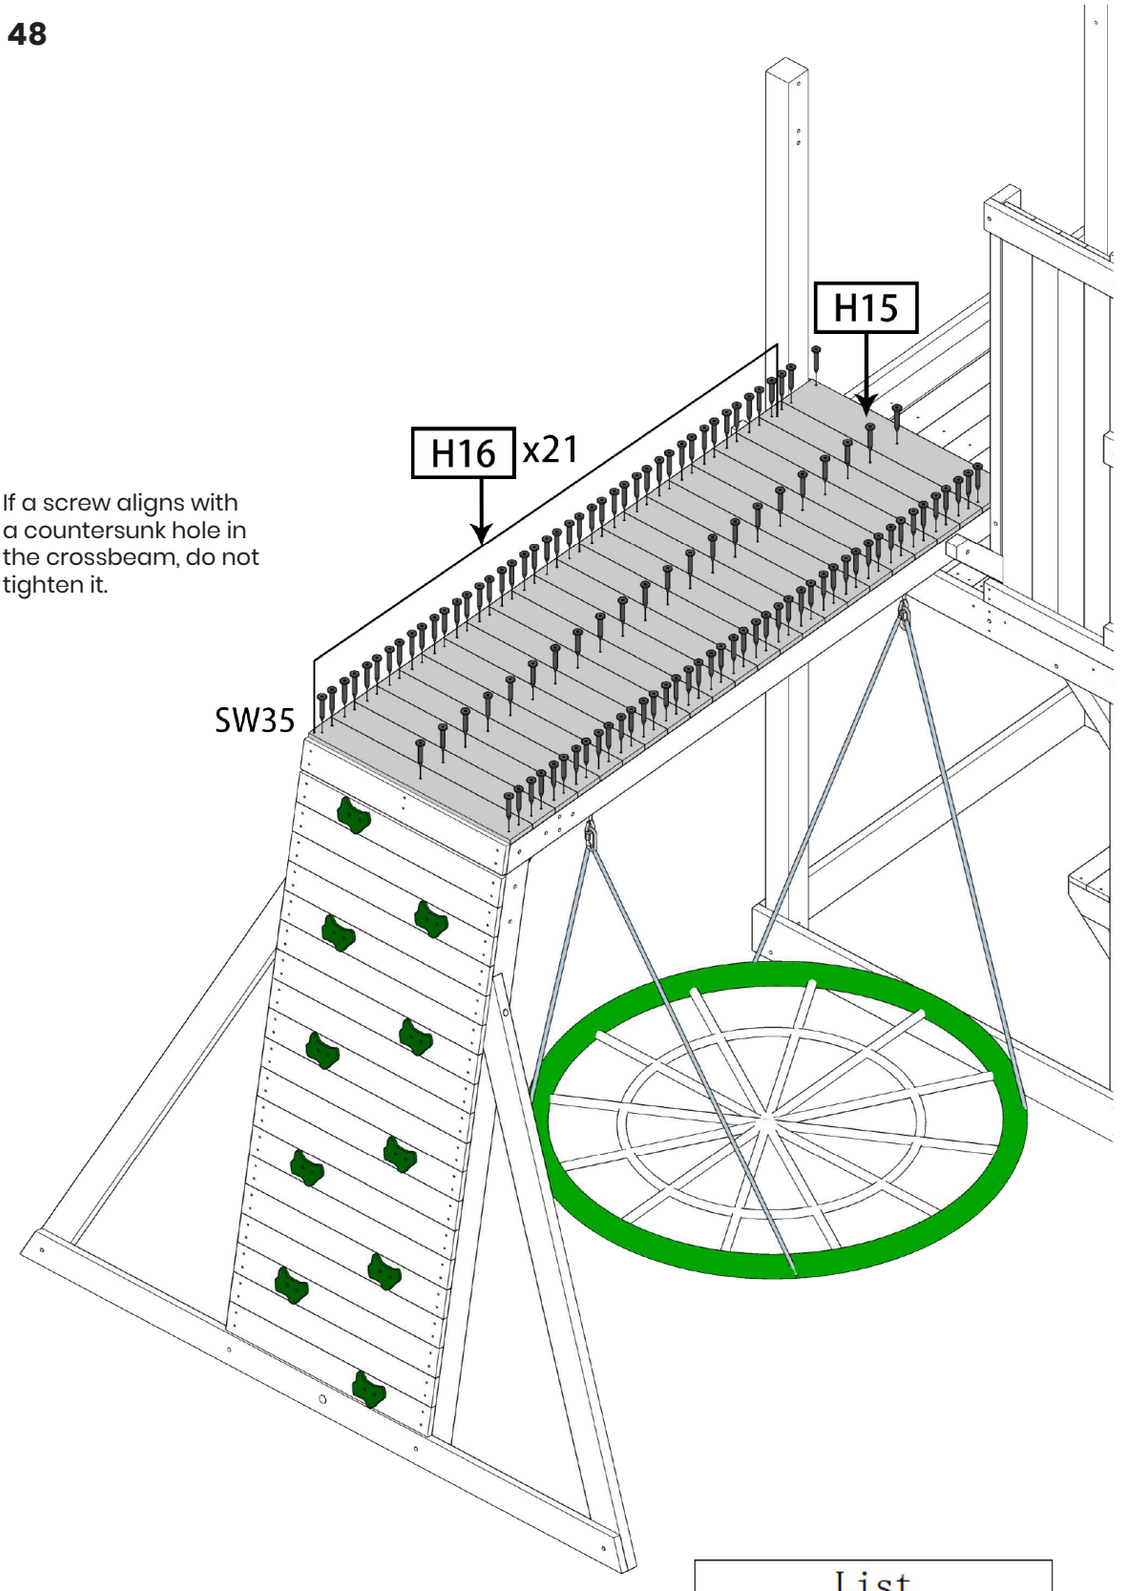



If a screw aligns with a countersunk hole in the crossbeam, do not tighten it.



List	
Part NO.	Qty
H16	21
H15	1
SW35	110


STEP 49

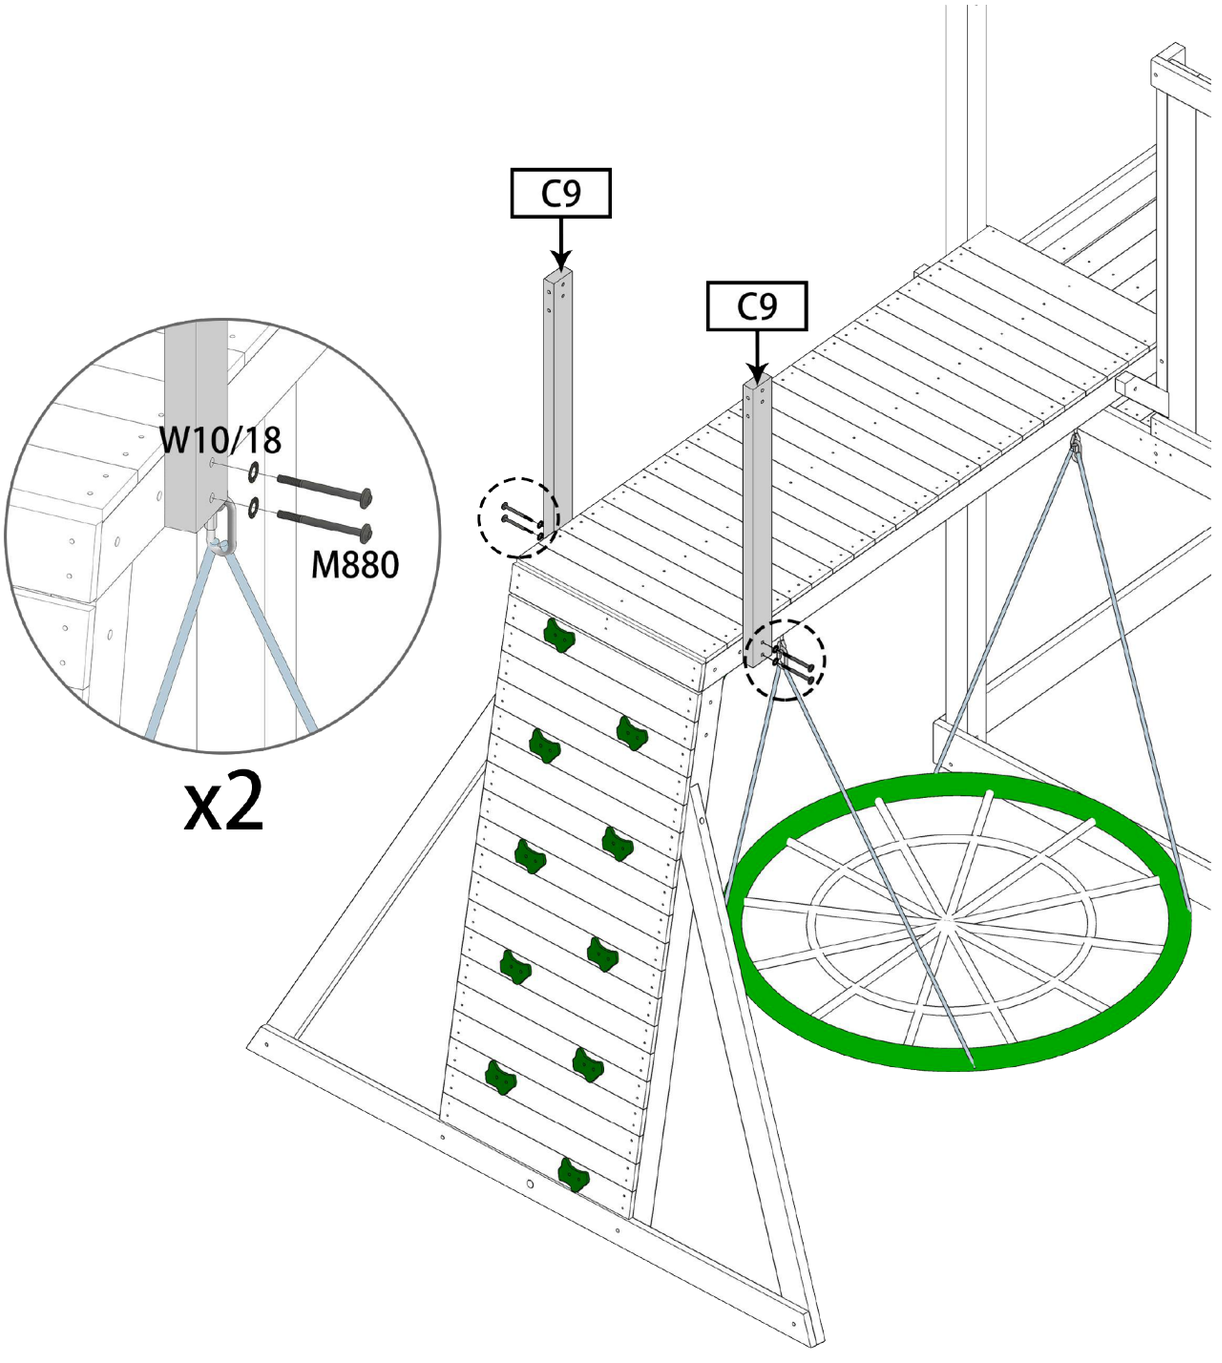

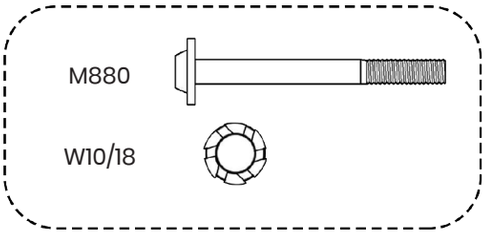


List	
Part NO.	Qty
C9	2
W10/18	4
M880	4


STEP 50

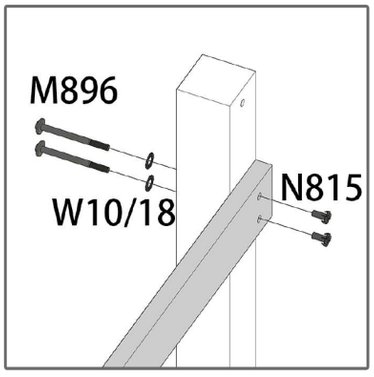


x1

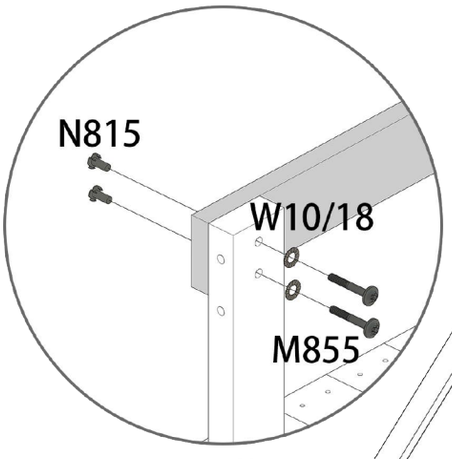


x3

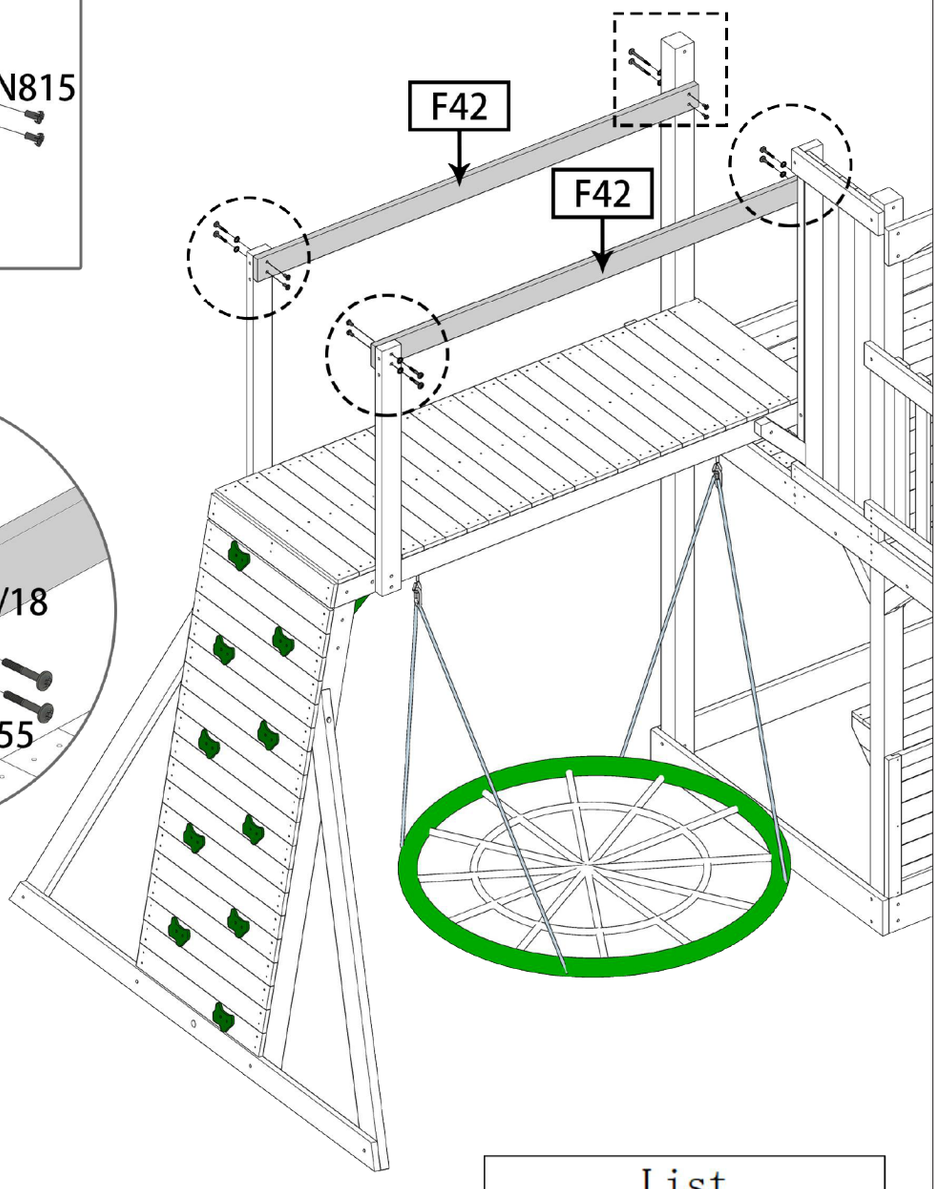


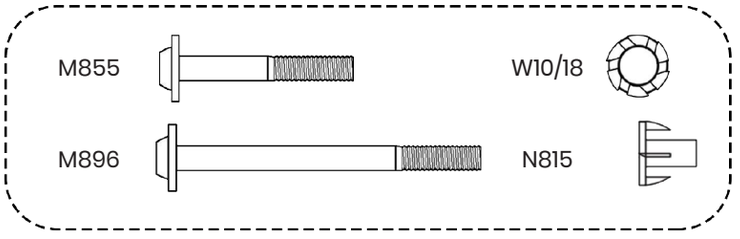

List	
Part NO.	Qty
F42	2
N815	8
W10/18	8
M855	6
M896	2

STEP 51

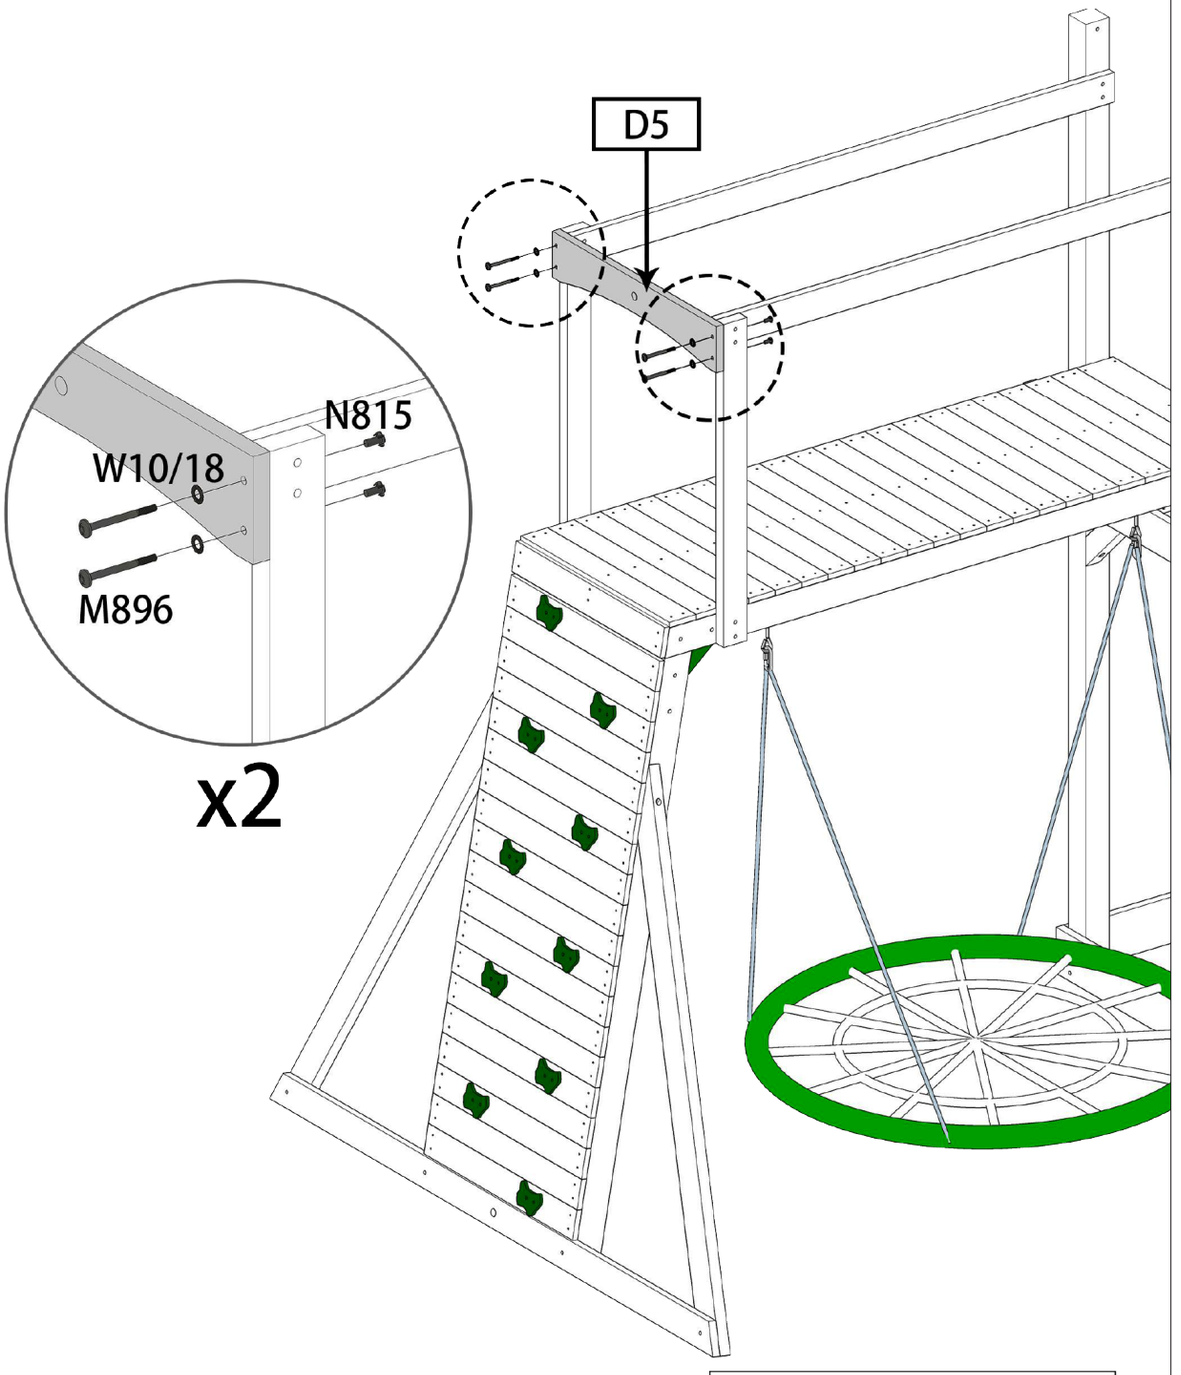


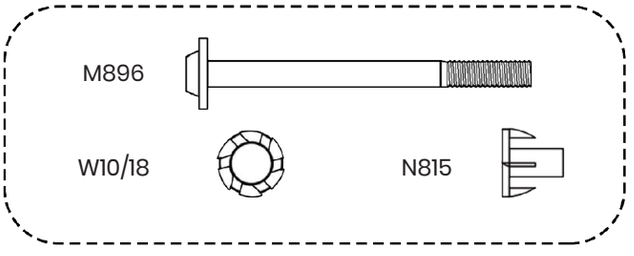


List	
Part NO.	Qty
D5	1
N815	4
W10/18	4
M896	4

STEP 52

TIP: Take note of the spacing.

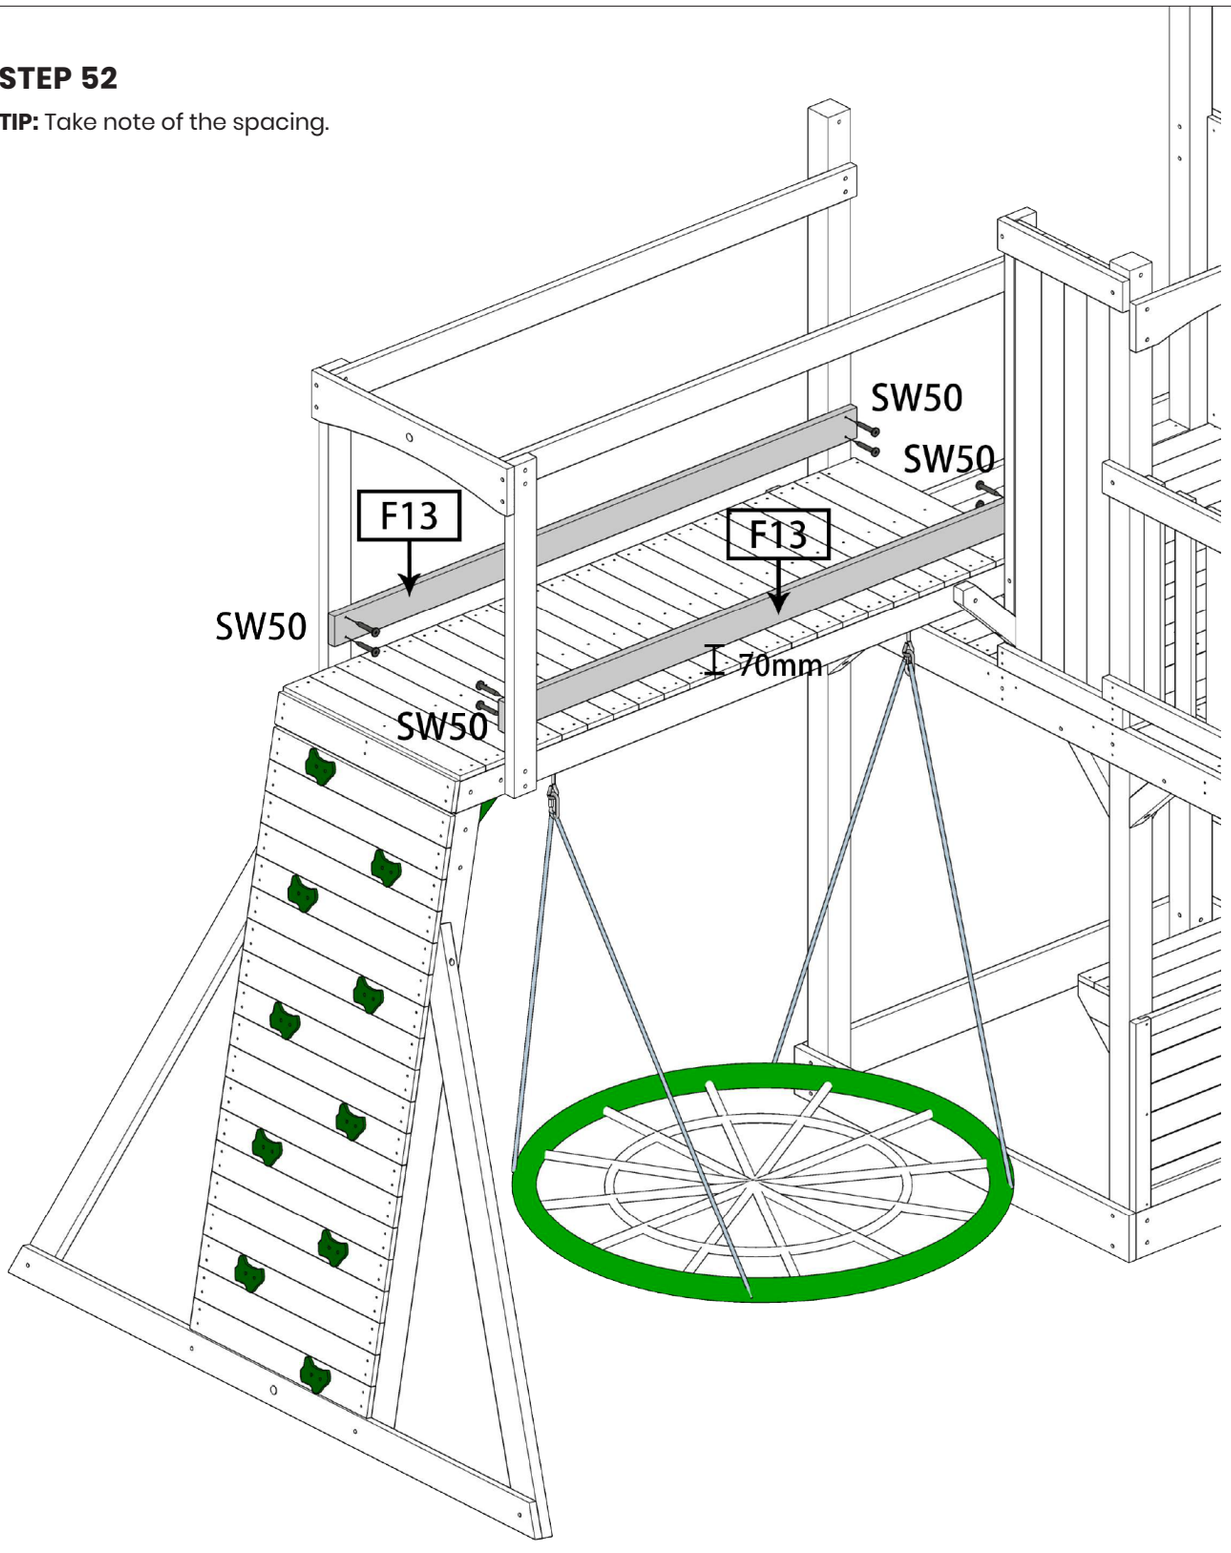


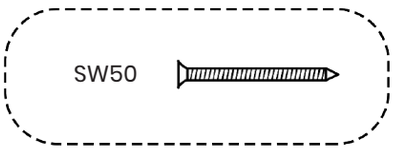


List	
Part NO.	Qty
F13	2
SW50	8

STEP 53

TIP: Take note of the spacing.

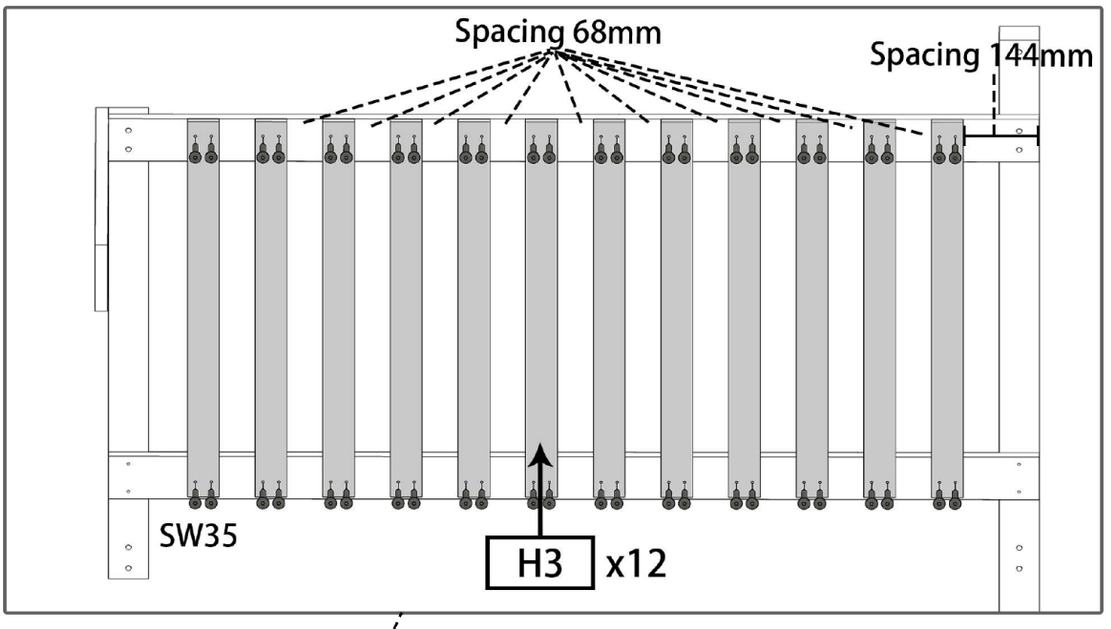

x2

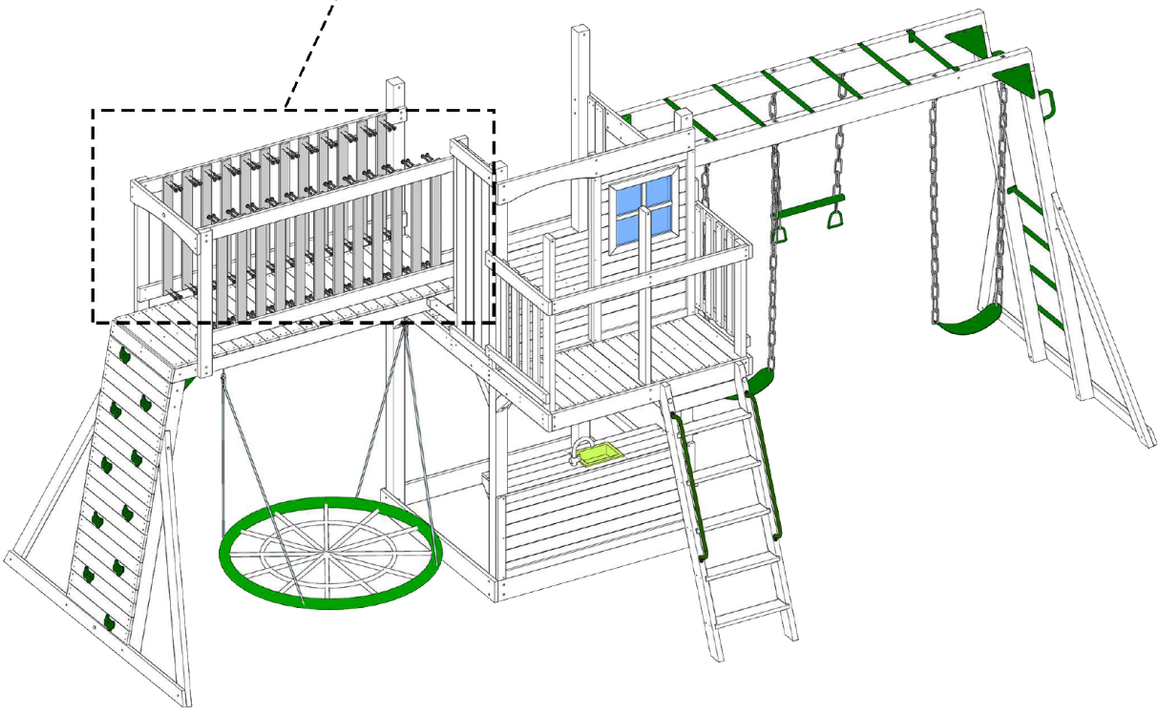



SW35

List	
Part NO.	Qty
H3	24
SW35	96

STEP 54


x2

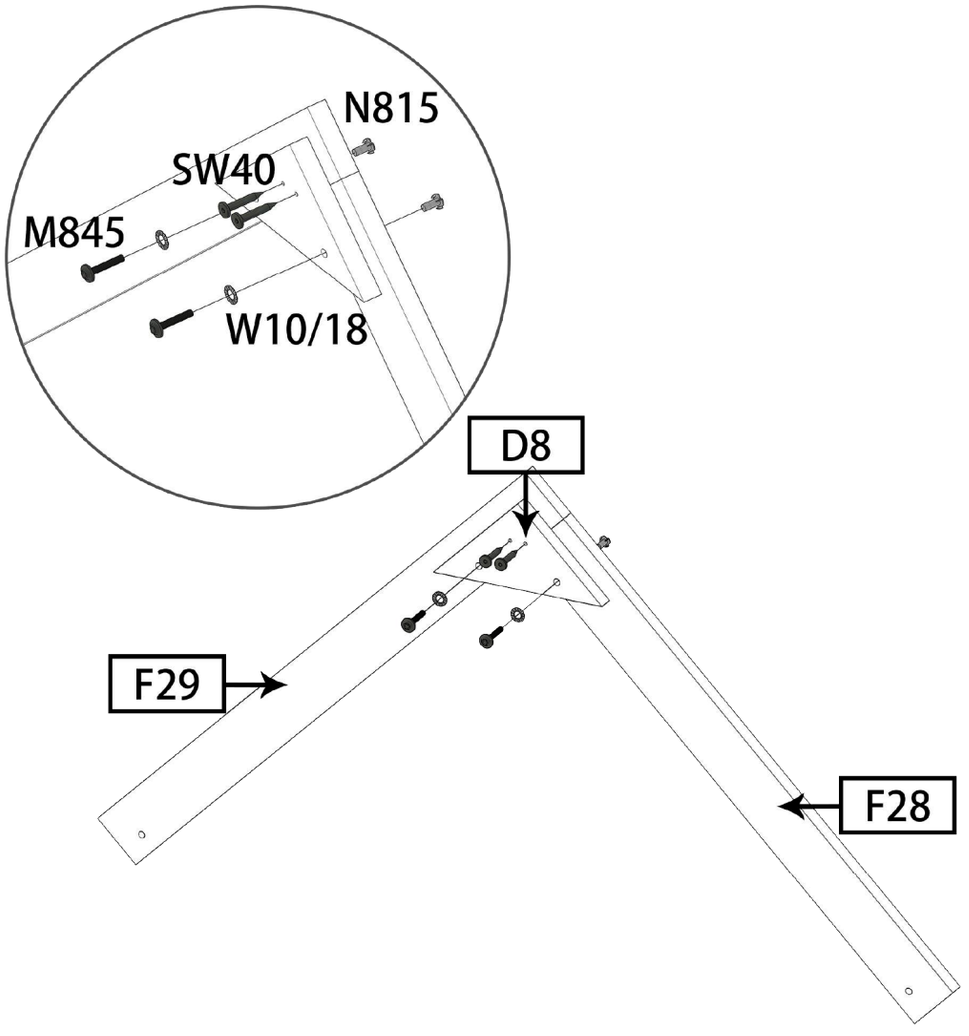


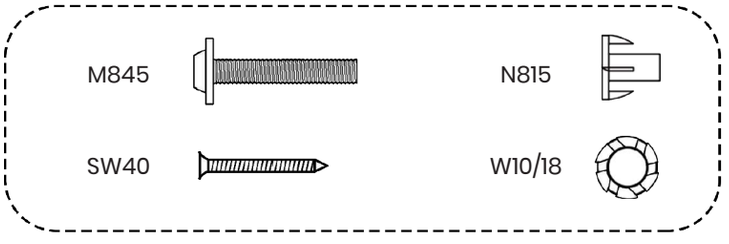

List	
Part NO.	Qty
D8	2
F28	2
F29	2
N815	4
W10/18	4
M845	4
SW40	4


STEP 55

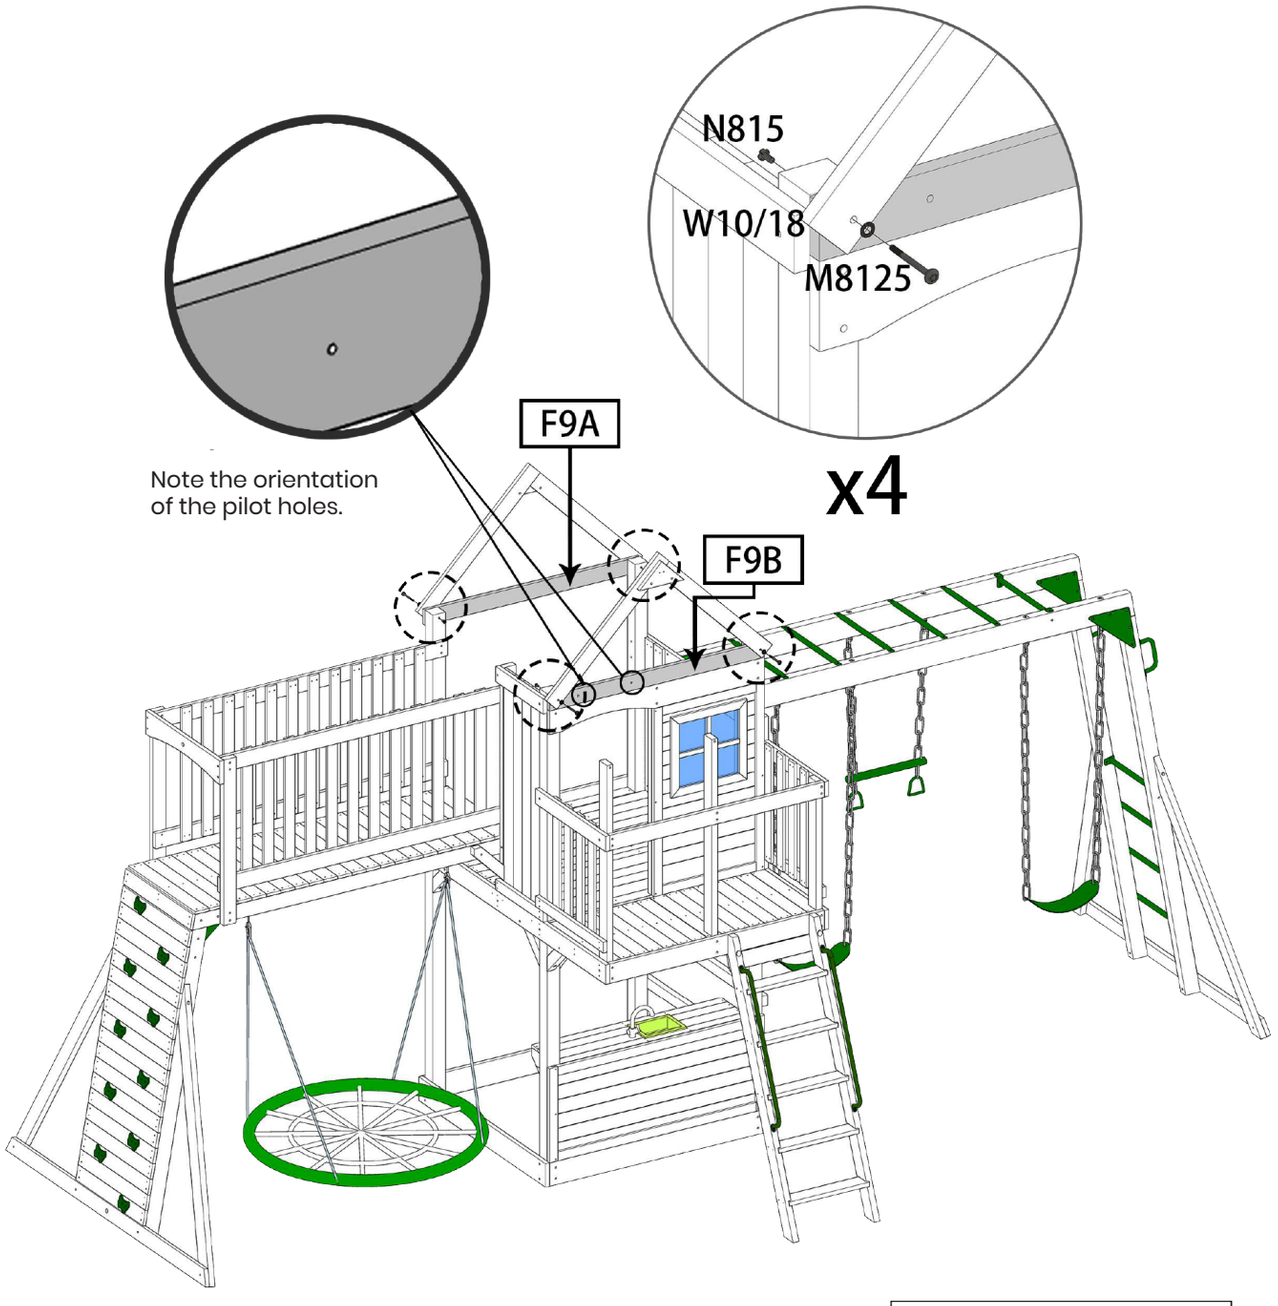


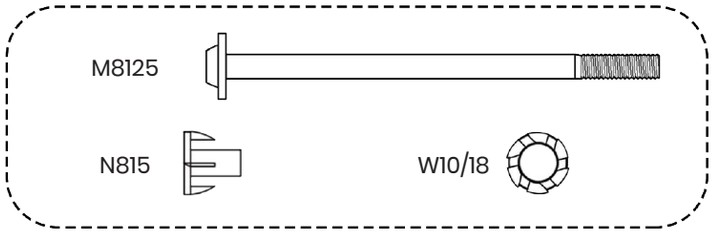

List	
Part NO.	Qty
F9A	1
F9B	1
N815	4
W10/18	4
M8125	4


STEP 56

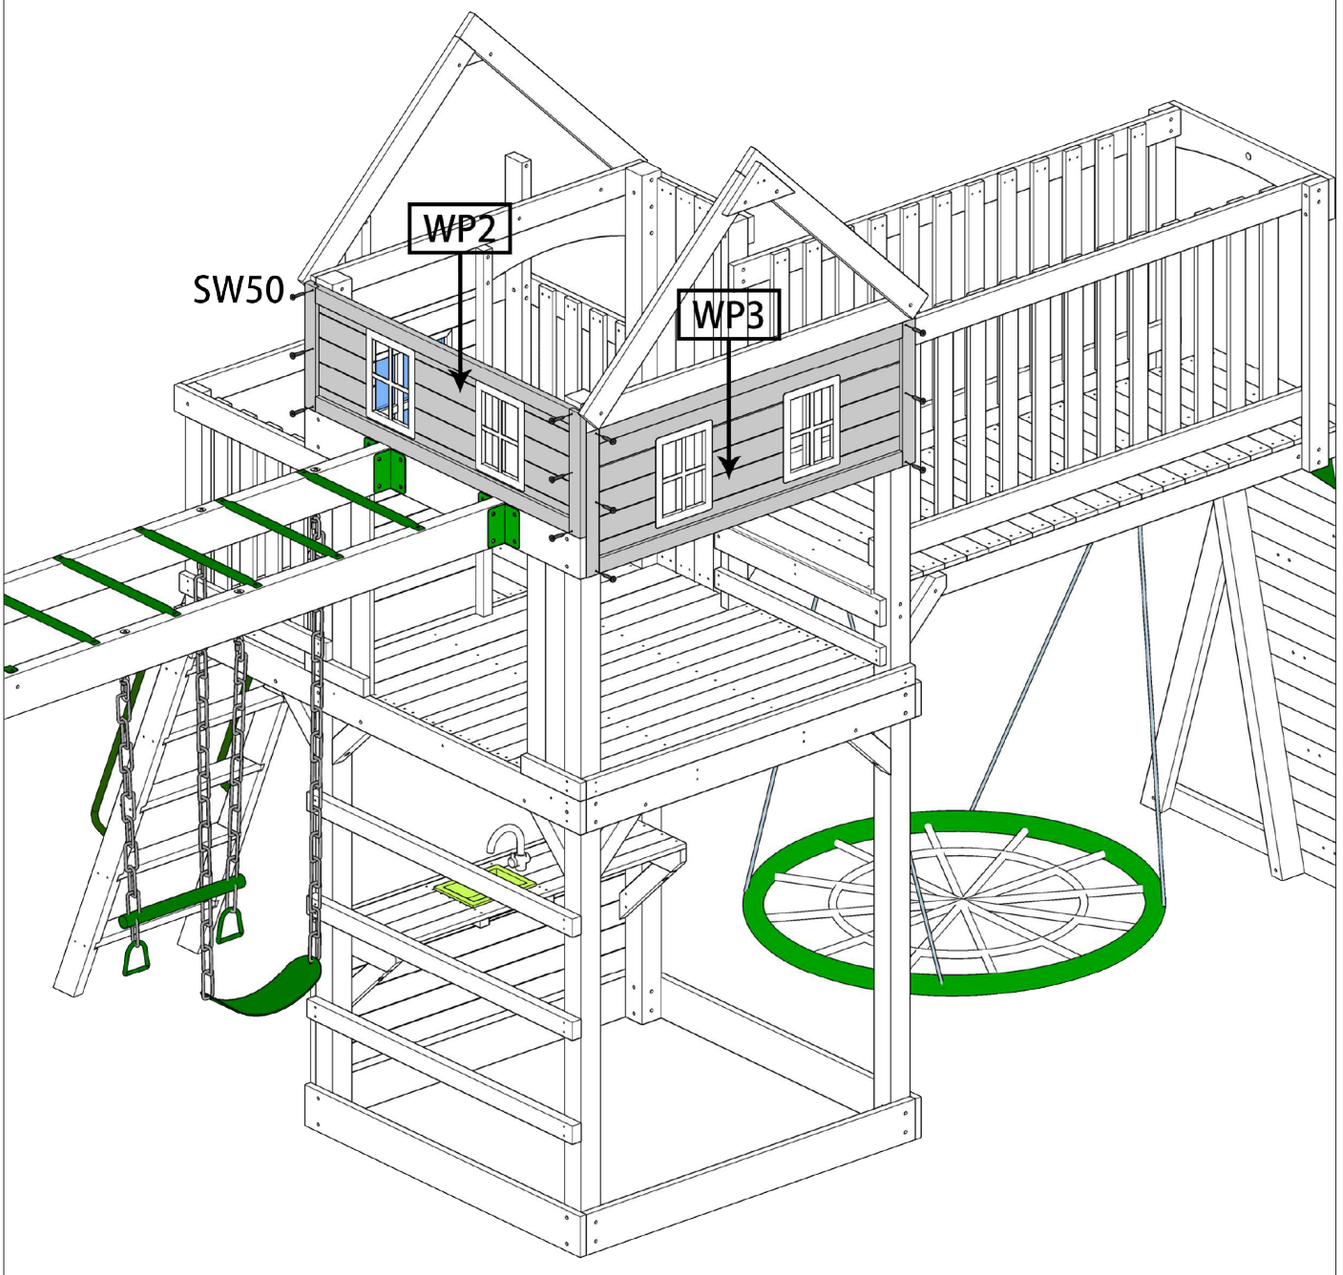


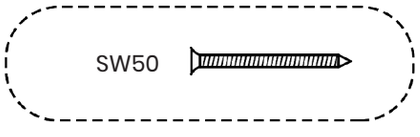

List	
Part NO.	Qty
WP2	1
WP3	1
SW50	12

STEP 57

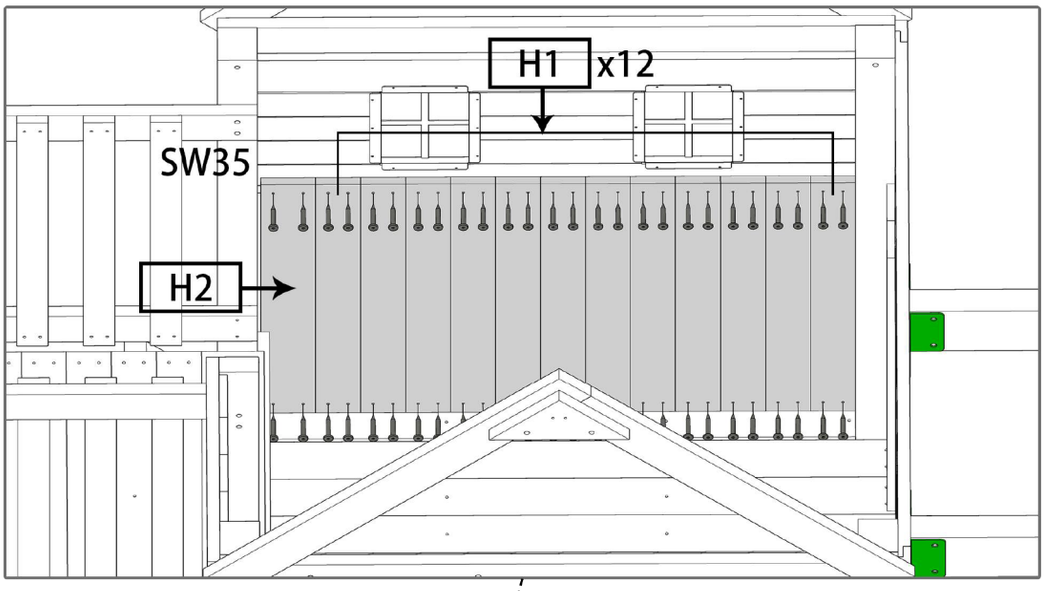

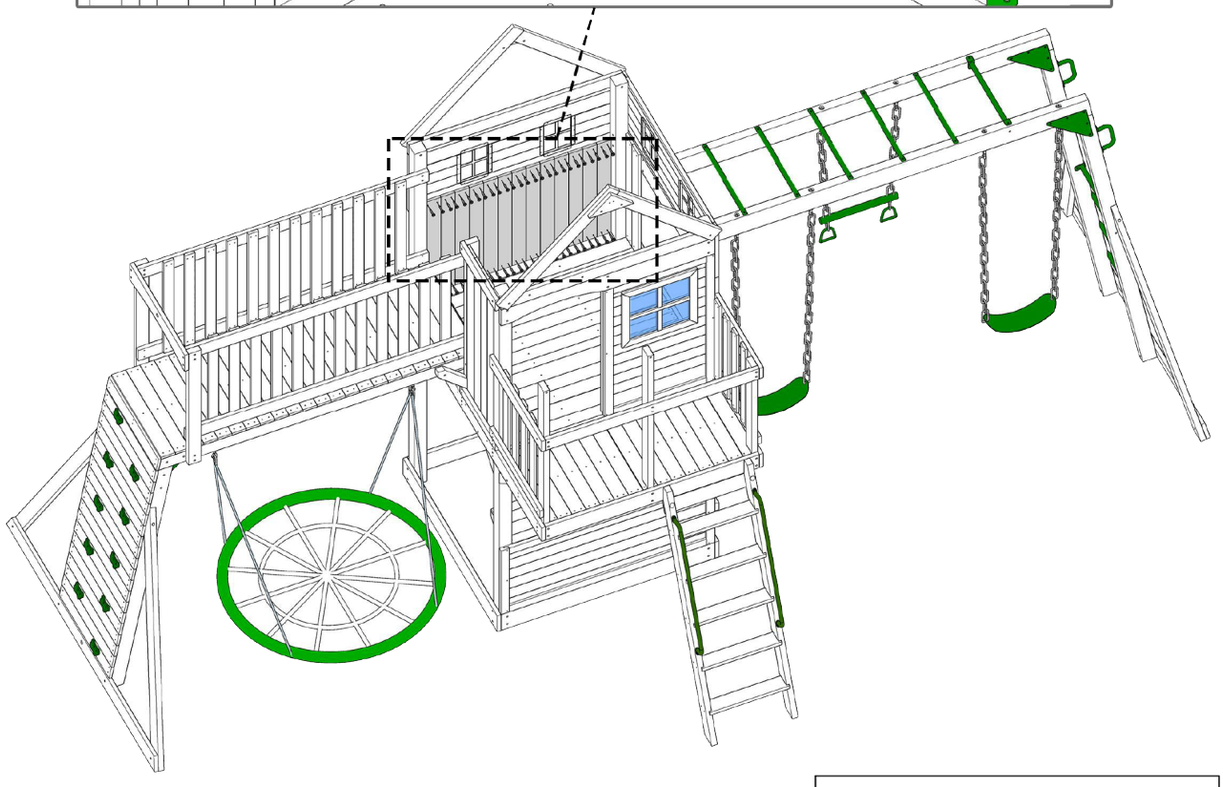



SW35


List	
Part NO.	Qty
H1	12
H2	1
SW35	52

STEP 58

TIP: Take note of the spacing.

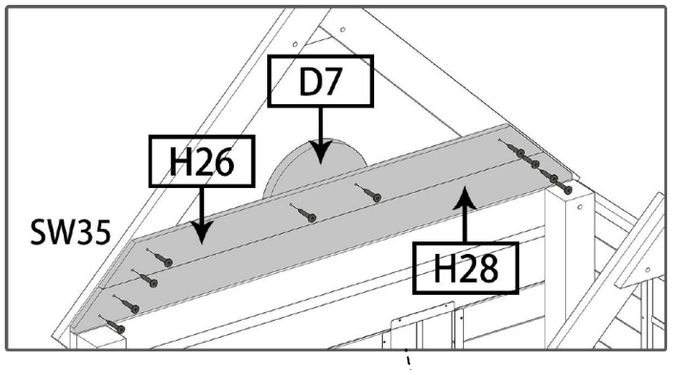

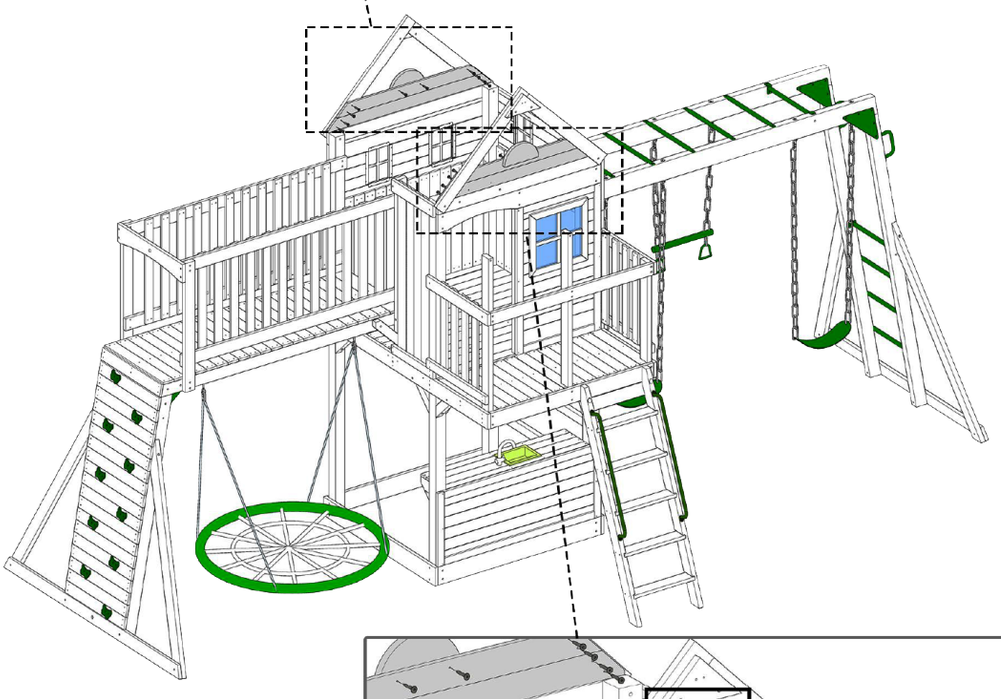

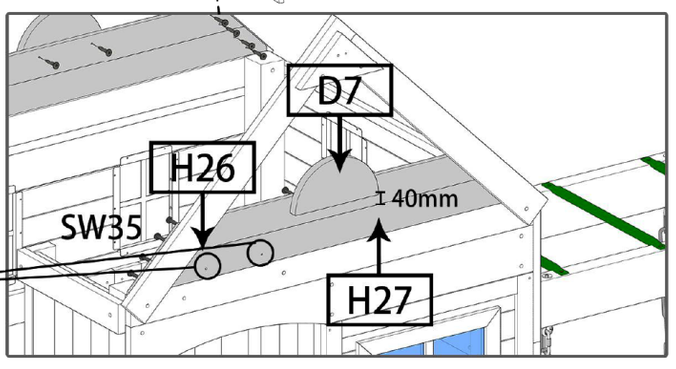


Note the orientation of the pilot holes.




List	
Part NO.	Qty
D7	2
H26	2
H27	1
H28	1
SW35	20

STEP 59

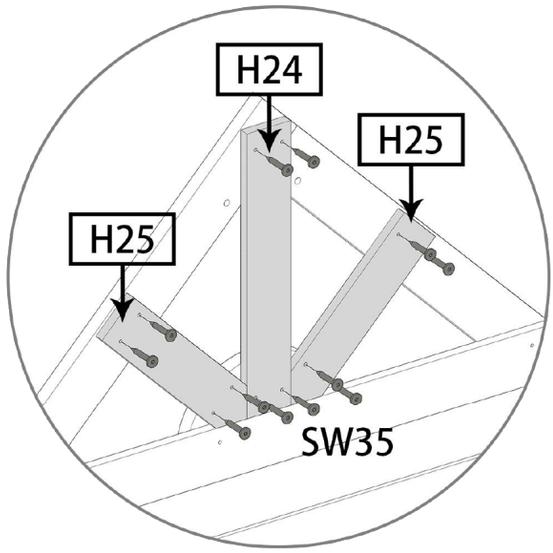


x2

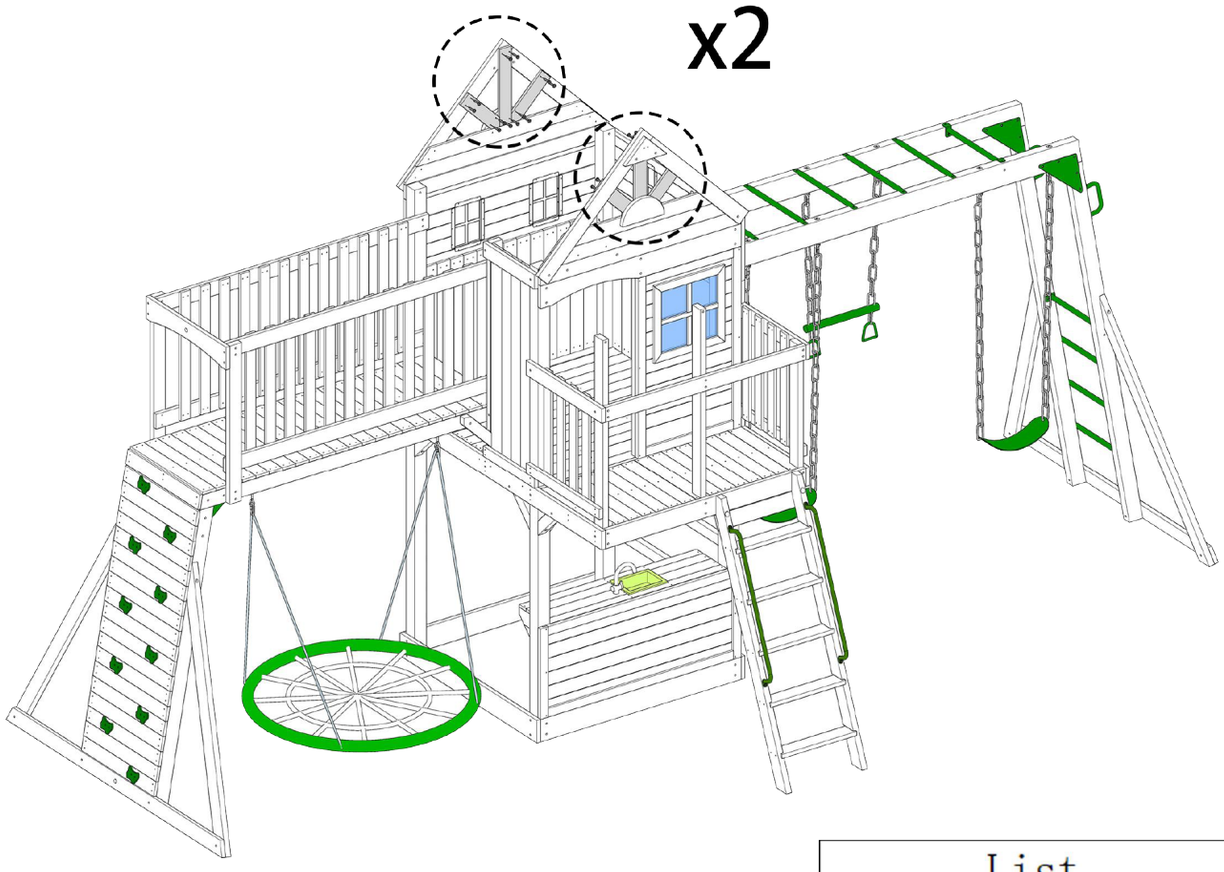

SW35

List	
Part NO.	Qty
H24	2
H25	4
SW35	24


STEP 60

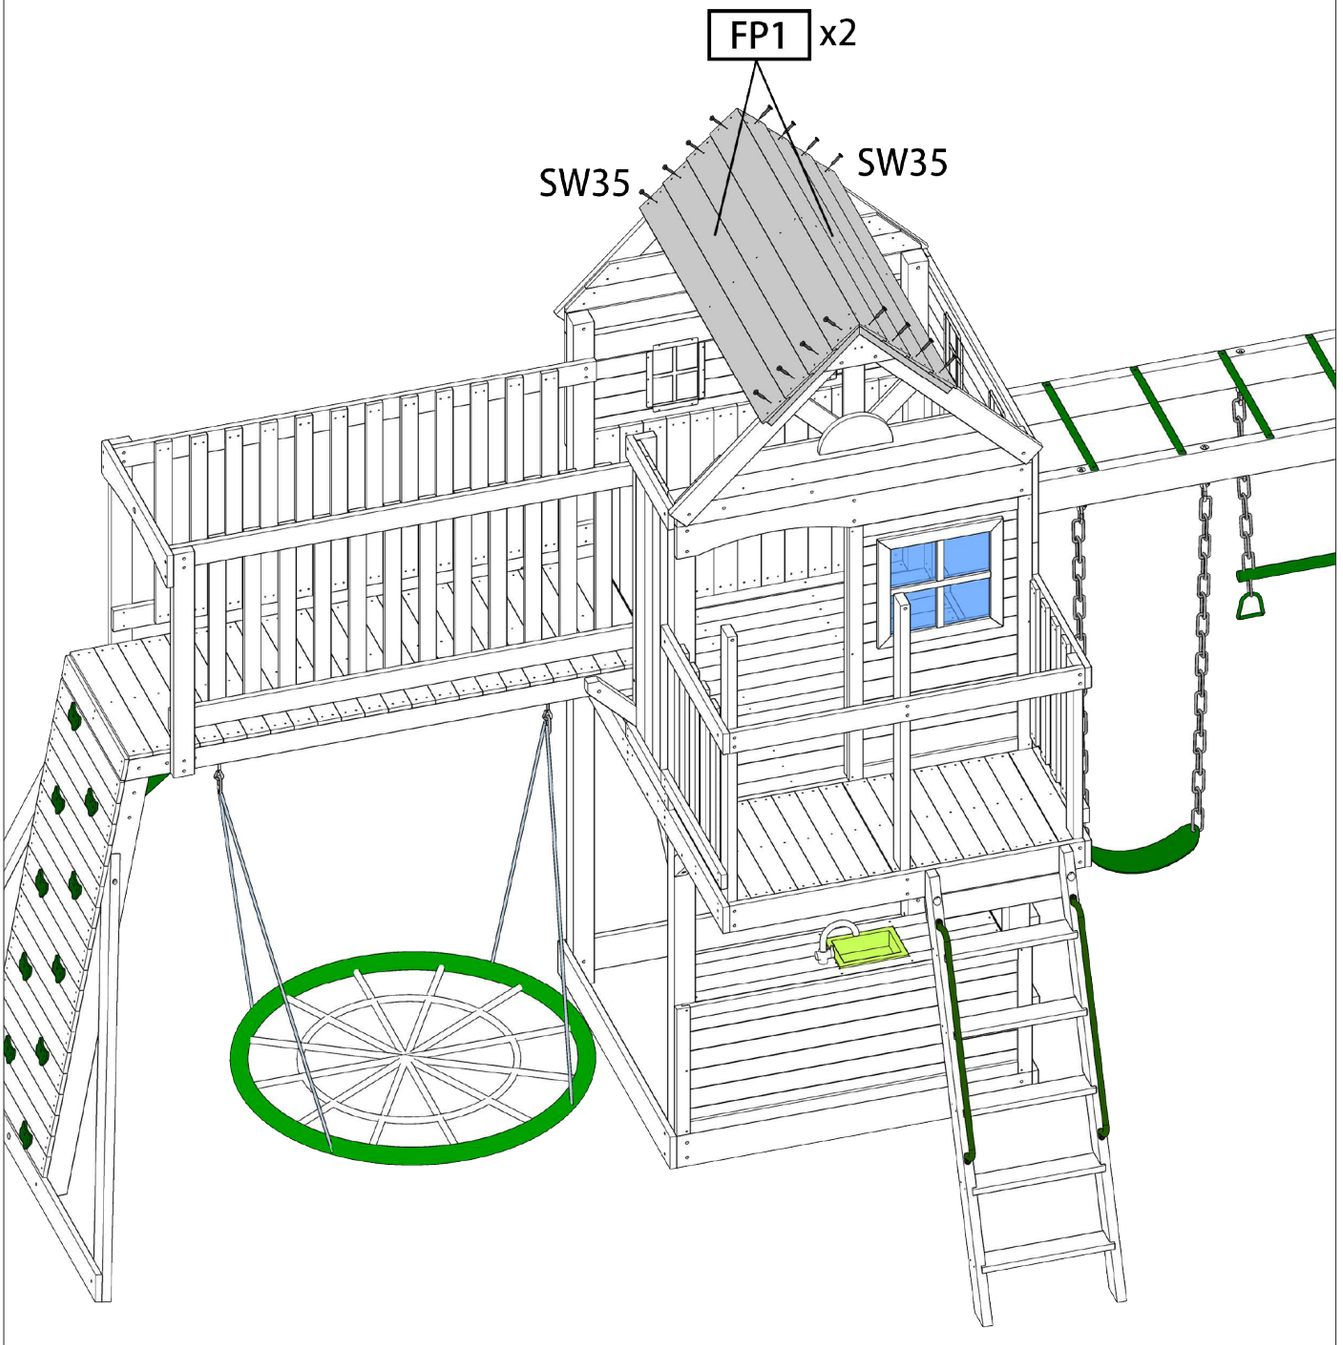



List	
Part NO.	Qty
FP1	2
SW35	16


STEP 61

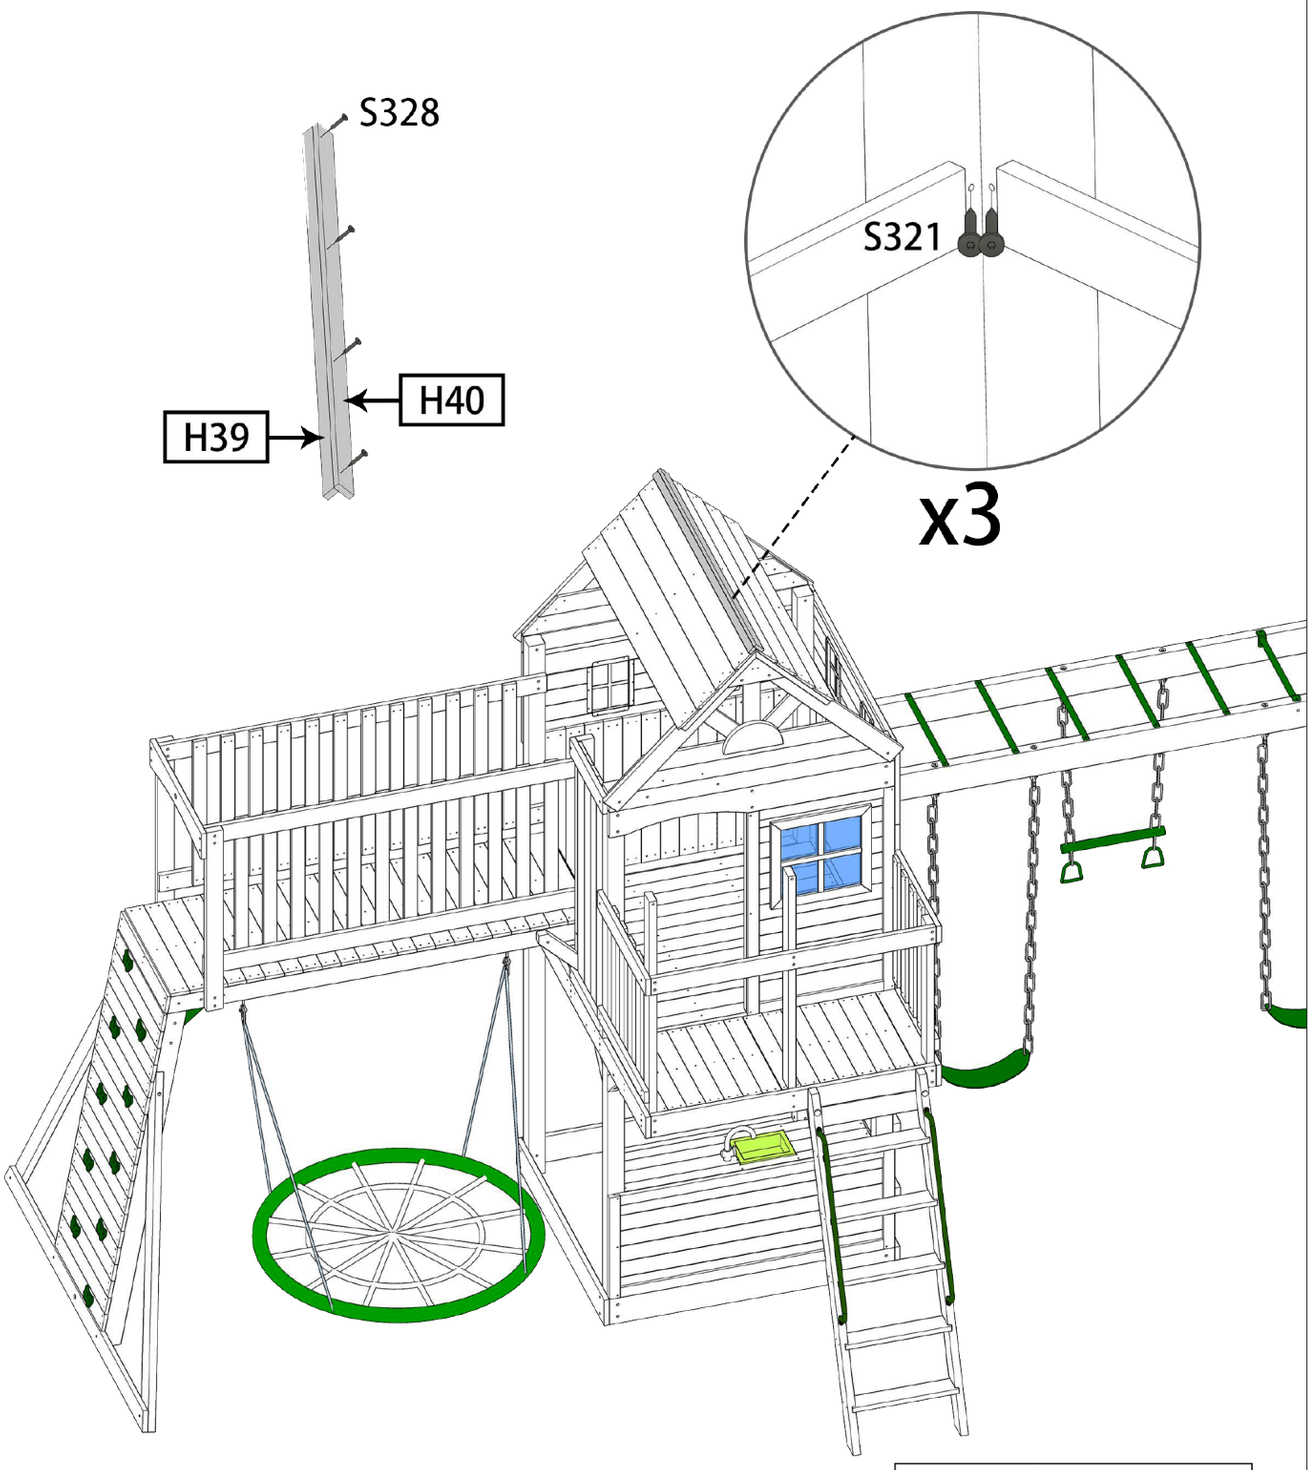





List	
Part NO.	Qty
H39	1
H40	1
S321	6
S328	4

STEP 62

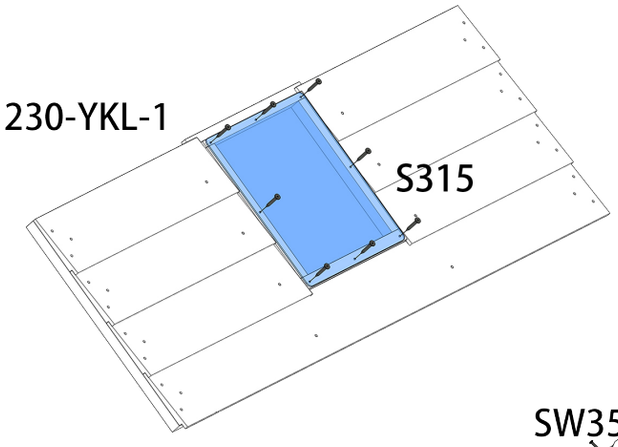


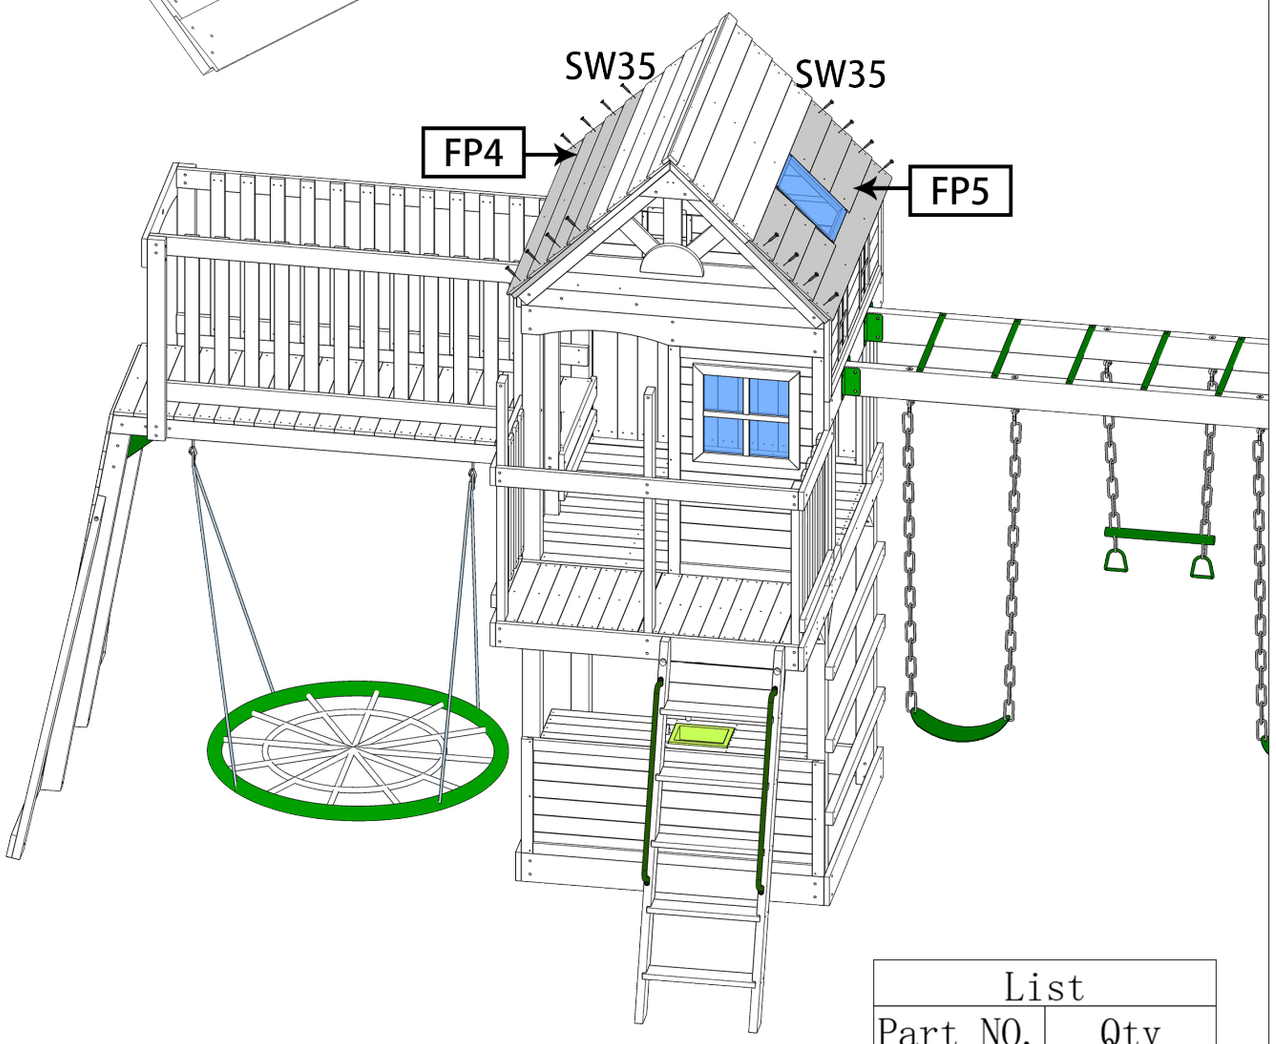


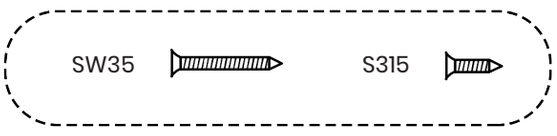

List	
Part NO.	Qty
230-YKL-1	1
FP4	1
FP5	1
S315	8
SW35	16

STEP 63

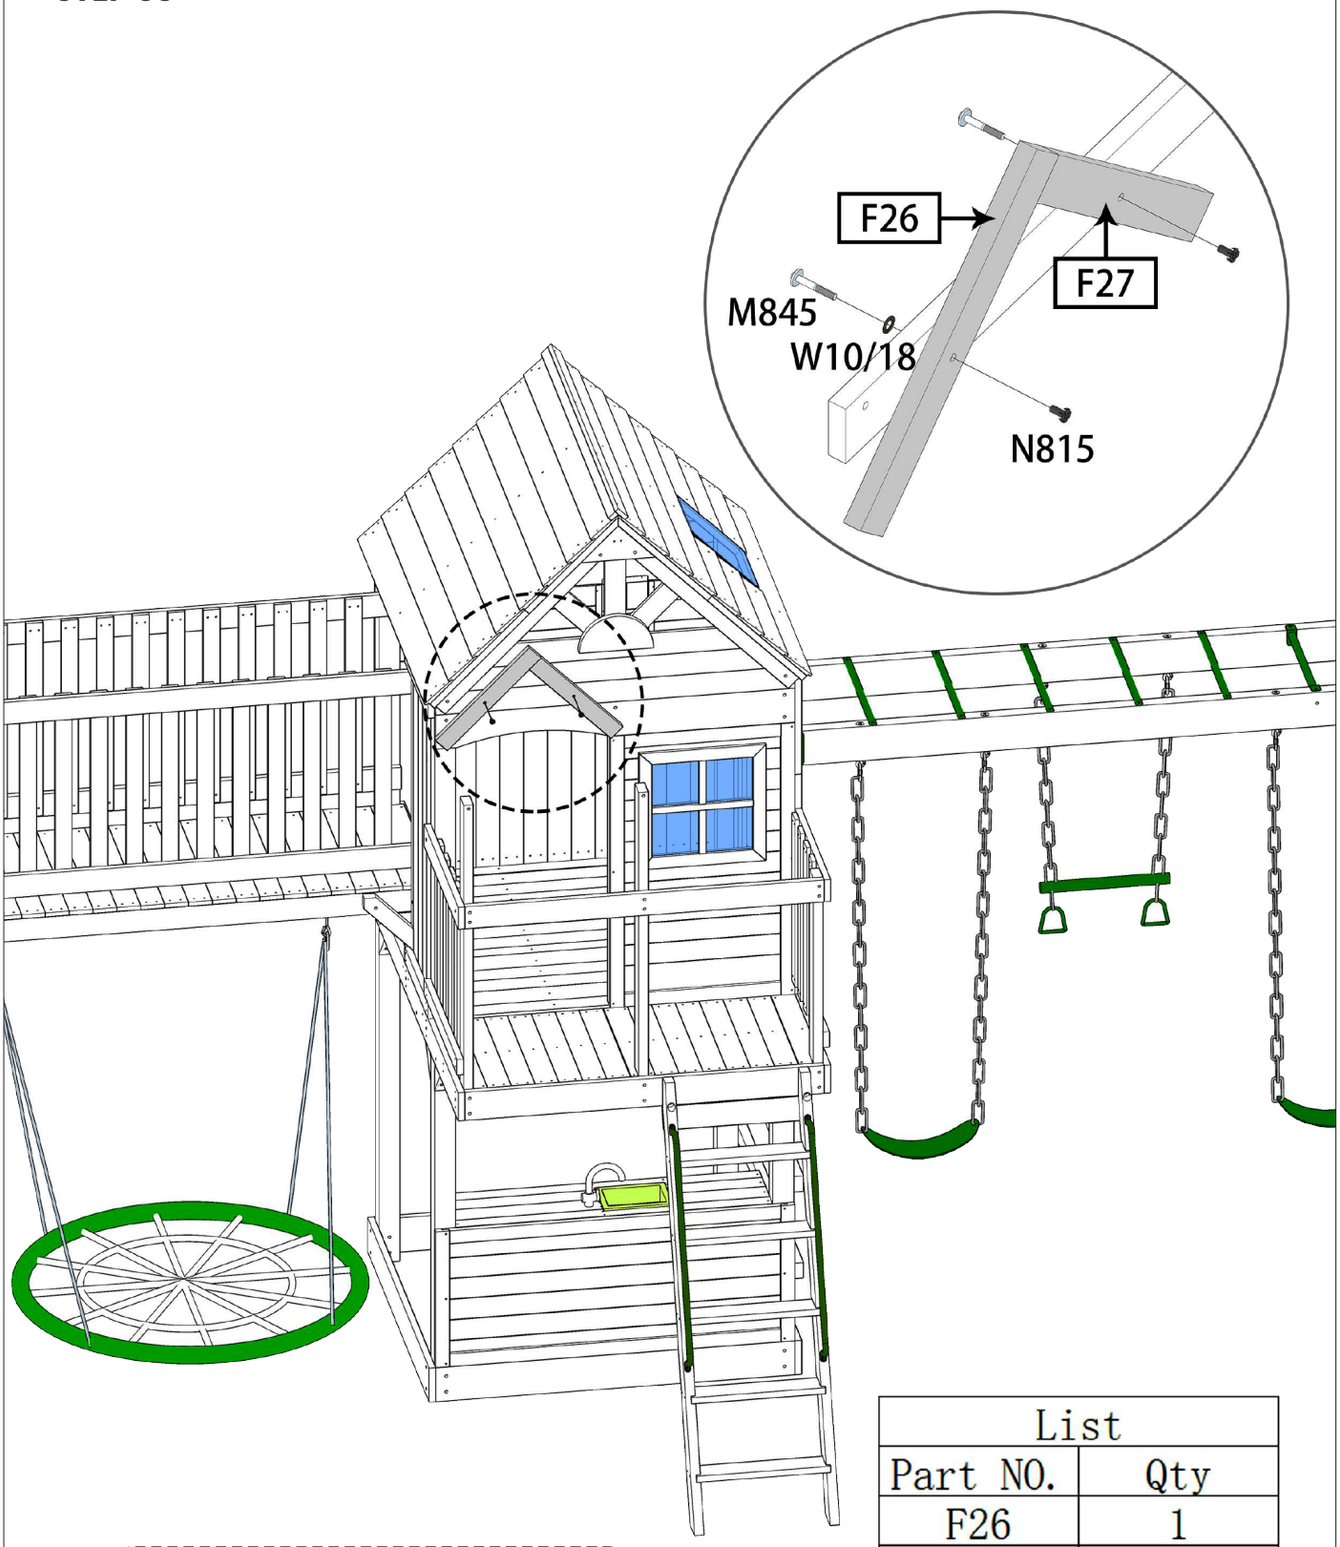


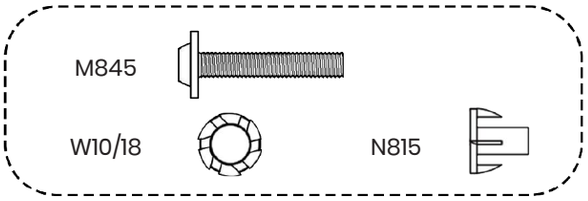



List	
Part NO.	Qty
F26	1
F27	1
N815	2
W10/18	2
M845	2

STEP 64

TIP: Take note of the spacing.

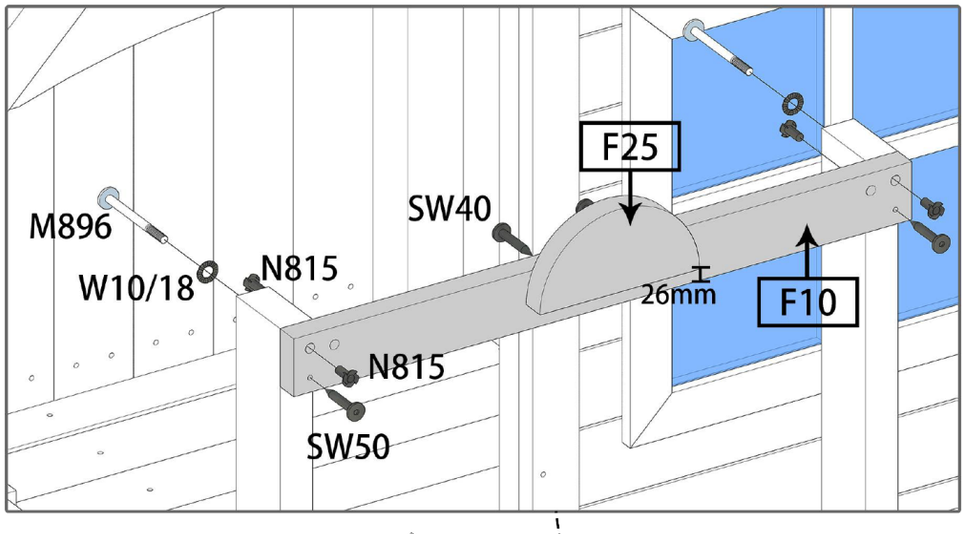


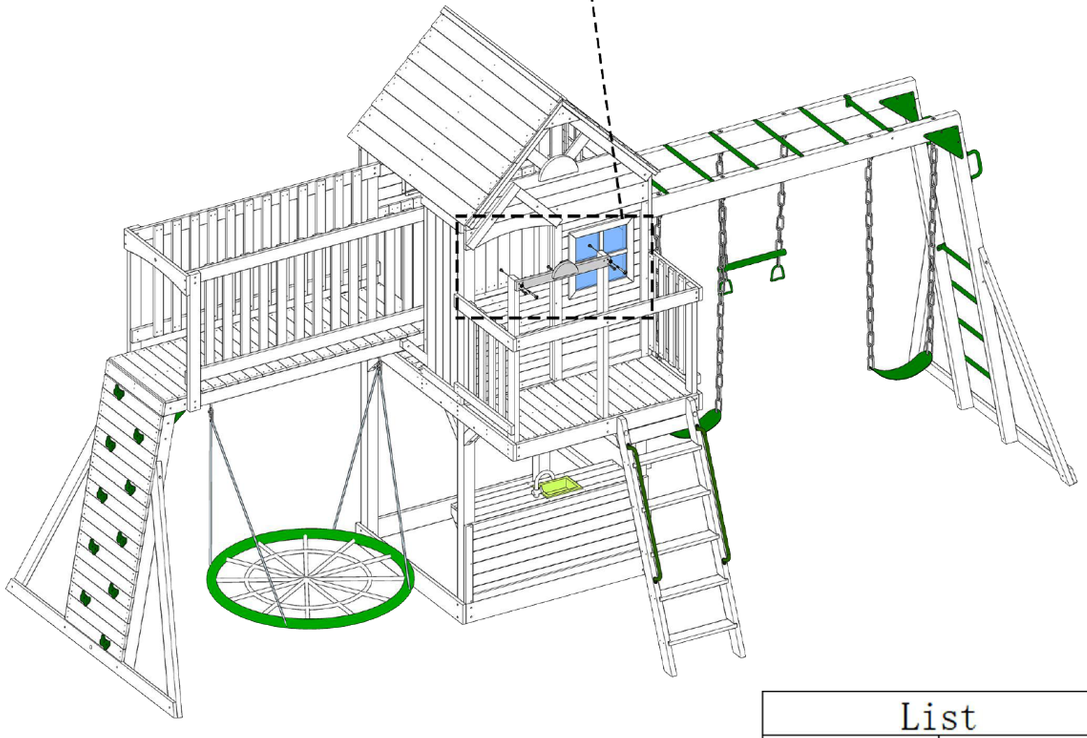


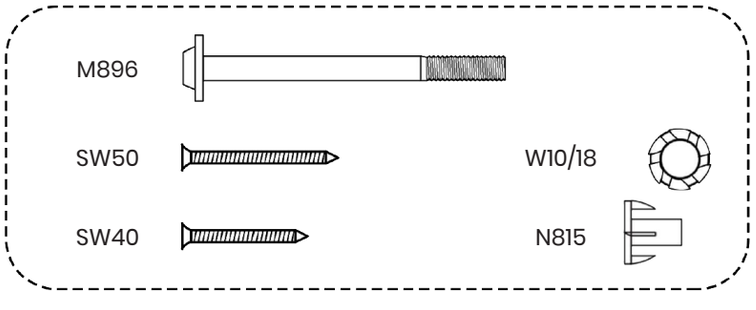

List	
Part NO.	Qty
F10	1
F25	1
N815	4
W10/18	2
M896	2
SW40	2
SW50	2


STEP 65

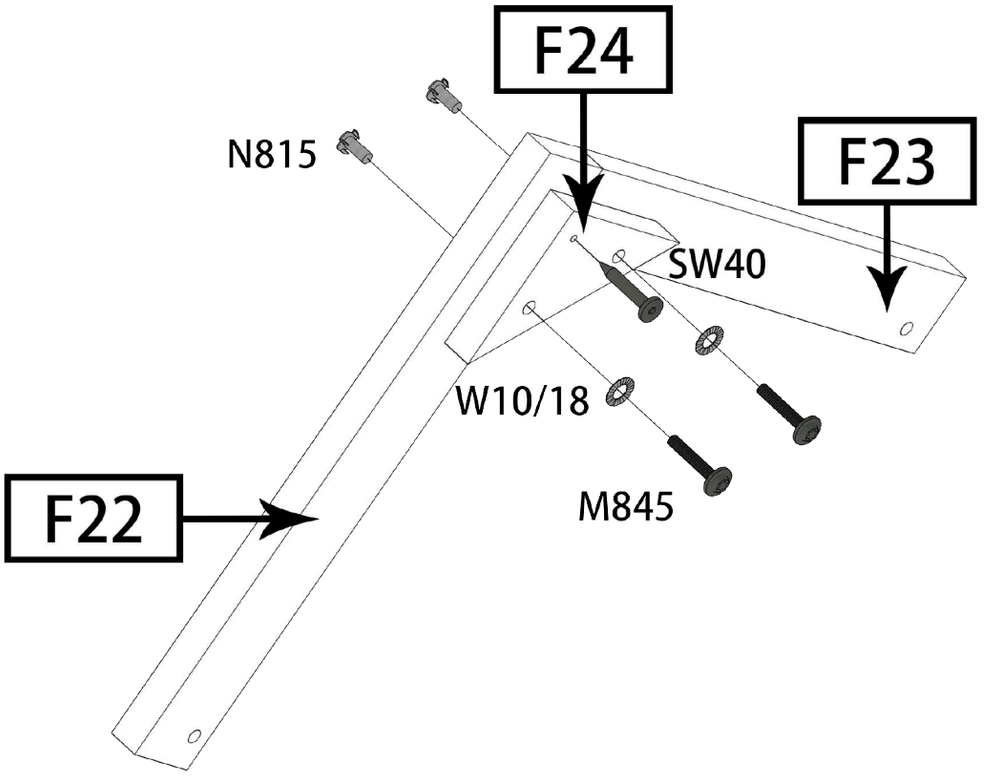


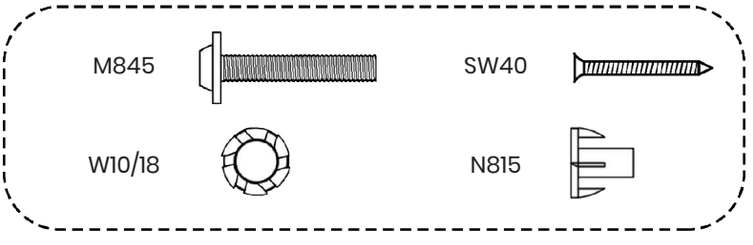


List	
Part NO.	Qty
F22	1
F23	1
F24	1
N815	2
W10/18	2
M845	2
SW40	1

STEP 66

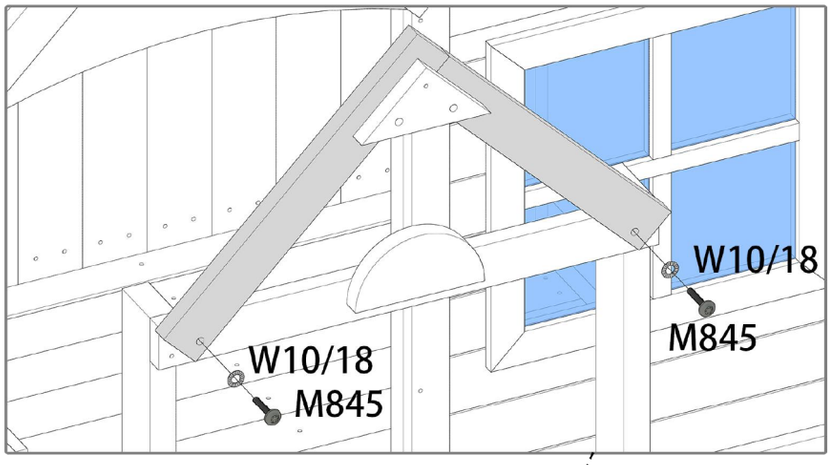


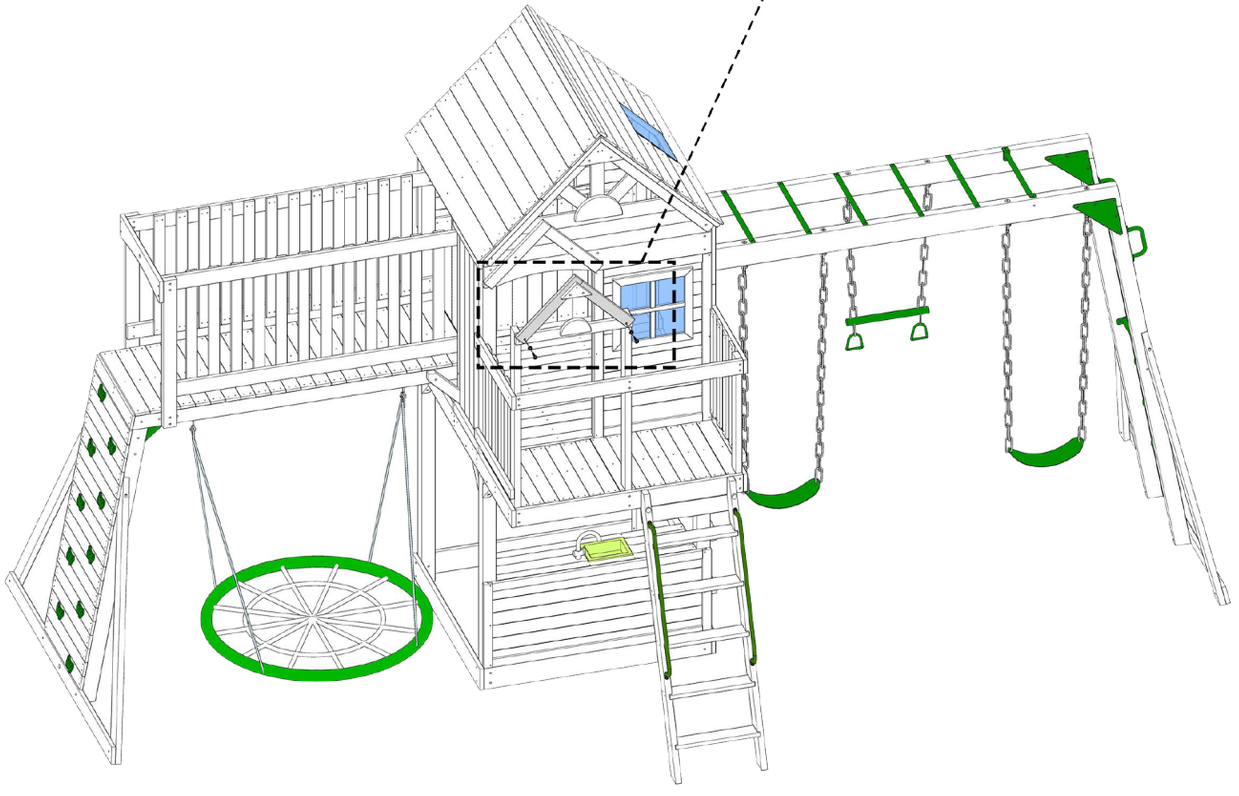

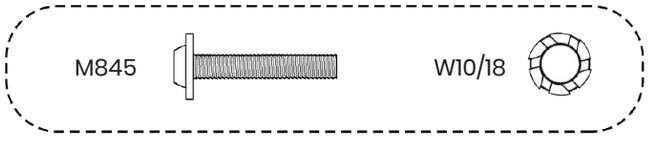

List	
Part NO.	Qty
W10/18	2
M845	2


STEP 67

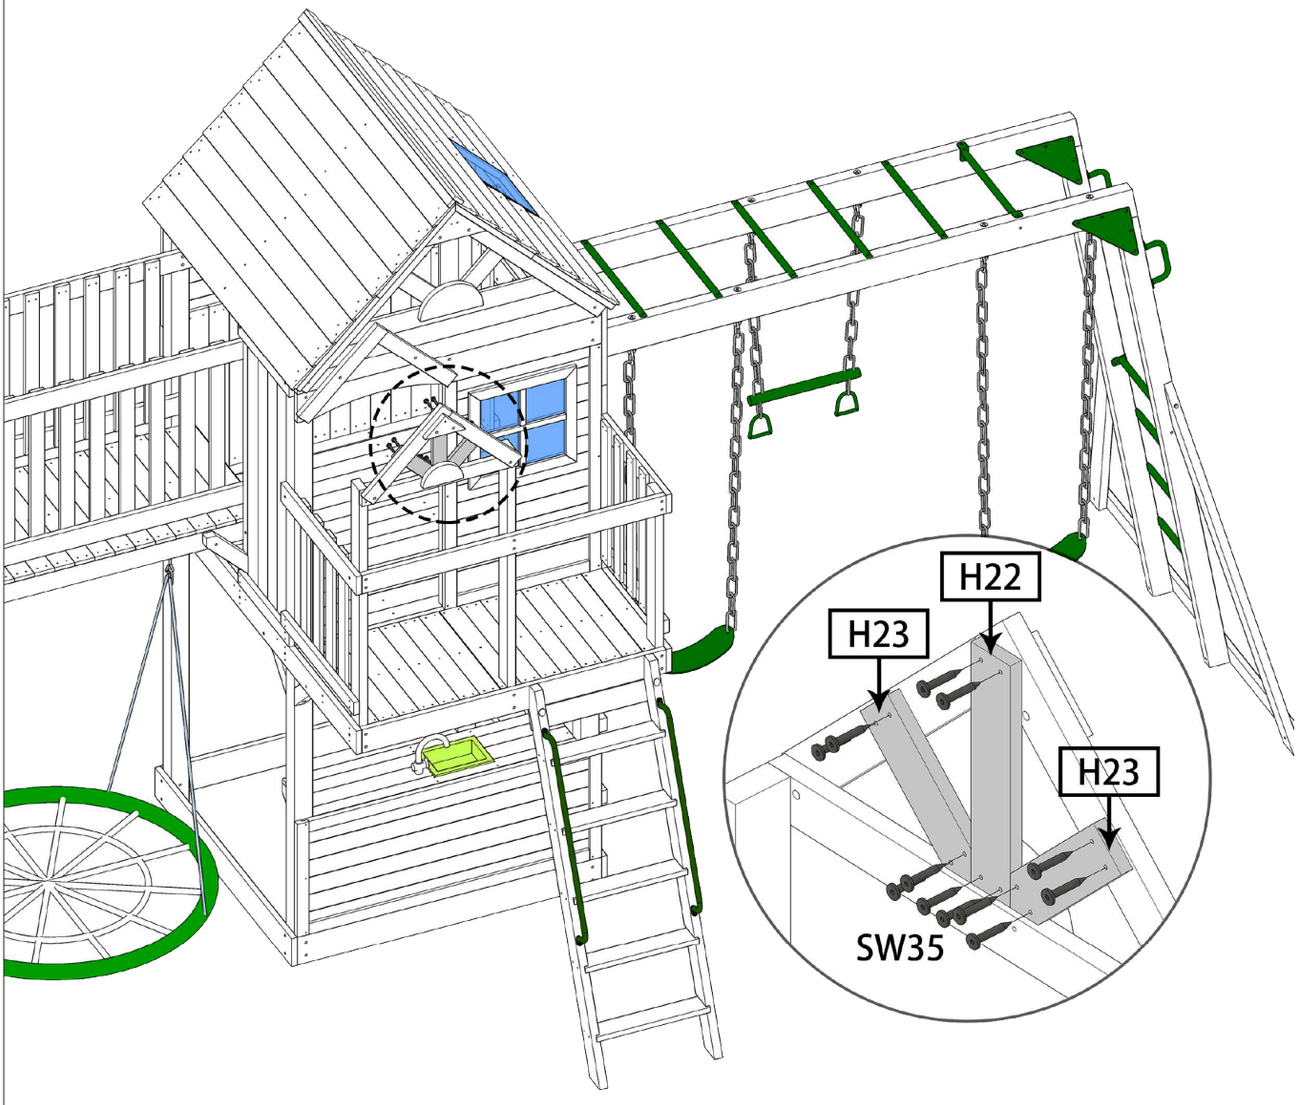

SW35


List	
Part NO.	Qty
H22	1
H23	2
SW35	12


STEP 68

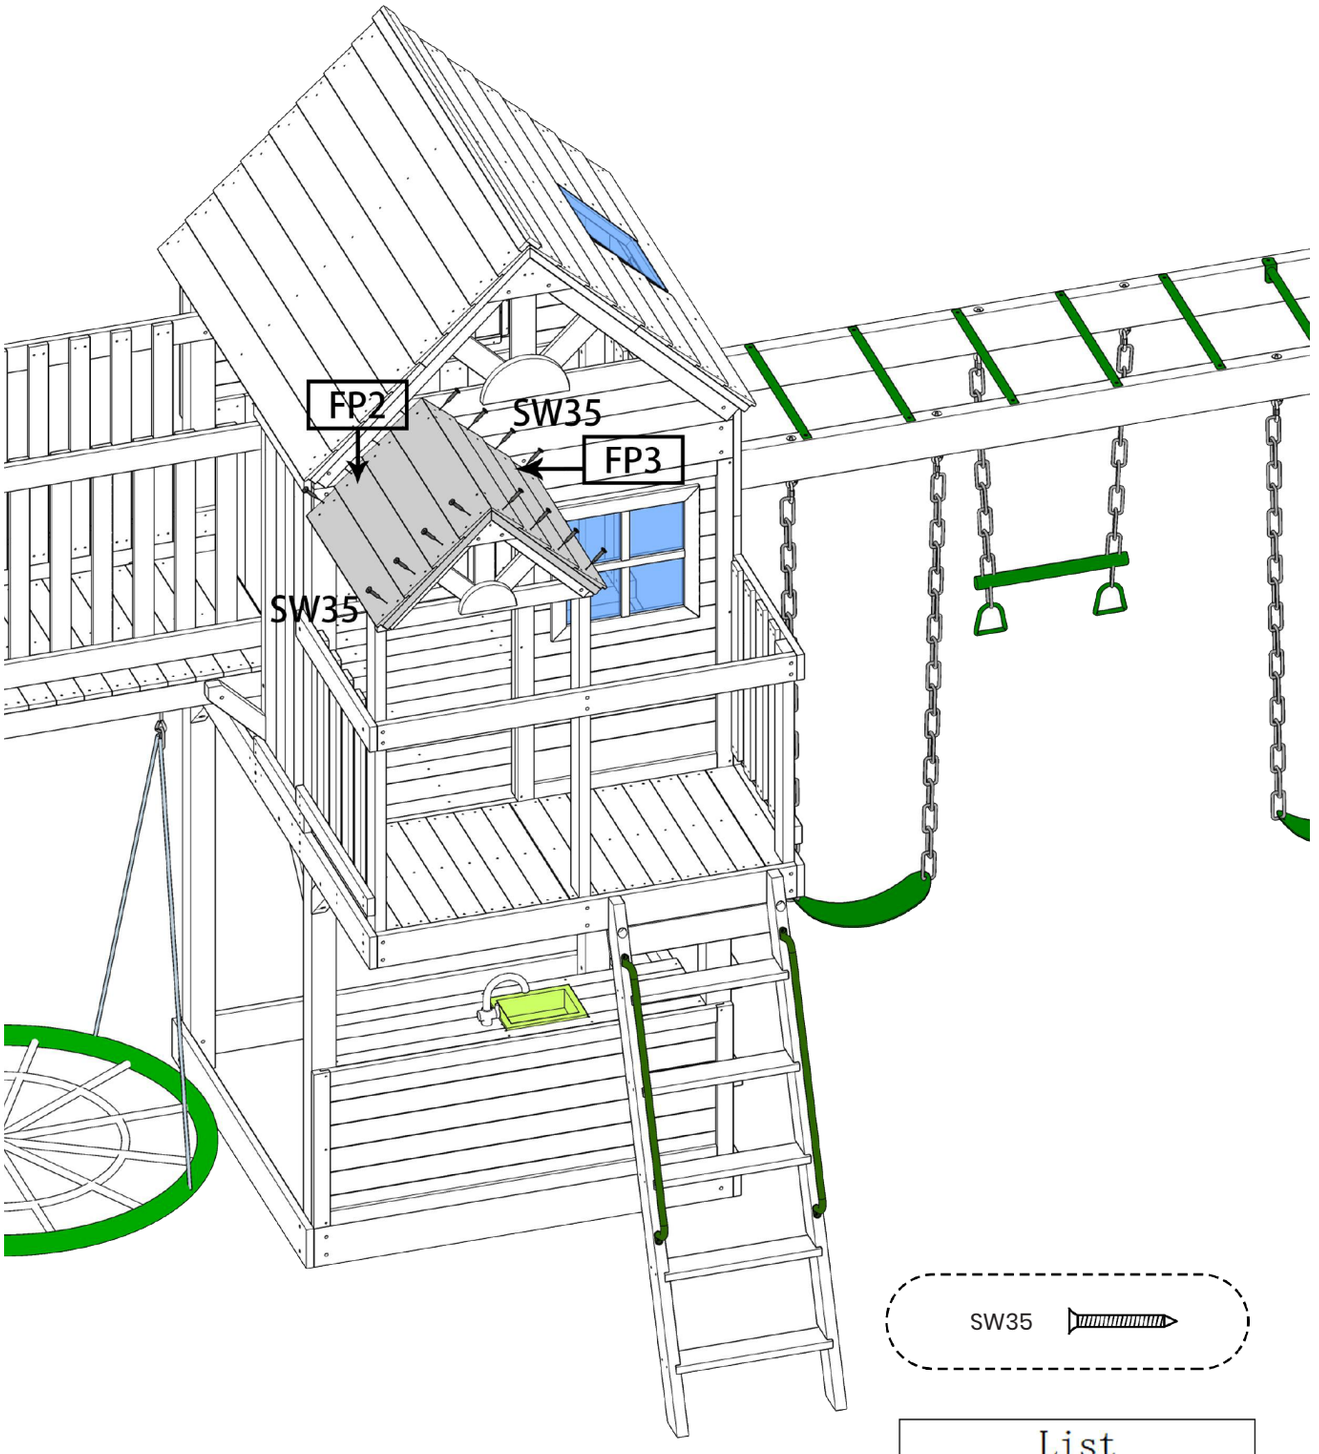



List	
Part NO.	Qty
FP2	1
FP3	1
SW35	16

STEP 69

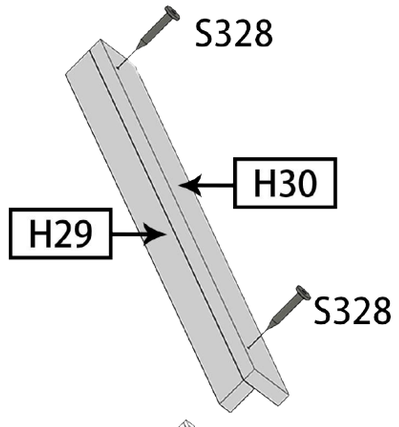

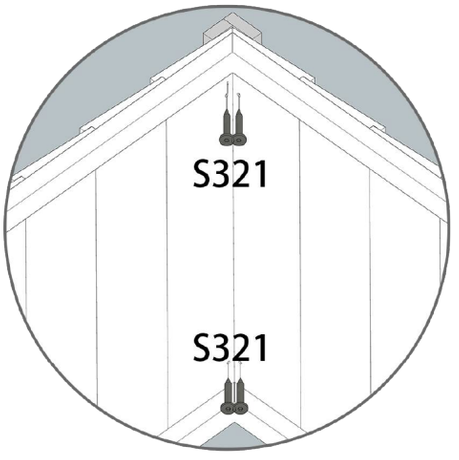


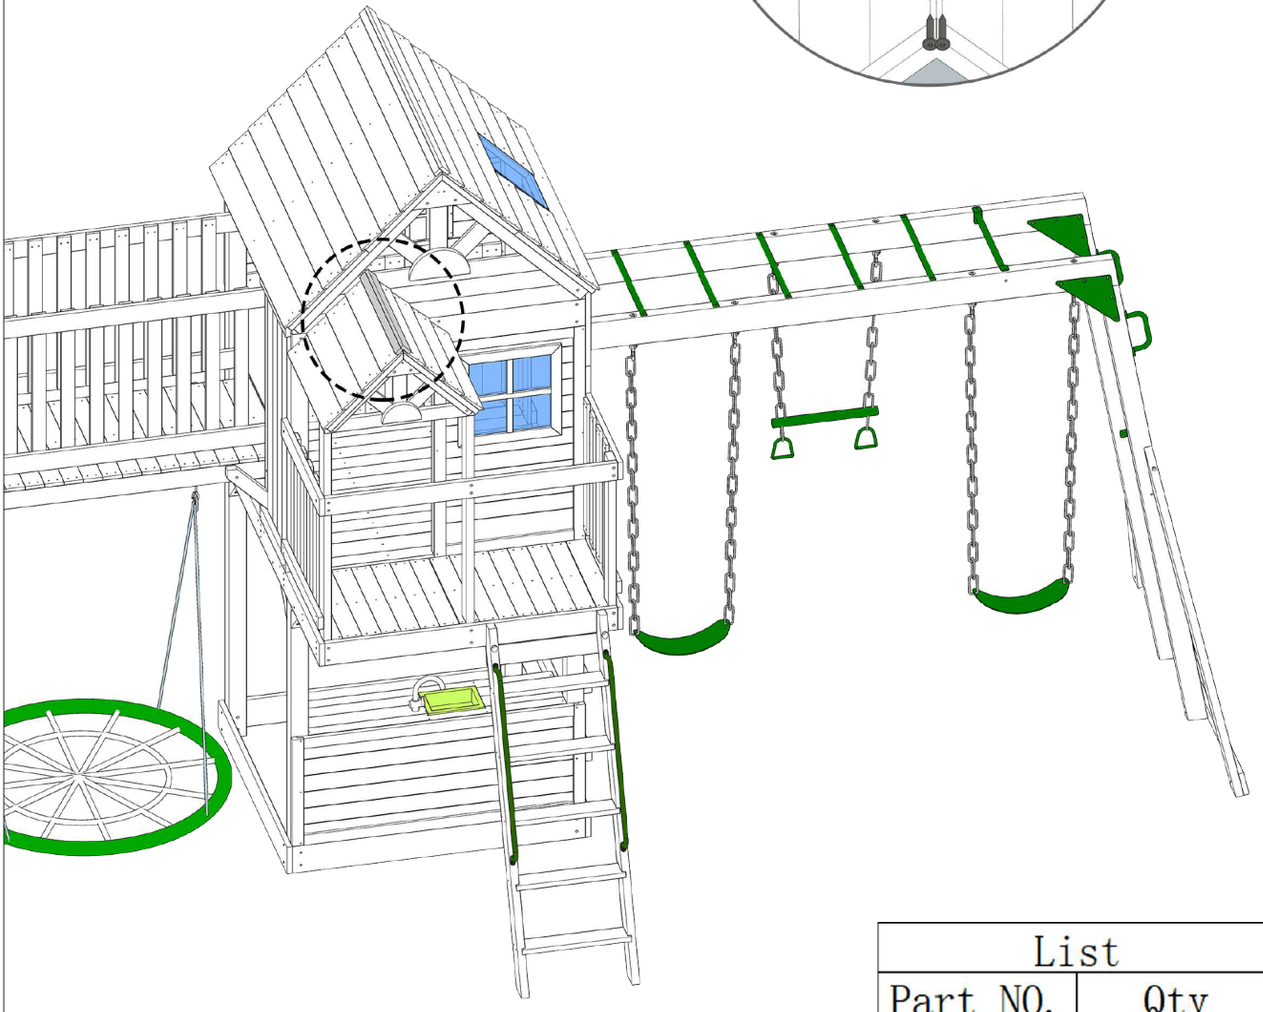


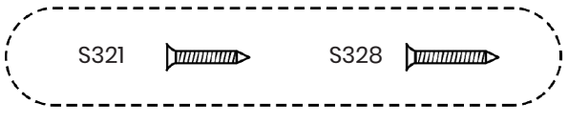

List	
Part NO.	Qty
H29	1
H30	1
S321	4
S328	2


STEP 70

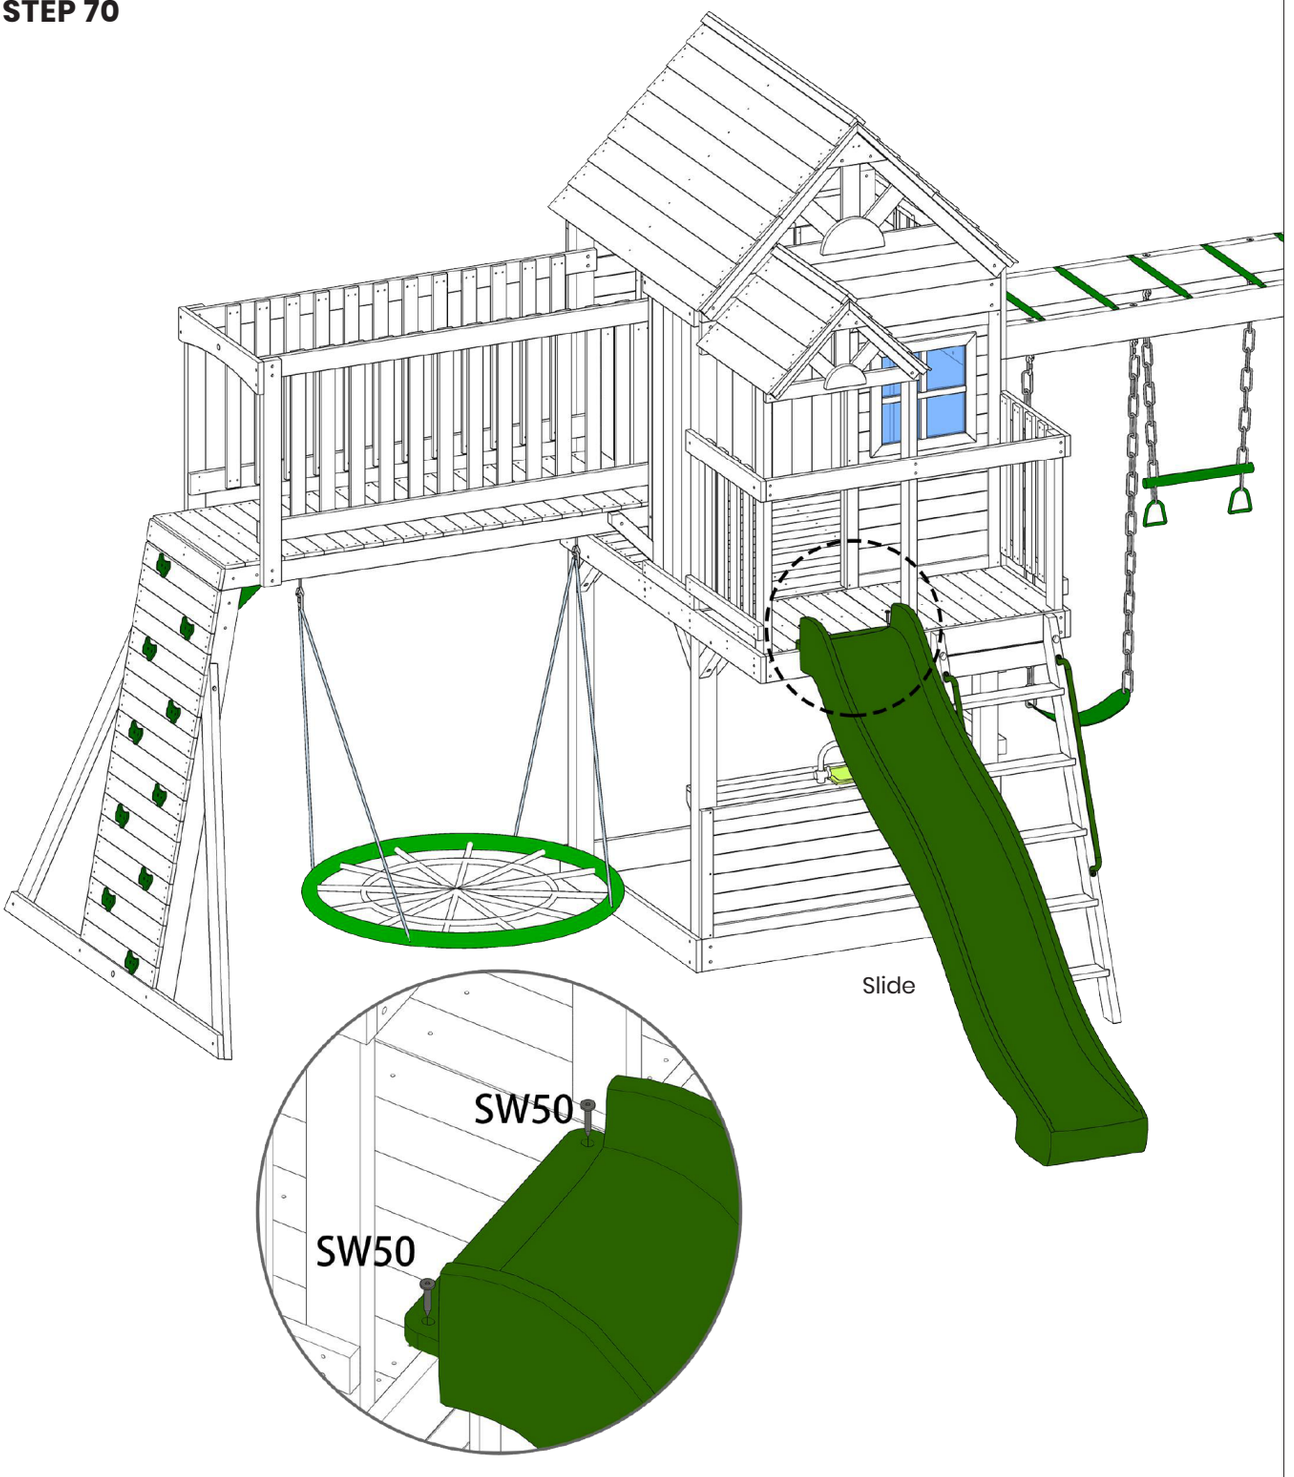

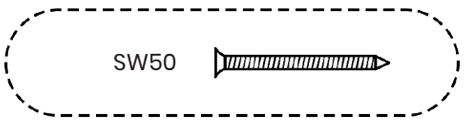


List	
Part NO.	Qty
SLIDE	1
SW50	2

STEP 71

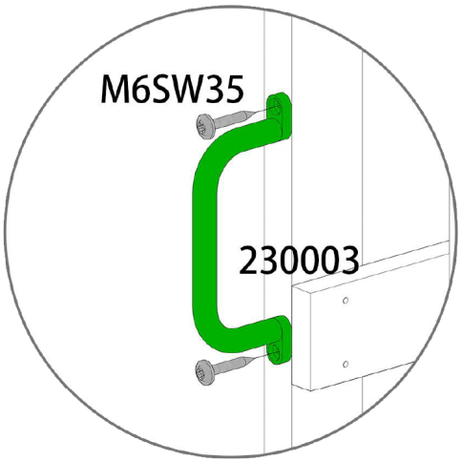


x4

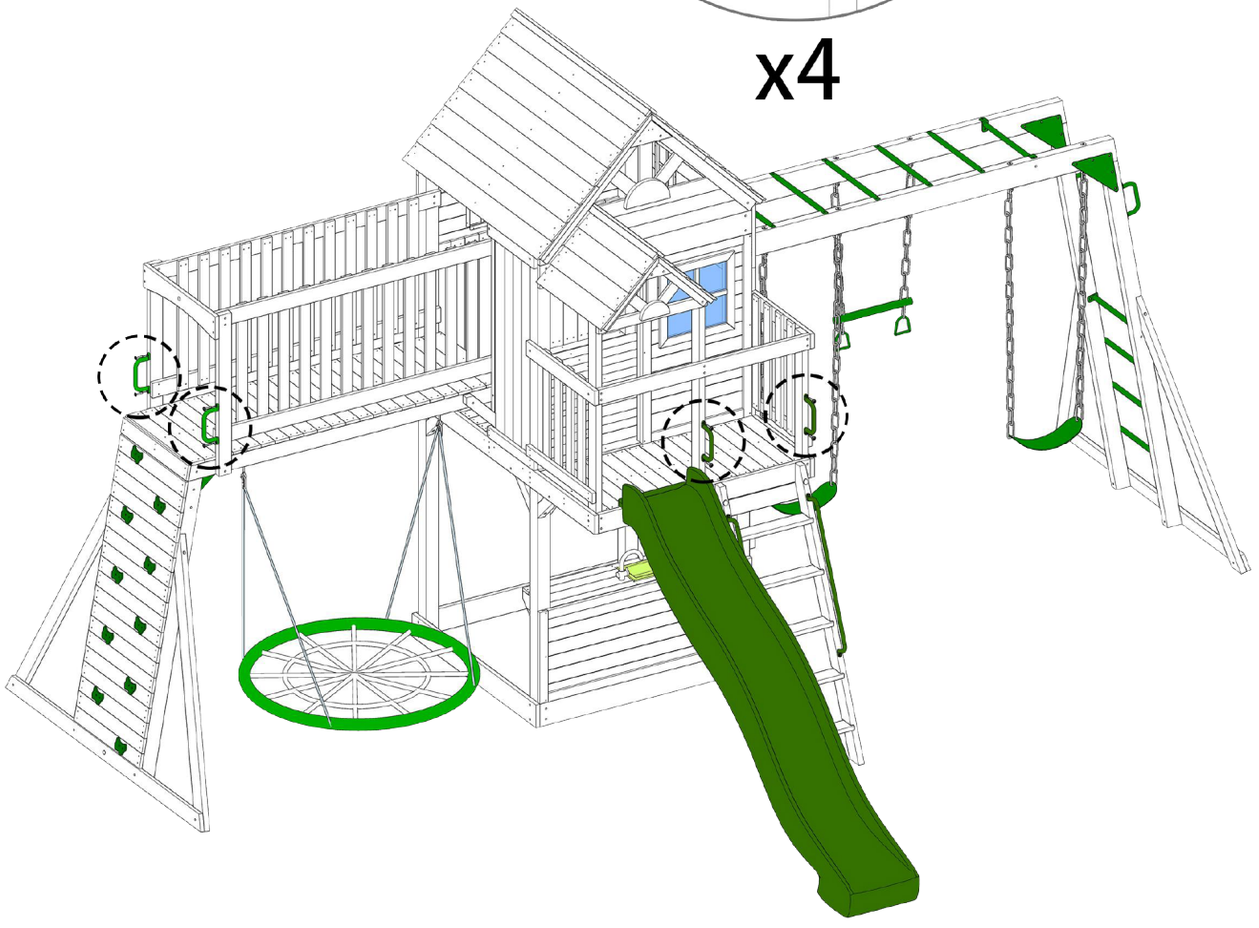



List	
Part NO.	Qty
230003	4
M6SW35	8

STEP 72

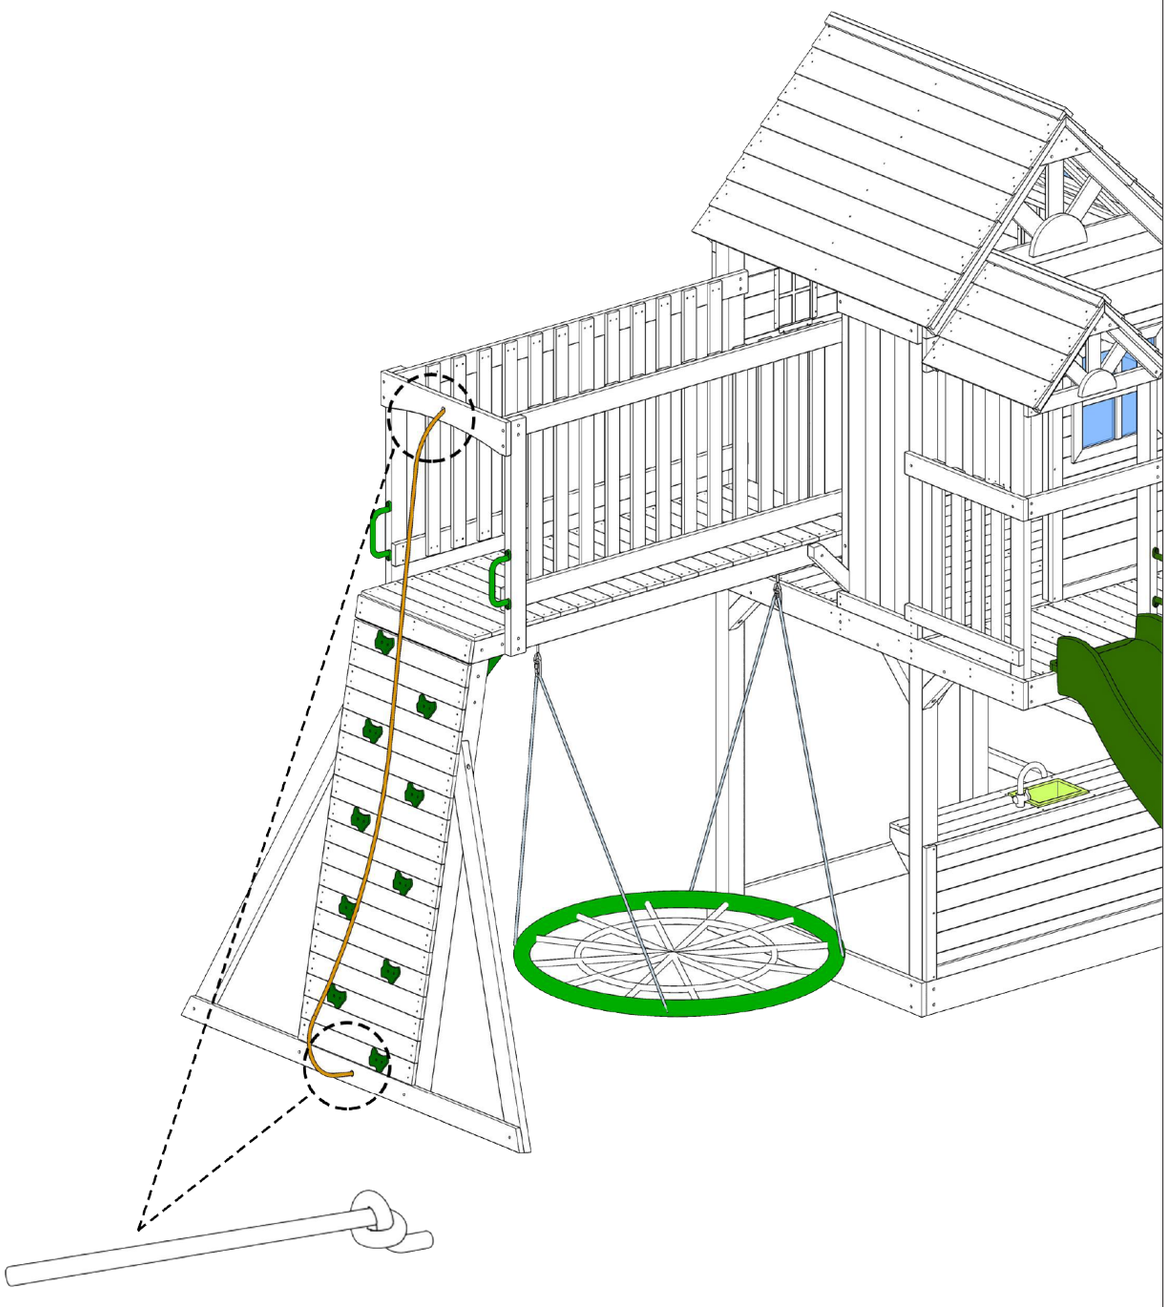


Thread the ropes through the pre-drilled holes and tie secure knots on the back. Ensure the knots are tight and cannot come loose.


WARNING: Check rope knots regularly to ensure they do not loosen from play.

List	
Part NO.	Qty
650009	1

STEP 73

TIP: Take note of the spacing.

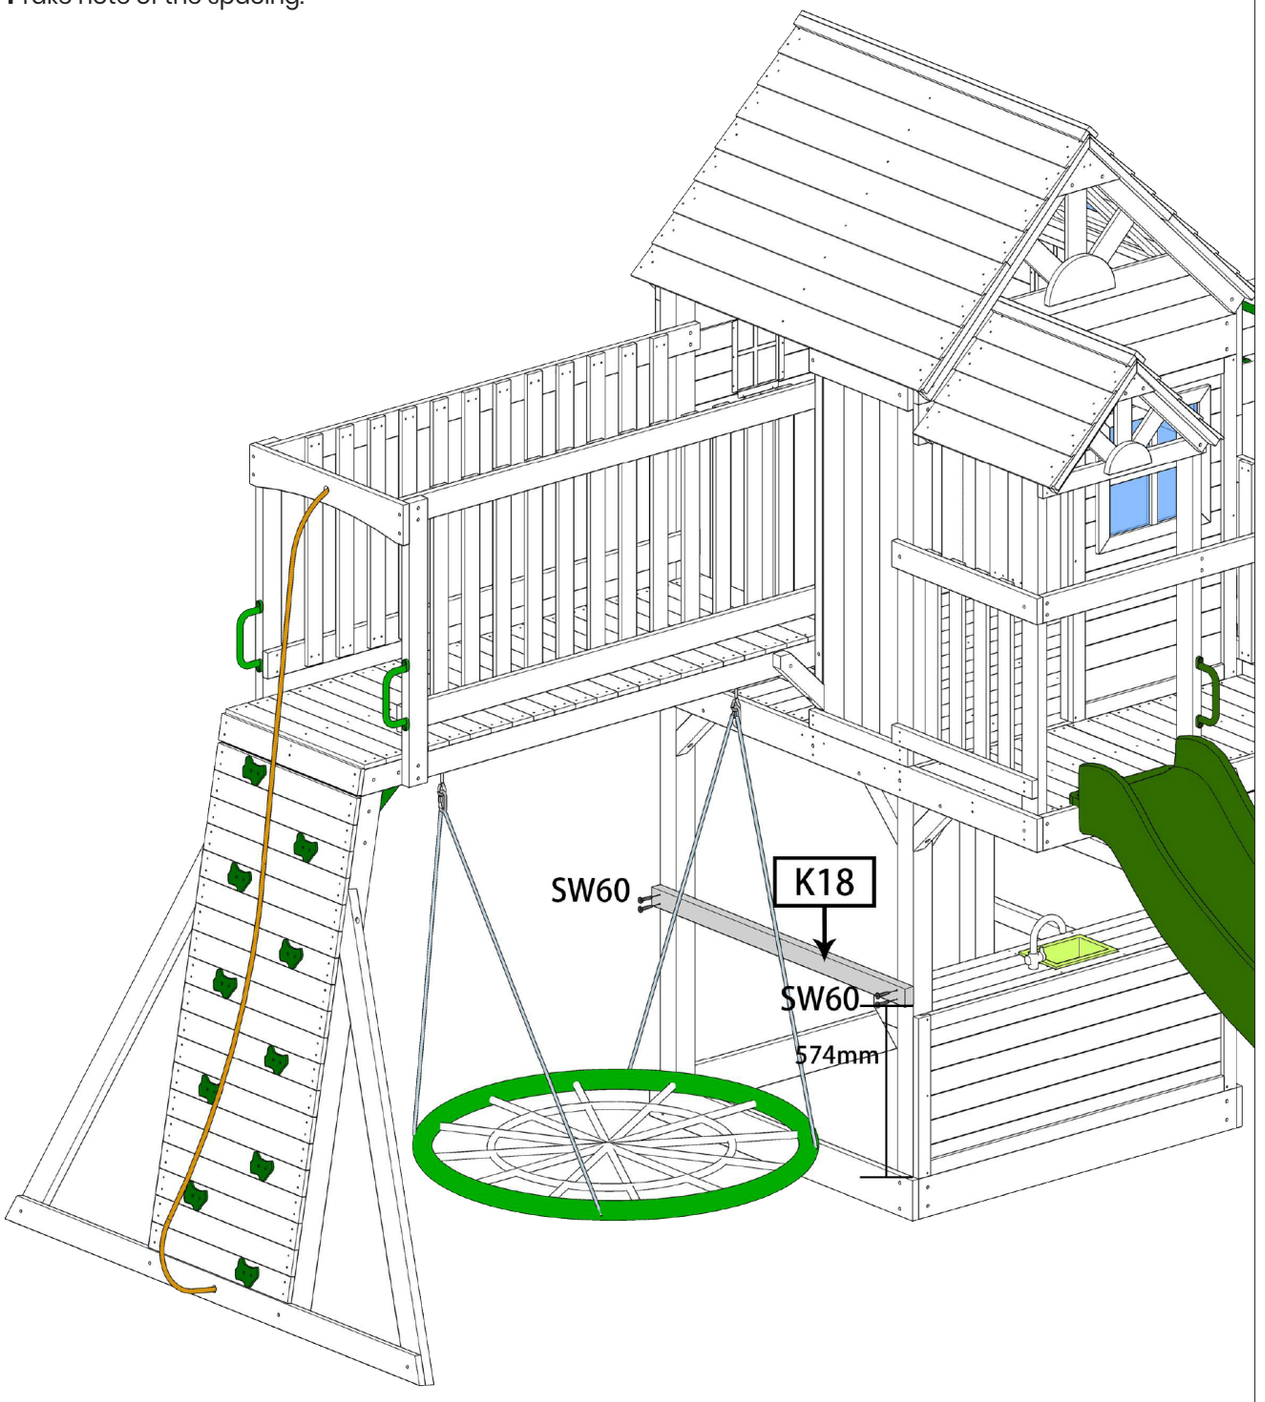


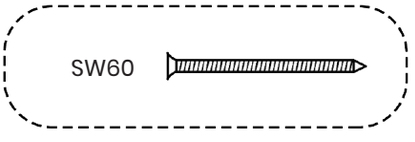


List	
Part NO.	Qty
K18	1
SW60	4

STEP 74


IMPORTANT: Ensure ground is fully levelled then install all ground anchors securely into firm soil before use.

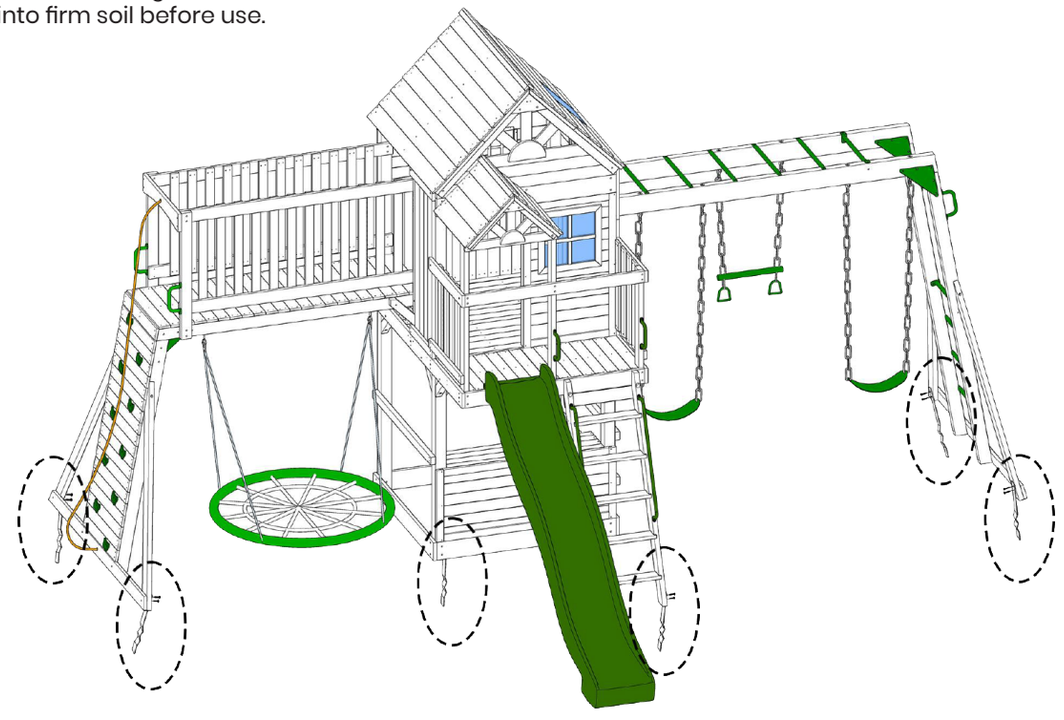

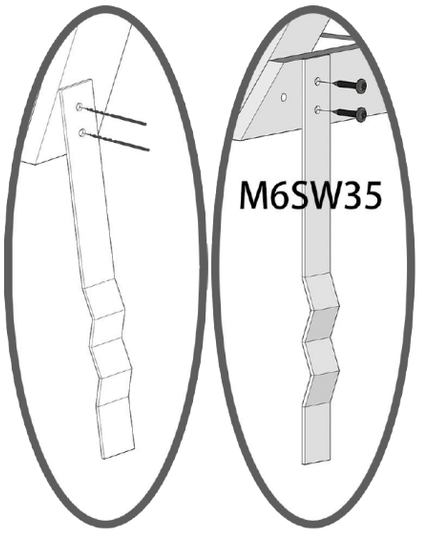

Pre-drill pilot holes before attaching screws.

139070 **X7**

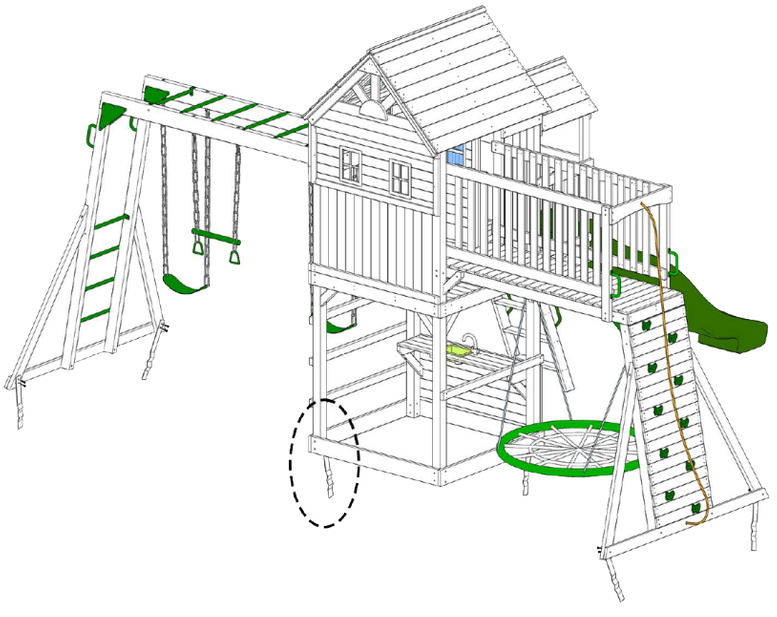



List	
Part NO.	Qty
139070	7
M6SW35	14

V. PLAY SET ASSEMBLY FAQS

1. Does the area for the playset need to be level?
Yes. We strongly recommend installing your playset on a flat, level surface to ensure maximum safety and durability. Always use the included ground stakes to securely anchor the playset.

2. What age range are the playsets suitable for?
Our playsets are designed for children aged 3 to 10 years.

3. Is the wood treated with chemicals?
No. For your child's safety, our timber is completely chemical-free and not pressure-treated. The finish is a water-based stain, applied as a topcoat for appearance only.

4. How often should the playset be stained?
We recommend re-staining your playset once per year to maintain its appearance and longevity. You may use either a water-based stain or paint.

5. Why is my playset developing cracks?
Wood is a natural material, and each piece reacts differently to environmental conditions. What you're seeing are called "wood checks", which are natural separations along the grain caused by temperature and moisture changes.
These are not structural cracks and do not affect the strength or durability of the playset.

6. Do the playsets come with a warranty?
Yes. All Lifespan Kids playsets include a replacement warranty covering manufacturing defects. Please refer to the full warranty policy for detailed coverage.

7. What is the best way to start assembling the playset?
Before starting assembly:
• Unpack all components
• Sort parts by their part numbers
This helps speed up the process and allows you to quickly identify any missing or damaged parts before you begin.

8. The playset rocks or sways—what should I do?
This is usually caused by uneven ground or obstructions like rocks or roots beneath the base.
To fix this:
• Remove any obstructions
• Re-level the ground
• Ensure all anchors are securely installed
• Check all bolts are tightened properly

9. The end beam is not perfectly vertical—is this normal?
Yes, this is intentional. Lifespan Kids designs playsets with a slight angle in certain beams to increase structural strength and help reduce rocking or twisting during use.

VI. WOOD ADVICE

Our products are manufactured from premium timber. Great care is taking in selecting, machining, and treating the timber before it is sold to you.

1. Inspect wood parts monthly. The grain of the wood sometimes will lift in dry periods causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/splitting and other weather damage.

2. The wood is treated via high temperature drying, degreasing and is stained against wood rot and insect damage (Termites not included). This is not a permanent treatment as weather conditions can wear it down. We recommend once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any “rough” spots on your set. **Please note this is a requirement of your warranty.**

Bear in mind that timber is a natural product and may experience changes throughout the course of its life. It may:


- Develop openings/checks (gaps, slits, apertures, cracks) along the line of the grain.
- Fade as the timber reacts with sunlight.

All woods are hygroscopic, that is, it will absorb or discharge moisture to attain equilibrium with the surrounding atmosphere. Timber openings/checks occur due to the moisture content between internal and outer surfaces of the timber. No two pieces of wood are exactly alike. Each piece has its own characteristics and personality and reacts differently to climate changes. When any wood products are exposed to the elements, it develops ‘wood checks’. A check is the radial separation of the wood fibres running with the grain of the wood. These are caused by the varying temperature and moisture conditions. A check does not affect the strength or durability of the wood or structural integrity of the play set.

WHEN SHOULD WOOD CRACKS BE A CONCERN?

Most of the wood splits will never become large enough to affect the reliability and strength of our products, however, there can be rare cases where splits can occur. This happens when a crack develops past the halfway point from the timber, splitting it into two separate pieces.

Feel free to contact us with detailed pictures of your product so we can assess and ensure that your playground remains safe.

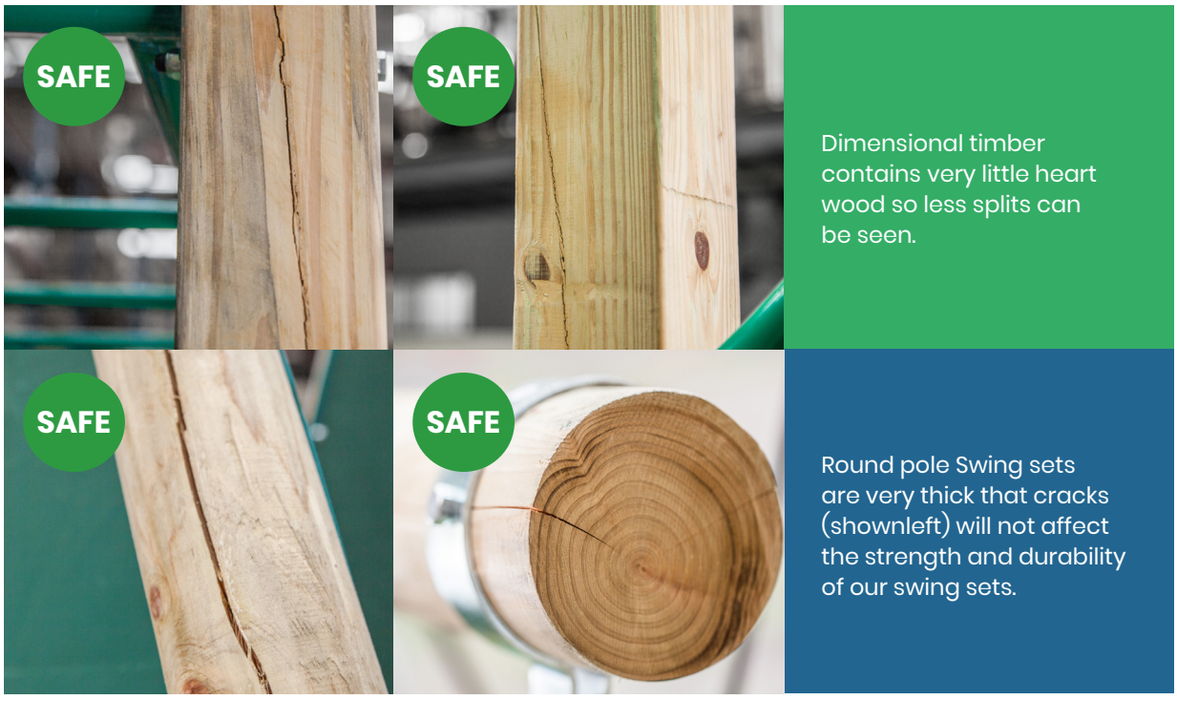

3. **Mould and Mildew**

Protecting against mould and mildew on your outdoor equipment is an important step in maintaining your backyard. Mould may develop for several reasons, such as certain weather conditions, improper drainage or infrequent usage. Here we'll share our tips for keeping your outdoor areas free of mould and mildew so that you can enjoy your backyard with peace of mind.

Once you spot mould on your equipment, it's important to start clearing it up straight away. The first step is to scrub it off with soap and water, until all the visible signs of mould are removed. It's important to remember however, that just because you can't see it anymore doesn't mean it's gone.
The next step is to kill off the remaining mould so that it doesn't grow back. Here are a few options, but keep in mind these should be used independently. Don't mix or combine these methods at the same time.

Mould Killer or Removal Spray
You can purchase off-the-shelf removal sprays that destroy mould either indoors or outdoors. For these products, make sure to follow the product instructions as well as wearing protective gloves to avoid contact with skin.

Bleach
A solution of bleach and water can also be highly effective in killing mould. For this method, mix the water and bleach on a 1 to 1 ratio, then use a sponge or brush to scrub the affected area. You can also use a higher concentration of bleach for spot treating. After bleach treatment, make sure to rinse off your equipment and allow to dry.

Vinegar
If mould is still lingers after applying bleach or a mould spray, vinegar will be an effective option for removing stubborn remnants. Vinegar will kill most types of mould and is best for nonporous materials like hard plastics or metal. The best method is to fill a spray-bottle with undiluted white vinegar of at least 5% acetic aced. Spray the affected area, then let sit for around an hour. Make sure to thoroughly rinse off afterwards.

For wooden equipment, you can add a coat of paint or stain after it has thoroughly dried.

Some people may find that mould keeps resurfacing after cleaning on certain areas. This can be due to a few reasons, such as poor sunlight. Areas without direct sun are more likely to become damp and take longer to dry off after rain. Consider removing obstacles or rearranging your equipment so that it receives more sunlight, which will also help to kill the mould once it develops.

VII. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit **www.lifespankids.com.au/warranty-form**

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit **www.lifespankids.com.au/warranty-form** and fill in our Repair/Service Request Form or Parts Purchase Form.

VIII. SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue. We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.



LIFESPAN KIDS

www.lifespankids.com.au