LIFESPAN KIDS

USER MANUAL
Roseberry Cubby House

Find the Digital Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:
This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:
This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at *www.lifespankids.com.au.*

TABLE OF CONTENTS

I. GENERAL SAFETY INSTRUCTIONS	3
II. SAFETY INFORMATION	3
III. ASSEMBLY INSTRUCTIONS	7
IV. MAINTENANCE	54
V. WOOD ADVICE	55
VI. WARRANTY	57
VII. SECURITY SUPPORT INFORMATION	58

I. SAFETY INFORMATION

WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT: This product may contain sharp points and small parts prior to assembly. The product must be assembled by an adult who has read and understood the instructions. Keep packaging away from children and dispose of all packaging before use.

NOTE: This product is intended for outdoor domestic use only.

MAX. WEIGHT LOAD: 200kg
MAX. USER: 5 children

- Children do not recognise potential dangers from this product. Store the unassembled product out of reach of children and pets.
- Adult supervision is required at all times while children are using the cubby house.
- Do not use the product if it is damaged or defective. Replace damaged, loose or worn parts before further use.
- Install the cubby house on a flat, horizontal and non-slip surface. Keep a minimum clear area of 2m from structures or hazards such as fences, buildings, tree branches, clotheslines, pools and electrical cables.
- Do not install the cubby house on a hard surface such as concrete or asphalt where a fall could cause injury.
- Do not place objects or body parts into gaps, openings, hinges or other moving areas.
- Do not lean, sit, stand or place body weight on window ledges, flower boxes, windows, doors or similar accessory features. These components are not designed to support user weight.
- Children must not swing, hang or pull on the cubby door, windows or other moving panels.
- Do not climb, sit or stand on the roof.
- Keep fingers and hands clear of hinges and closing edges when opening or closing the door and windows.
- Do not make alterations to the product. Repairs should only be carried out using suitable replacement parts.
- If strong winds are predicted, prevent the cubby house from moving by using a suitable anchoring method for the ground conditions, or move/disassemble the product to a sheltered location where practical.

PRODUCT-SPECIFIC SAFETY

- Flower boxes and window ledges are decorative/play features only and must not be used as seats, steps or climbing points.
- Do not allow children to hang from the door, window shutters, roof frame or decorative roof features.
- Keep hands clear of door and window hinge points to reduce the risk of pinching or trapping fingers.
- Do not allow children to access or climb onto the roof, including through the roof window/opening.
- Inspect the deck and internal floor regularly for loose boards, raised screw heads, splinters or movement.
- Clean the chimney of debris to allow water to flow through the exit holes.

STORAGE AND SEVERE WEATHER

- If severe weather or strong winds are expected, secure the cubby house against movement or move/disassemble it to a sheltered location where practical.
- Remove snow or heavy debris from the roof promptly. Do not allow heavy buildup to remain on the structure.
- If components are removed for storage, keep them dry and store fixings with their matching parts for correct reassembly.

II. BEFORE ASSEMBLY

- Assembly must be completed carefully by an able-bodied adult. If in doubt, seek assistance from a technically qualified person.
- Read all assembly diagrams before starting.
- Remove all packaging and lay out the parts in an open area so all components can be identified easily.
- Check the exploded diagram and hardware list before assembly. Do not continue if parts are missing or damaged.
- Keep children and pets away from the assembly area.
- Wear gloves during assembly and use tools carefully.
- Use two adults when lifting or positioning large wall, gable and roof panels.
- Assemble the cubby house on a flat, level surface and keep the work area free from trip hazards.
- Do not fully tighten major wall joints until the adjoining panels are aligned and the structure is square, unless the diagram specifically requires full tightening earlier.

FINAL CHECKS

- Check that all screws, brackets and fixings are correctly installed and securely tightened.
- Check that the walls, floor and roof are aligned and the cubby house sits stable and level.
- Check that the door and windows open and close freely without binding.
- Check all exposed hardware and timber surfaces for sharp edges, splinters or protruding fasteners.
- Confirm the area around the cubby house is clear of tools, packaging and other hazards before allowing children to use it.
- Recheck all main fixings after the first period of use and tighten if required.

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS:

The US Consumer Product Safety Commission (CPSC) estimates that about 100 000 playground equipment-related injuries resulting from falls to the ground surface are treated annually in US hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall on to a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces, such as concrete or asphalt, and while grass may appear to be acceptable, it may quickly turn to hard-packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table B.1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall on to four different loose-fill surfacing materials if they are installed and maintained at depths of 150 mm, 225 mm and 300 mm.

TABLE B.1: Fall height in millimetres from which a life-threatening head injury would not be expected.

TYPE OF MATERIAL	DEPTH OF SURFACING MATERIAL		
	150mm	225mm	300mm
Double Shredded Bark Mulch	1800	3000	3300
Wood Chips	1800	2100	3600
Fine Sand	1500	1500	2700
Fine Gravel	1800	2100	3000

However, it should be recognised that all injuries due to falls cannot be prevented, no matter what surfacing material is used.

It is recommended that a shock absorbing material extend a minimum of 1800mm in all directions from the perimeter of stationary equipment such as climbing frames and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of twice the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for the equipment in question. The choice of a material depends on the type and height of the playground equipment, the availability of the material in a particular area, and its cost.

III. ASSEMBLY INSTRUCTIONS

PARTS LIST

K1A=1

1247 x 35 x 35mm

K1B=1

1247 x 35 x 35mm

K2=2

1598 x 35 x 35mm

K3=1

1598 x 35 x 35mm

K4=1

1103 x 35 x 35mm

K5=3

1103 x 35 x 35mm

K6=1

1636 x 35 x 35mm

K7=1

1612 x 35 x 35mm

K8=1

987 x 35 x 35mm

K9=1

1636 x 60 x 35mm

K10=1

435 x 35 x 24mm

K11A=1

1585 x 35 x 24mm

K11B=1

1585 x 35 x 24mm

K12=2

444 x 35 x 24mm

K13=2

1070 x 35 x 24mm

K14=2


514 x 35 x 24mm


K19=1


637 x 50 x 35mm

H1=1

1012 x 86 x 16mm

H2A=1

1012 x 86 x 16mm

H2B=1

1012 x 86 x 16mm

H2=15

1012 x 86 x 16mm

H3=1

1012 x 110 x 16mm

H4=1


1619 x 86 x 16mm


H5=10

1619 x 86 x 16mm

H6=1


1619 x 76 x 16mm


H7=1

1619 x 102 x 16mm

H8=1

530 x 86 x 16mm

H9=1

530 x 76 x 16mm

H10=16

530 x 86 x 16mm

H11=1

530 x 86 x 16mm

H12=19

110 x 35 x 16mm

H13=9

484 x 60 x 16mm

H14=4

484 x 60 x 16mm

K20=2

1529 x 35 x 35mm

K21=2

999 x 35 x 35mm

K22=2

884 x 60 x 35mm

K23=1

914 x 60 x 35mm

C1A=2

1642 x 35 x 35mm

C1B=1

1642 x 35 x 35mm

C1=2

1642 x 35 x 35mm

C2=1

1642 x 35 x 35mm

C3=1

1452 x 35 x 35mm

C3A=1

1452 x 35 x 35mm

C4=1

1503 x 35 x 35mm

C5=1

1561 x 35 x 35mm

C6=1

1820 x 35 x 35mm

C7=1

1494 x 35 x 35mm

C9=1

1533 x 35 x 35mm

H161=1

1526 x 50 x 16mm

H169=1



518 x 134 x 16mm

H167=2



134 x 134 x 16mm

H160=1



550 x 134 x 16mm

H168=1



518 x 134 x 16mm

H62=2

1512 x 60 x 16mm

H63A=1

1138 x 86 x 16mm

H64A=1



1668 x 86 x 16mm

H105=1

1208 x 50 x 16mm

H106=1

1208 x 35 x 16mm

H107=1

530 x 50 x 16mm

H108=1

530 x 35 x 16mm

H117=2



134 x 134 x 16mm

H118=1



444 x 134 x 16mm

H119=1



444 x 134 x 16mm

F22=2

153 x 24 x 24mm

H120=1



476 x 134 x 16mm

F10=2

524 x 50 x 24mm

H121=2



350 x 134 x 16mm

F11=2

644 x 50 x 24mm

H122=1




350 x 134 x 16mm

H123=1




251 x 134 x 16mm

WP1=1

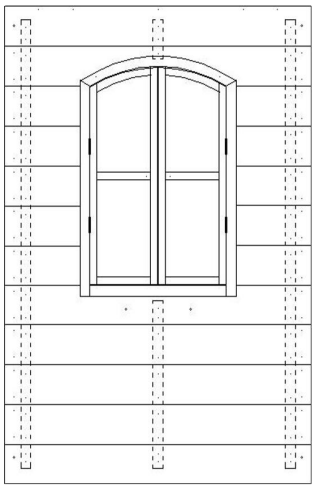


1080 x 1560 x 48mm

WP3=1

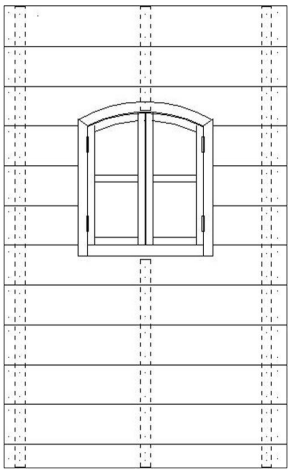

1509 x 1000 x 48mm

WP9=1

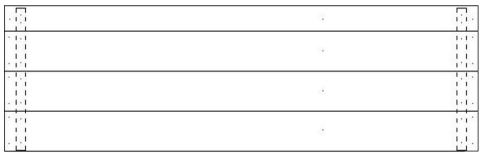


1668 x 522 x 32mm

WP10=1




1668 x 522 x 32mm

WP2=1

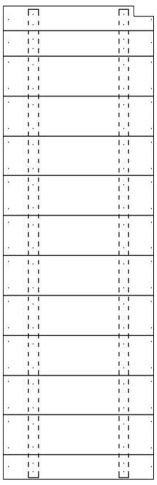


1509 x 530 x 32mm

WP5=1

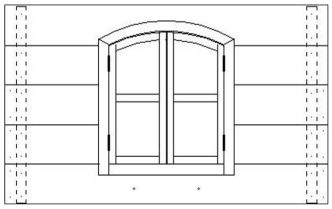

1138 x 652 x 32mm

WP6=1

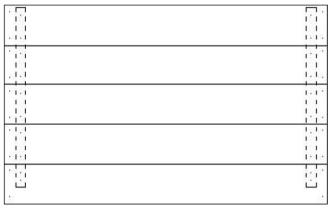

1138 x 651 x 32mm

WP17=1



1333 x 522 x 32mm

WP18=1



1333 x 522 x 32mm

WP19=1




1333 x 522 x 32mm

WP20=1




1333 x 522 x 32mm

WP21=1

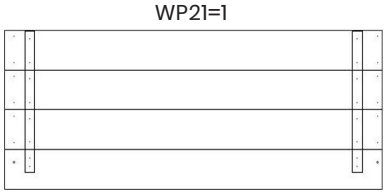

1333 x 522 x 32mm

WP4=1




1138 x 217 x 32mm

WP22=1




1333 x 522 x 32mm

WP11=1

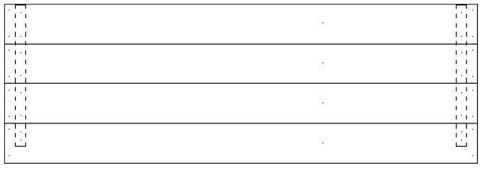


1668 x 522 x 32mm

WP12=1

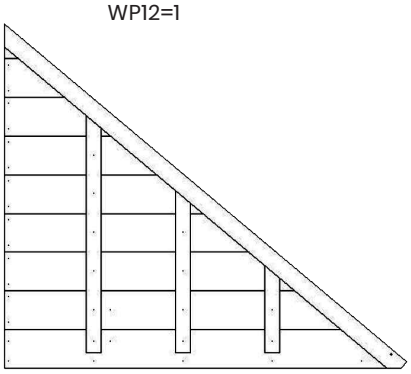


1352 x 1157 x 35mm

WP13=1

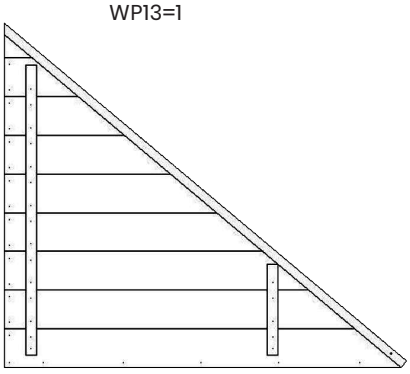


1352 x 1157 x 51mm

DOOR=1

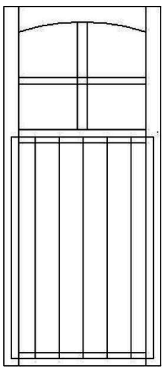


530 x 1209 x 24mm

WP14=1

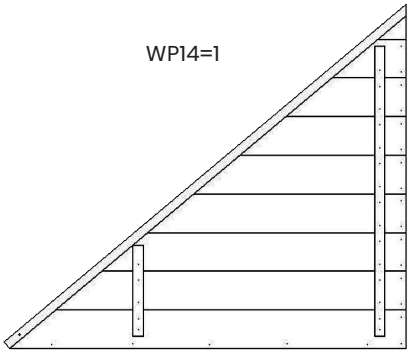


1352 x 1157 x 51mm

WP15=1

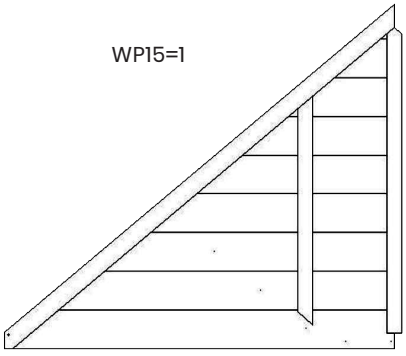


1338 x 1157 x 35mm

FP6=1

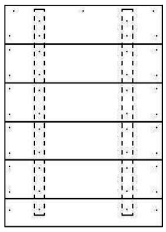


530 x 743 x 32mm

FP7=1

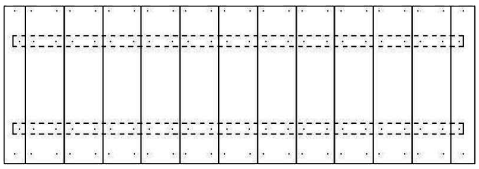


530 x 1585 x 32mm

FP1=2

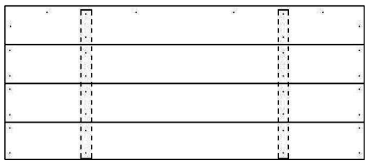


1208 x 518 x 32mm

WP16=1

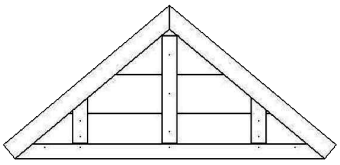


1119 x 515 x 35mm

FP2=1

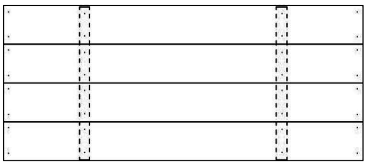


1208 x 522 x 32mm

FP4=1

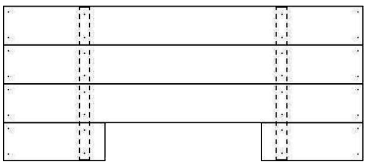


1208 x 522 x 32mm

FP3=1

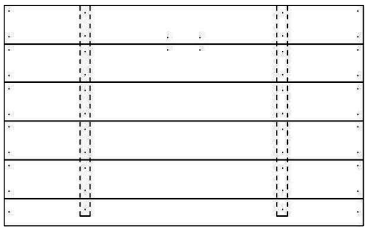


1208 x 743 x 32mm

FP5=1

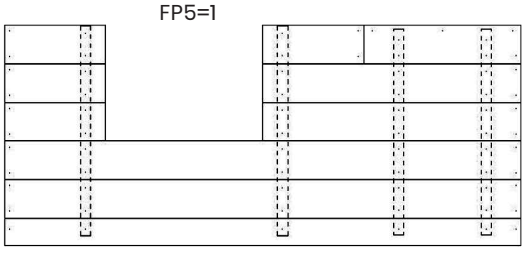


1738 x 743 x 32mm

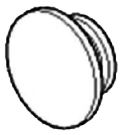


(7) MMBS-1




(4) 139070

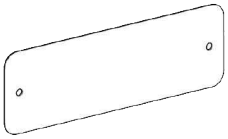


(1) 235002

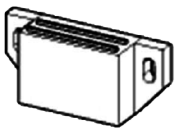


(2) CX-1

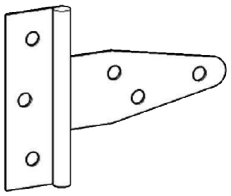


(3) T-HY-1

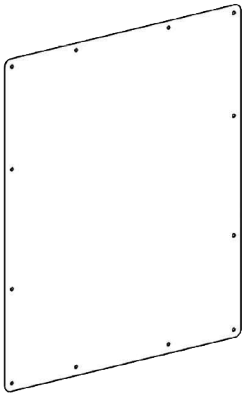


(1) 236YKL-3

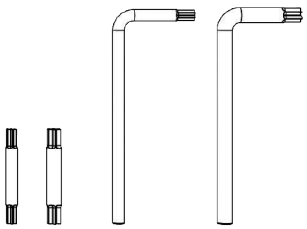


Star Bit (S)
Star Bit (L)
Allen Wrench (S)
Allen Wrench (L)



(1) 651028-L

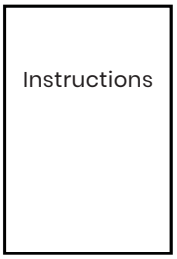

(1) 236090

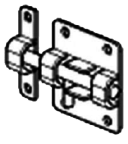

(3) CHCX-1


W8/15
Washer x 40



N615
NUT x 40




M625
Bolt x 4




M645
Bolt x 12



M655
Bolt x 12



M665
Bolt x 12



S315
Screw x 46



S321
Screw x 40



S328
Screw x 45



SW16
Screw x 2



SW28
Screw x 57



SW35
Screw x 883



SW40
Screw x 41



SW50
Screw x 3



SW60
Screw x 45




M6SW35
Screw x 8




STEP 1

IMPORTANT:
• Do not overtighten the screws.
• Check the timbers are properly aligned and spaced as required.

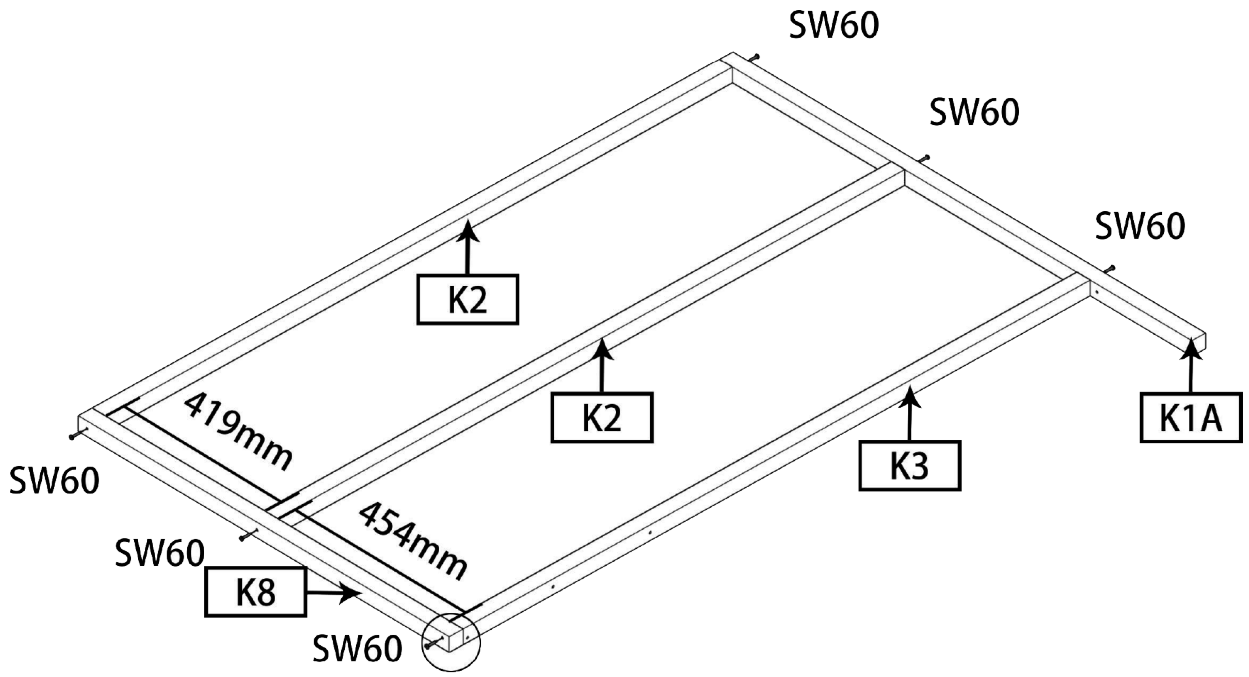


Pay attention to the hole position.

Attention : vertical

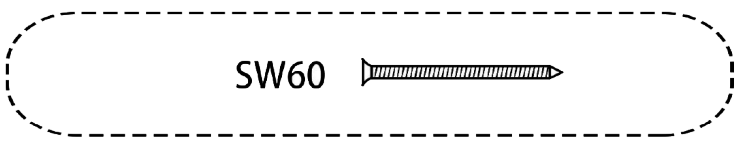


List	
Part NO.	Qty
K2	2
K3	1
K1A	1
K8	1
SW60	6

STEP 2

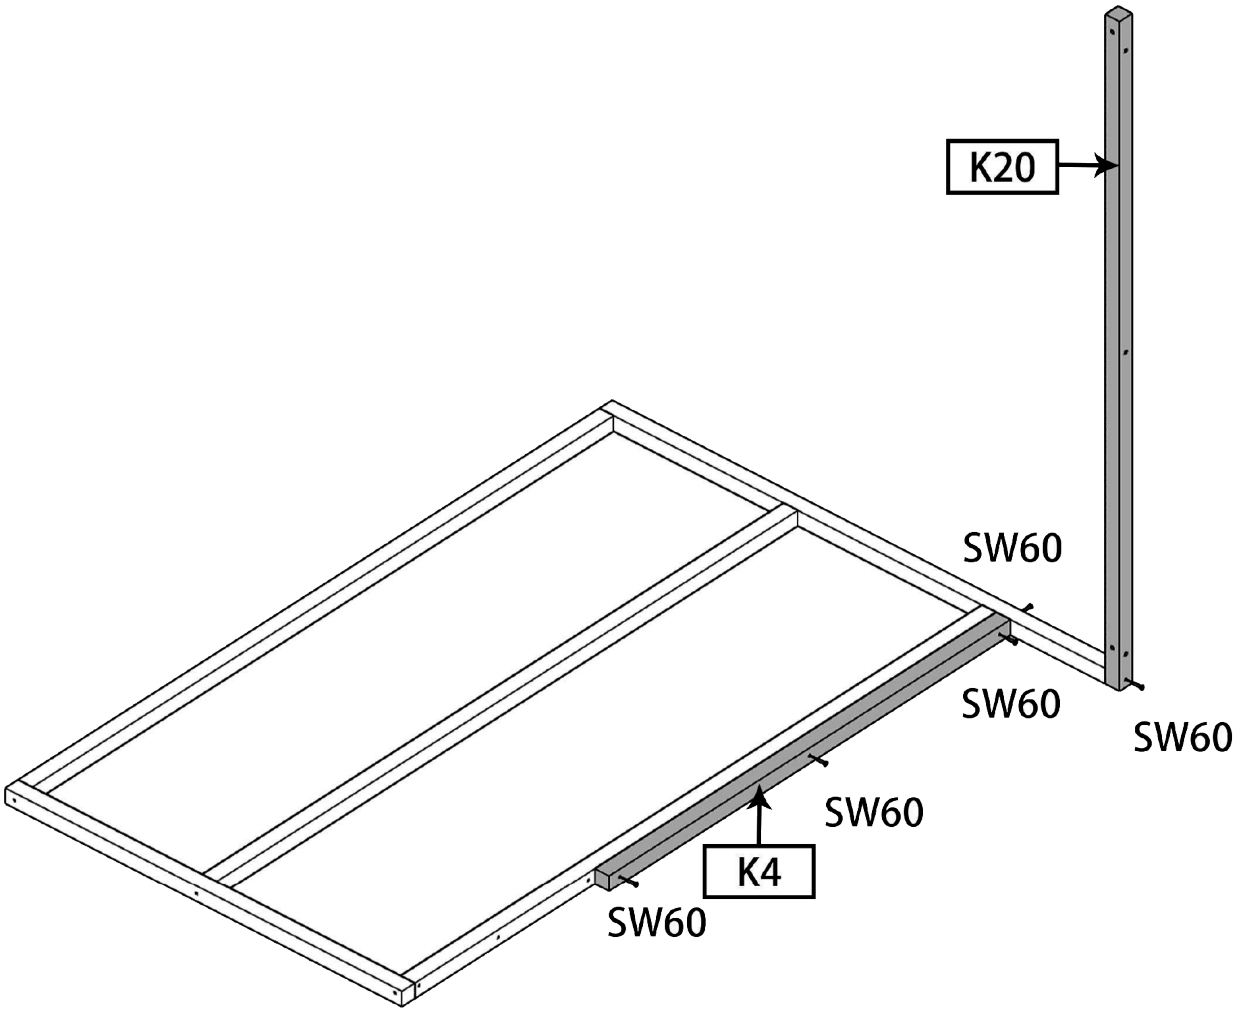


Attention : vertical

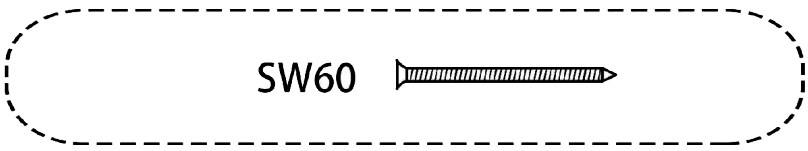

List	
Part NO.	Qty
K4	1
K20	1
SW60	5

STEP 3


TIP: Take note of the spacing.

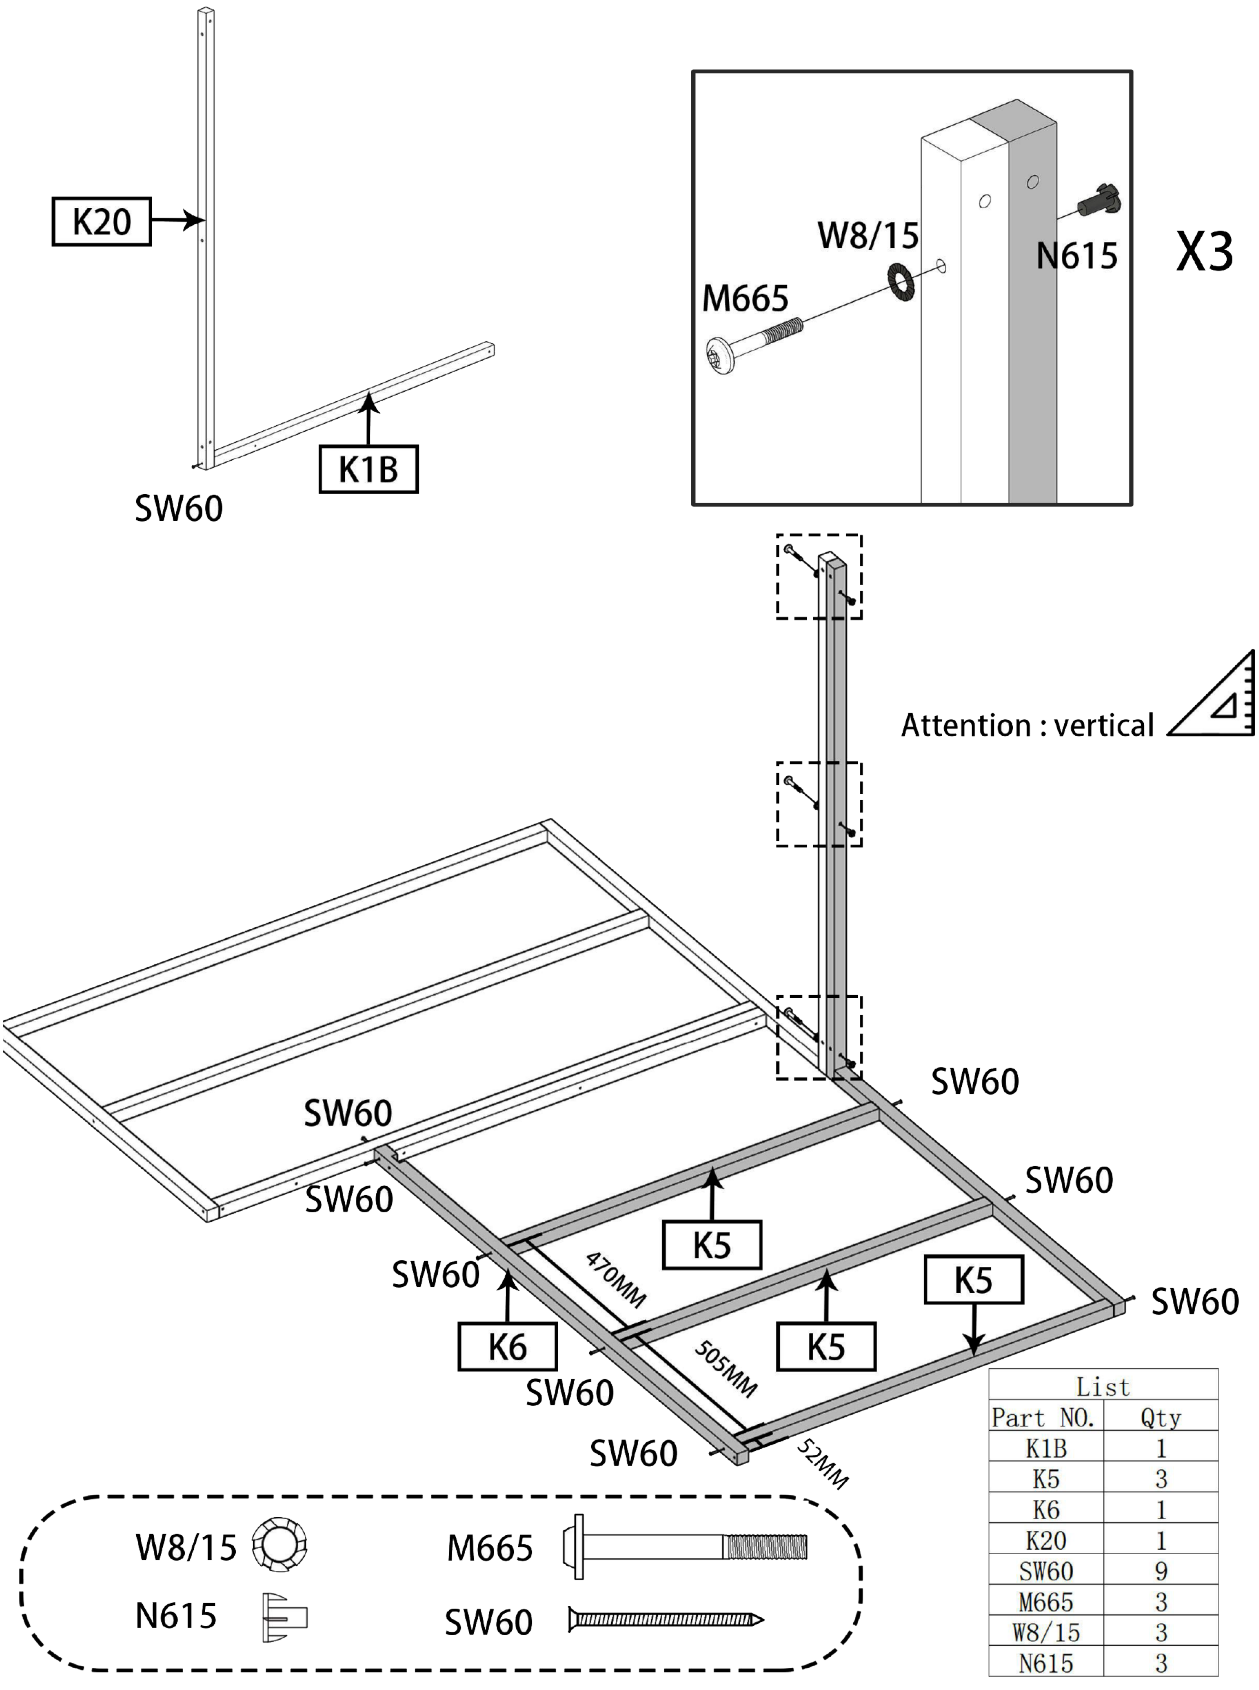

List	
Part NO.	Qty
K1B	1
K5	3
K6	1
K20	1
SW60	9
M665	3
W8/15	3
N615	3

STEP 4

TIP: Take note of the spacing.

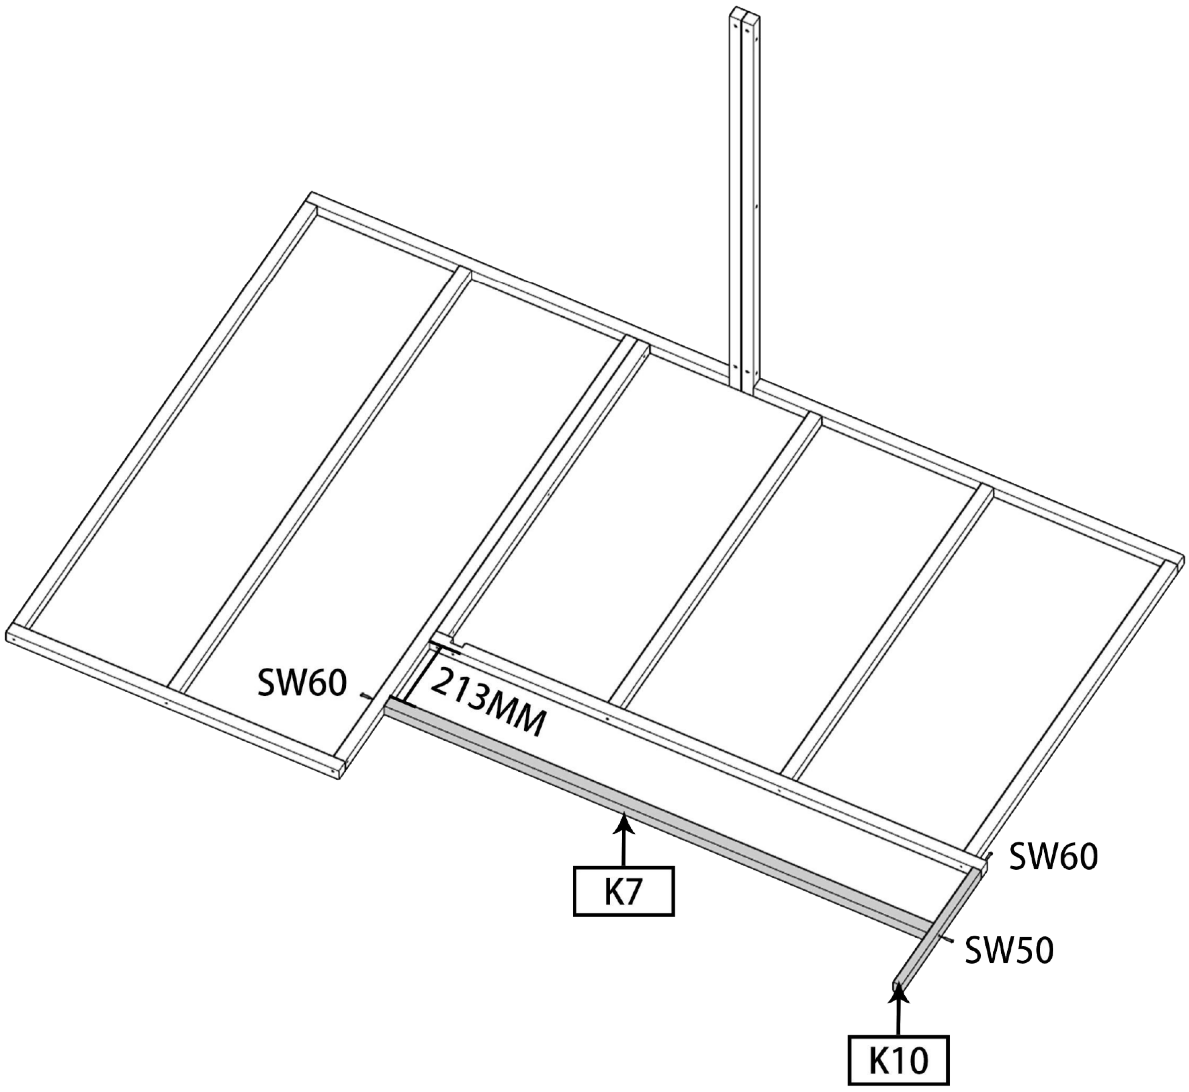


Attention : vertical



List	
Part NO.	Qty
K7	1
K10	1
SW60	2
SW50	1

STEP 5

TIP: Take note of the spacing.

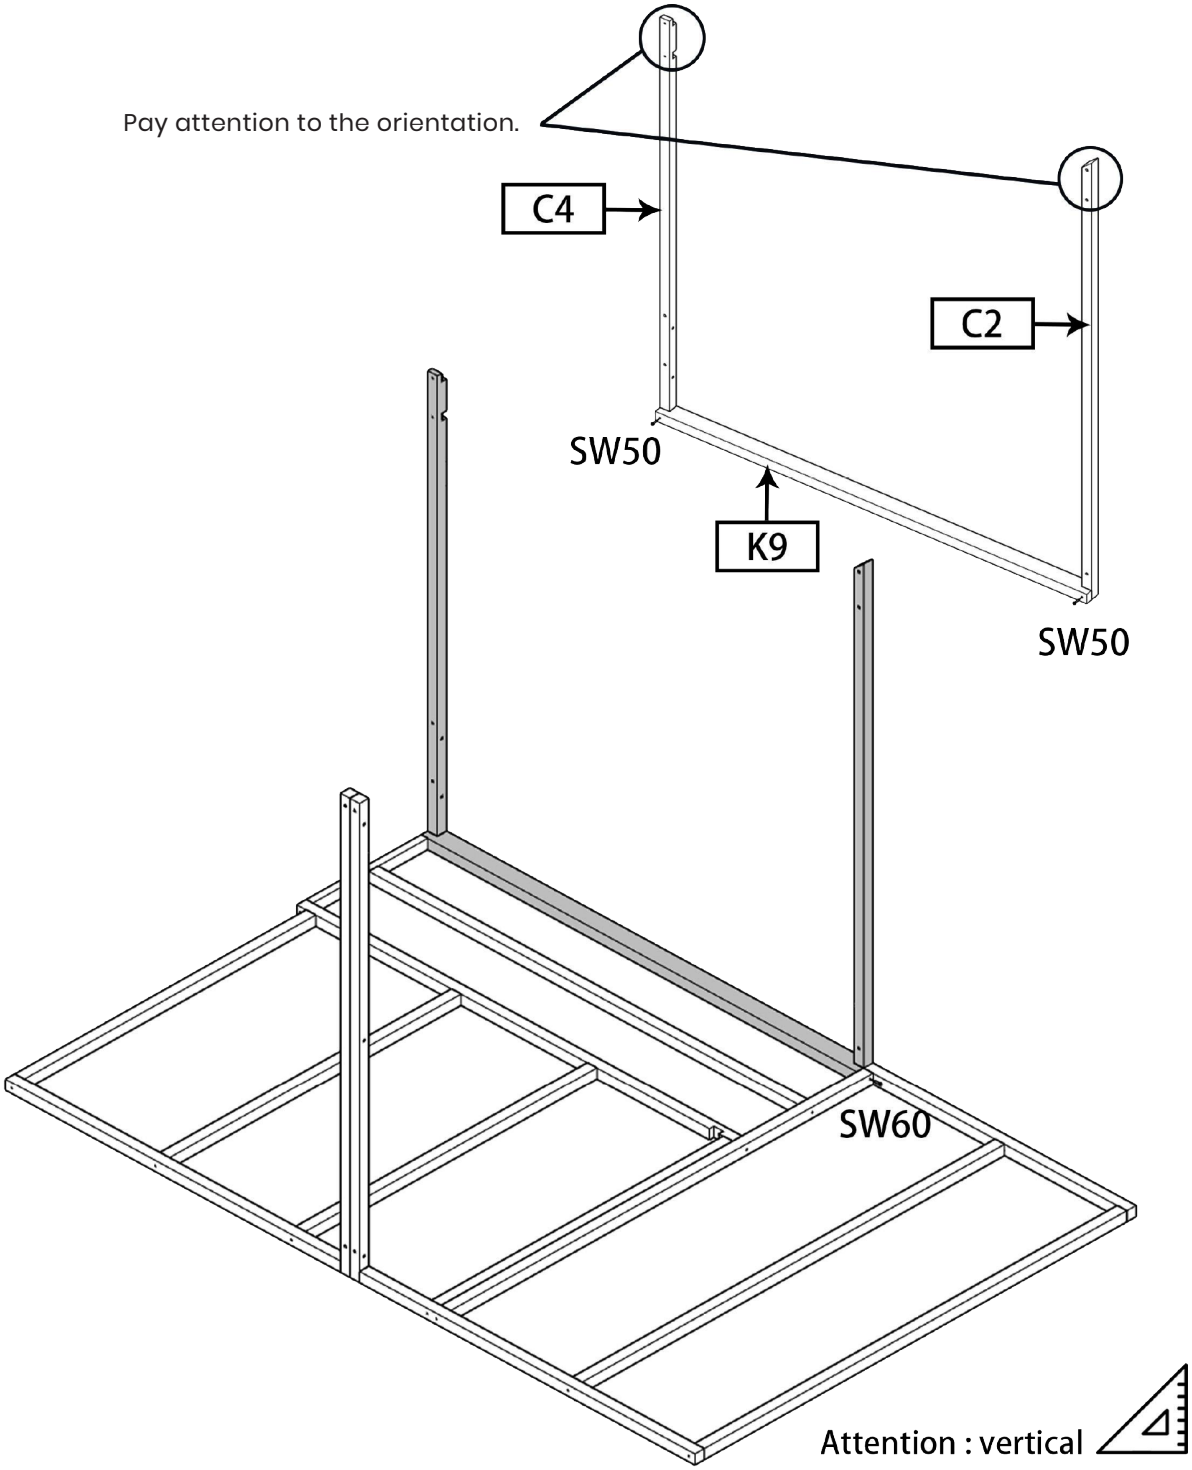




List	
Part NO.	Qty
C2	1
C4	1
K9	1
SW50	2
SW60	1

STEP 6

TIP: Take note of the spacing.

Pay attention to the orientation.

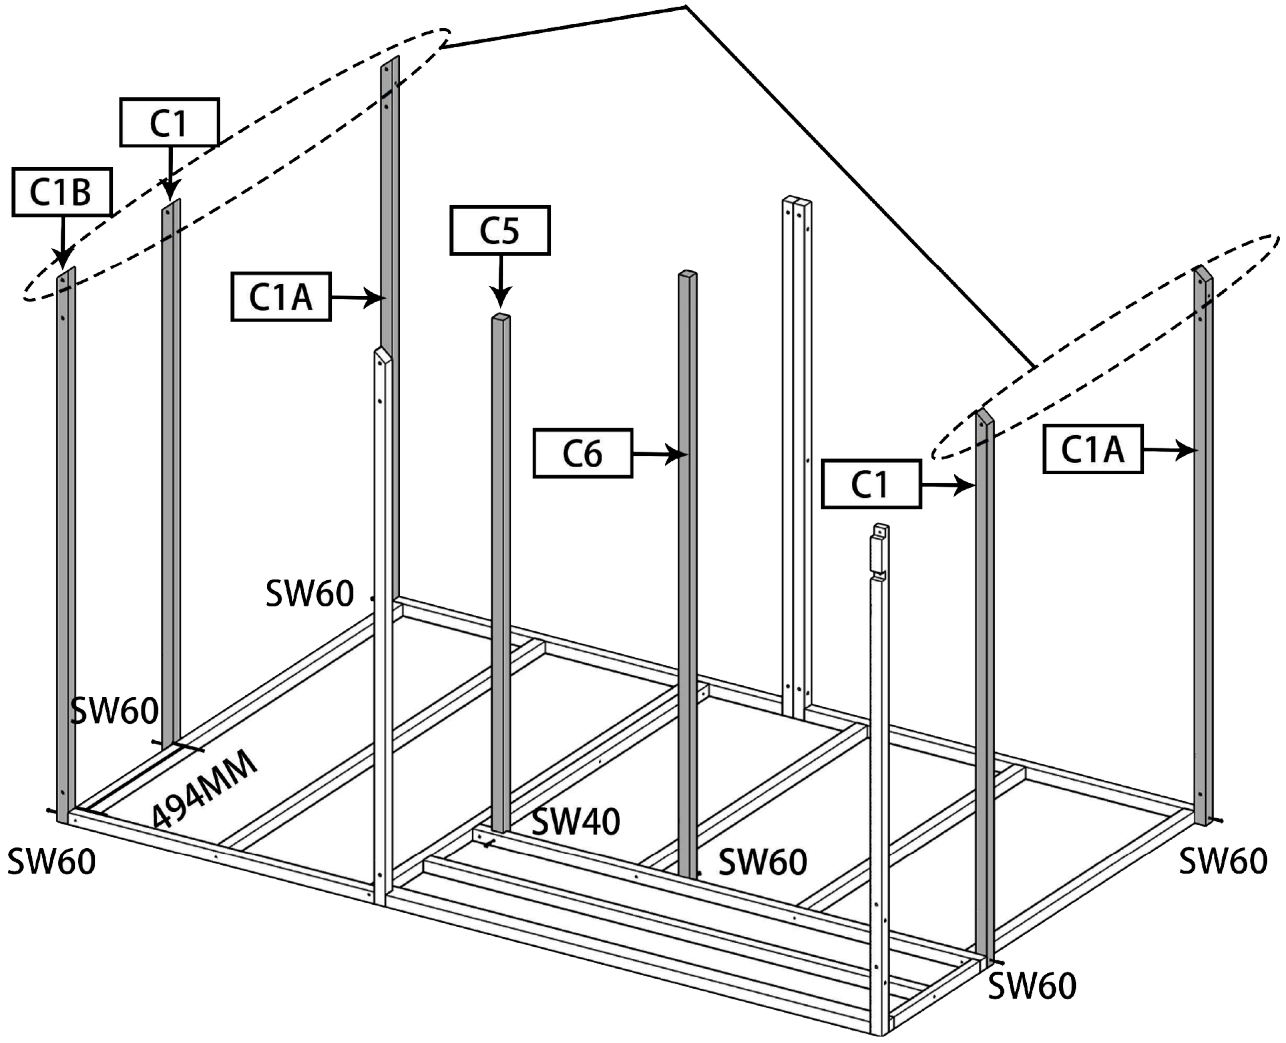



Attention : vertical



List	
Part NO.	Qty
C1	2
C1A	2
C1B	1
C5	1
C6	1
SW40	1
SW60	6

STEP 7

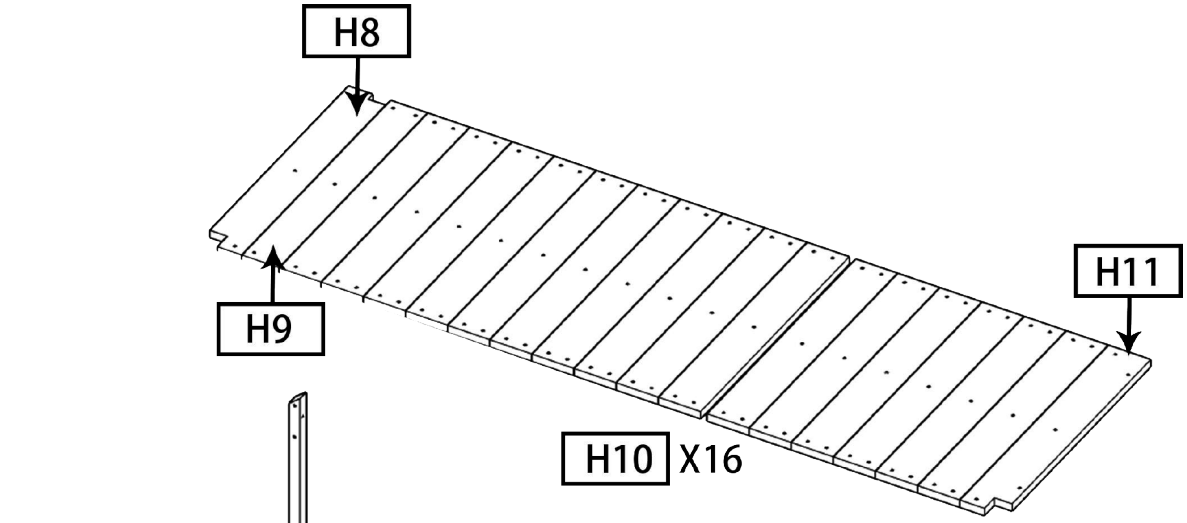

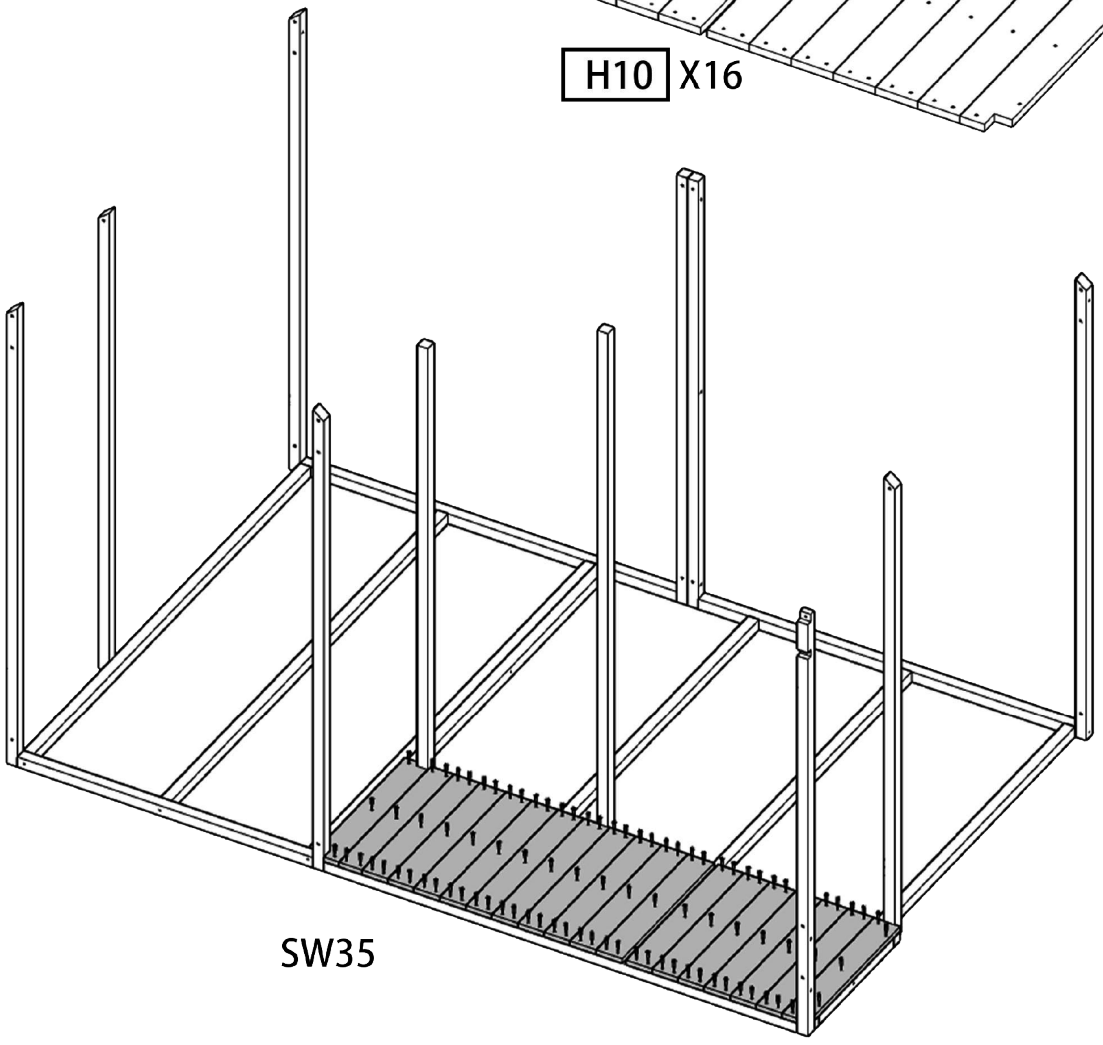


SW35


List	
Part NO.	Qty
H8	1
H9	1
H10	16
H11	1
SW35	93

SW35

STEP 8

TIP: Take note of the spacing.

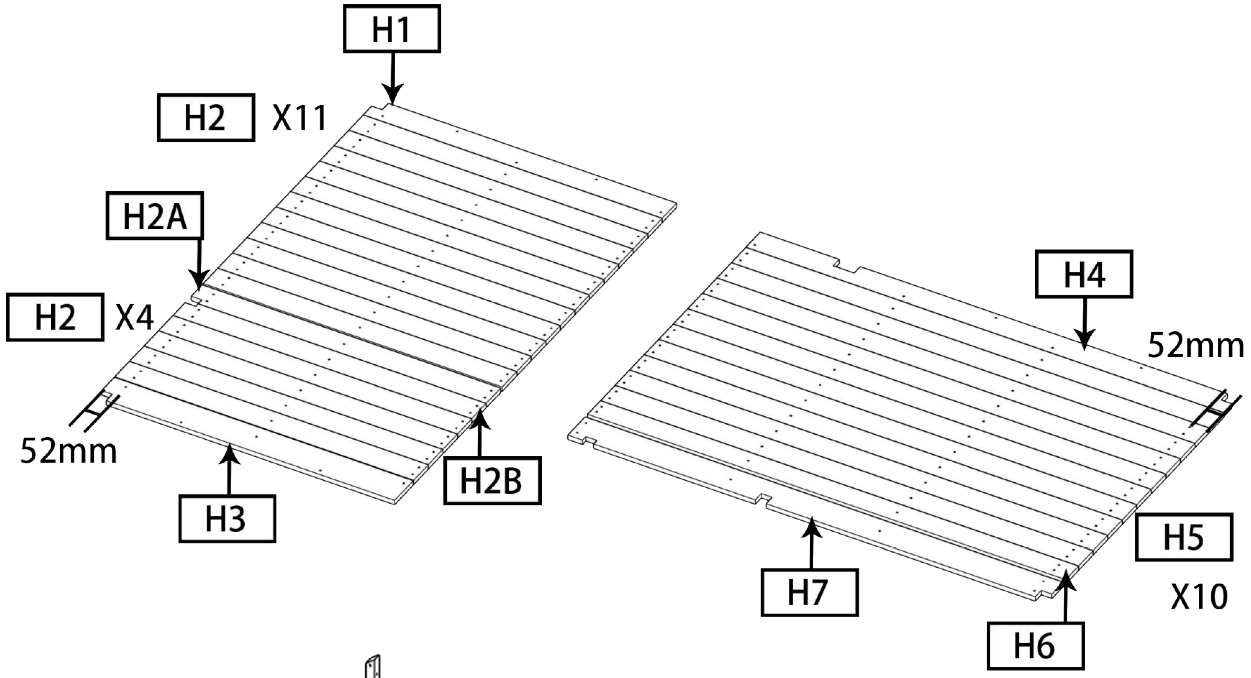

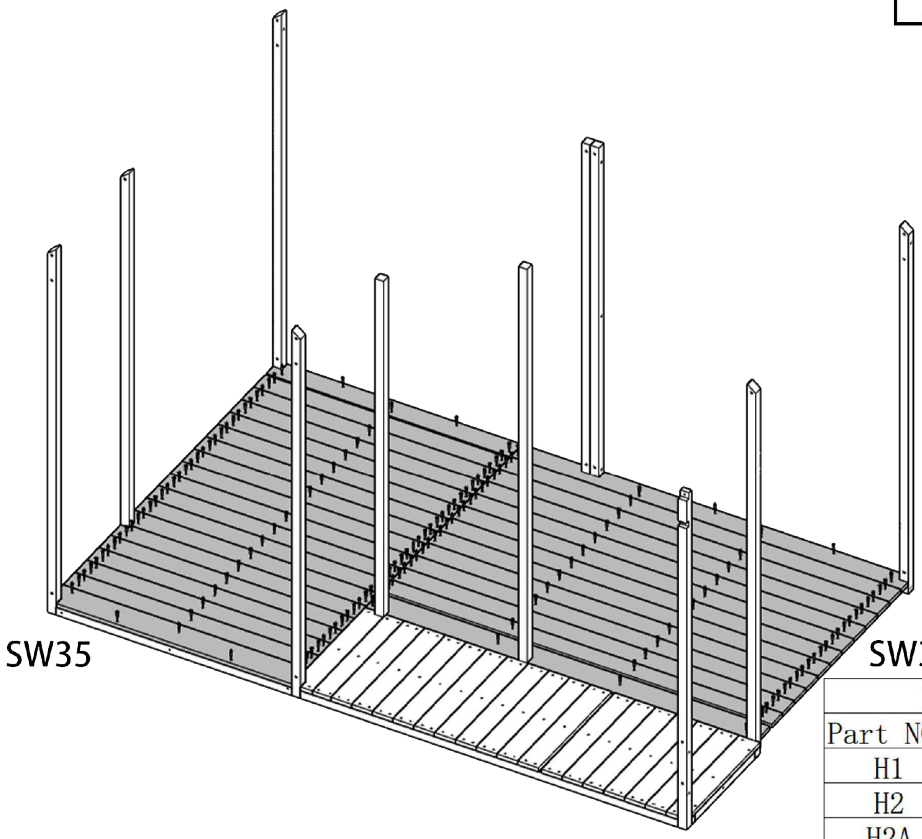




List	
Part NO.	Qty
H1	1
H2	15
H2A	1
H2B	1
H3	1
H4	1
H5	10
H6	1
H7	1
SW35	173

STEP 9

TIP: Take note of the spacing.

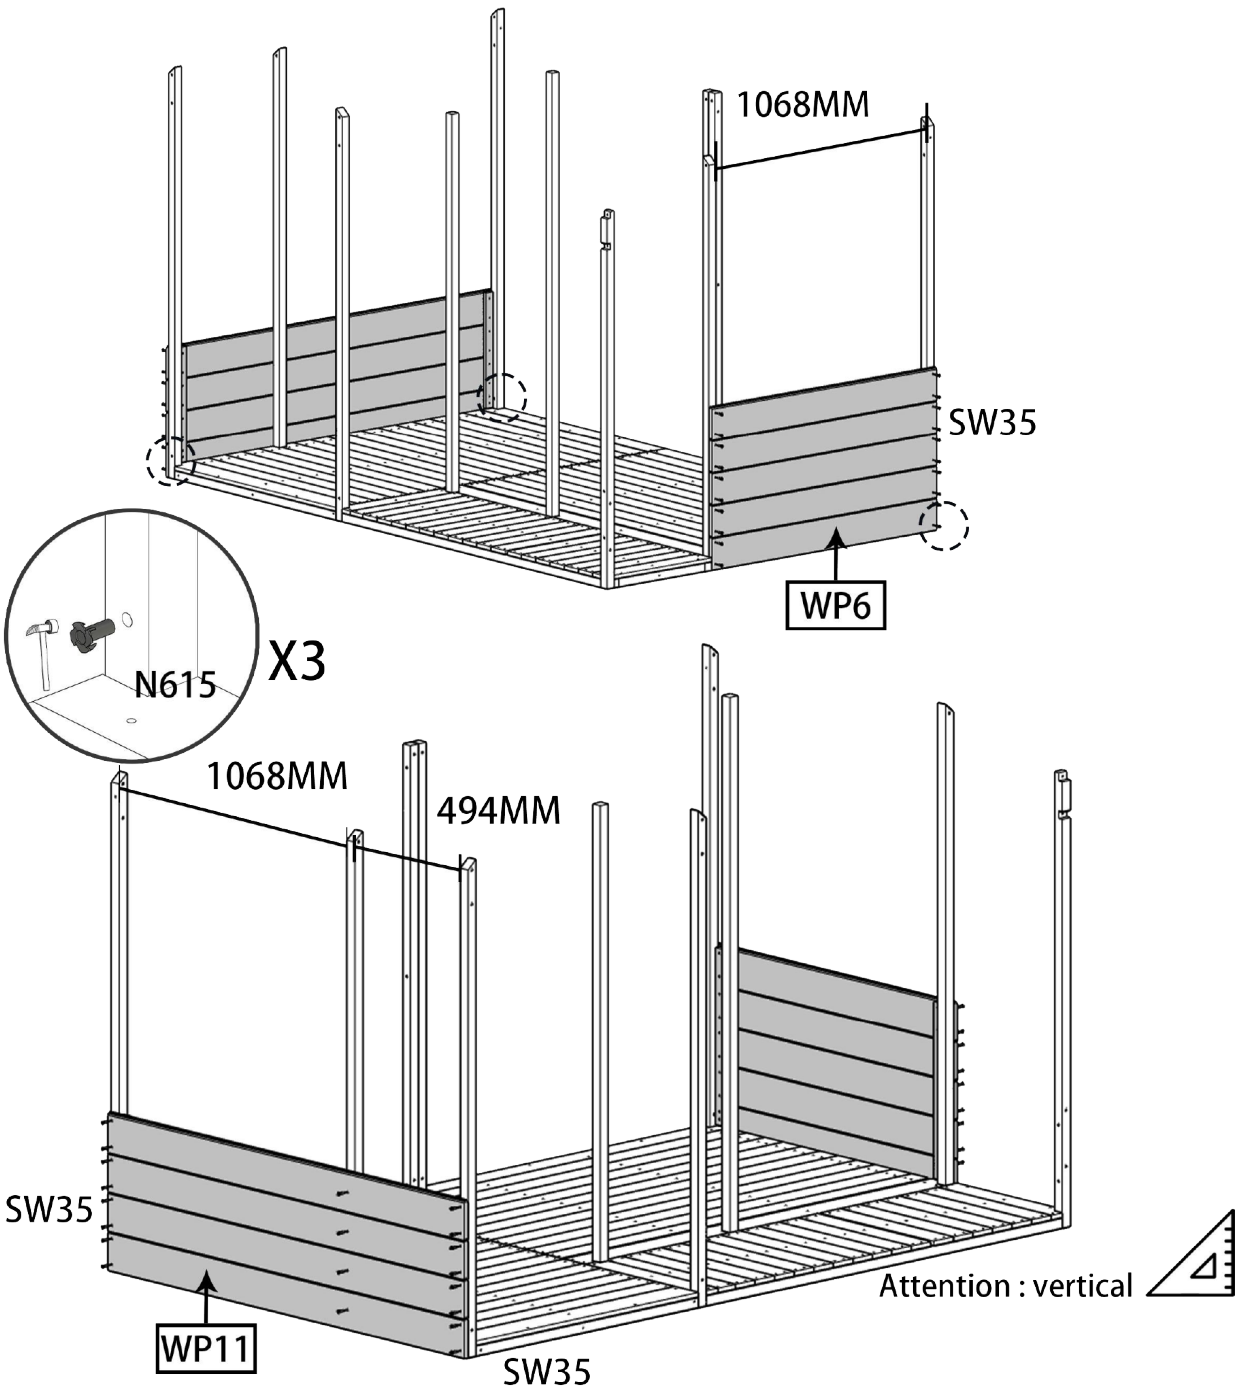





List	
Part NO.	Qty
WP6	1
WP11	1
SW35	40
N615	3


STEP 10

TIP: Take note of the spacing.

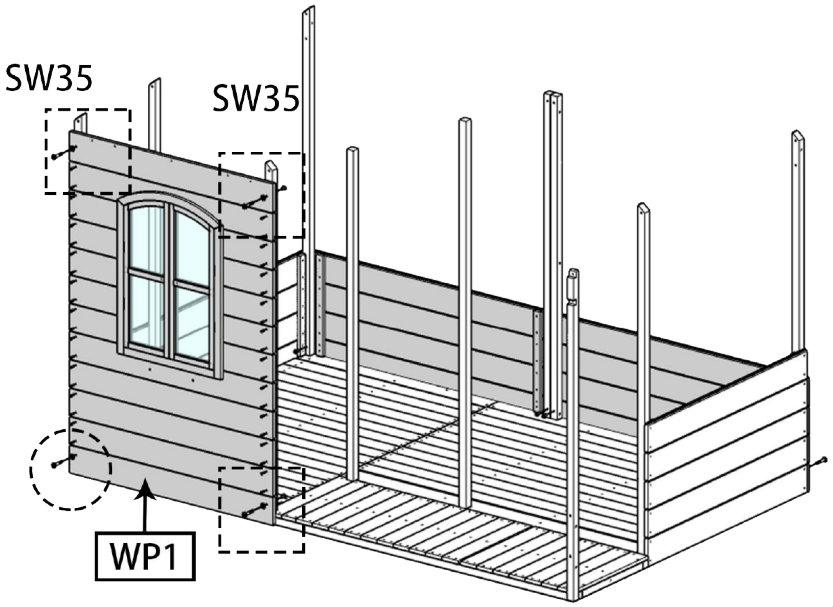

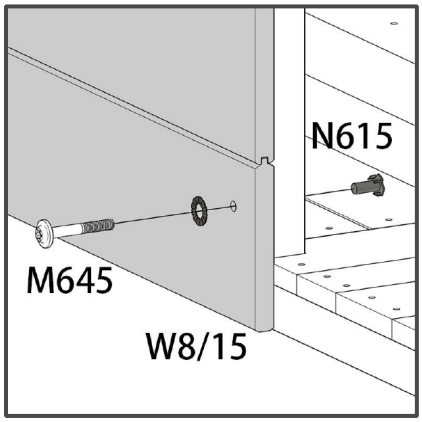


X5

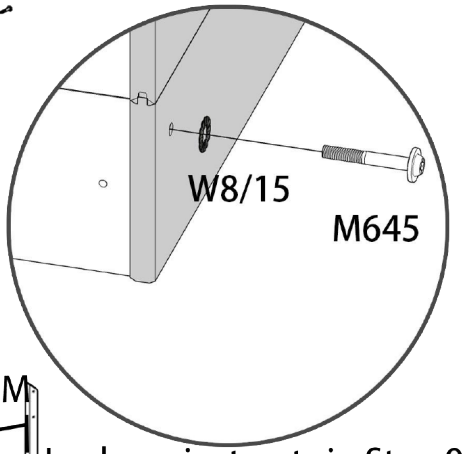


Lock against nuts in Step 9

X3

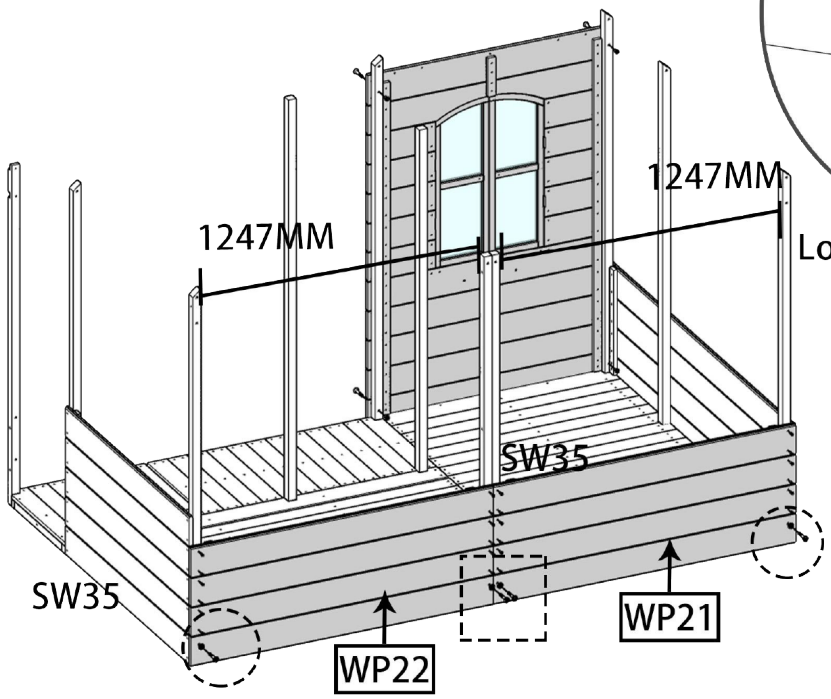


SW35


Attention : vertical

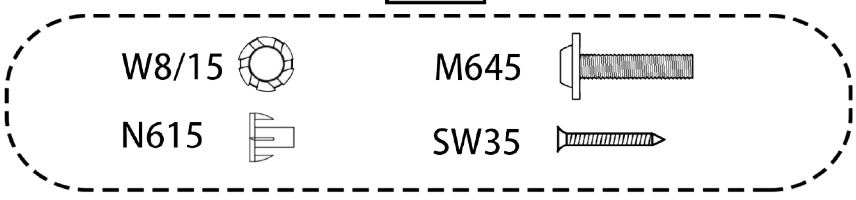

List	
Part NO.	Qty
WP1	1
WP21	1
WP22	1
M645	8
W8/15	8
N615	5
SW35	64

STEP 11

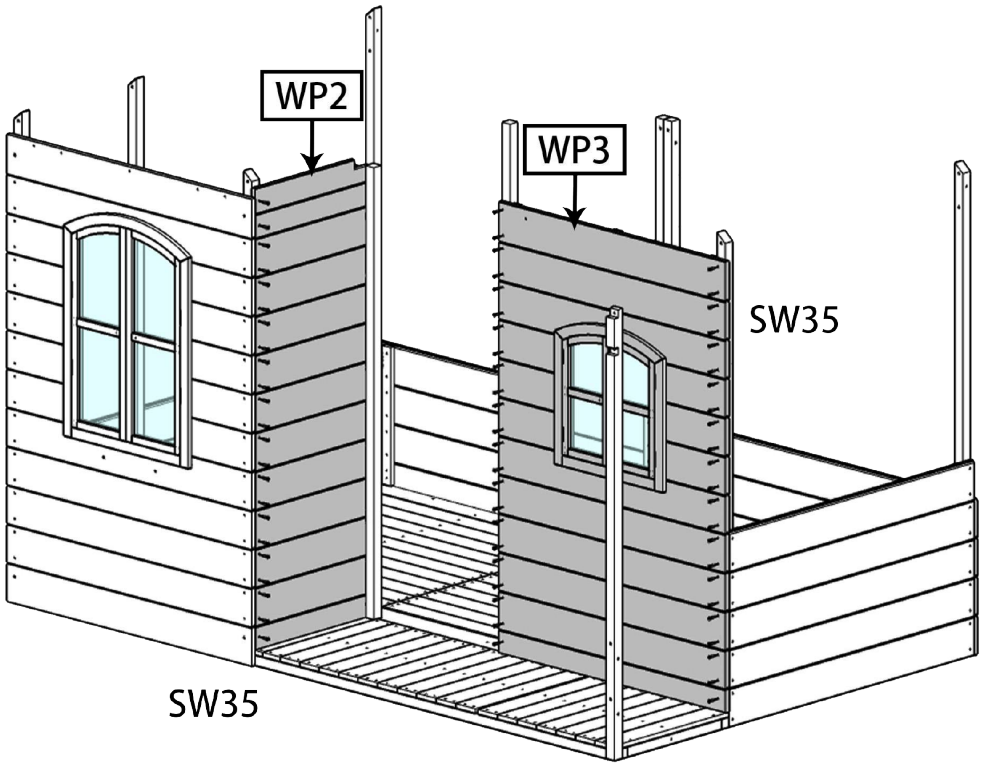

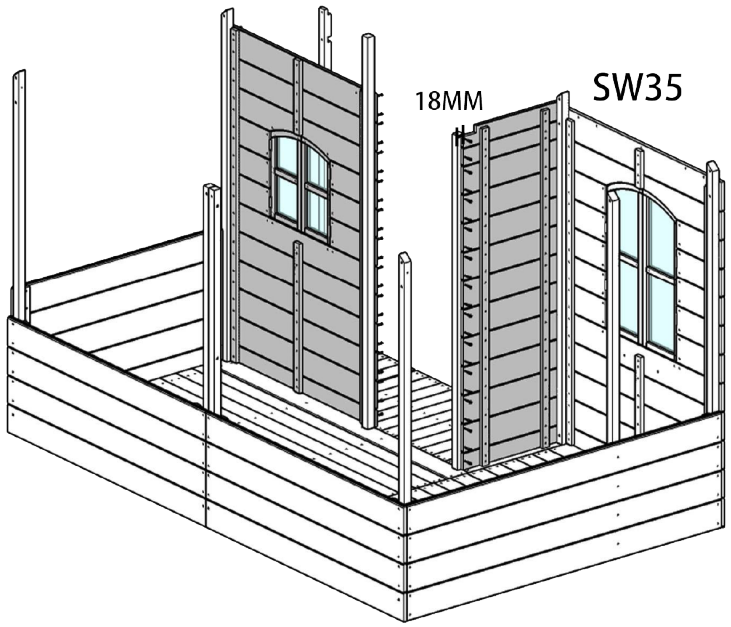


Attention : vertical


SW35

List	
Part NO.	Qty
WP2	1
WP3	1
SW35	92

STEP 12

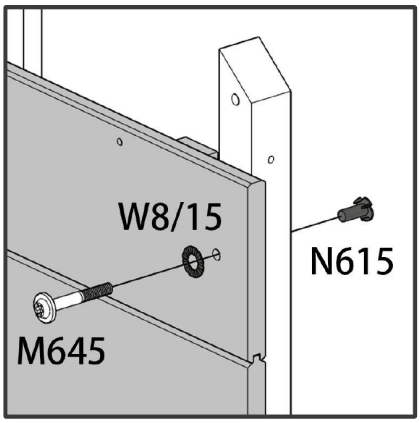

X4

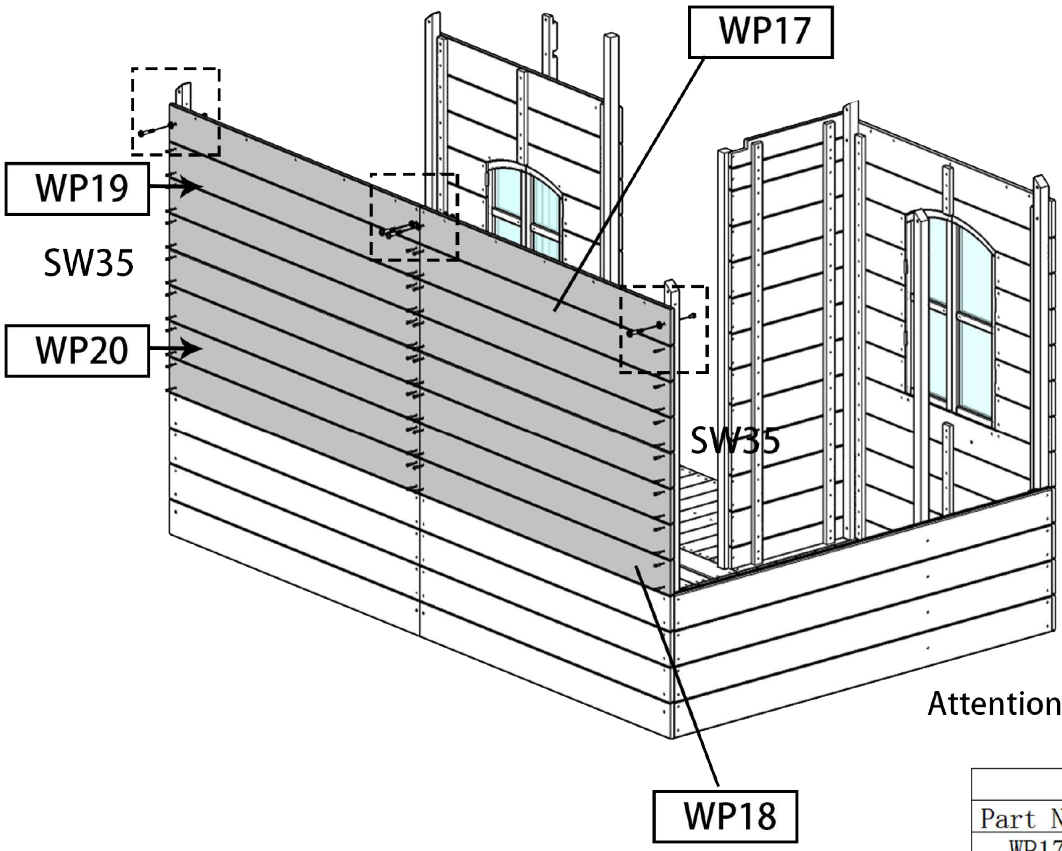


Attention : vertical


List	
Part NO.	Qty
WP17	1
WP18	1
WP19	1
WP20	1
M645	4
W8/15	4
N615	4
SW35	56




STEP 13

TIP: Take note of the spacing.

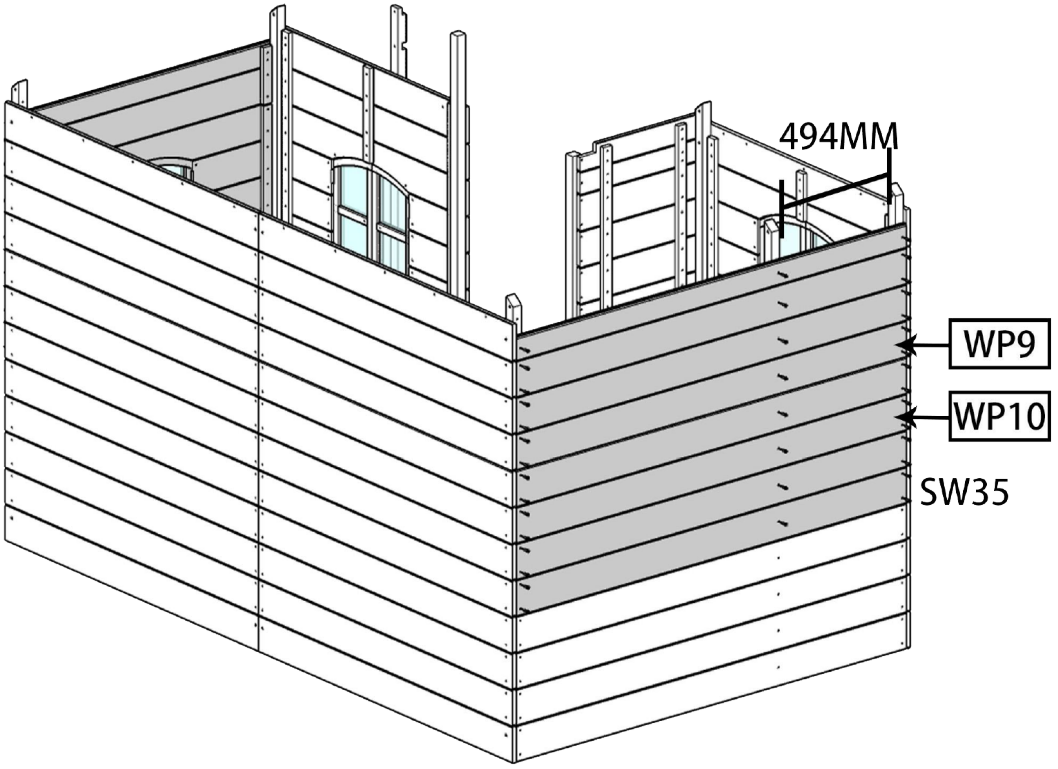

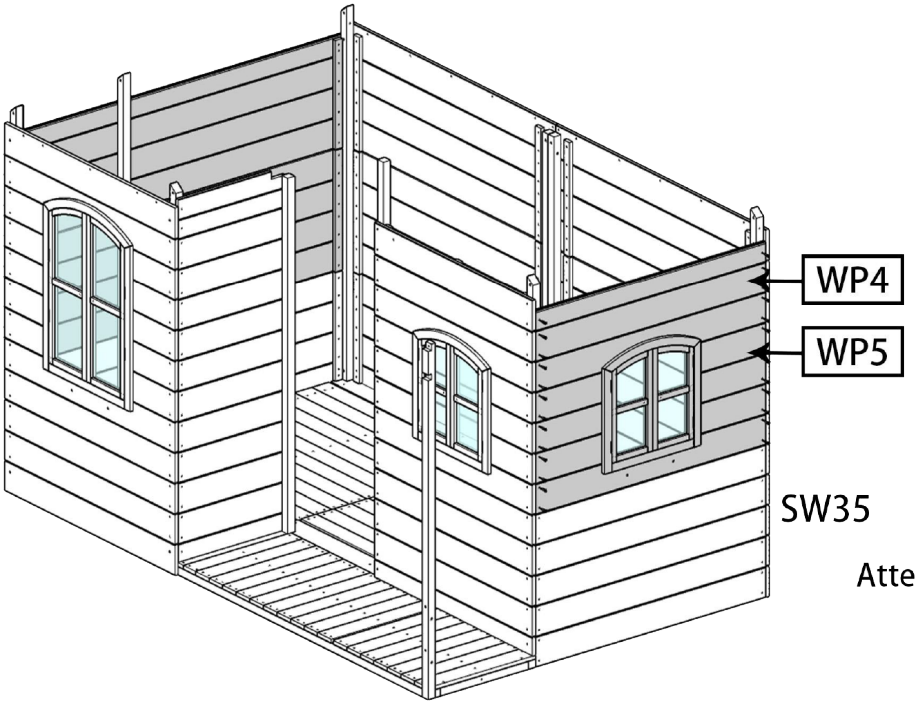


Attention : vertical

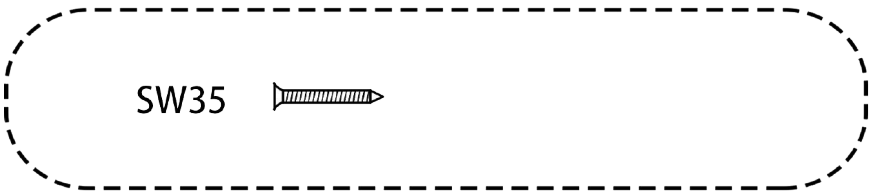


List	
Part NO.	Qty
WP4	1
WP5	1
WP9	1
WP10	1
SW35	64

STEP 14


TIP: Take note of the spacing.

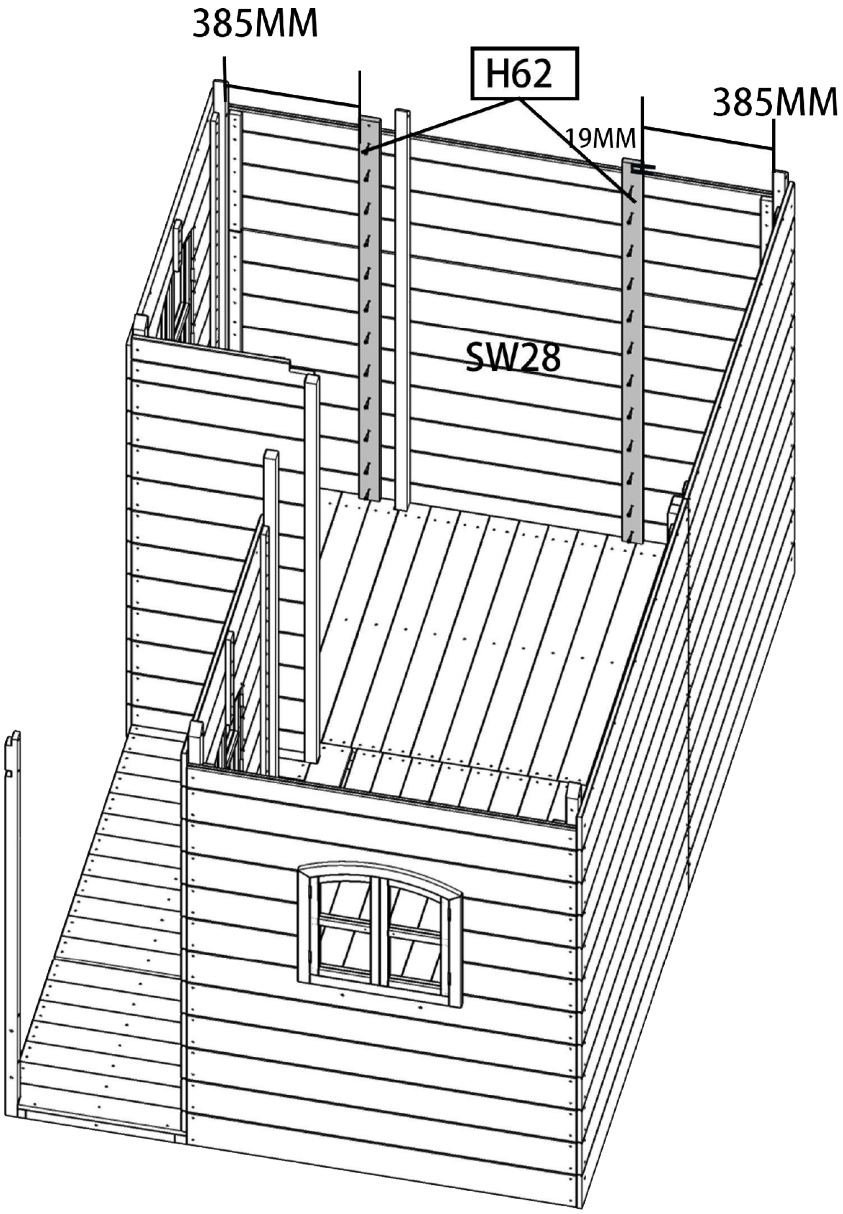

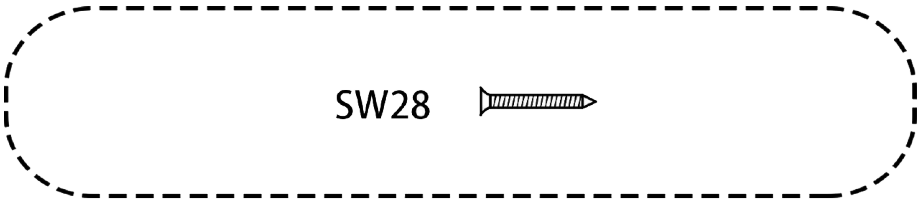



List	
Part NO.	Qty
H62	2
SW28	24

STEP 15

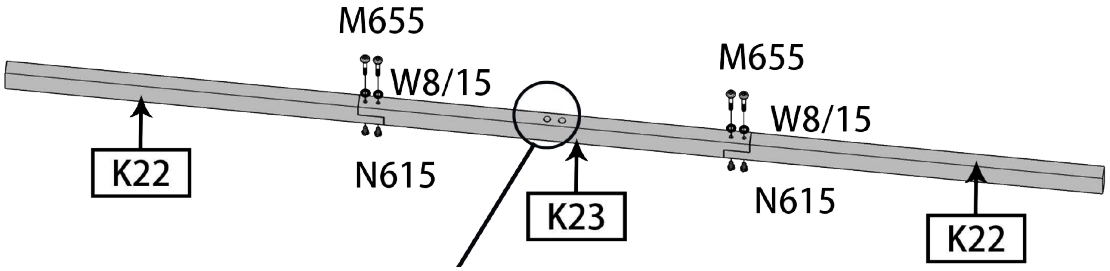

Pay attention to the hole position.

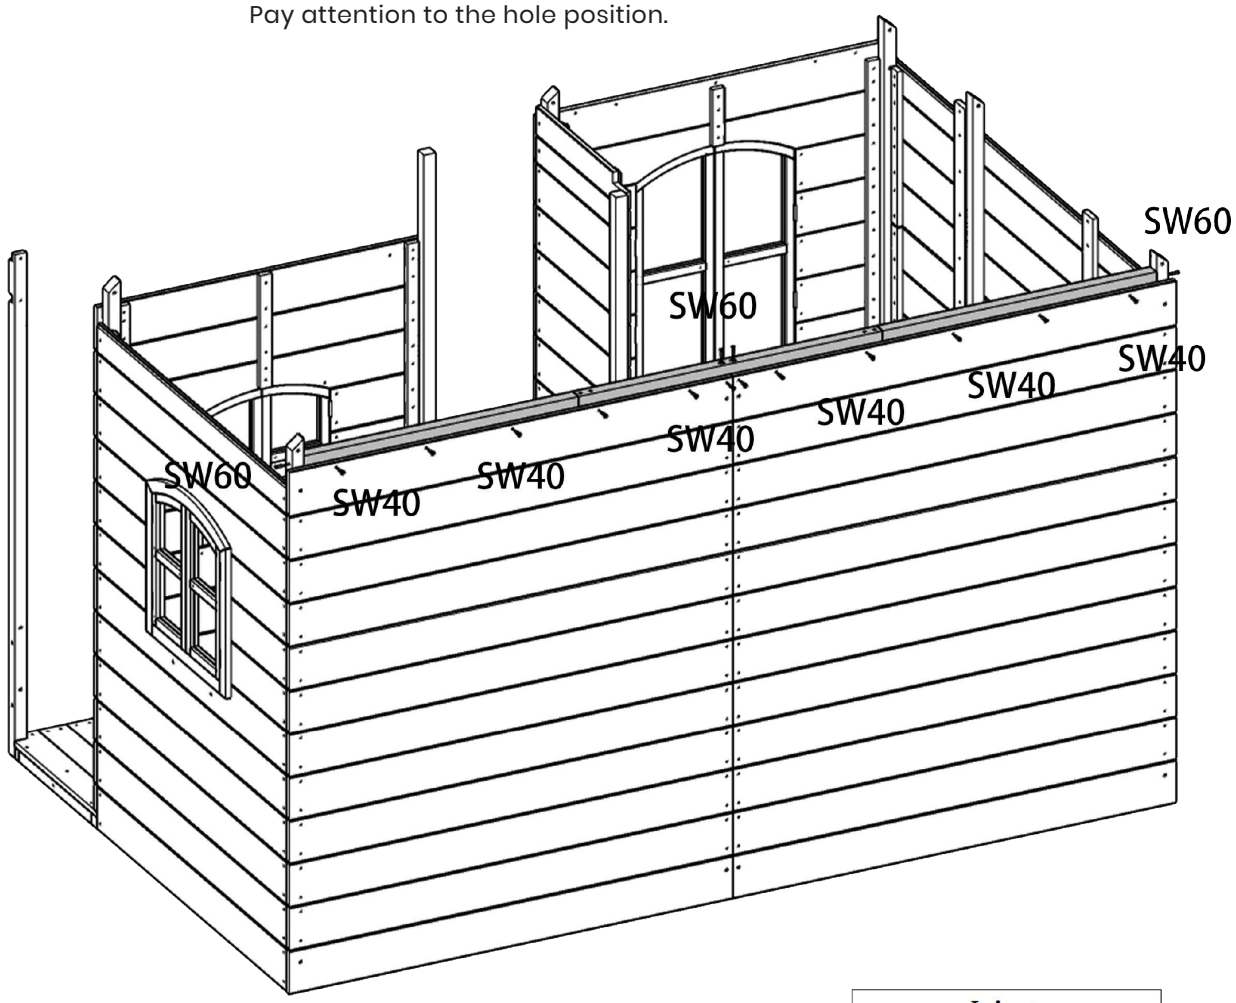


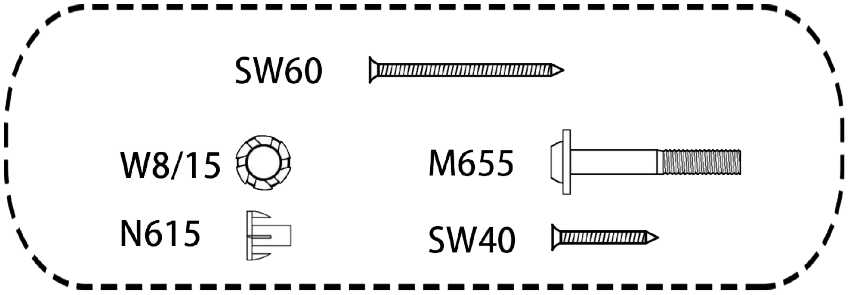



List	
Part NO.	Qty
K22	2
K23	1
M655	4
W8/15	4
N615	4
SW40	12
SW60	4

STEP 16

TIP: Take note of the spacing.

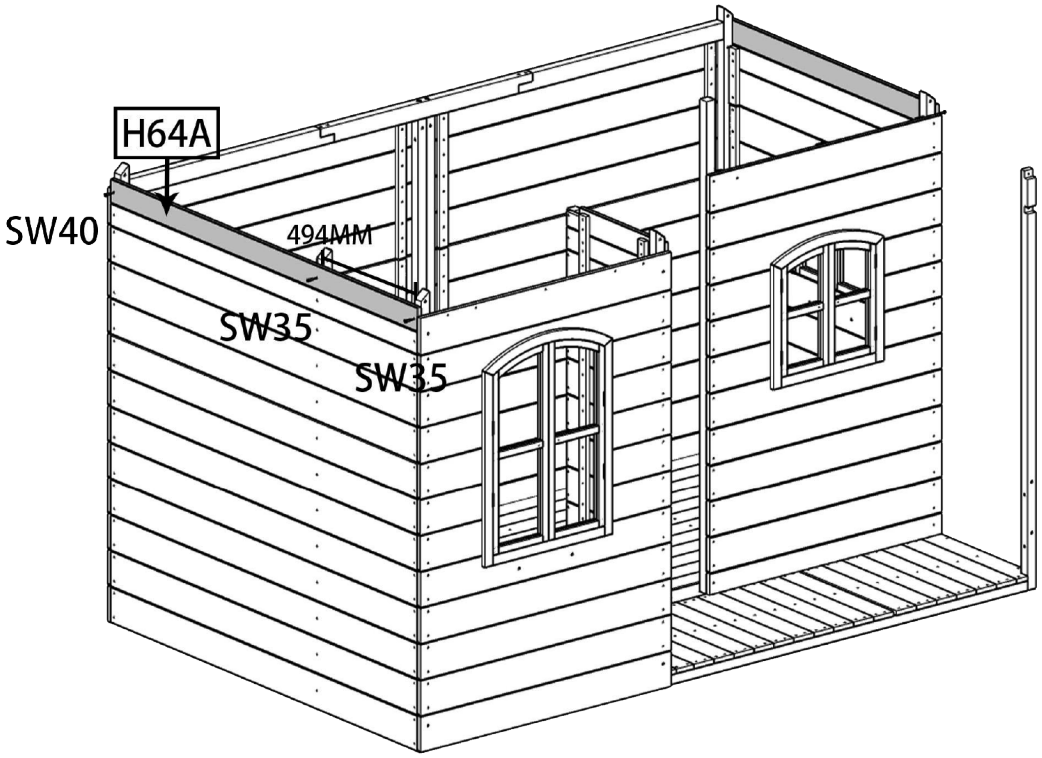

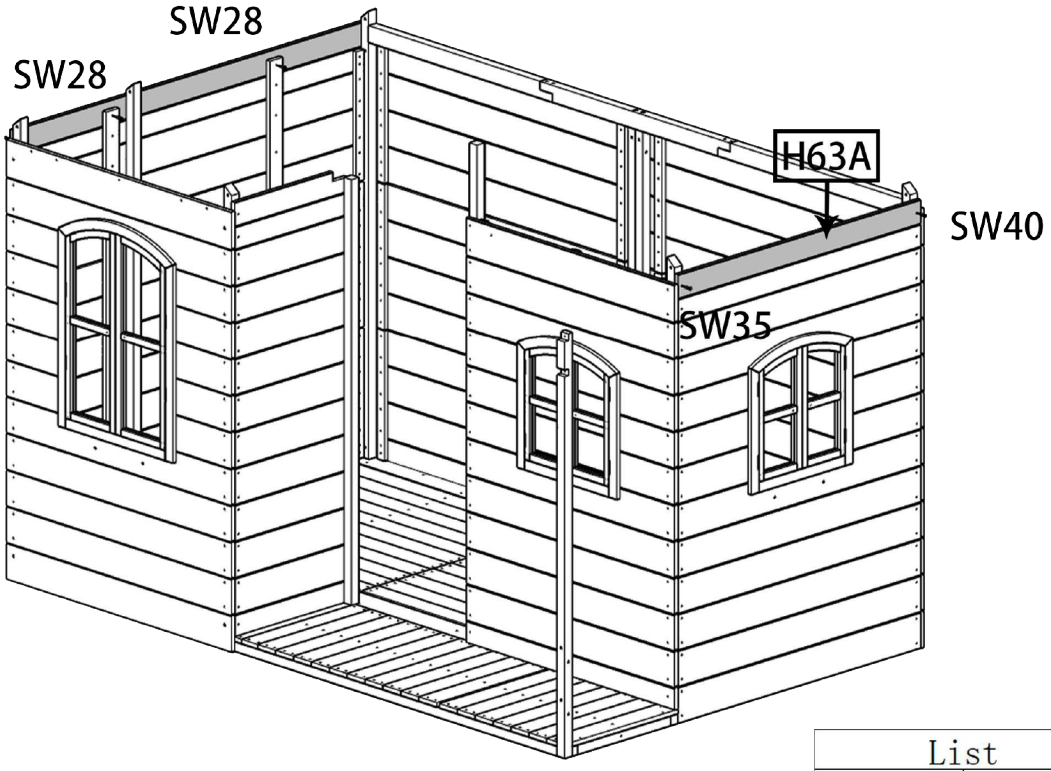


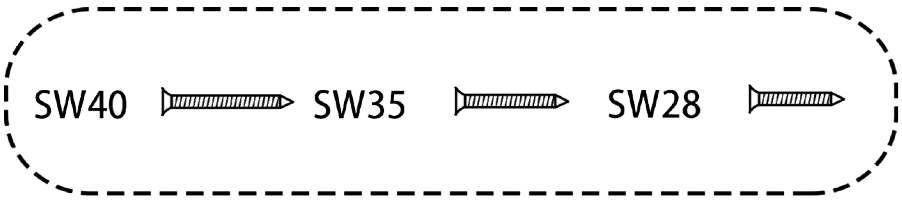


List	
Part NO.	Qty
H64A	1
H63A	1
SW35	3
SW28	2
SW40	2


STEP 17

TIP: Take note of the spacing.

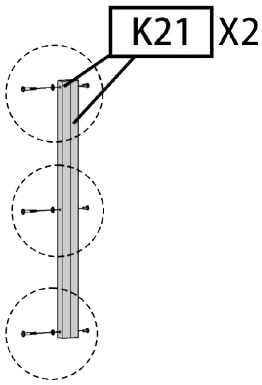


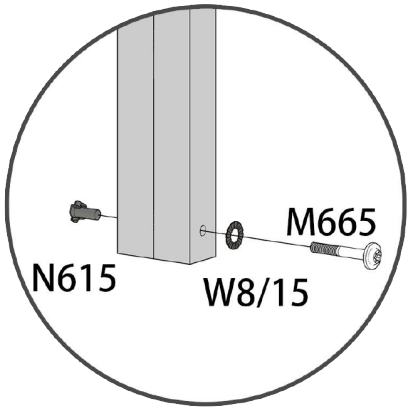


X3

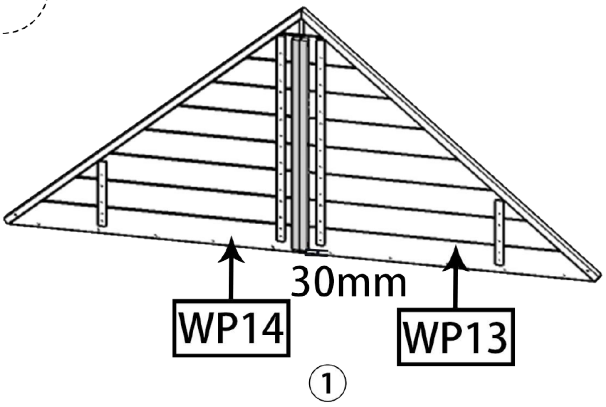

①

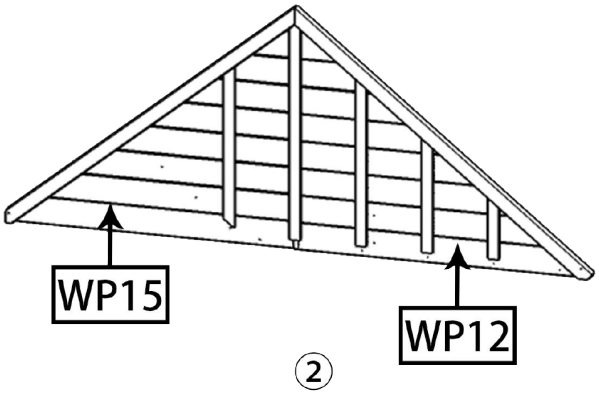


②

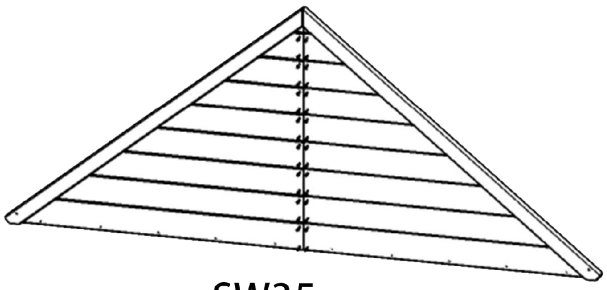

SW35


①

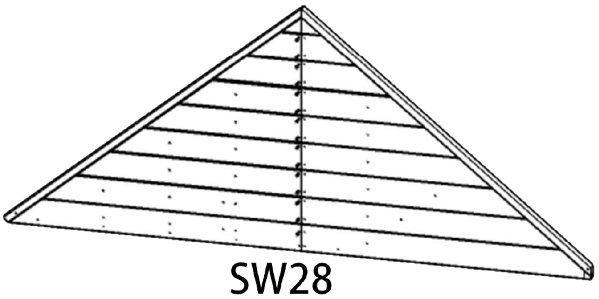

SW28

②


List	
Part NO.	Qty
WP12	1
WP13	1
WP14	1
WP15	1
SW28	15
SW35	32
K21	2
M665	3
W8/15	3
N615	3

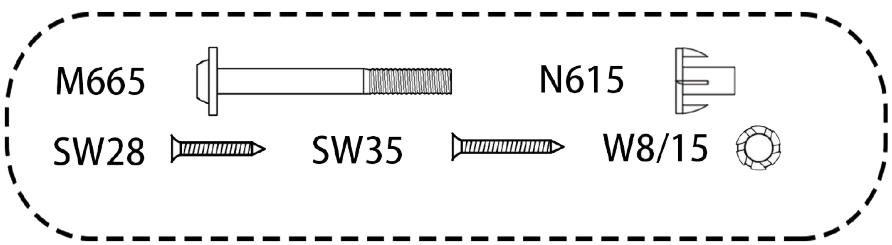


STEP 18


CAUTION: 2 adults are required to secure the roof sections.

Install the triangle roof as labelled from step 17.

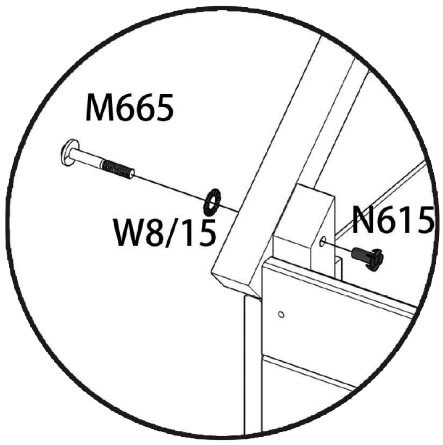

X4

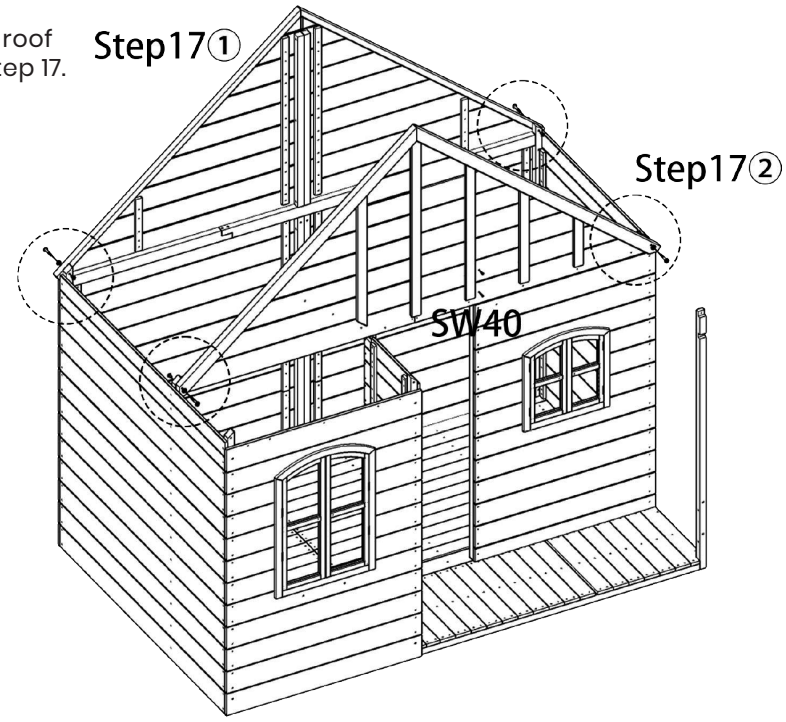


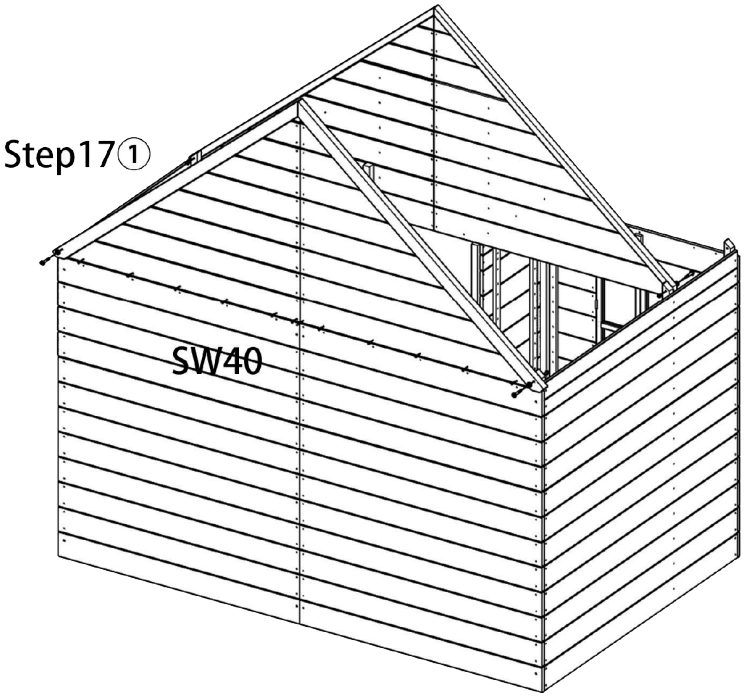





List	
Part NO.	Qty
M665	4
W8/15	4
N615	4
SW40	14

STEP 19

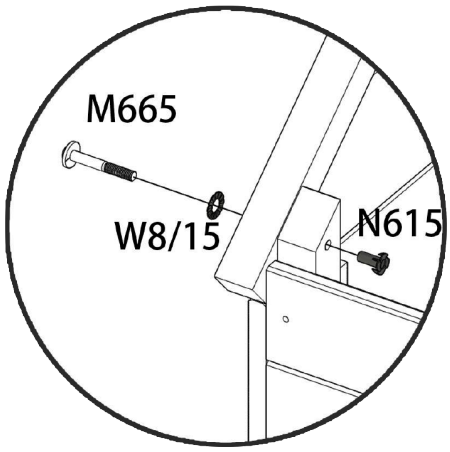

X2

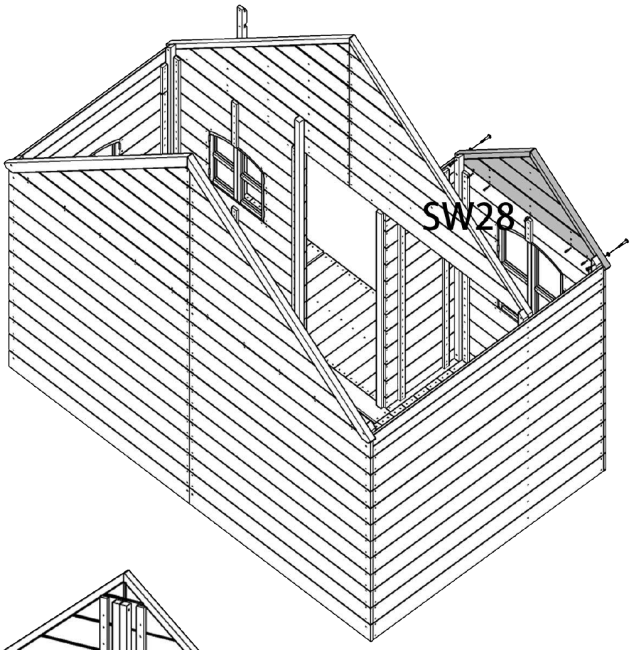


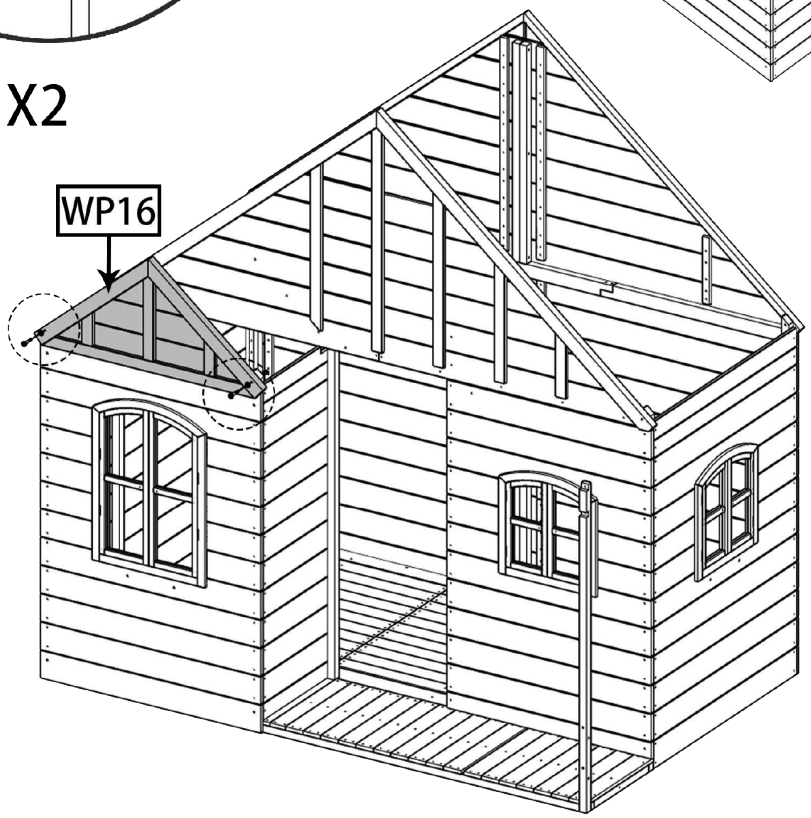



List	
Part NO.	Qty
WP16	1
M665	2
W8/15	2
N615	2
SW28	5


STEP 20

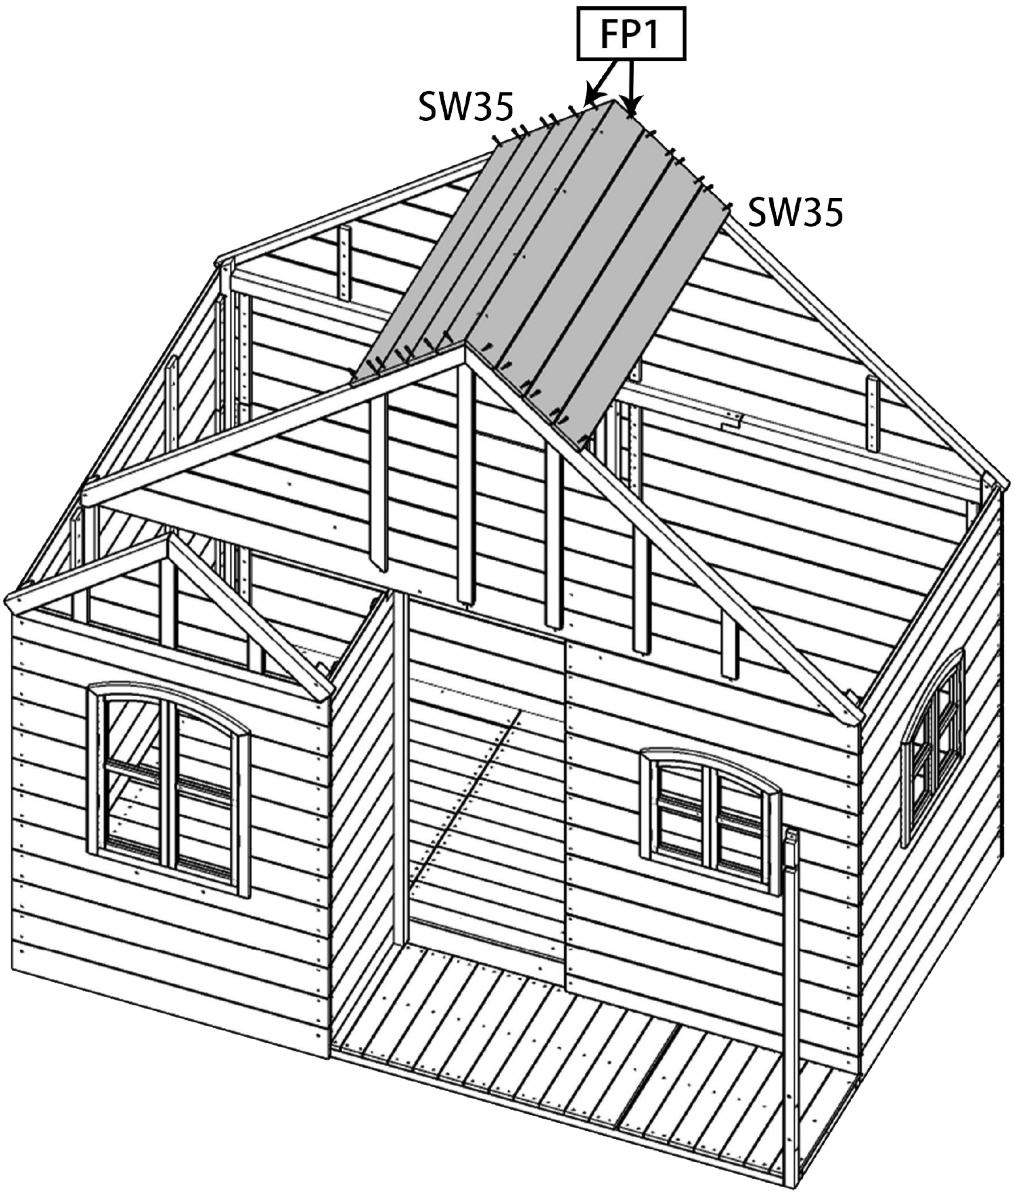


SW35

List	
Part NO.	Qty
FP1	2
SW35	28


STEP 21

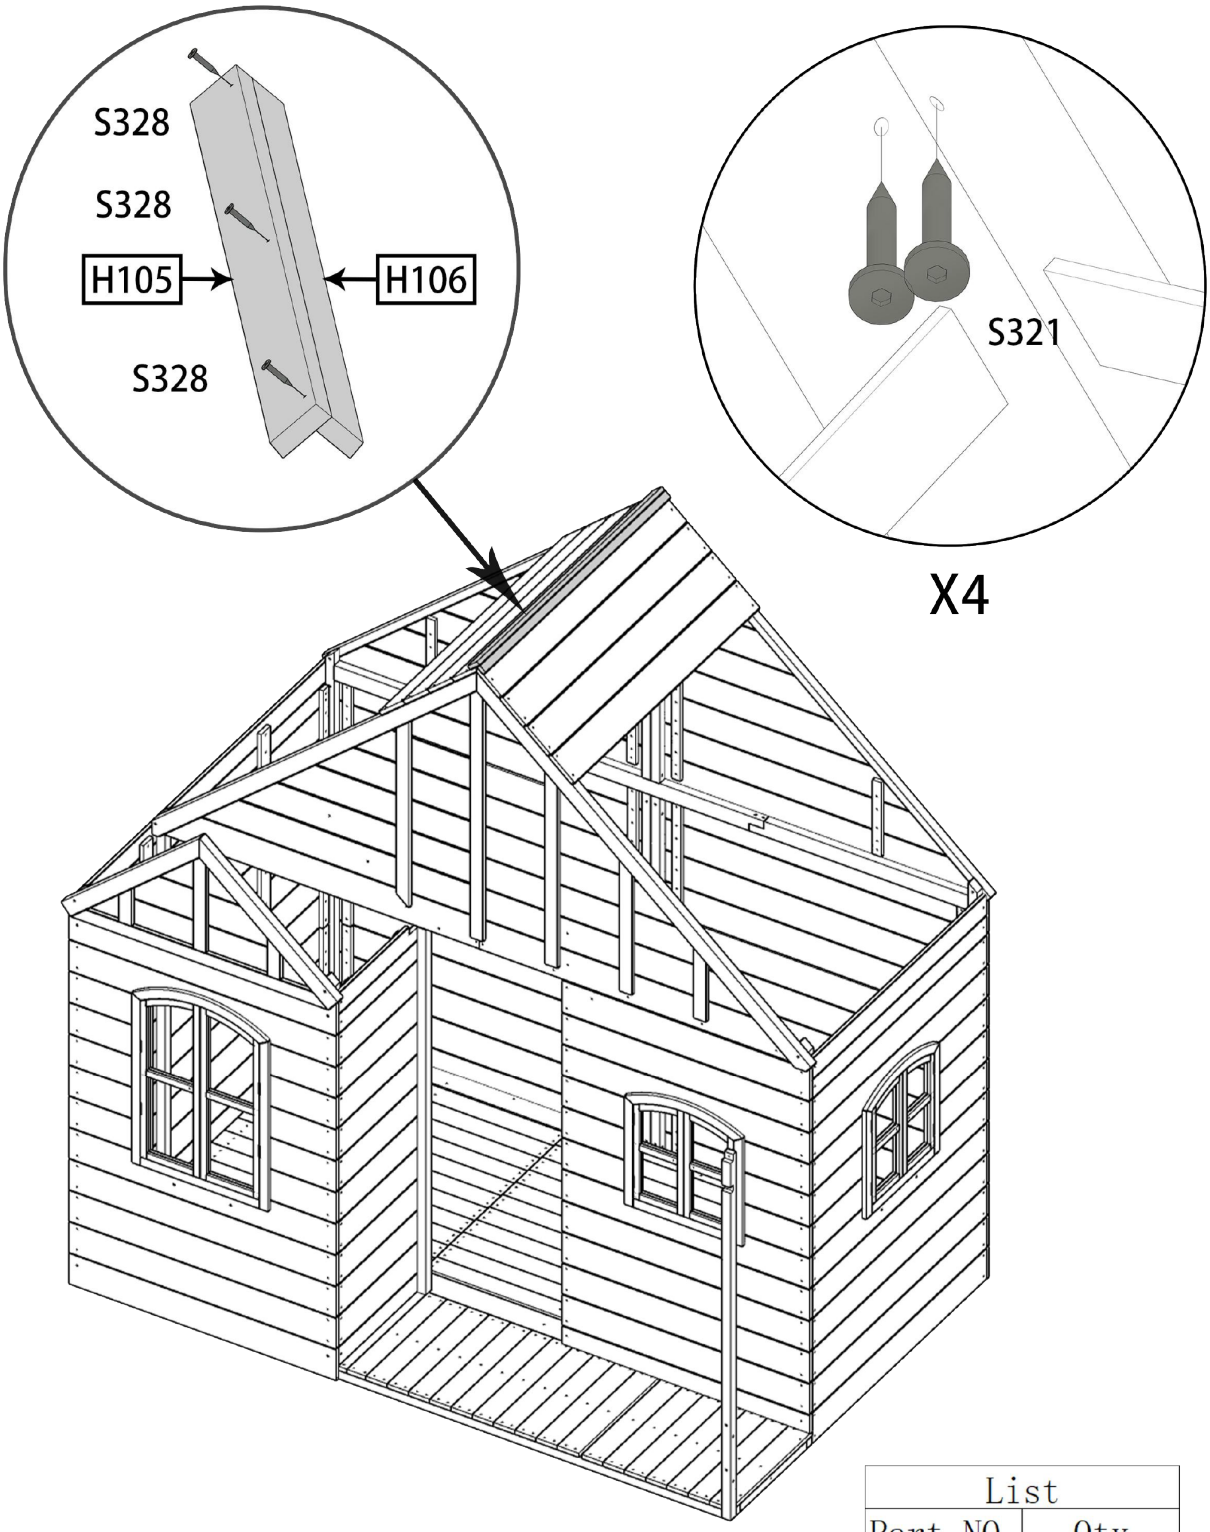

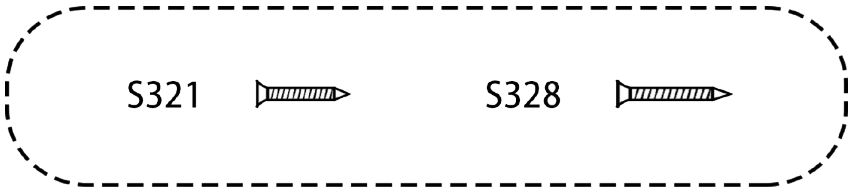

List	
Part NO.	Qty
H105	1
H106	1
S321	8
S328	3

STEP 22

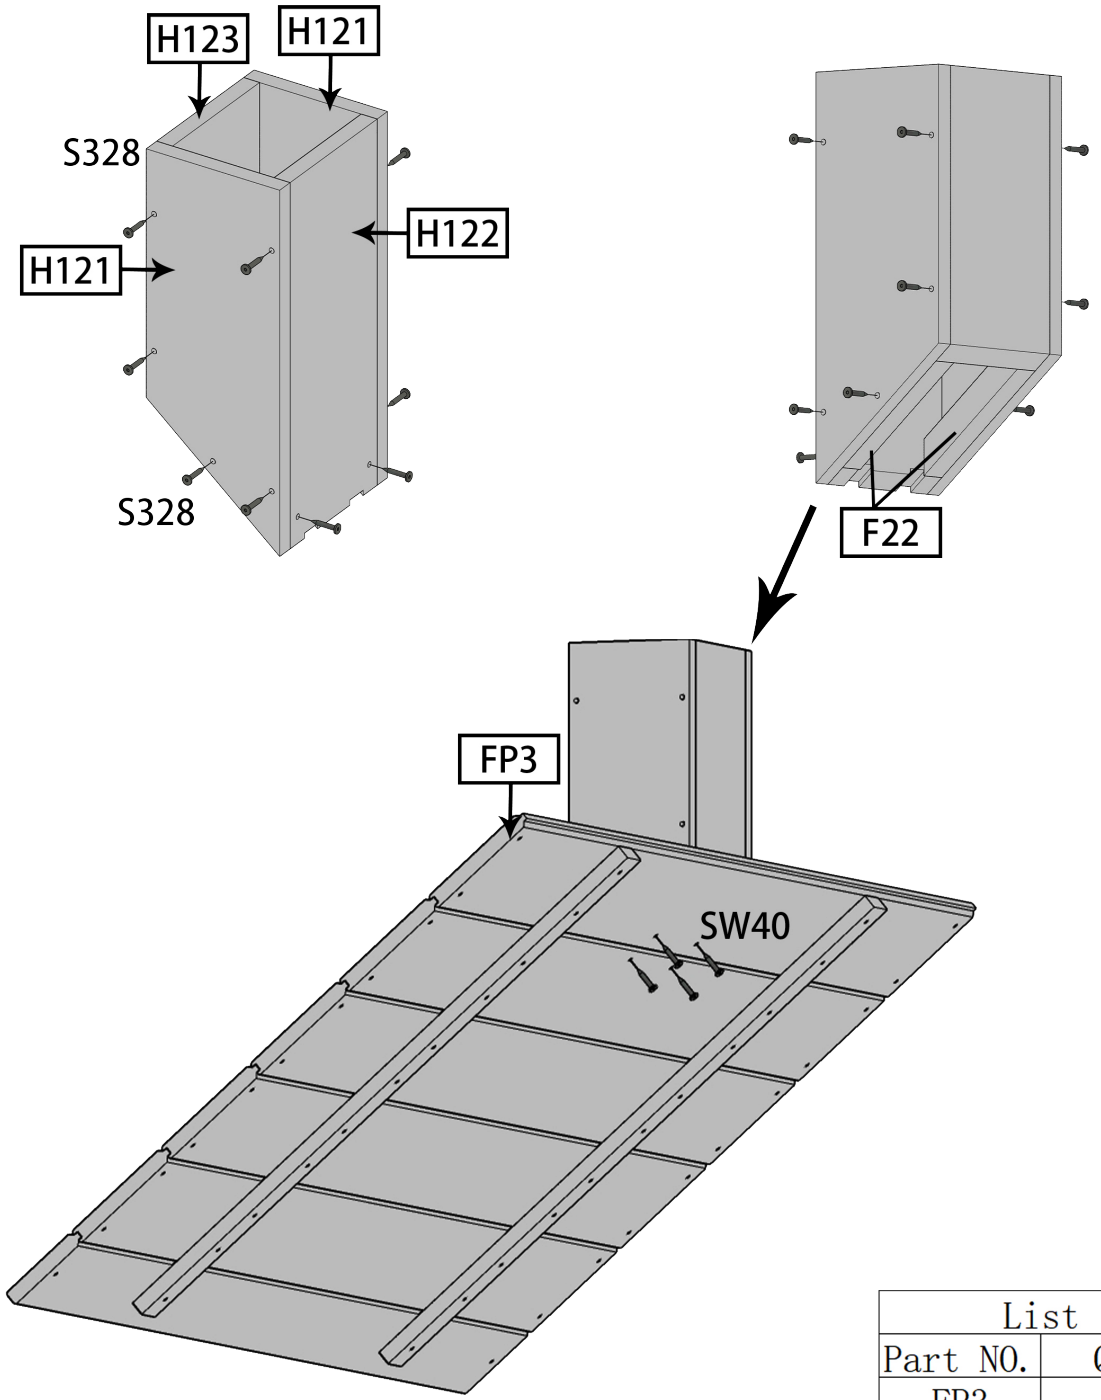



List	
Part NO.	Qty
FP3	1
F22	2
H121	2
H122	1
H123	1
S328	12
SW40	4



STEP 23


TIP: Take note of the spacing.

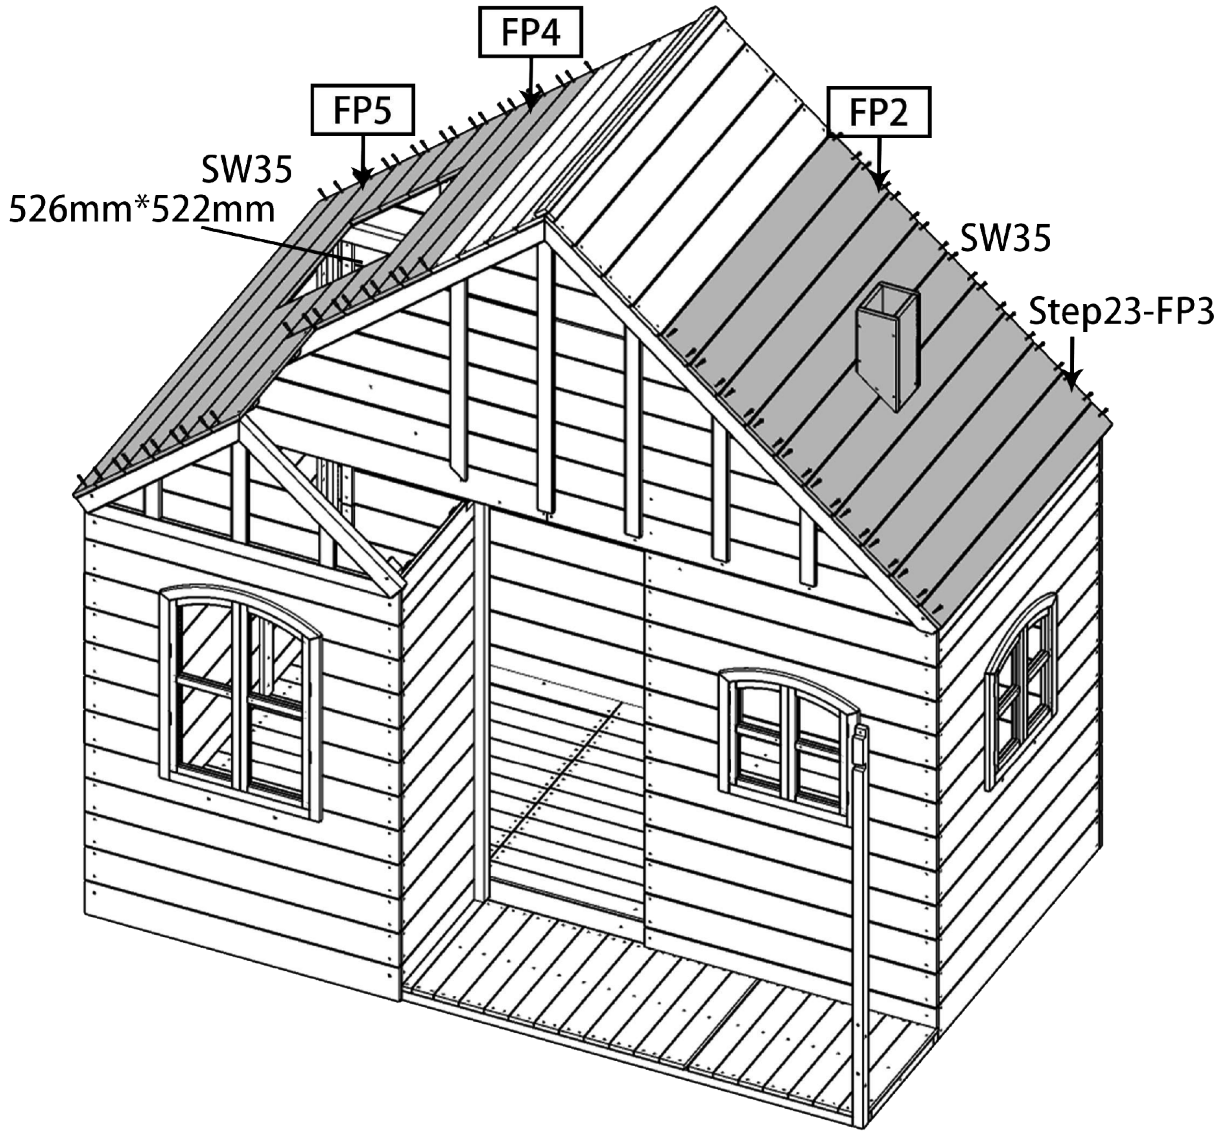

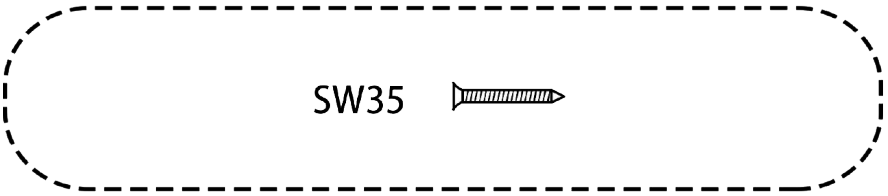



List	
Part NO.	Qty
FP2	1
FP4	1
FP5	1
SW35	77


STEP 24

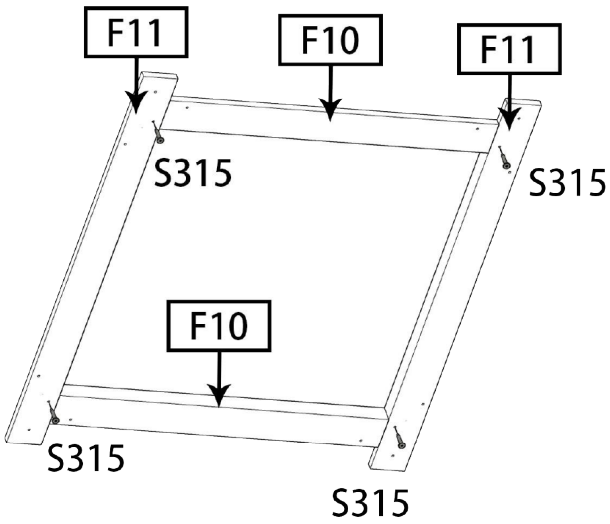

Screws are secured from the inside and outside of the house for the window.

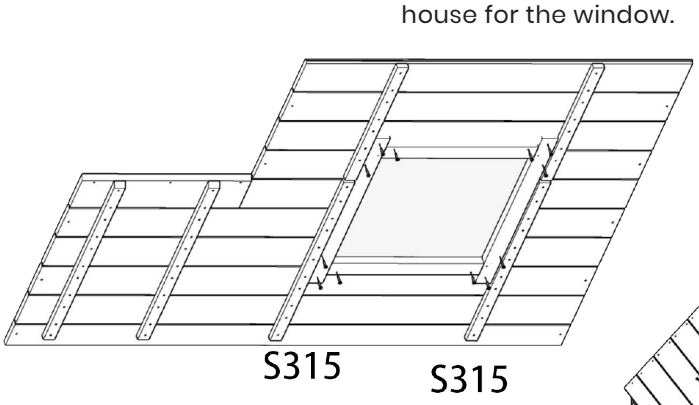


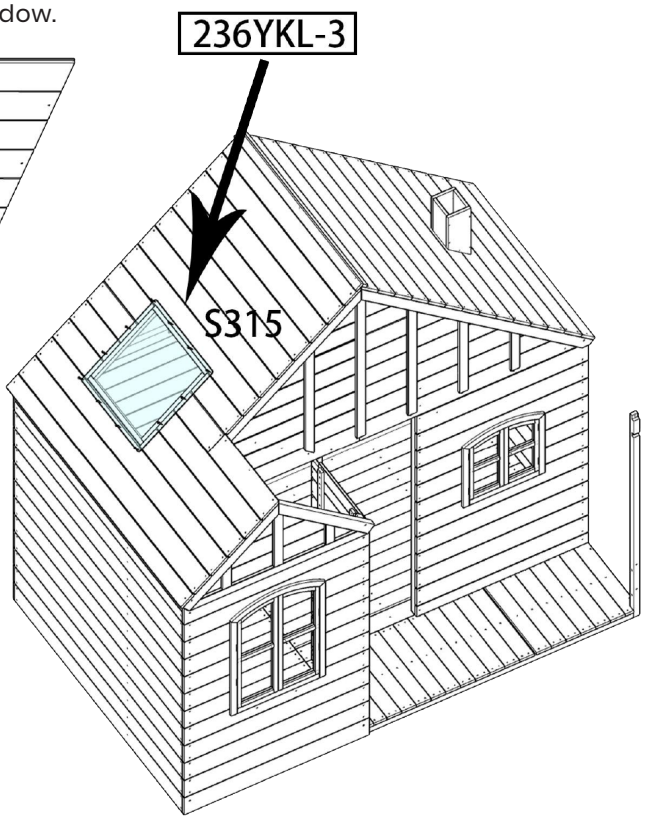

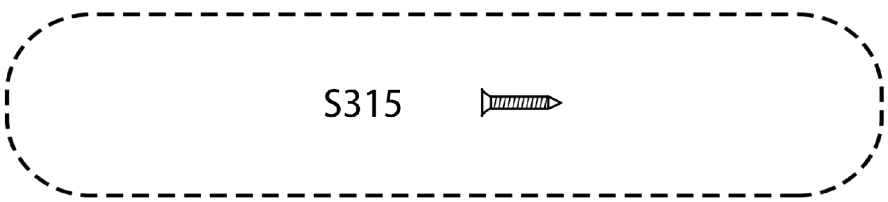


List	
Part NO.	Qty
F10	2
F11	2
236YKL-3	1
S315	28

STEP 25

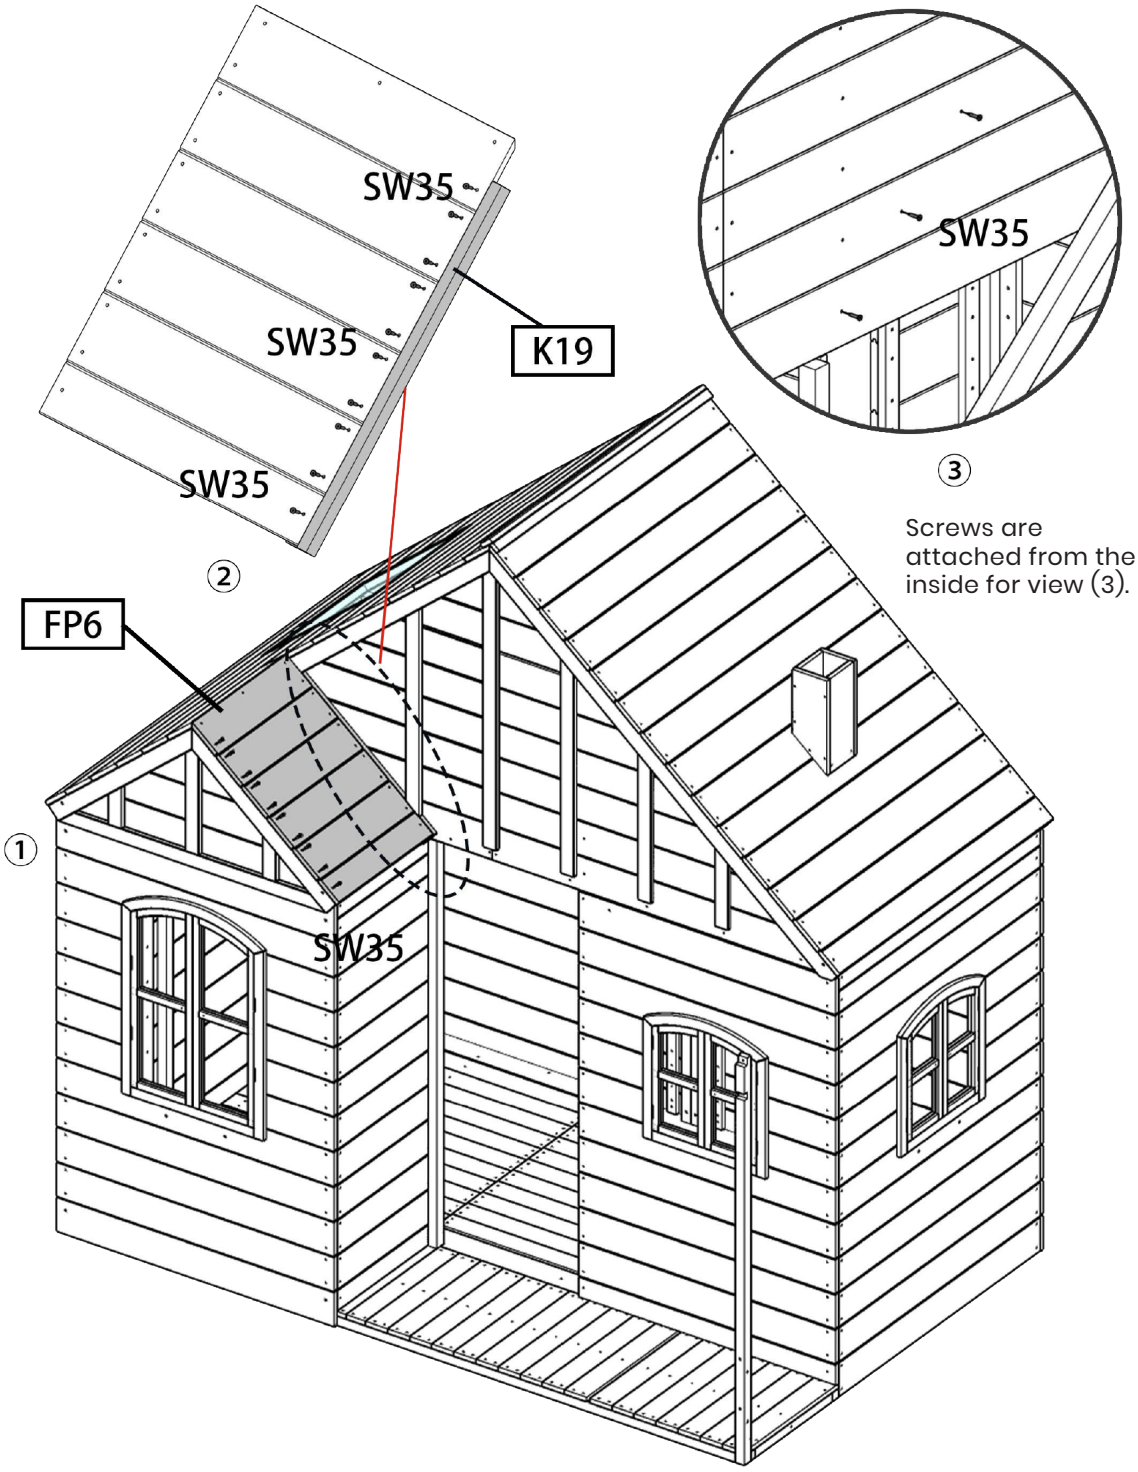



Insert K19 underneath the roof panel for assembly.

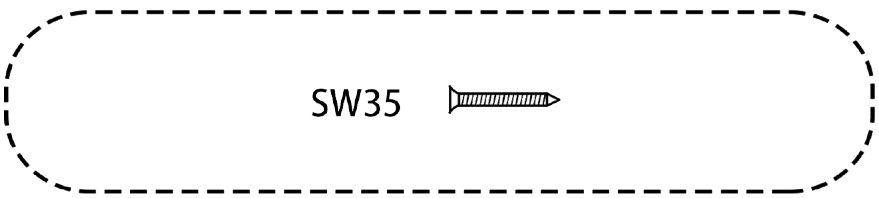

List	
Part NO.	Qty
FP6	1
SW35	23
K19	1


STEP 26

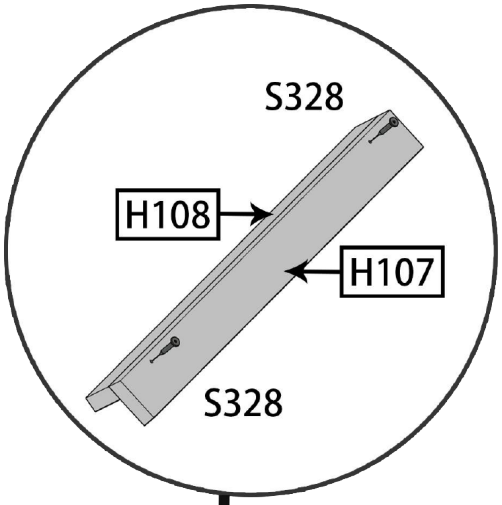

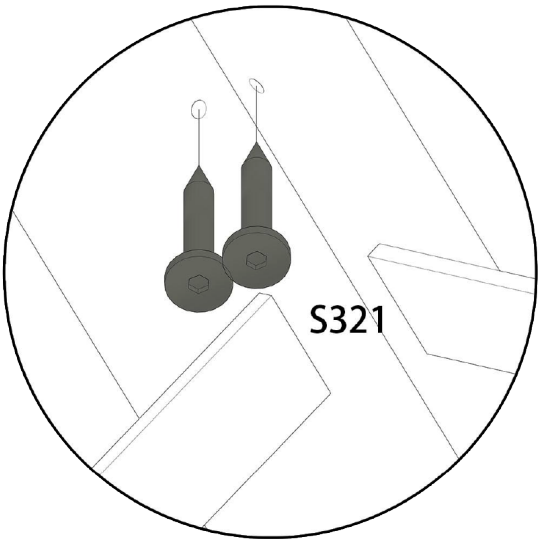

X3


Secure the screws from under the roof.

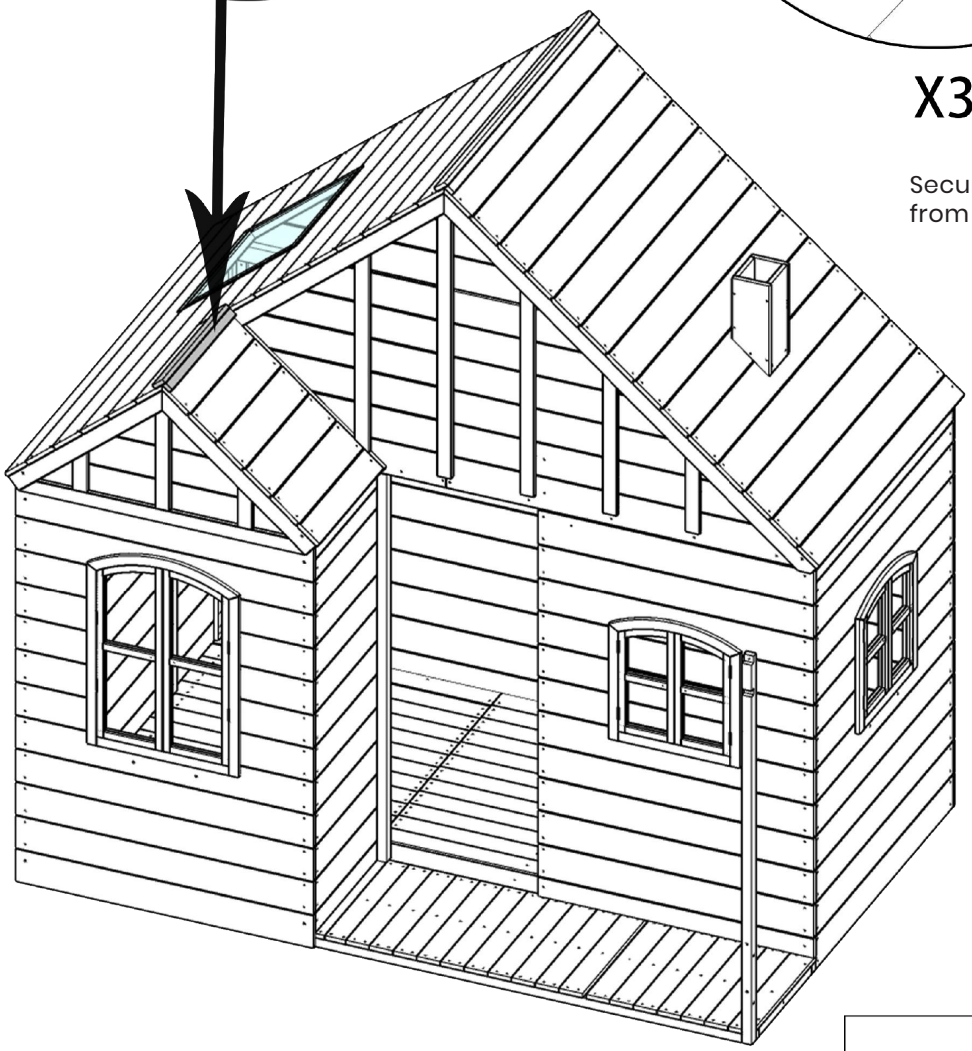


S321 S328

List	
Part NO.	Qty
H107	1
H108	1
S328	2
S321	6

STEP 27

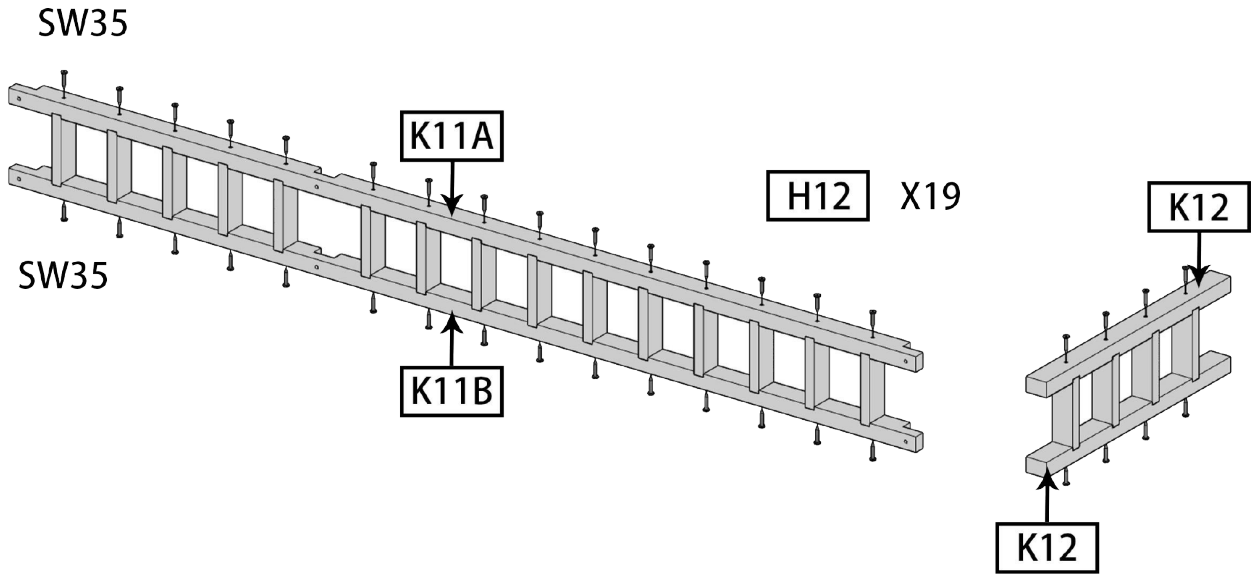


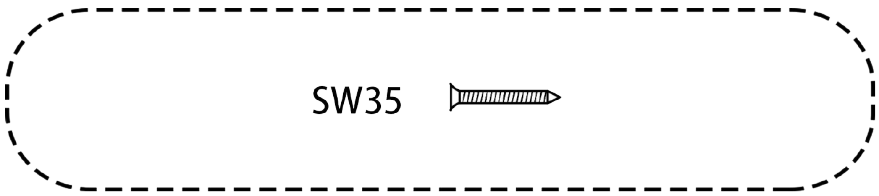

List	
Part NO.	Qty
K11A	1
K11B	1
K12	2
H12	19
SW35	38

STEP 28


TIP: Take note of the spacing.

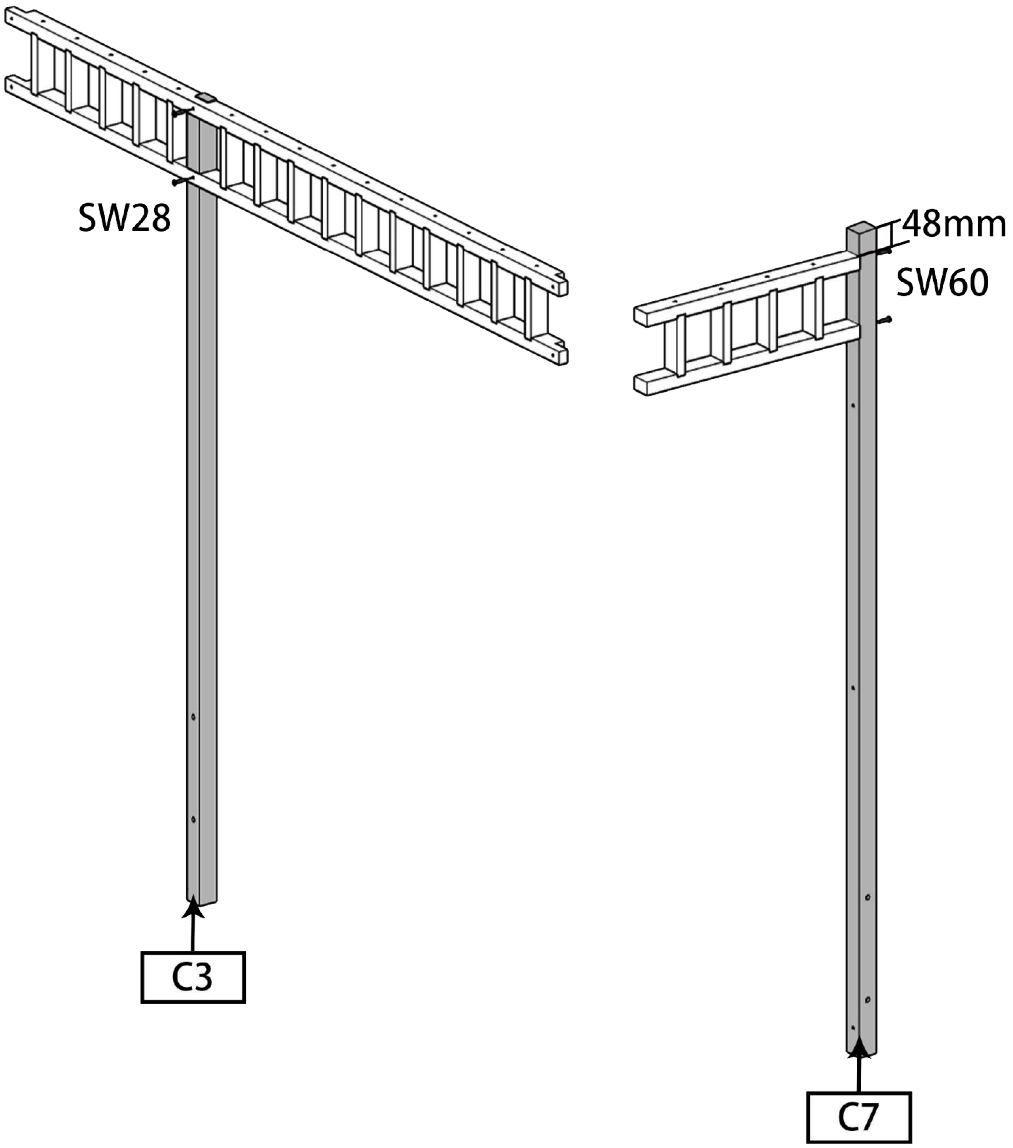




List	
Part NO.	Qty
C3	1
C7	1
SW28	2
SW60	2


STEP 29

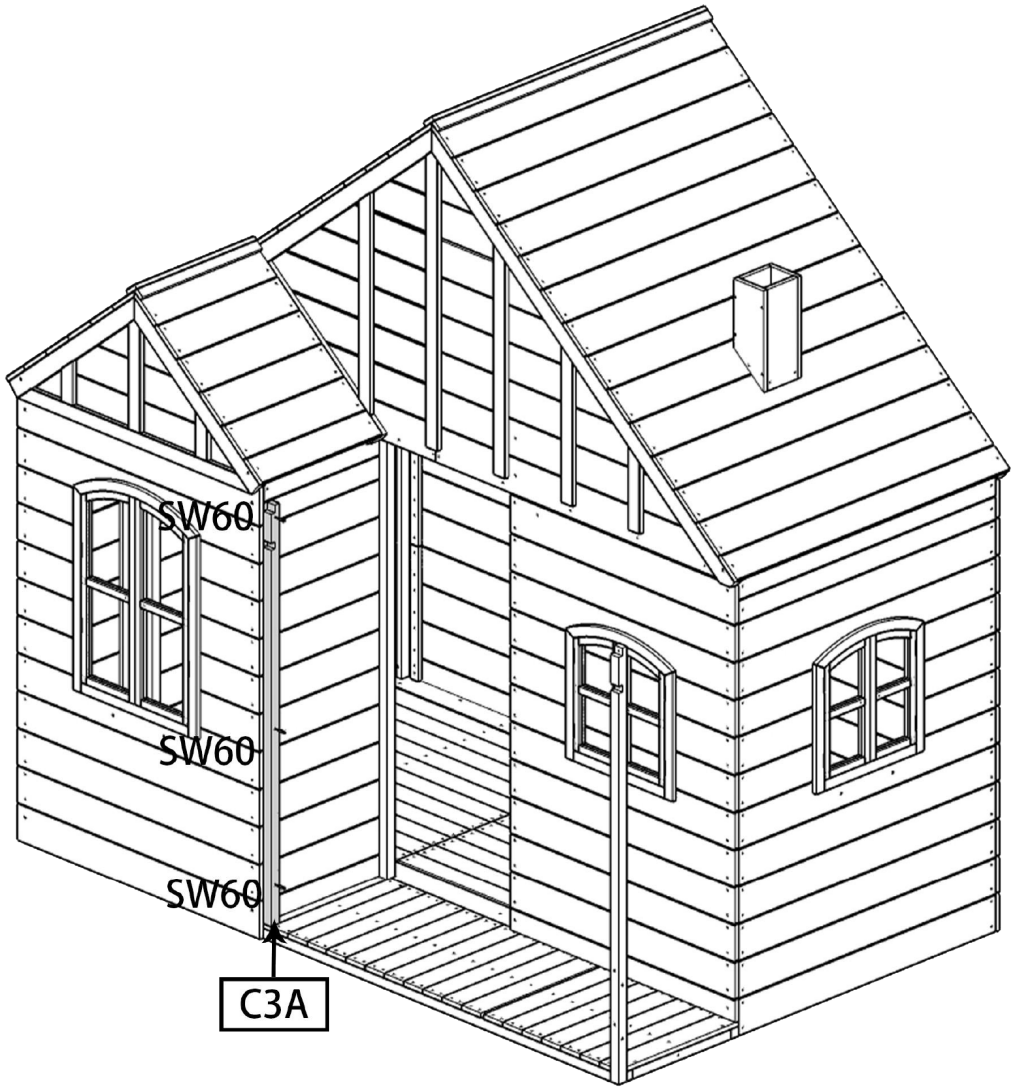

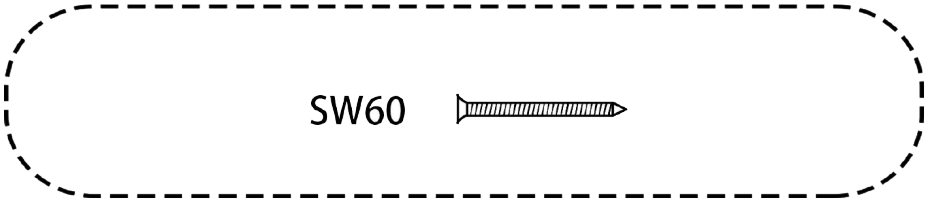

List	
Part NO.	Qty
C3A	1
SW60	3


STEP 30

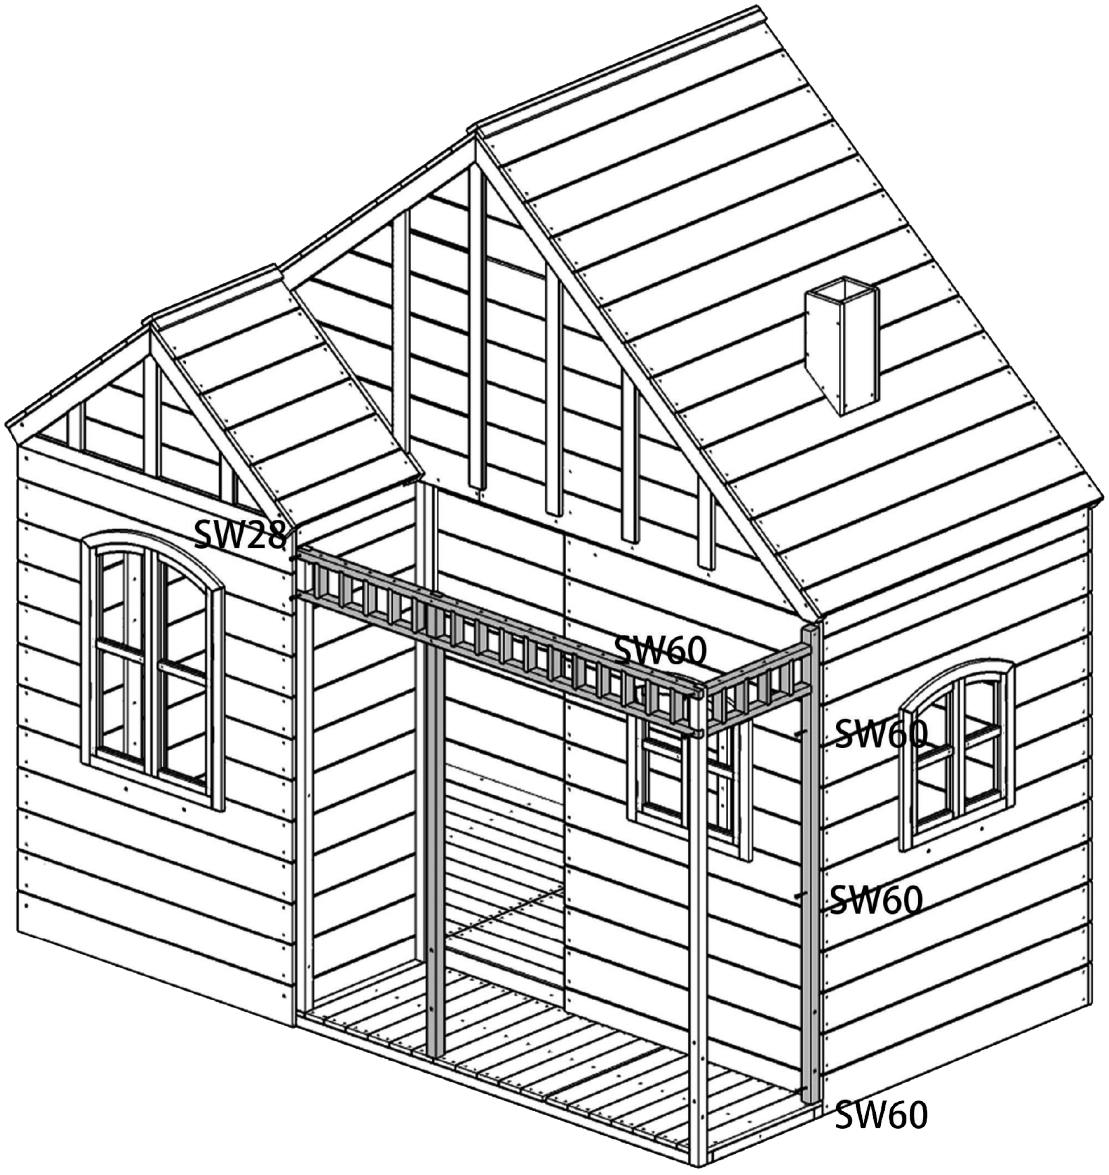





List	
Part NO.	Qty
SW28	2
SW60	5

STEP 31

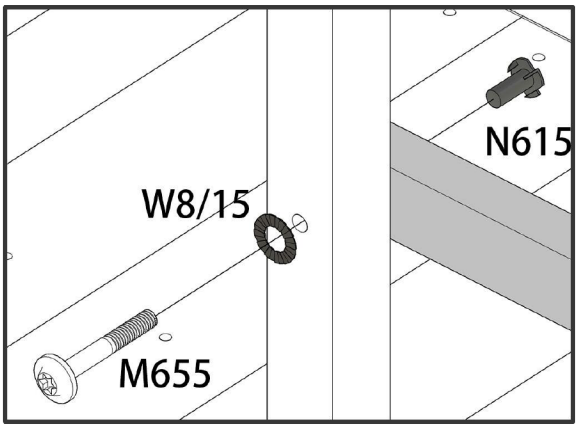


X8

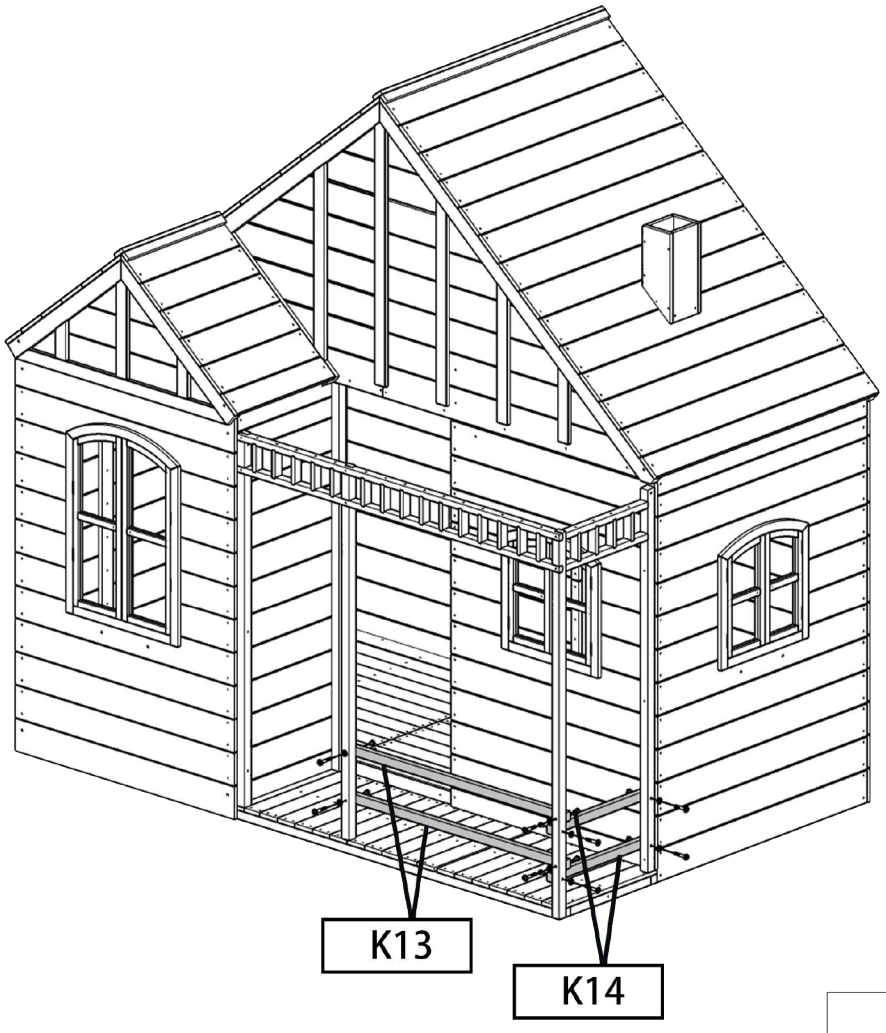


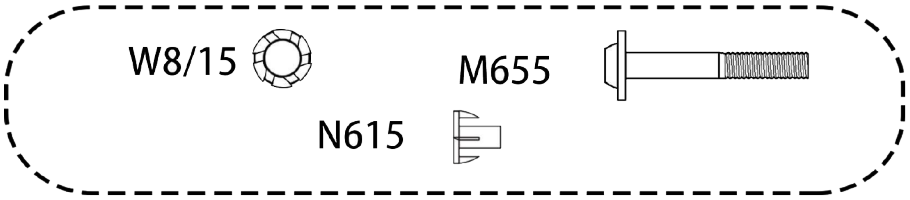

List	
Part NO.	Qty
K13	2
K14	2
M655	8
W8/15	8
N615	8

STEP 32

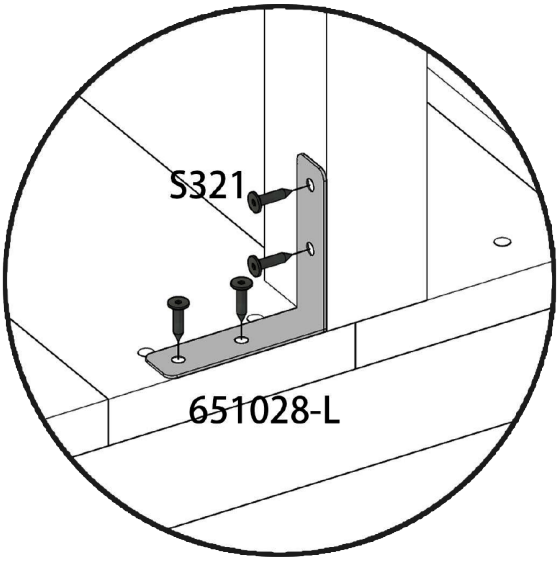


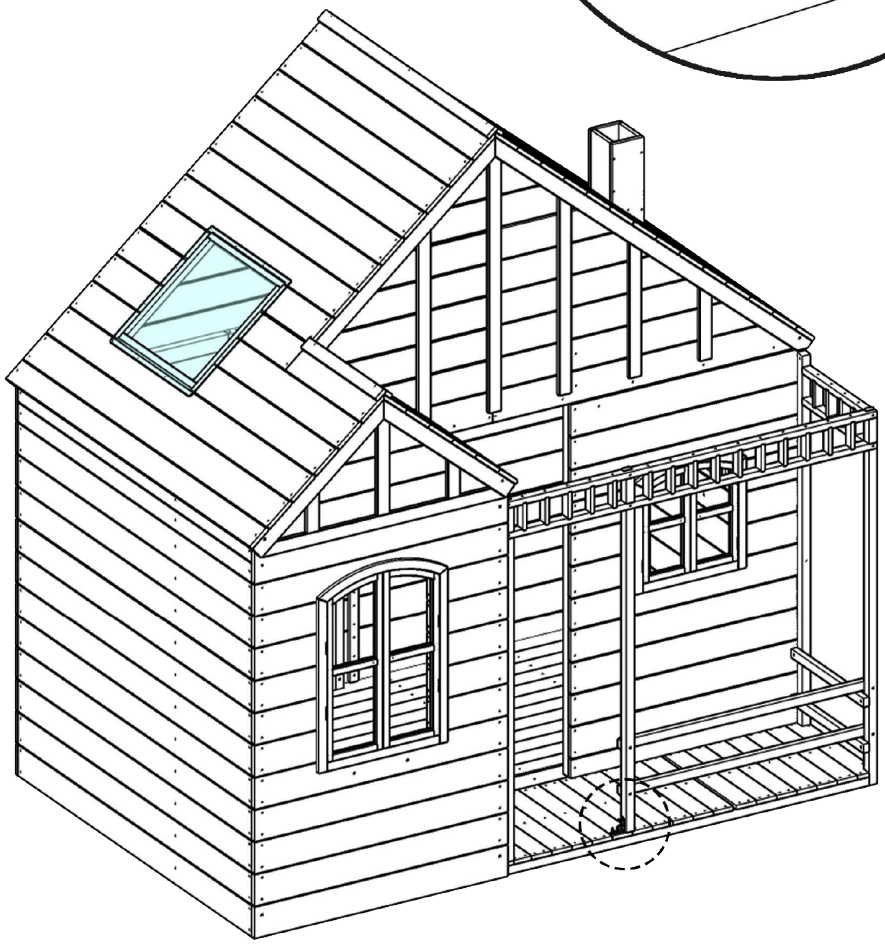


S321

List	
Part NO.	Qty
651028-L	1
S321	4

STEP 33

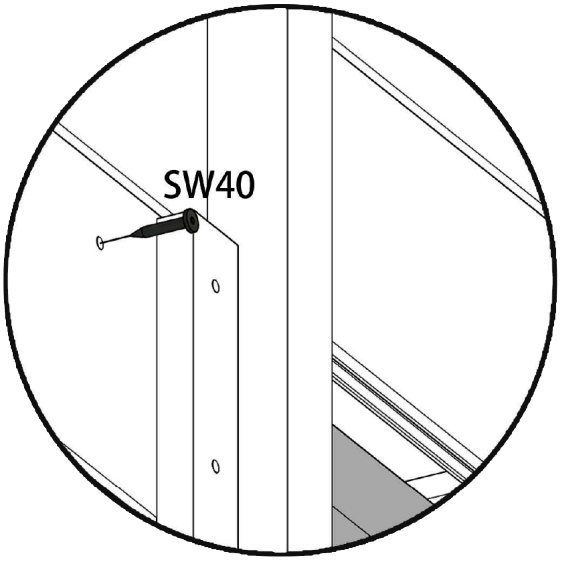

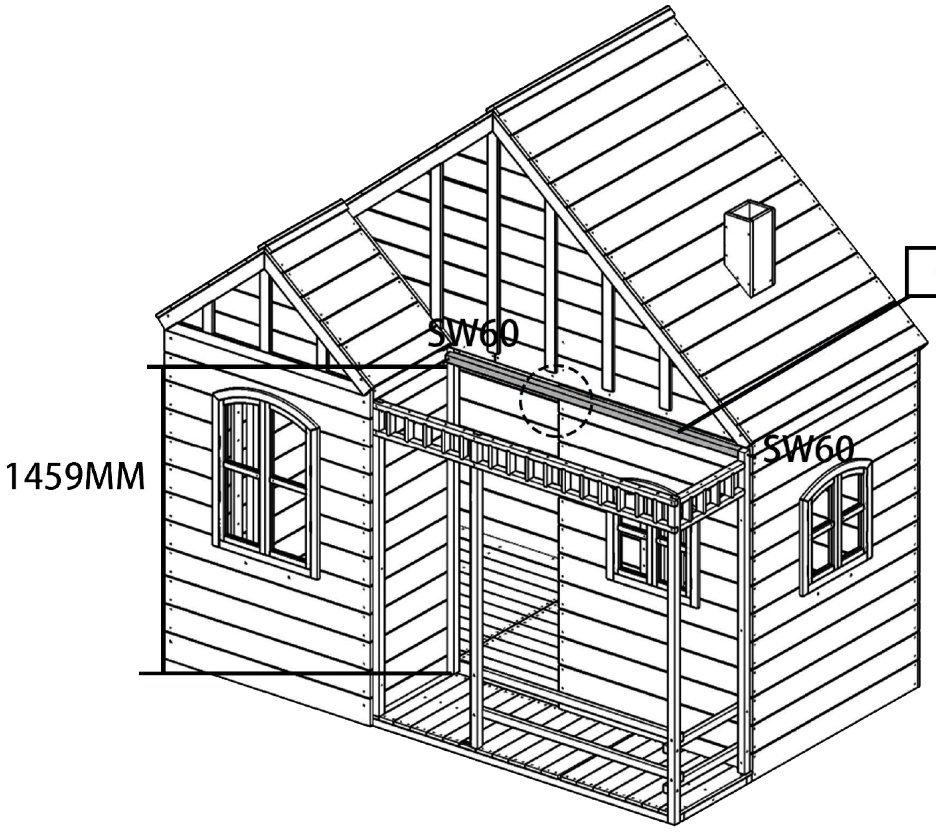

Attention :


Roof needs to have a slant. C9 needs to be slightly higher. Take note of the measurement.




List	
Part NO.	Qty
C9	1
SW40	1
SW60	2

STEP 34

TIP: Take note of the spacing.

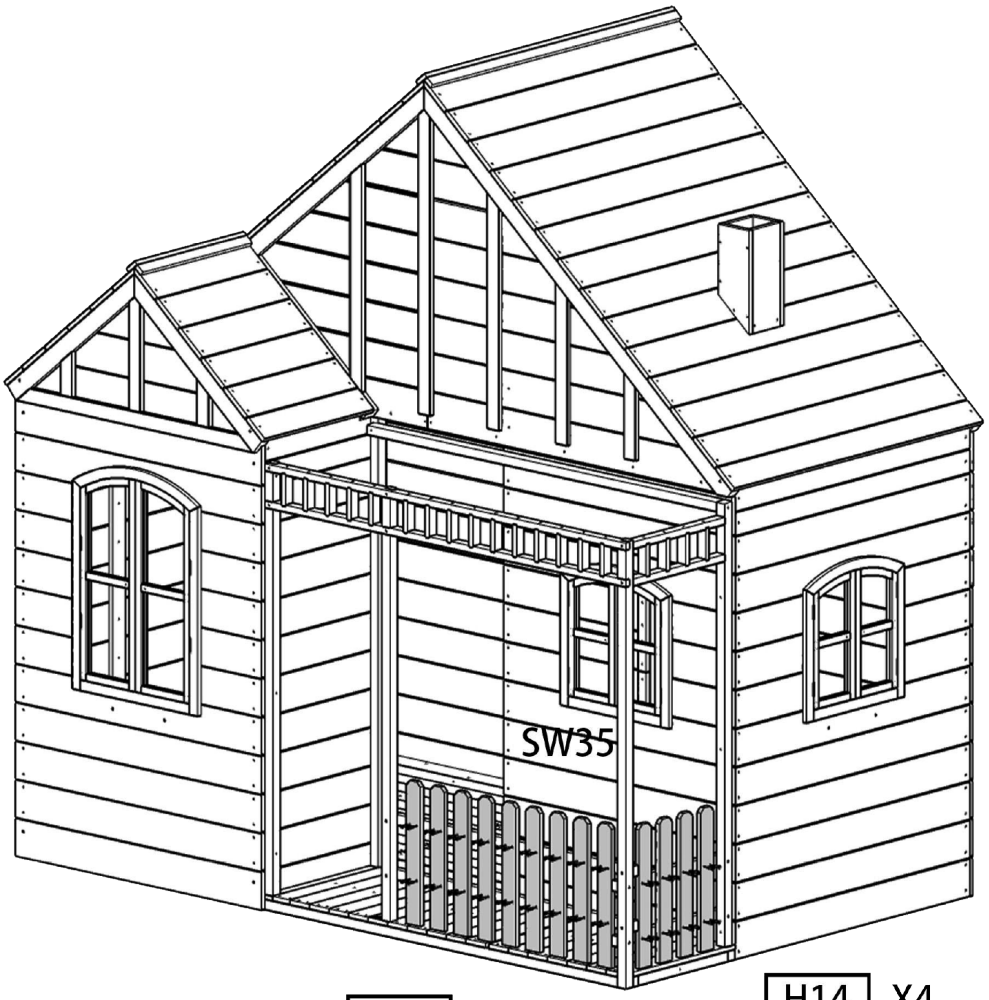


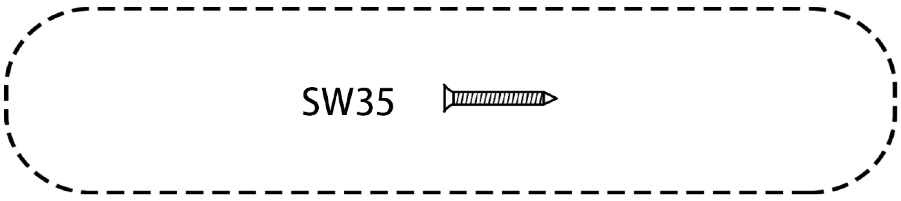


List	
Part NO.	Qty
H13	9
H14	4
SW35	52

STEP 35

TIP: Take note of the spacing for the screws from the edge of timber.

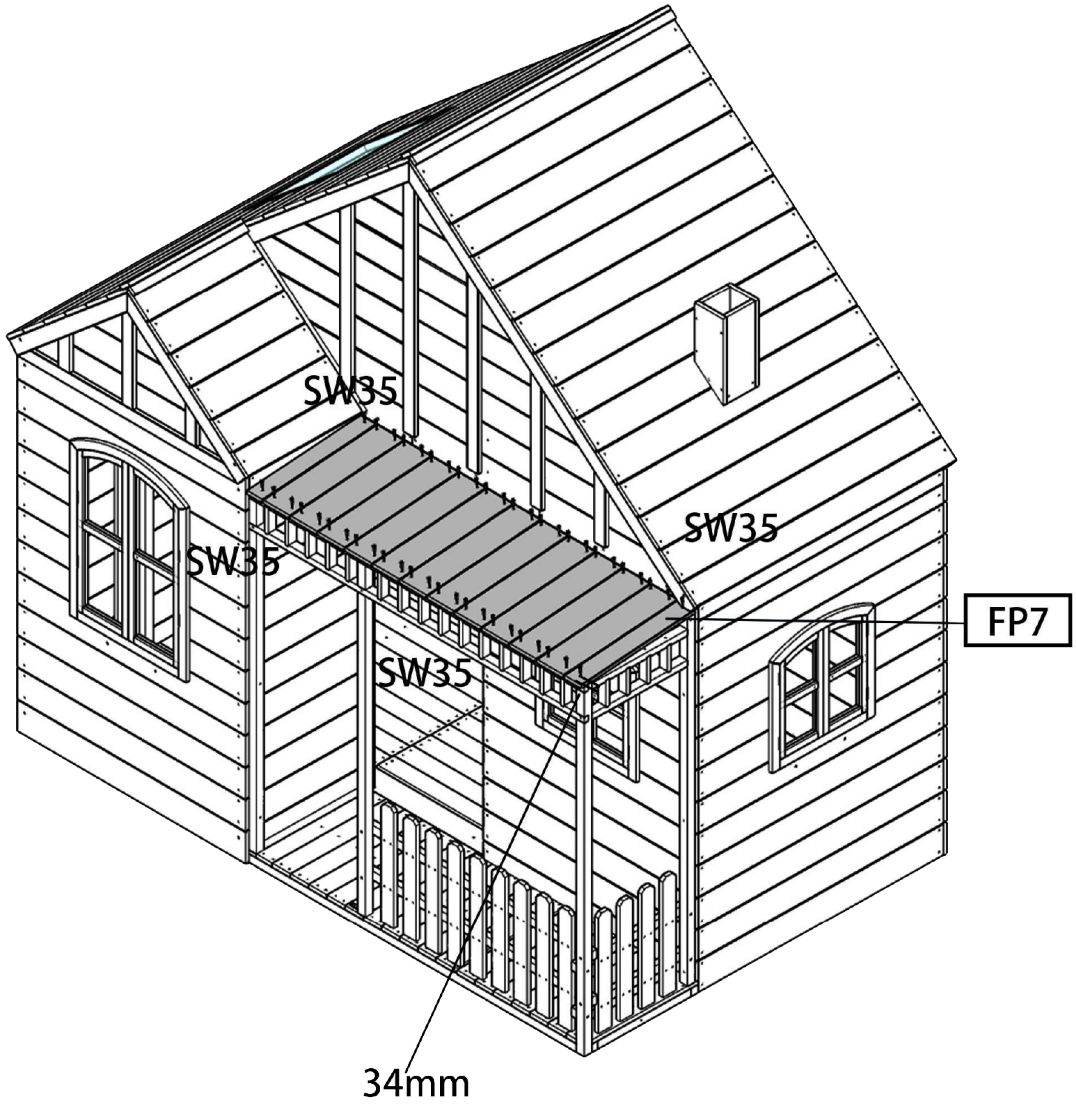



Pay attention to the hole position.

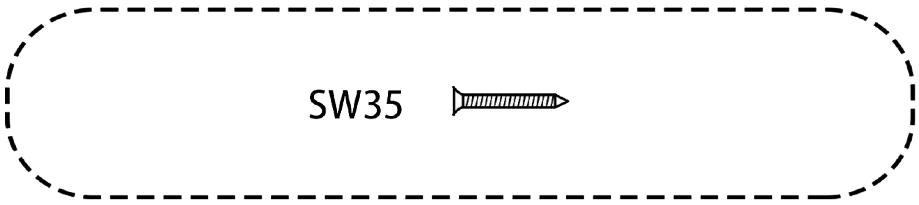


List	
Part NO.	Qty
FP7	1
SW35	48


STEP 36

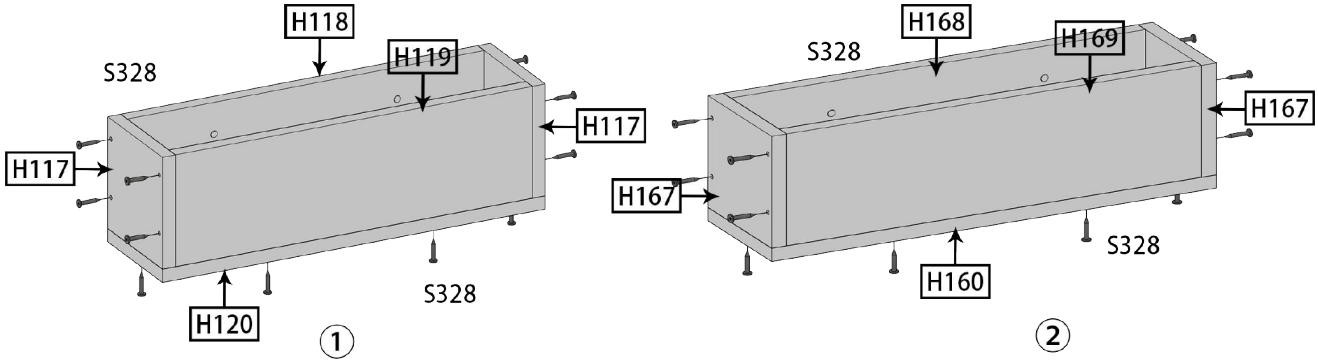

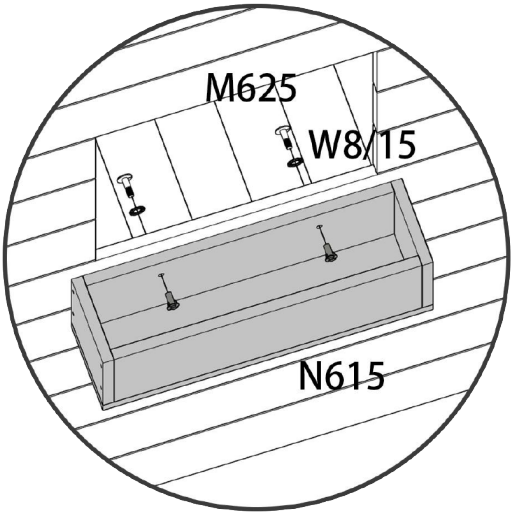

X2

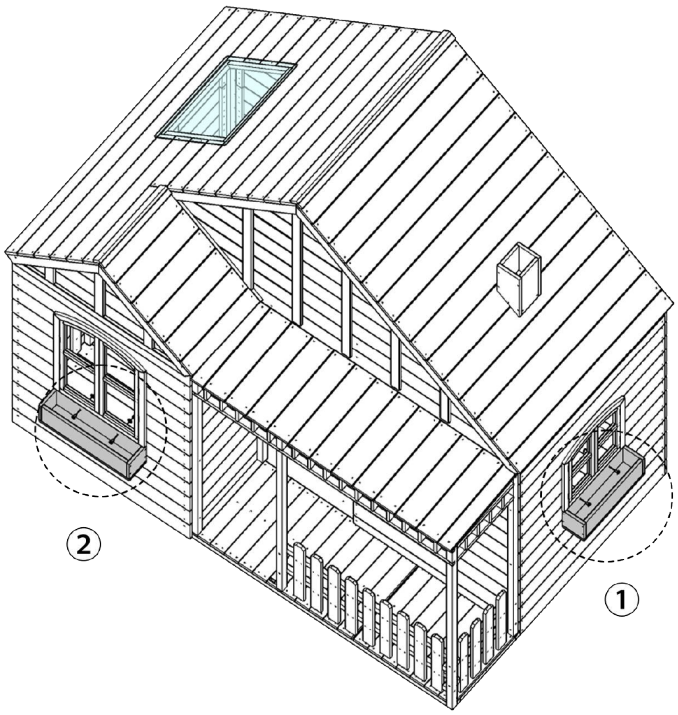


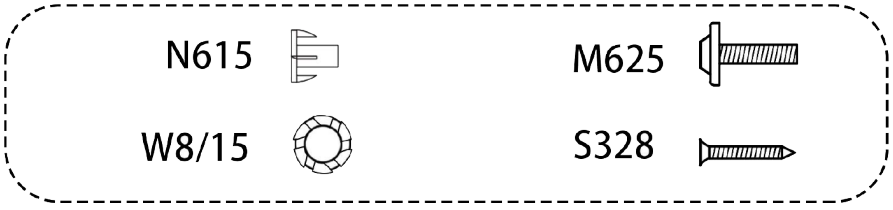


List	
Part NO.	Qty
H117	2
H118	1
H119	1
H120	1
H167	2
H168	1
H169	1
H160	1
S328	28
M625	4
W8/15	4
N615	4

STEP 37


TIP: Align the lock before fully tightening.

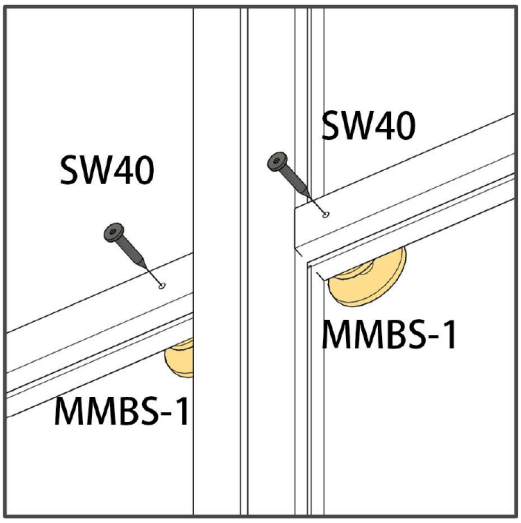

X3

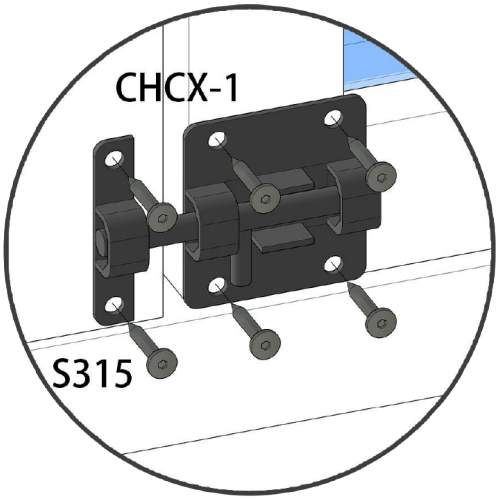

X3

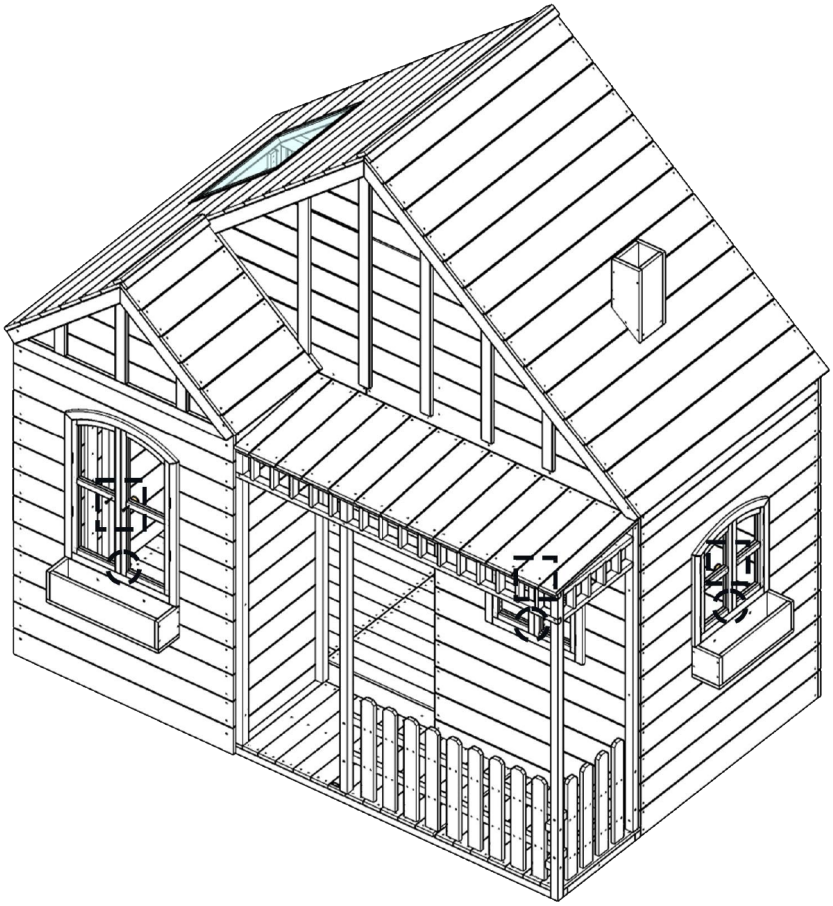





List	
Part NO.	Qty
MMBS-1	6
CHCX-1	3
S315	18
SW40	6


STEP 38


TIP: Align the door hinges and the magnetic pair before fully tightening.

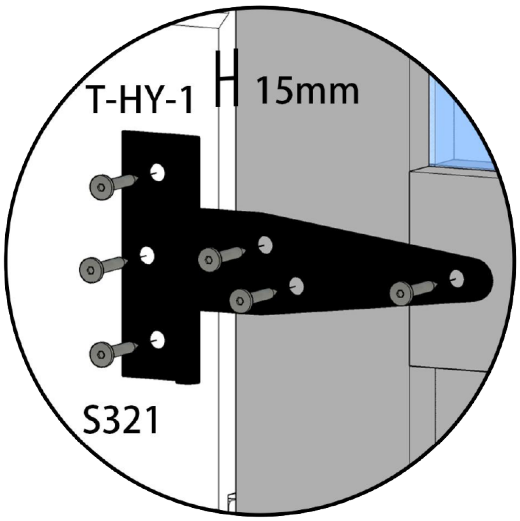

X3

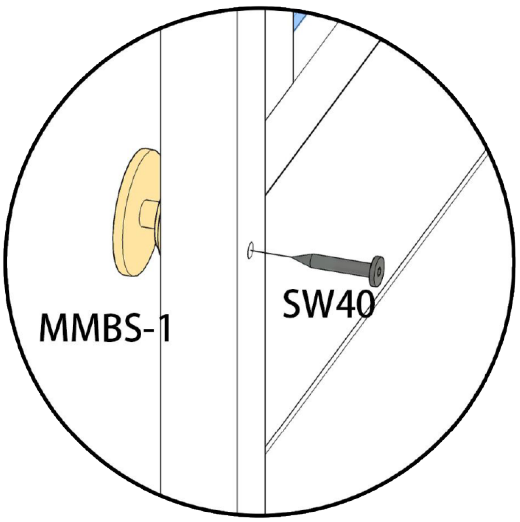

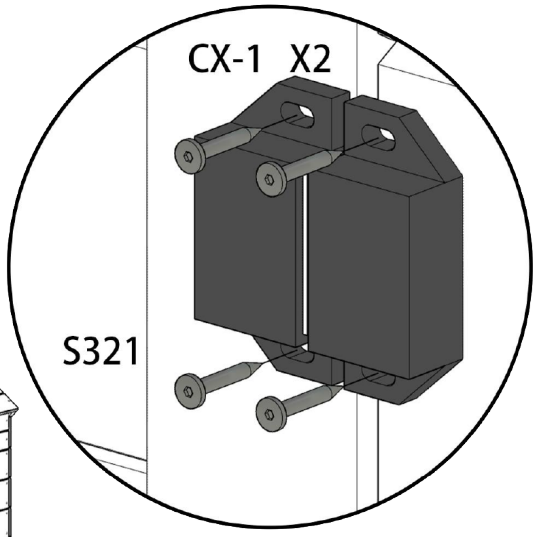


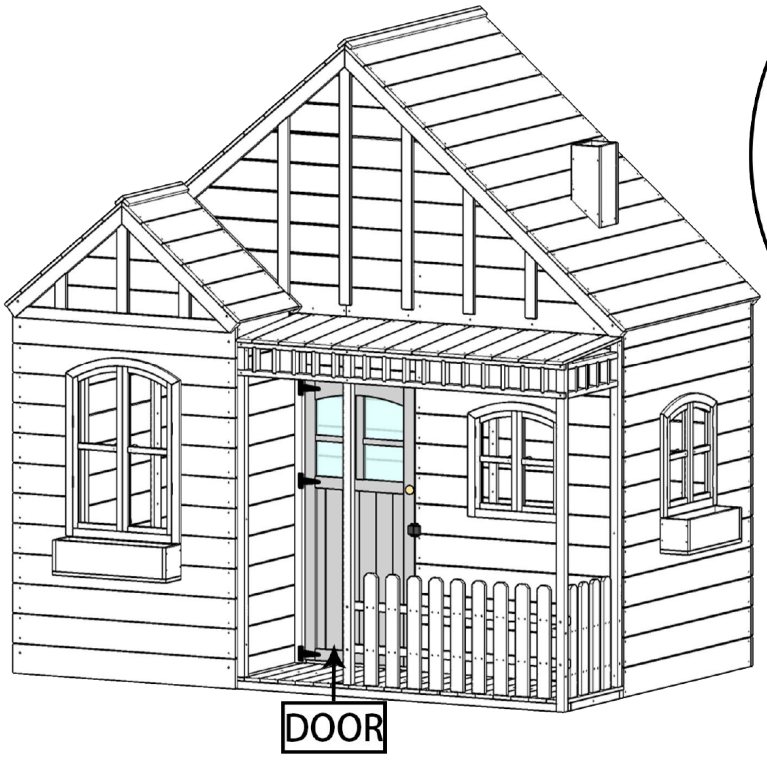



List	
Part NO.	Qty
DOOR	1
T-HY-1	3
MMBS-1	1
CX-1	2
S321	22
SW40	1

STEP 39

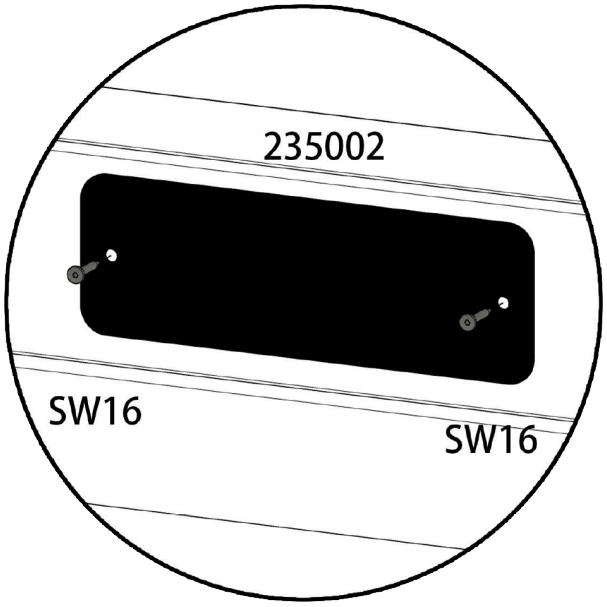





SW16 

List	
Part NO.	Qty
235002	1
SW16	2

STEP 40

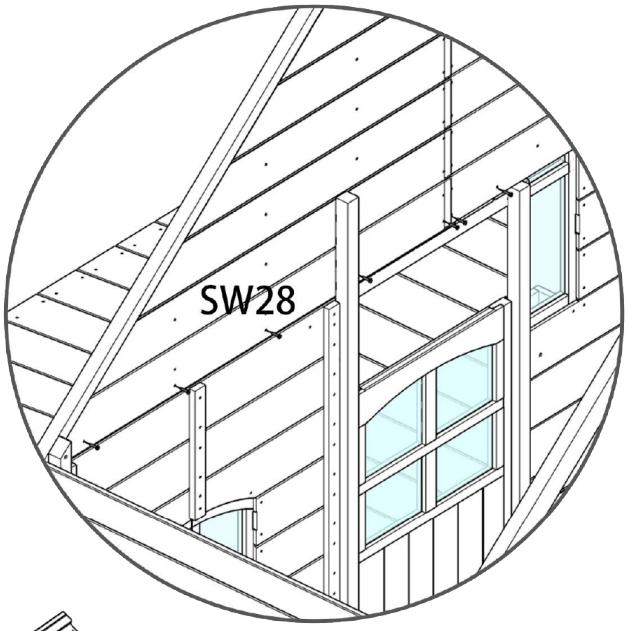

Secure from inside the house.

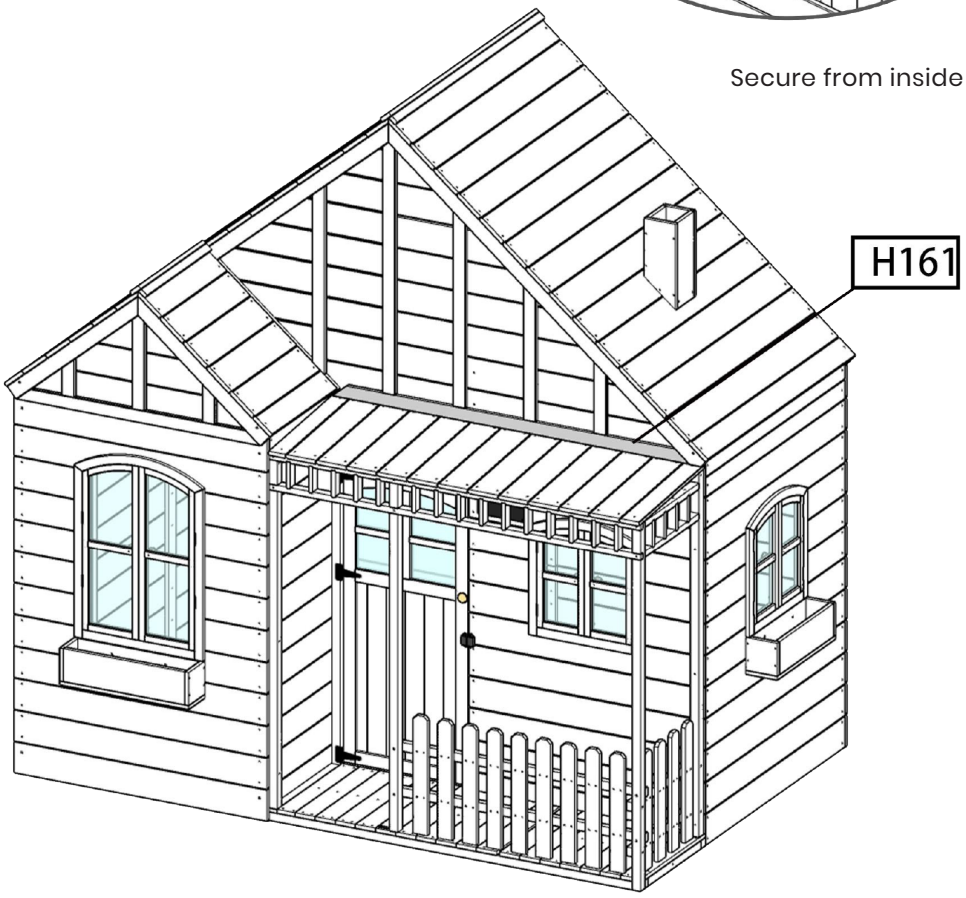



SW28 

List	
Part NO.	Qty
H161	1
SW28	7

STEP 41


IMPORTANT: Ensure ground is fully levelled then install all ground anchors securely into firm soil before use. Never install the cubby on a slope.

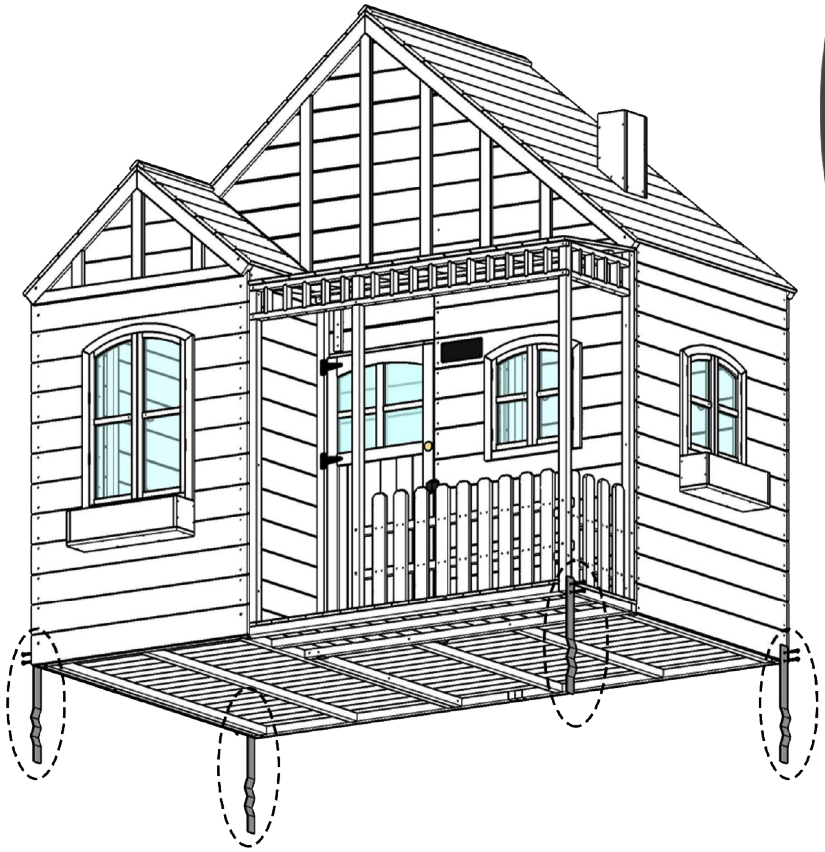

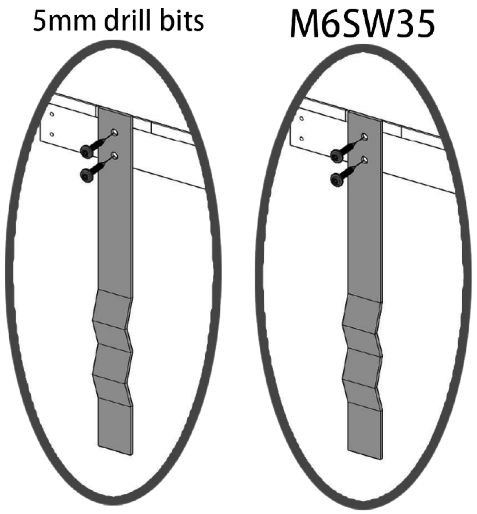

Pre-drill pilot holes
Anchors - 139070

X4

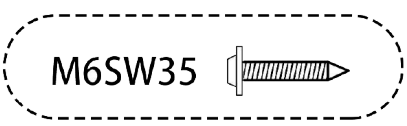

List	
Part NO.	Qty
139070	4
M6SW35	8

IV. MAINTENANCE



WARNING: Keep these maintenance instructions for future reference.

Regular maintenance should be carried out at the beginning of each season and at regular intervals during the period of use to ensure all main parts and fixings remain secure and intact.

• Inspect the cubby house structure and accessories at least monthly during regular use.

• Check and retighten screws, bolts and other hardware as necessary. Do not overtighten, as this may damage the thread or crack the surrounding wood.

• Check coverings, brackets and fixings for sharp edges and replace damaged parts when required.

• Lubricate moving metal parts such as hinges where required, taking care not to stain timber surfaces.

• When signs of oxidation or rust appear on metal parts, remove surface rust and recoat with a suitable non-lead-based protective paint where appropriate.

• Check doors, windows, hinges and other moving components for wear, looseness or damage.

• Replace damaged components before the cubby house is used again.

• If the play structure is disassembled, clearly mark removed metal plates and fixings so they can be reinstalled correctly and safely.

CARE AND CLEANING

• Do not use abrasive cleansers for cleaning timber sections.

• Use a soft, damp cloth to remove dirt and dust.

• Allow the timber to dry thoroughly after cleaning before use or applying any protective coating.

V. WOOD ADVICE

Our products are manufactured from premium timber. Great care is taken in selecting, machining, and treating the timber before it is sold to you.

1. Inspect wood parts monthly. The grain of the wood sometimes will lift in dry periods causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/splitting and other weather damage.

2. The wood is treated via high temperature drying, degreasing and is stained against wood rot and insect damage (Termites not included). This is not a permanent treatment as weather conditions can wear it down. We recommend once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your set. Please note this is a requirement of your warranty.

Bear in mind that timber is a natural product and may experience changes throughout the course of its life. It may:


- Develop openings/checks (gaps, slits, apertures, cracks) along the line of the grain.
- Fade as the timber reacts with sunlight.

All woods are hygroscopic, that is, it will absorb or discharge moisture to attain equilibrium with the surrounding atmosphere. Timber openings/checks occur due to the moisture content between internal and outer surfaces of the timber. No two pieces of wood are exactly alike. Each piece has its own characteristics and personality and reacts differently to climate changes. When any wood products are exposed to the elements, it develops 'wood checks'. A check is the radial separation of the wood fibres running with the grain of the wood. These are caused by the varying temperature and moisture conditions. A check does not affect the strength or durability of the wood or structural integrity of the play set.

WHEN SHOULD WOOD CRACKS BE A CONCERN?

Most of the wood splits will never become large enough to affect the reliability and strength of our products, however, there can be rare cases where splits can occur. This happens when a crack develops past the halfway point from the timber, splitting it into two separate pieces.

Feel free to contact us with detailed pictures of your product so we can assess and ensure that your playground remains safe.

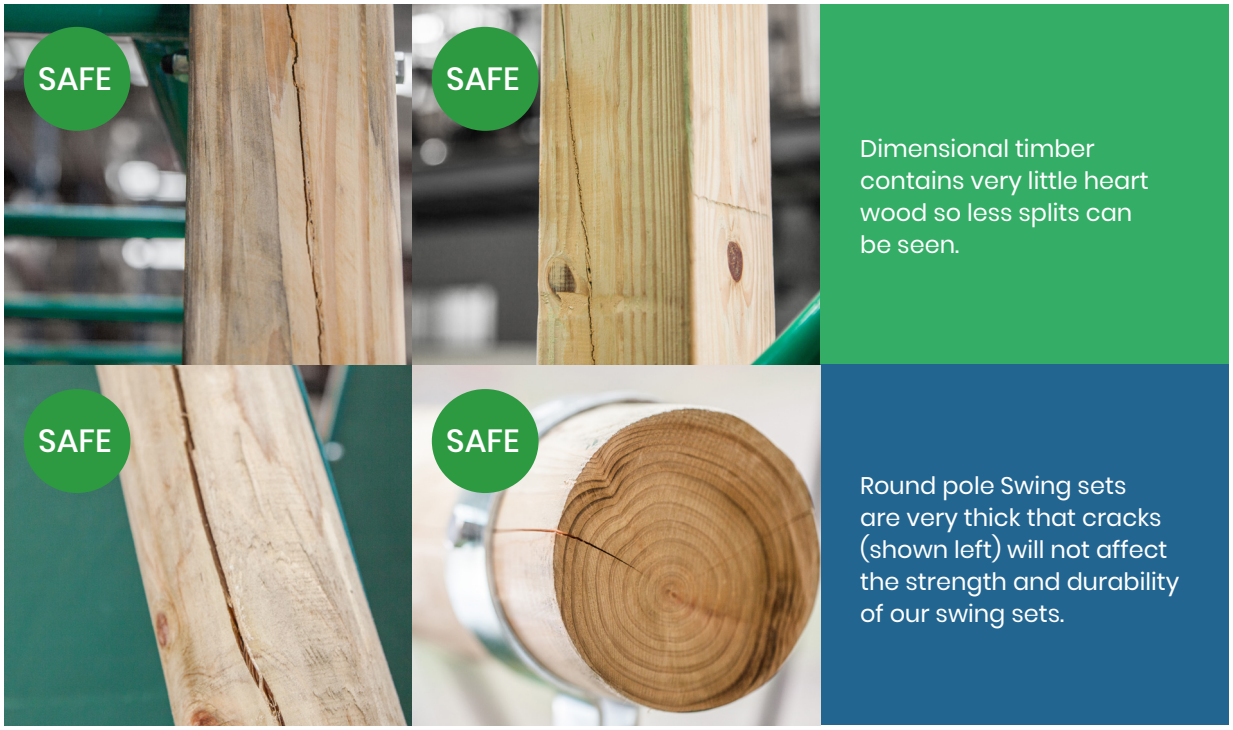

3. Mould and Mildew

Protecting against mould and mildew on your outdoor equipment is an important step in maintaining your backyard. Mould may develop for several reasons, such as certain weather conditions, improper drainage or infrequent usage. Here we'll share our tips for keeping your outdoor areas free of mould and mildew so that you can enjoy your backyard with peace of mind.

Once you spot mould on your equipment, it's important to start clearing it up straight away. The first step is to scrub it off with soap and water, until all the visible signs of mould are removed. It's important to remember however, that just because you can't see it anymore doesn't mean it's gone.
The next step is to kill off the remaining mould so that it doesn't grow back. Here are a few options, but keep in mind these should be used independently. Don't mix or combine these methods at the same time.

Mould Killer or Removal Spray
You can purchase off-the-shelf removal sprays that destroy mould either indoors or outdoors. For these products, make sure to follow the product instructions as well as wearing protective gloves to avoid contact with skin.

Bleach
A solution of bleach and water can also be highly effective in killing mould. For this method, mix the water and bleach on a 1 to 1 ratio, then use a sponge or brush to scrub the affected area. You can also use a higher concentration of bleach for spot treating. After bleach treatment, make sure to rinse off your equipment and allow to dry.

Vinegar
If mould is still lingers after applying bleach or a mould spray, vinegar will be an effective option for removing stubborn remnants. Vinegar will kill most types of mould and is best for nonporous materials like hard plastics or metal. The best method is to fill a spray-bottle with undiluted white vinegar of at least 5% acetic acid. Spray the affected area, then let sit for around an hour. Make sure to thoroughly rinse off afterwards.

For wooden equipment, you can add a coat of paint or stain after it has thoroughly dried.

Some people may find that mould keeps resurfacing after cleaning on certain areas. This can be due to a few reasons, such as poor sunlight. Areas without direct sun are more likely to become damp and take longer to dry off after rain. Consider removing obstacles or rearranging your equipment so that it receives more sunlight, which will also help to kill the mould once it develops.

For more information: *www.lifespankids.com.au/natural-timber*

VI. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit www.lifespankids.com.au/warranty-form

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit www.lifespankids.com.au/warranty-form and fill in our Repair/Service Request Form or Parts Purchase Form.

VII. SECURITY SUPPORT INFORMATION

REPORTING

To report a cyber security issue, please email **support@gflgroup.com.au** with product details and a description of the issue. We will acknowledge receipt and provide updates as it is investigated.

DEVICE SUPPORT PERIOD

This product will receive security updates for a minimum of 12 months from the date of purchase.



LIFESPAN KIDS

www.lifespankids.com.au