


USER MANUAL

Armada Play Centre Set with 2 x 2.2m Yellow Slides



Find the Digital
Manual Online

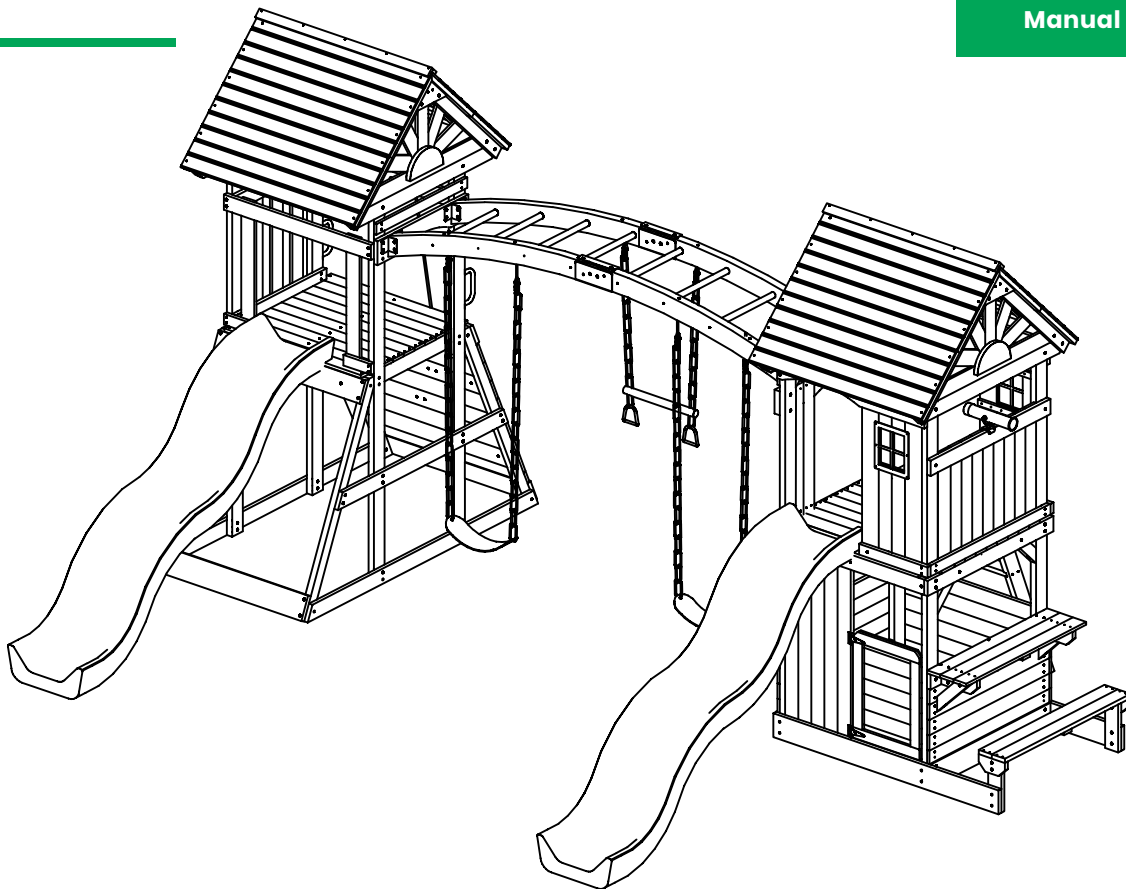

WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. GENERAL SAFETY INSTRUCTIONS	3
1.1 Danger for Children	3
1.2 Risk of Injuries	3
1.3 Product Damage	3
1.4 Assembly Advice	4
II. SAFETY INSTRUCTIONS	5
III. ASSEMBLY INSTRUCTIONS	7
IV. MAINTENANCE	77
V. FREQUENTLY ASKED QUESTIONS	78
VI. WOOD ADVICE	79
VII. WARRANTY	81

I. GENERAL SAFETY INSTRUCTIONS

NOTE: This product is intended for outdoor domestic use only.

1.1 DANGER FOR CHILDREN



WARNING: No eating while using the product at the same time.

- Children do not recognize potential dangers from this product. The unassembled product must be stored out of reach of children and pets.
- This product may only be used with adult supervision at all times.
- The packaging material is not suitable for children due to choking and suffocation hazards.

1.2 RISK OF INJURIES

- Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician.
- Check the product before each use. Defective parts must be changed immediately as they can impair the function and the safety of the product.
- Adhere to the weight loading and user at a time as specified on the product manual or website product specifications.
- Use the product only on even and non-slipping surfaces. Never use it near water and keep sufficient space around for safety.
- Beware of moving parts such as the springs or elastics, which could catch your arms and legs. Do not place any objects or body parts in the product's openings.

1.3 PRODUCT DAMAGE

- Do not make alterations to the product. Only use original spare parts. Qualified technicians should only carry out repairs – improper repairs can lead to danger for the user. Use this product only as described in this manual.

1.4 ASSEMBLY ADVICE

- The product should not be installed over concrete, asphalt or any hard surface. We recommend installing on grass area or dirt ground with playground wood-chips (mulch) or other impact absorbing ground cover on top (see page 6).
- The assembly of the product must be done carefully and by an able-bodied adult. If in any doubt, ask a technically qualified person.
- Before you start with the assembly, read the instructions carefully.
- Remove all packaging materials and lay down all parts on an open space. This gives you an overview and simplifies the assembly procedure.
- Check with the parts list that all parts are available. Dispose of the packaging material when the assembly is completed.
- Beware that when using tools or doing technical work, there is always a risk of injuries. Assemble the product with care.
- Create a danger free environment; for example, do not let tools lay around the workspace. Store the packaging material in a way that cannot cause any danger.
- After installing the product according to the instruction manual, ensure all screws, bolts and nuts are correctly installed and tightened and that all joints are secure.
- Reasonable space must be kept between the product and possible sources of danger, such as other equipment swimming pools and fences.
- The product must be assembled correctly before use.
- Your play structure must be installed on a flat horizontal surface with a minimum of 2m between it and any structure or obstacle such as a fence, garage house, tree branches, clothes lines, or electric cables.
- Modifications made to the original product shall be carried out according to the instructions of the manufacturer.
- The product must always be used in a well-lit area.
- Do not place anything under the product.
- Use gloves during assembly and disassembly.
- Outdoor products should be equipped with devices to prevent displacement in strong wind conditions (e.g. steel bars in the ground or loads like sandbag or water bags).
- In certain areas during winter, snow buildup and the low temperatures can damage the product. It is recommended to remove snow buildup and to store the product indoors.
- We strongly recommend visual inspections every 3 months to ensure the integrity of the entire product. Replace any parts as necessary.

II. SAFETY INSTRUCTIONS

A maximum of 68 kgs. per child is recommended for play activities designed for individual use.

A maximum of 54 kgs. per child is recommended for play activities designed for multiple child use.

A maximum of 9 children is recommended for this swing set.

- The safety instructions of the product should always be considered and obeyed.
- No clothes with hooks or loose parts should be worn or carried during product usage in order to avoid hooks getting caught and causing injury.
- Strong winds can result in the product being blown away or damaged. If strong winds are predicted the product must be disassembled and moved to a sheltered area or sufficiently anchored down.
- Moving the product whilst assembled may affect the integrity of the frame. Should it be necessary to move the product, please consider the following:
 1. Force to be evenly spaced around the frame to lift the product off the ground
 2. The product must be carried horizontally
 3. Use caution whilst moving as it could bend the product frame.
- Users should be familiar with the assembly manual. This manual contains assembly guidance; selected precautionary measures as well as recommendations for servicing and maintenance of the product, in order to ensure a secured and fun use of the product.
- It is the responsibility of the owner or the supervisor to guarantee that all users of the product are informed sufficiently of all warning references and safety instructions.

For the supervisor

The supervisor's role is to make sure users are aware of all safety precautions and that these precautions are enforced. When a supervisor is not available, the product may be disassembled or covered to limit access.

- The product can be only used if it is in good condition, worn or damaged parts should be replaced.
- Objects, which could be dangerous to the user, should be away from the product.
- Avoid unauthorized and unsupervised use of the product.
- Do not use the product under influence of alcohol or drugs (incl. medicines).
- Do not use the product as a jumping platform for other articles.

Consumer Information Sheet for Playground Surfacing Materials

The US Consumer Product Safety Commission (CPSC) estimates that about 100 000 playground equipment-related injuries resulting from falls to the ground surface are treated annually in US hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall on to a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces, such as concrete or asphalt, and while grass may appear to be acceptable, it may quickly turn to hard-packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or the gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table B.1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall on to four different loose-fill surfacing materials if they are installed and maintained at depths of 150 mm, 225 mm and 300 mm.

TABLE B.1: Fall height in millimetres from which a life-threatening head injury would not be expected.

TYPE OF MATERIAL	DEPTH OF SURFACING MATERIAL		
	150mm	225mm	300mm
Double Shredded Bark Mulch	1800	3000	3300
Wood Chips	1800	2100	3600
Fine Sand	1500	1500	2700
Fine Gravel	1800	2100	3000

However, it should be recognised that all injuries due to falls cannot be prevented, no matter what surfacing material is used.

It is recommended that a shock absorbing material extend a minimum of 1800mm in all directions from the perimeter of stationary equipment such as climbing frames and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of twice the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.


This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for the equipment in question. The choice of a material depends on the type and height of the playground equipment, the availability of the material in a particular area, and its cost.

III. ASSEMBLY INSTRUCTIONS

BOARD LIST

B1 = 1 


1437x172x50mm

B2 = 1 

1437x172x50mm


B3 = 1 

1437x172x50mm


B4 = 1 

1437x172x50mm

WP1 = 1

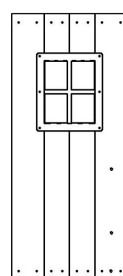

WP2 = 1

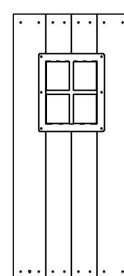


C1A = 1 


2156x86x35mm

C1B = 1 


2156x86x35mm

C2A = 1 


2156x86x35mm

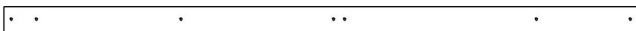C2B = 1 


2156x86x35mm

C3 = 2 


2156x86x35mm

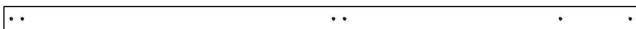C4 = 2 

2156x86x35mm

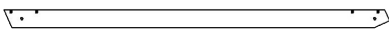
C5A = 2 


1301x60x35mm

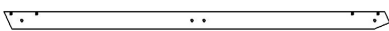C5B = 2 

1301x60x35mm


DOOR = 1

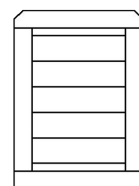

D1 = 2 


1478x134x24mm

FP1 = 4

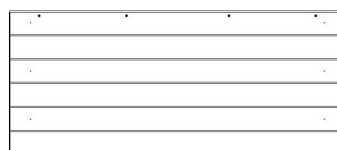

D2A = 1 

966x134x24mm


D2B = 1 


966x134x24mm

D3 = 1 

966x134x24mm

FP2 = 4

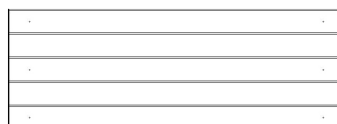



D4 = 2 


966x134x24mm


D5A = 1 


966x134x24mm

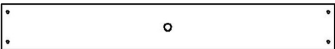
D5B = 1 
966x134x24mm

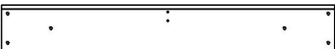
D6 = 2 
966x134x24mm


D7 = 1 
732x134x24mm


D10 = 4 
268x134x24mm


D11 = 4 
268x134x24mm

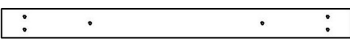
F1 = 2 
1014x86x24mm

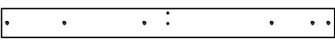
F2 = 1 
966x86x24mm

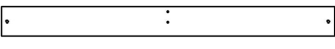F3 = 1 
966x86x24mm

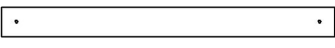
F4 = 1 
966x86x24mm

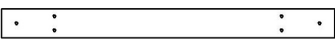
F5 = 1 
966x86x24mm

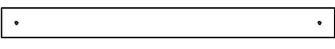
F6 = 1 
966x86x24mm

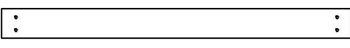
F7 = 1 
1014x86x24mm


F8 = 2 
234x86x24mm

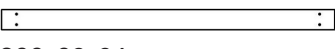
F9 = 1 
966x60x24mm

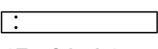
F10 = 2 
451x60x24mm


F11 = 2 
258x60x24mm

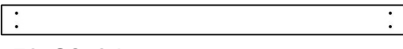F14 = 1 
1170x86x24mm

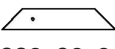
F17 = 2 
330x60x24mm


F18 = 2 
172x86x24mm

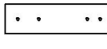
F19 = 2 
300x86x24mm

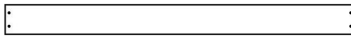
F20 = 2 
1014x86x24mm


F23 = 4 
484x86x24mm

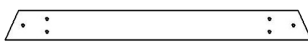
F24 = 2 
888x86x24mm

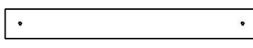
F25 = 1 
732x86x24mm

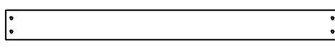
F26A = 1 
966x86x24mm

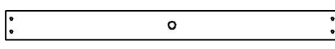
F26B = 1 
966x86x24mm

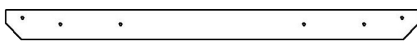
F27A = 1 
1200x86x24mm

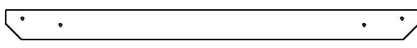
F27B = 1 
1200x86x24mm

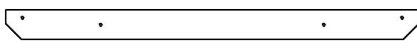
F28 = 2 
1200x86x24mm

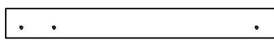F29 = 4 
794x86x24mm

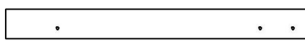
F30 = 4 
880x86x24mm

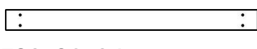
F31 = 1 
732x60x24mm


F32 = 1 
150x24x24mm


F33 = 2 
181x60x24mm


FA28 = 4 
86x76x24mm

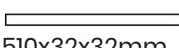
G2 = 8 
510x32x32mm

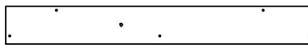
H1 = 2 
896x110x16mm

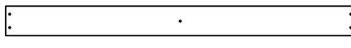
H2 = 8 
1014x86x16mm

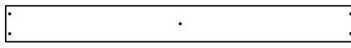
H3 = 1 
1014x105x16mm

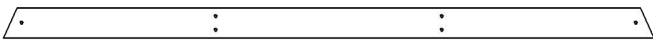
F21 = 2 
1857x86x24mm

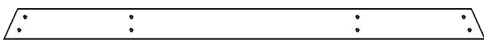
F22 = 1 
1374x86x24mm


H4 = 1 
650x105x16mm

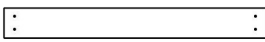
H5 = 4 
748x86x16mm

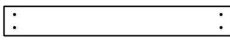
H6 = 8 
650x86x16mm

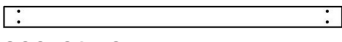H9 = 1 
966x60x16mm

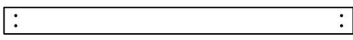
H10 = 1 
998x76x16mm

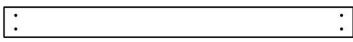
H11 = 4 
998x86x16mm

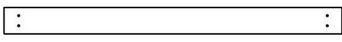
H12 = 2 
966x76x16mm

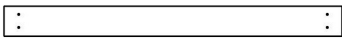
H13 = 8 
966x86x16mm


H14 = 4 
1170x86x16mm

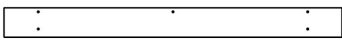
H15 = 1 
966x86x16mm

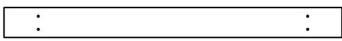
H16 = 2 
966x86x16mm


H17 = 1 
232x60x16mm


H18 = 4 
966x134x16mm


H19 = 3 
966x134x16mm

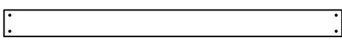
H20 = 1 
966x76x16mm

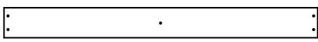
H21 = 10 
896x86x16mm

H22 = 1 
170x60x16mm

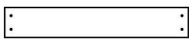
H23 = 1 
524x86x16mm


H24 = 4 
454x86x16mm

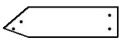
H25 = 8 
327x86x16mm


H26 = 8 
332x86x16mm


H27 = 4 
1205x86x16mm

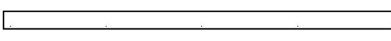
H28 = 2 
1133x50x16mm

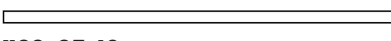
H29 = 2 
1133x35x16mm

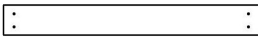H32 = 5 
730x86x16mm

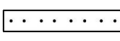
H36 = 1 
340x60x16mm

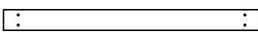
H37 = 1 
732x60x16mm

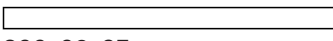
K1 = 1 
966x60x35mm

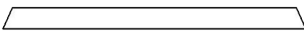
K2 = 1 
865x60x35mm


K22 = 1 
1284x86x35mm

K23 = 1 
1284x86x35mm

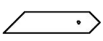K26 = 2 
276x60x35mm

K27 = 4 
279x60x35mm

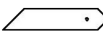K30 = 6 
300x60x35mm

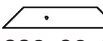K33 = 2 
330x60x35mm

T1 = 4 
89x60x24mm

PARTS LIST

W8/15



Washer x 16

W10/18



Washer x 152

W12/28



Washer x 6

BM615




B-NUT x 22

BM818



B-NUT x 4

BM825



B-NUT x 16

N815




NUT x 178

AN8



A-NUT8 x 6

M615



Bolt x 2

M625




Bolt x 18

M633




Bolt x 2

M821



Bolt x 20

M833




Bolt x 8

M845




Bolt x 38

M855



Bolt x 90

M8107



Bolt x 36

S350



Screw x 16

S321



Screw x 16

S328



Screw x 14

SW21



Screw x 12

SW28



Screw x 18

SW35




Screw x 466

SW40



Screw x 14

SW50



Screw x 78

SW60



Screw x 8

M6SW35



Screw x 26


M6SW55



Screw x 30




(4) 157003




(4) 157001



(8) 157004

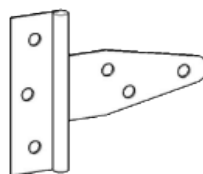


(2) T-HY-1



(2) L651025




(1) Z650009

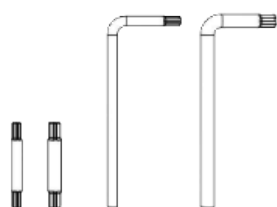

Star Bit (S)
Star Bit (L)
Allen Wrench (S)
Allen Wrench (L)




(6) 157007

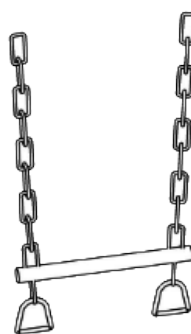

(1) 108002



(2) 108001

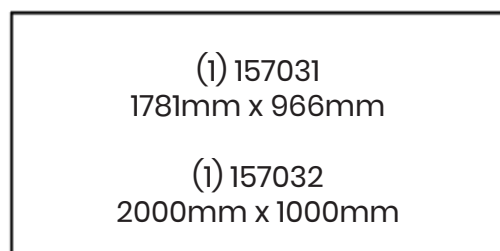


(1) 157031

1781mm x 966mm

(1) 157032


2000mm x 1000mm




(1) L650008




(6) 139070

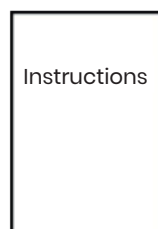

(1) 157090

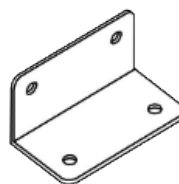


(10) L651015

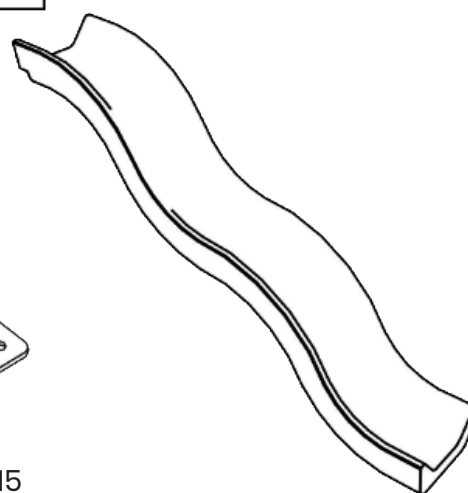


(2) L650001


STEP 1

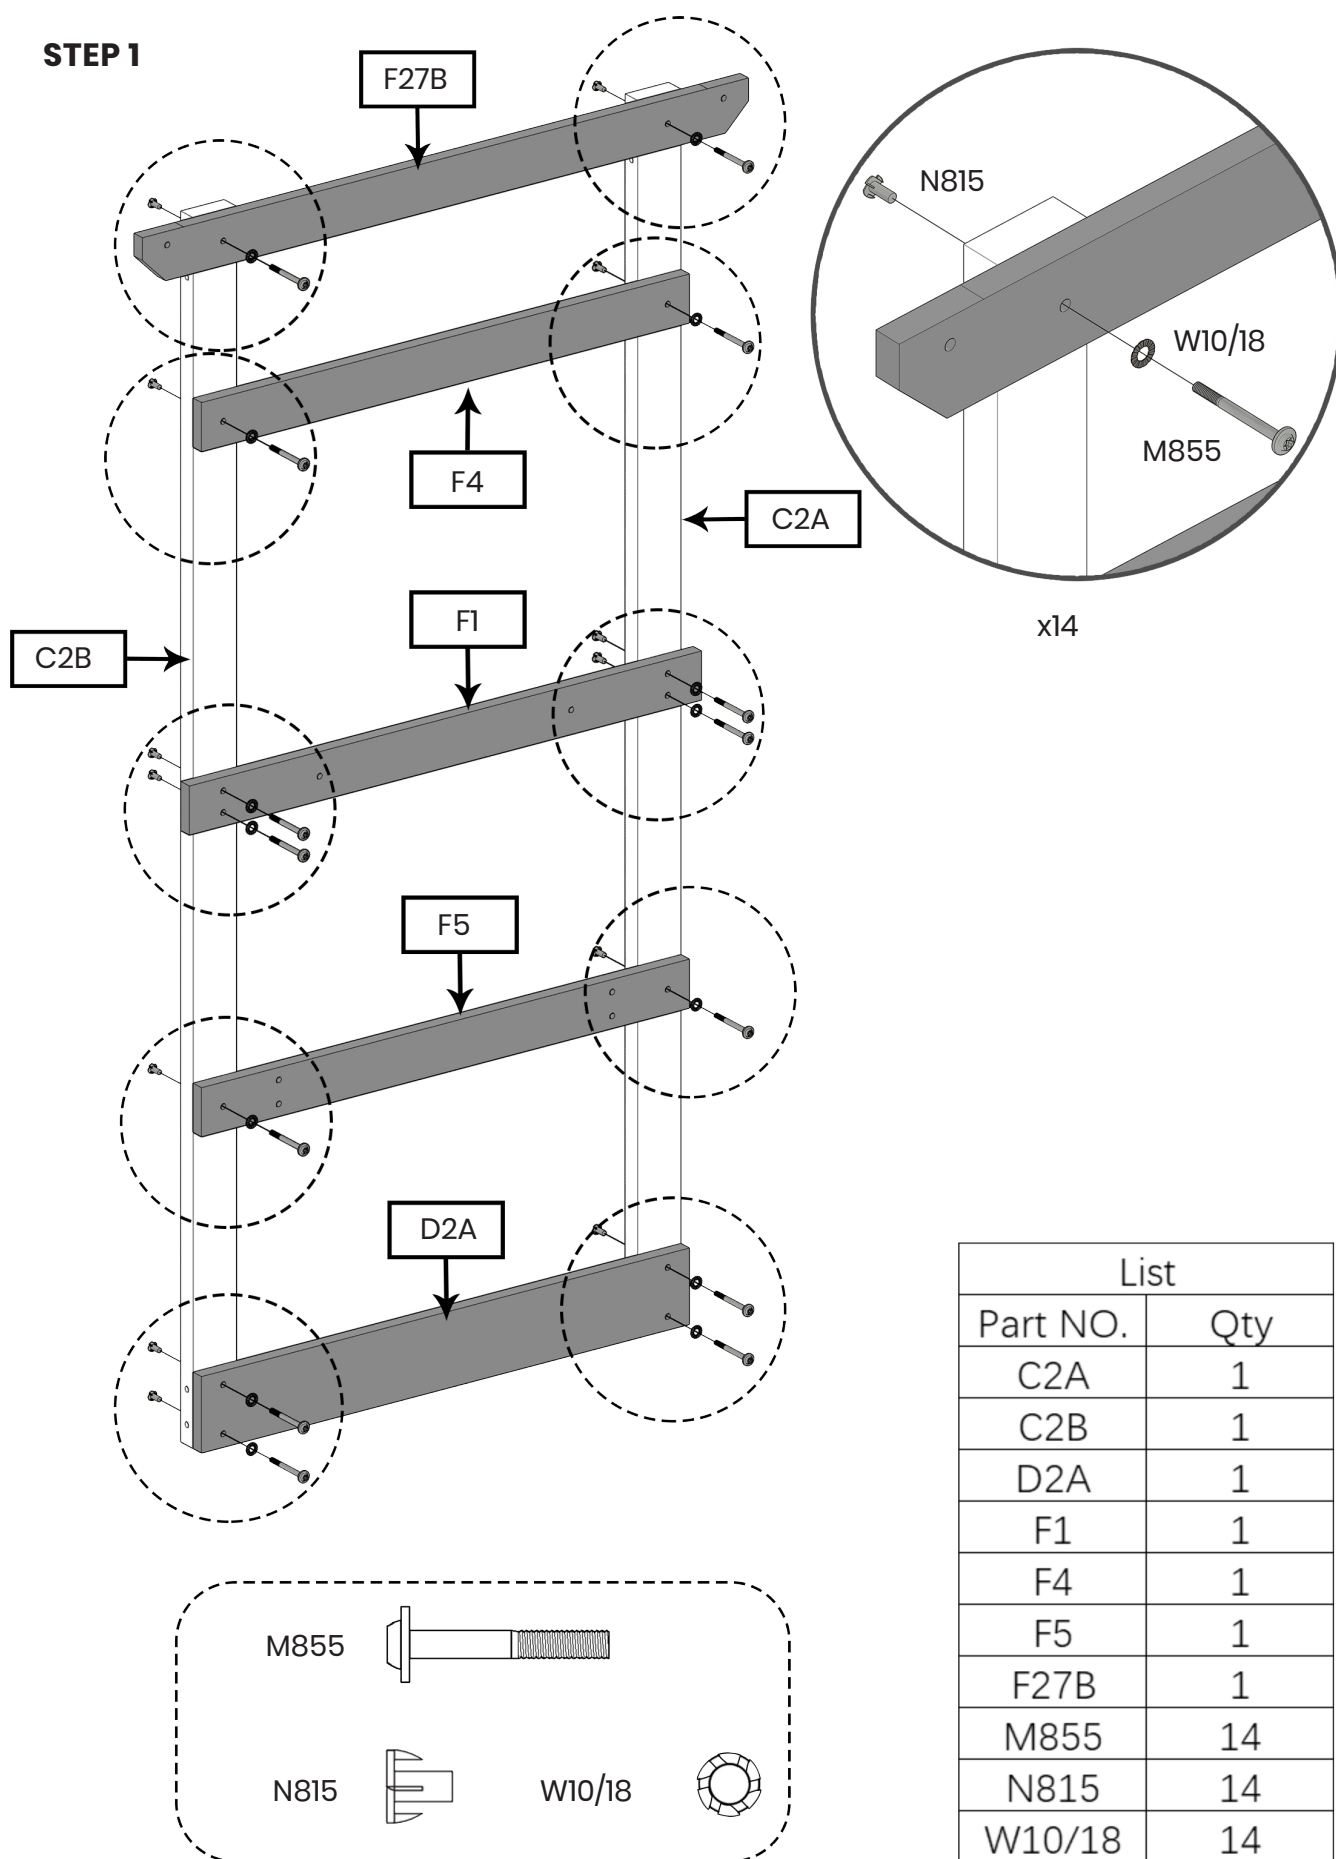



STEP 2

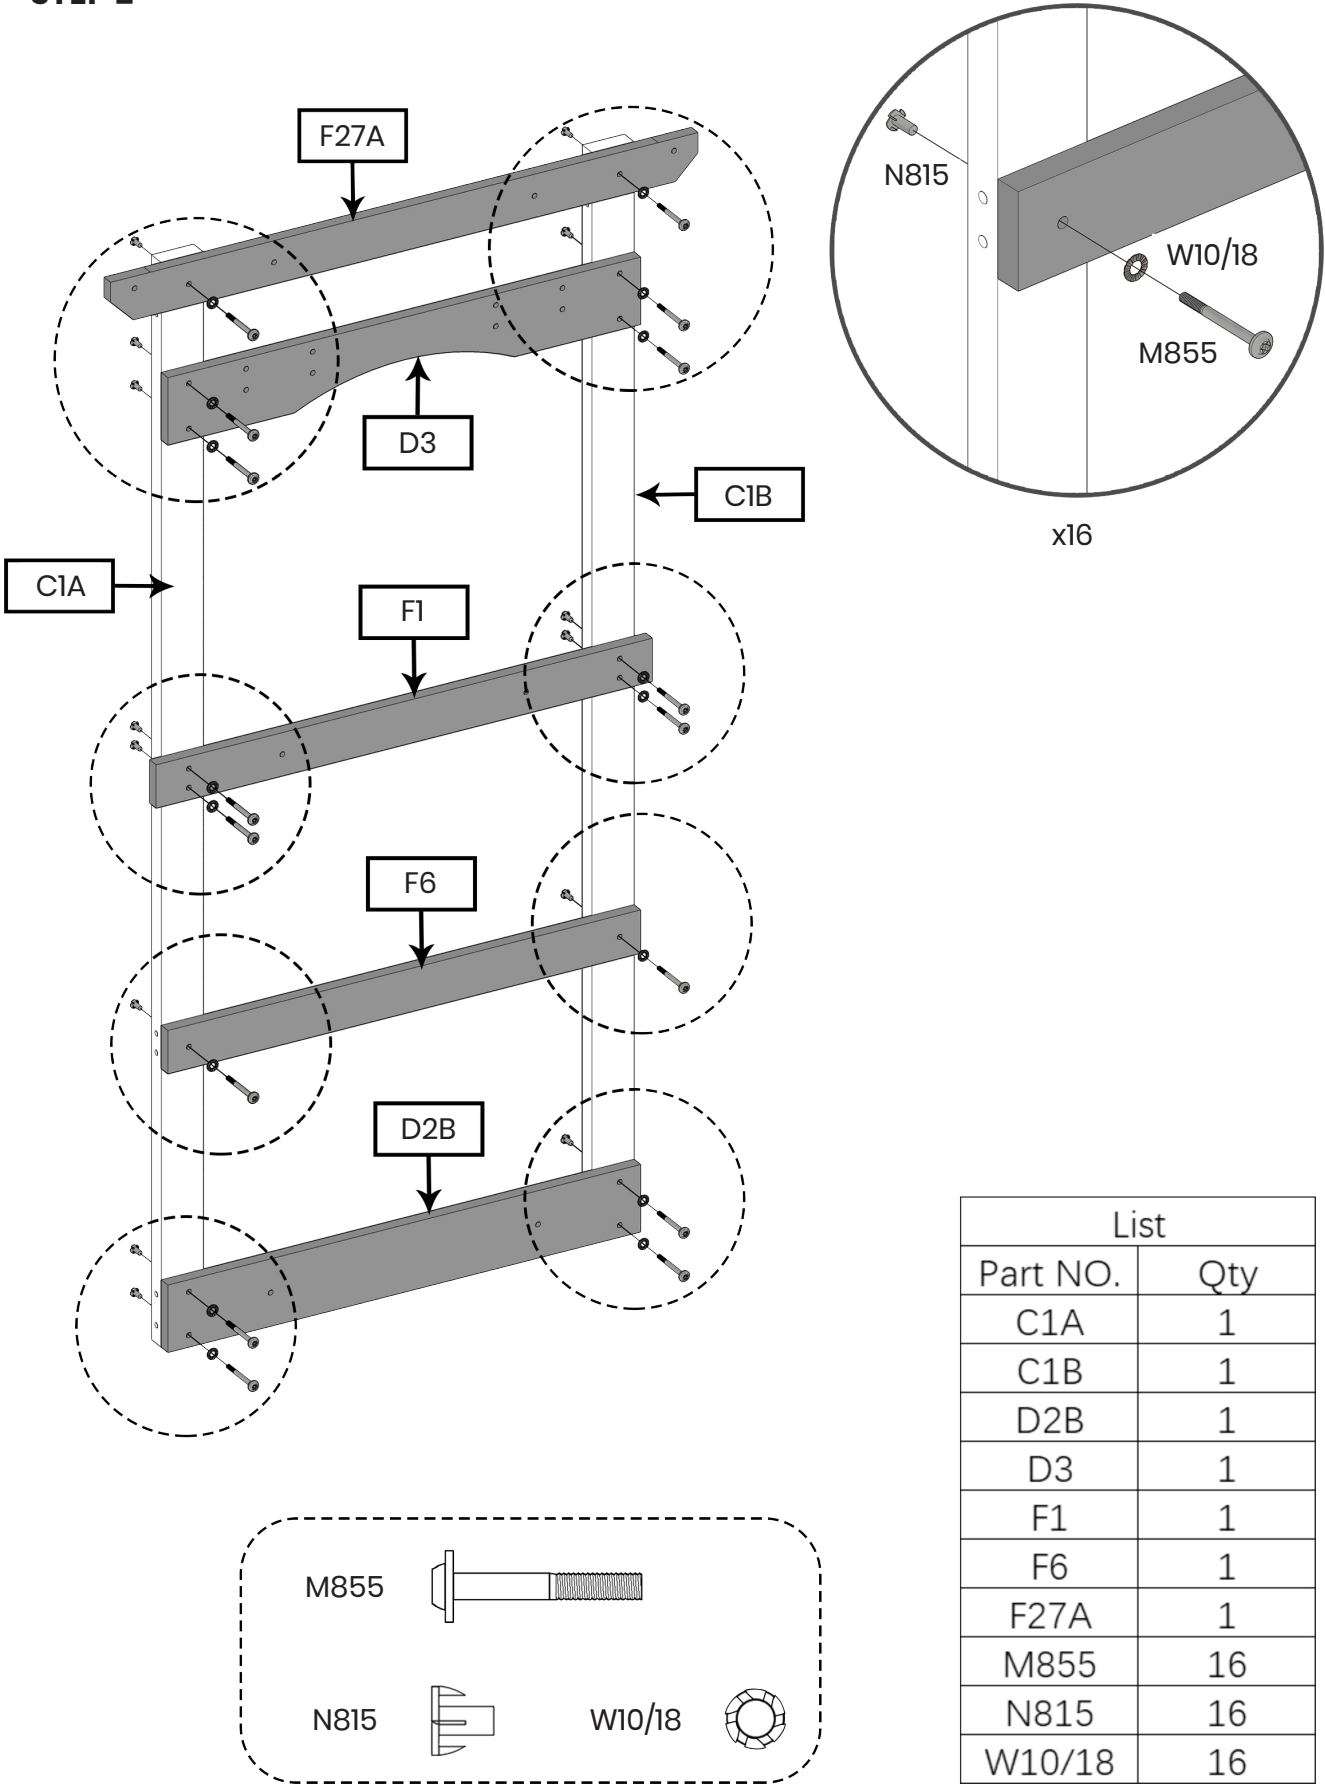

STEP 3


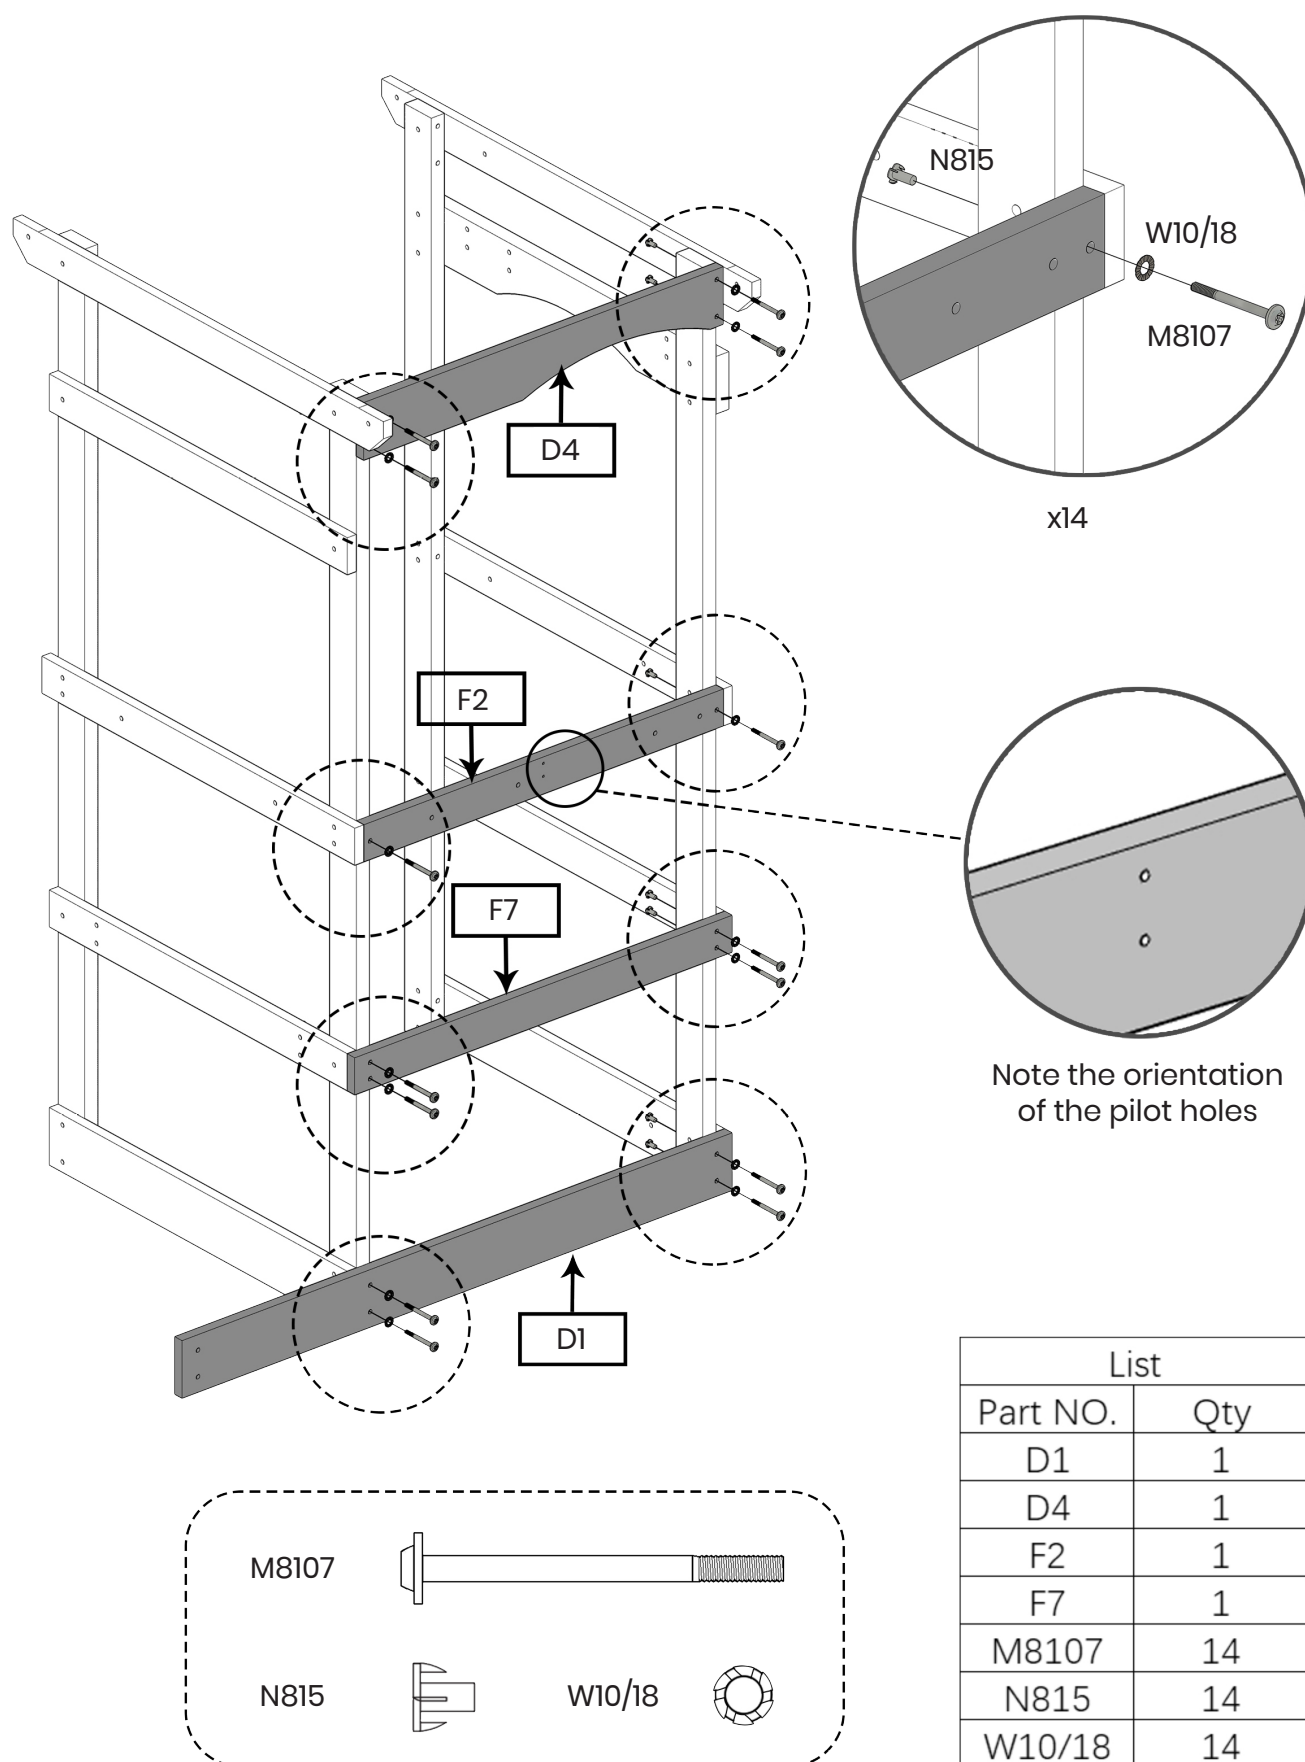


STEP 4

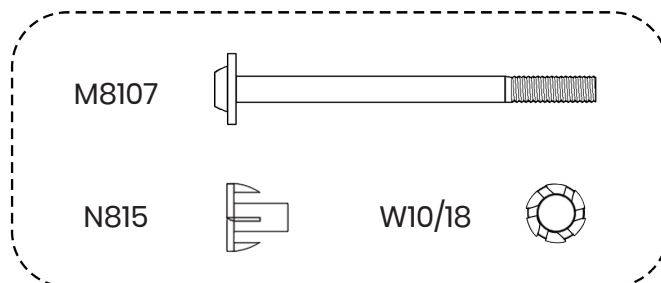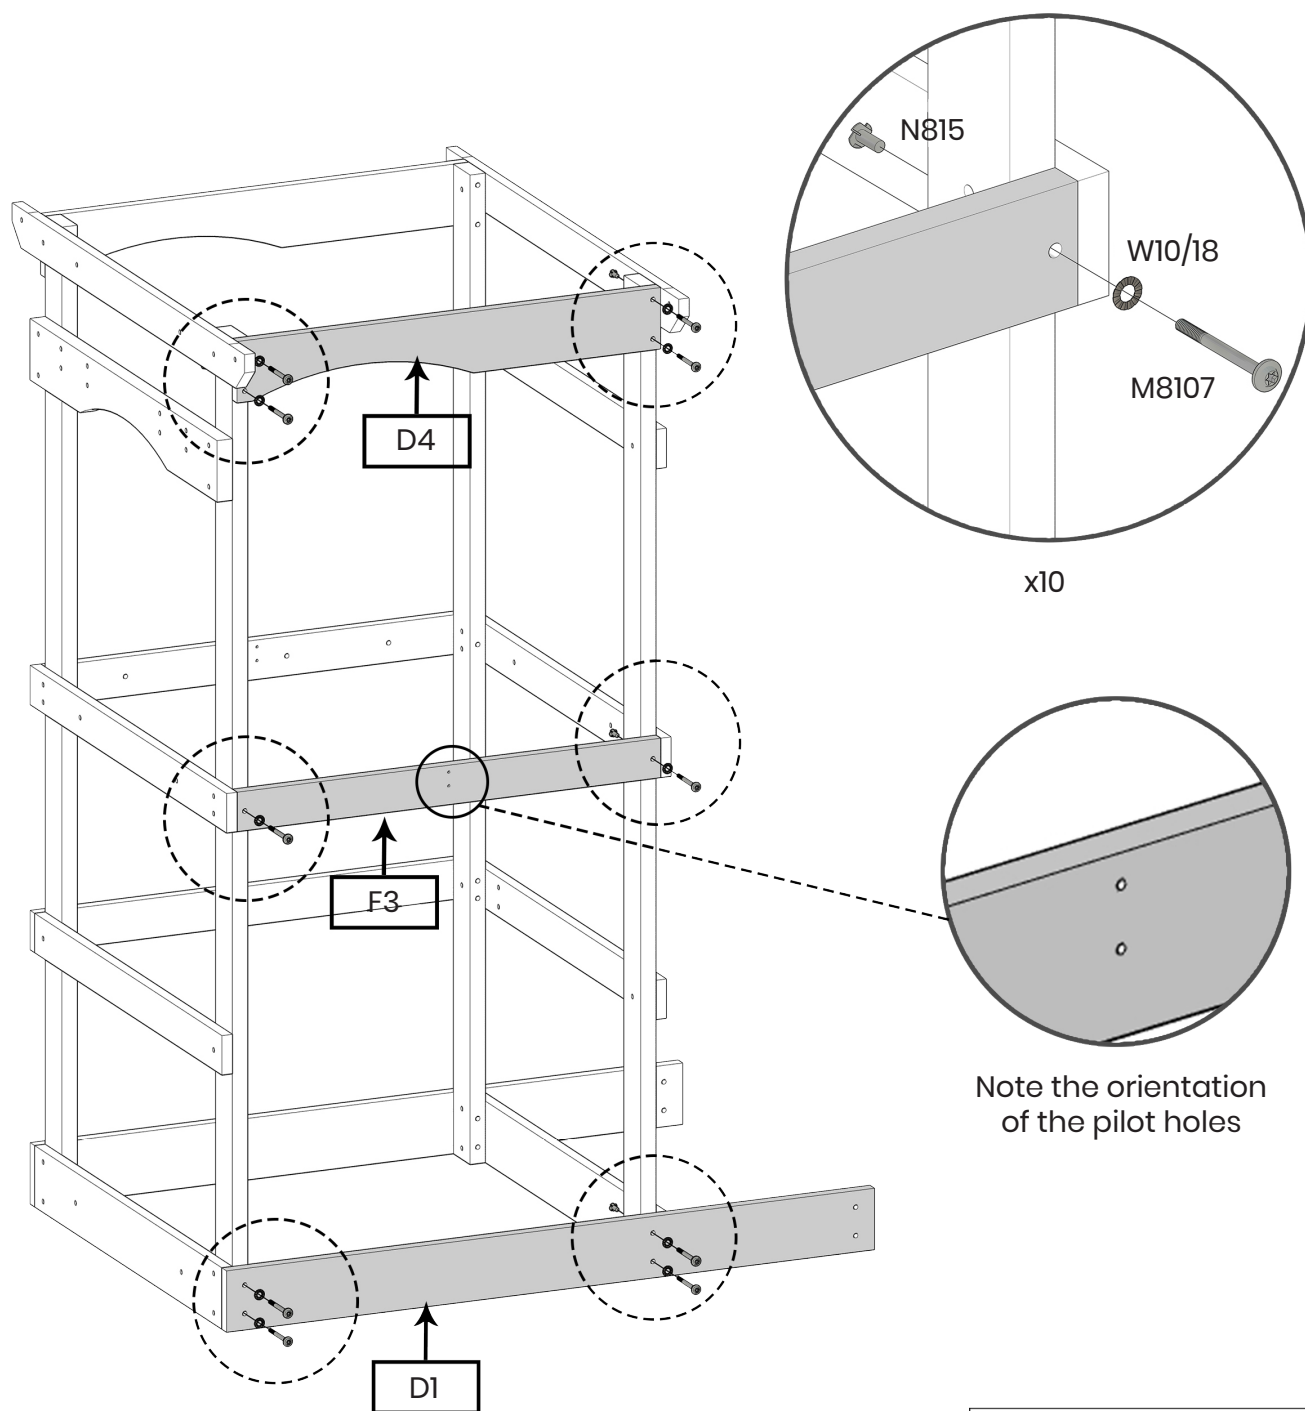



List	
Part NO.	Qty
D1	1
D4	1
F3	1
M8107	10
N815	10
W10/18	10

STEP 5

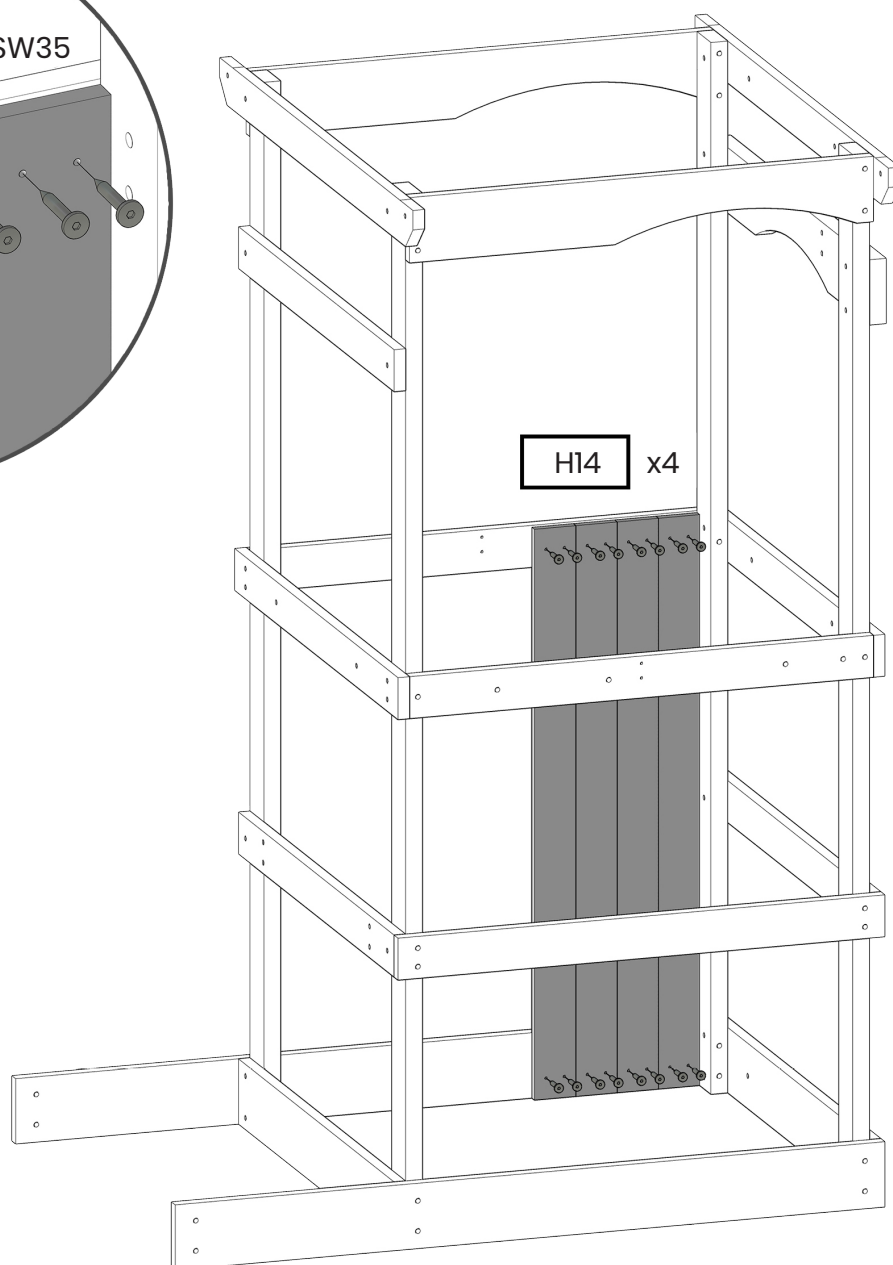
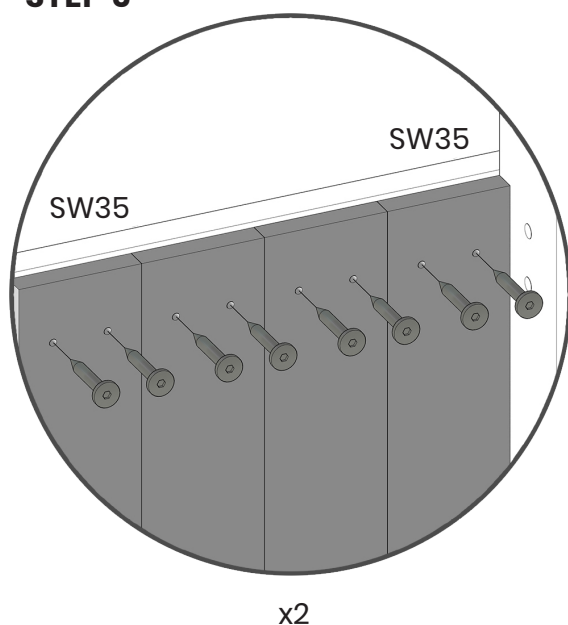


List	
Part NO.	Qty
H14	4
SW35	16

STEP 6

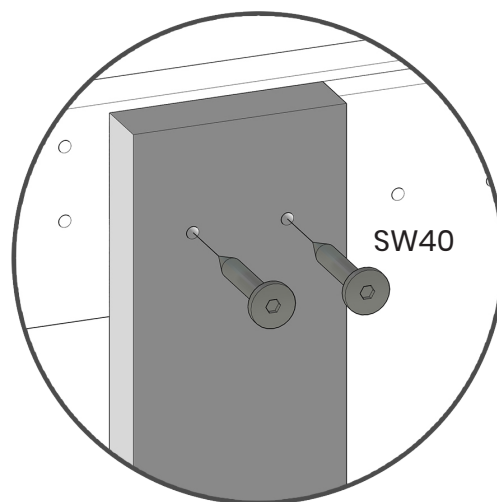
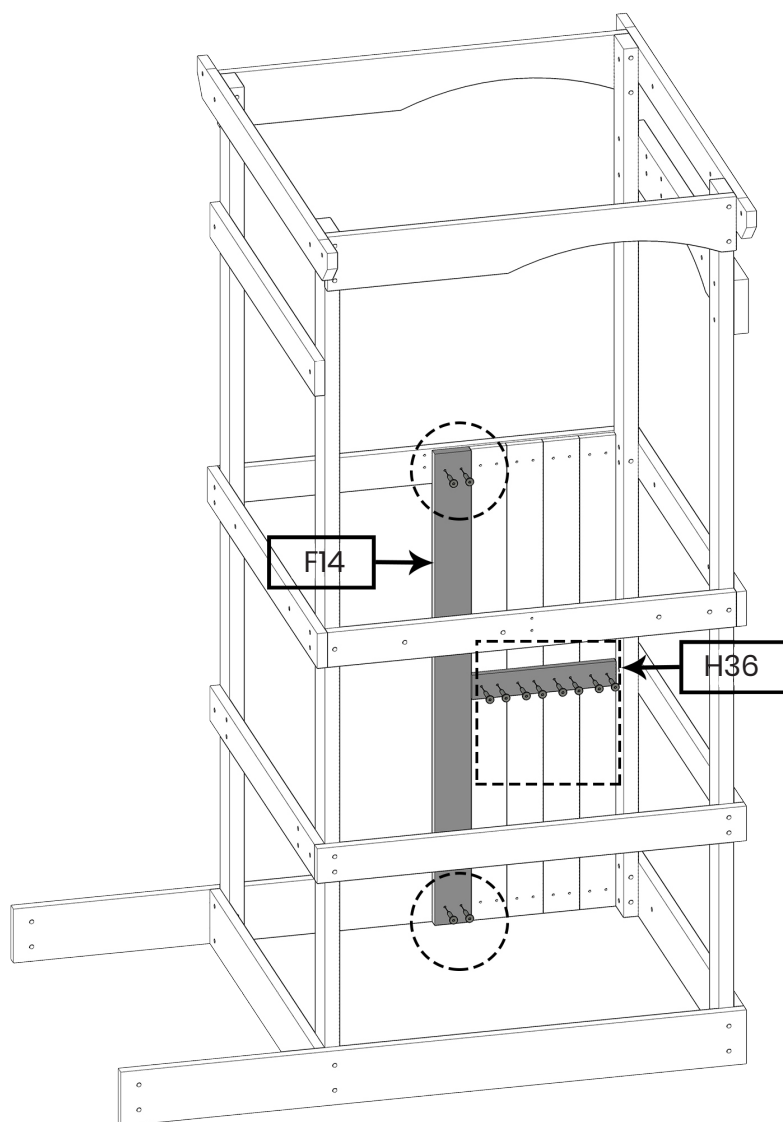


x2

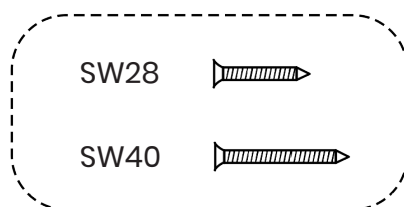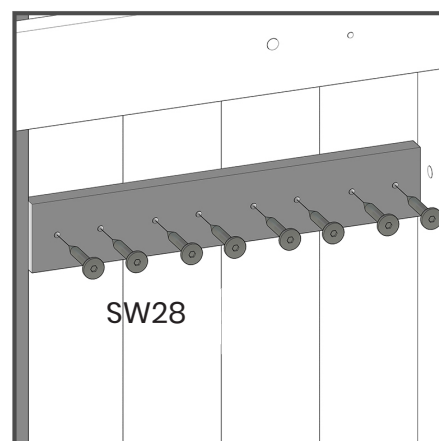


List	
Part NO.	Qty
F14	1
H36	1
SW28	8
SW40	4

STEP 7

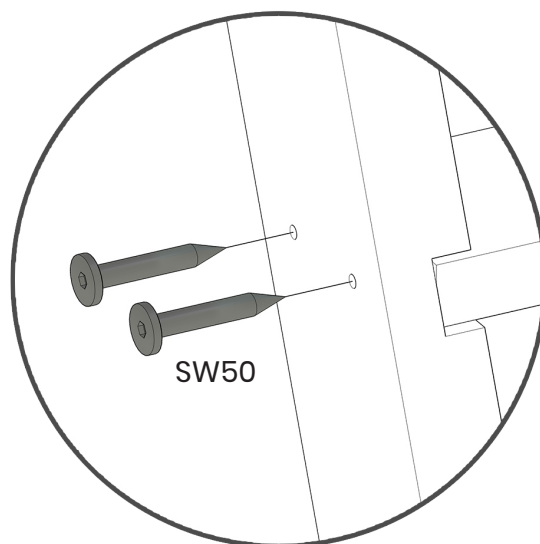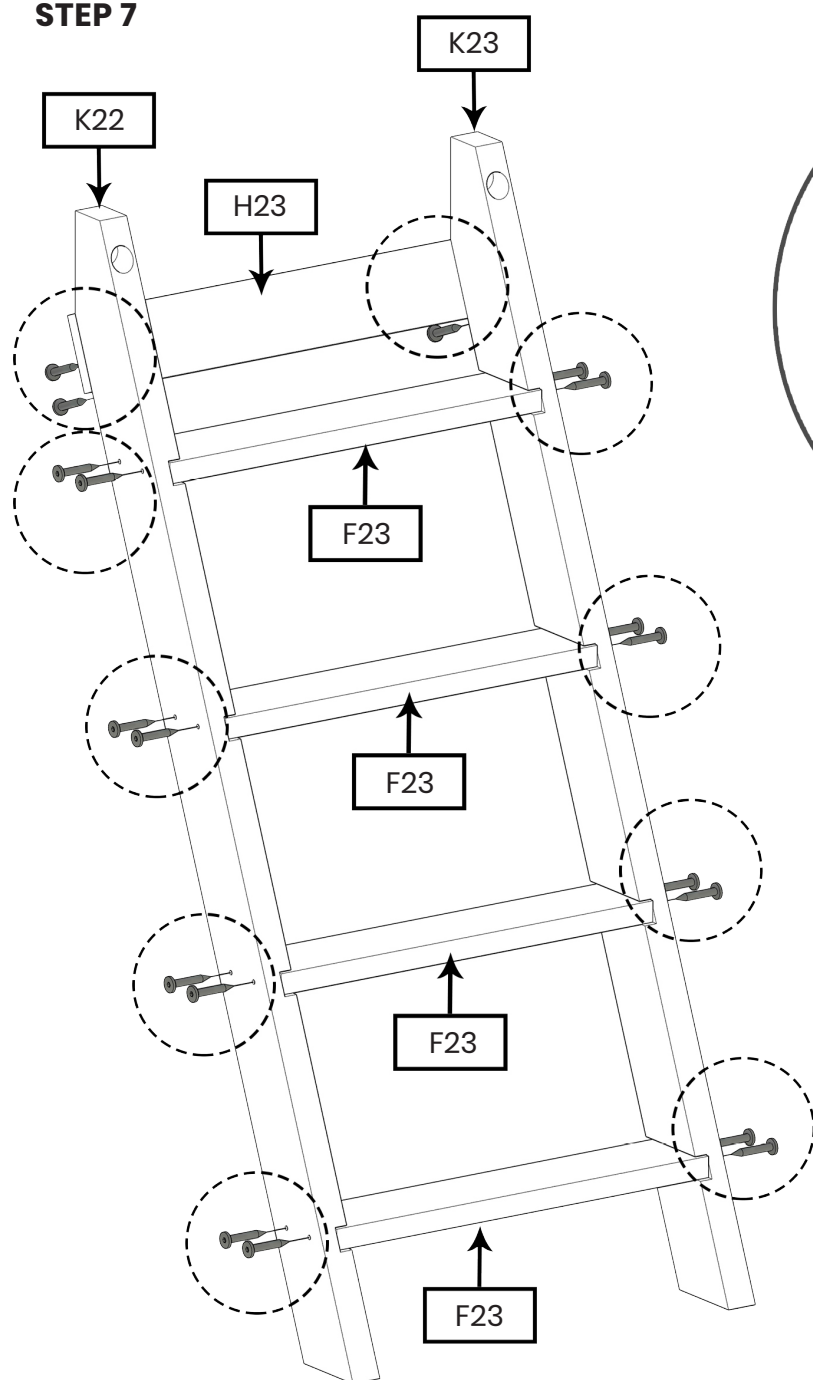


x10


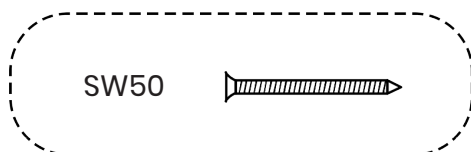


List	
Part NO.	Qty
F23	4
H23	1
K22	1
K23	1
SW50	20

STEP 8

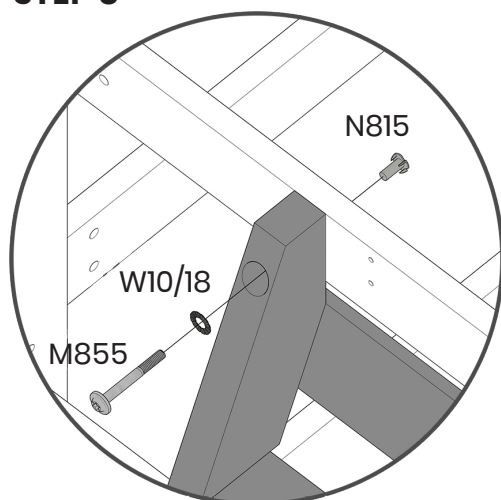


x2

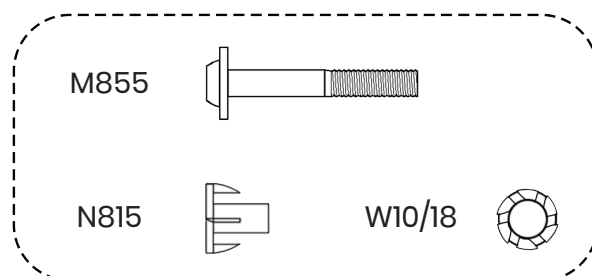
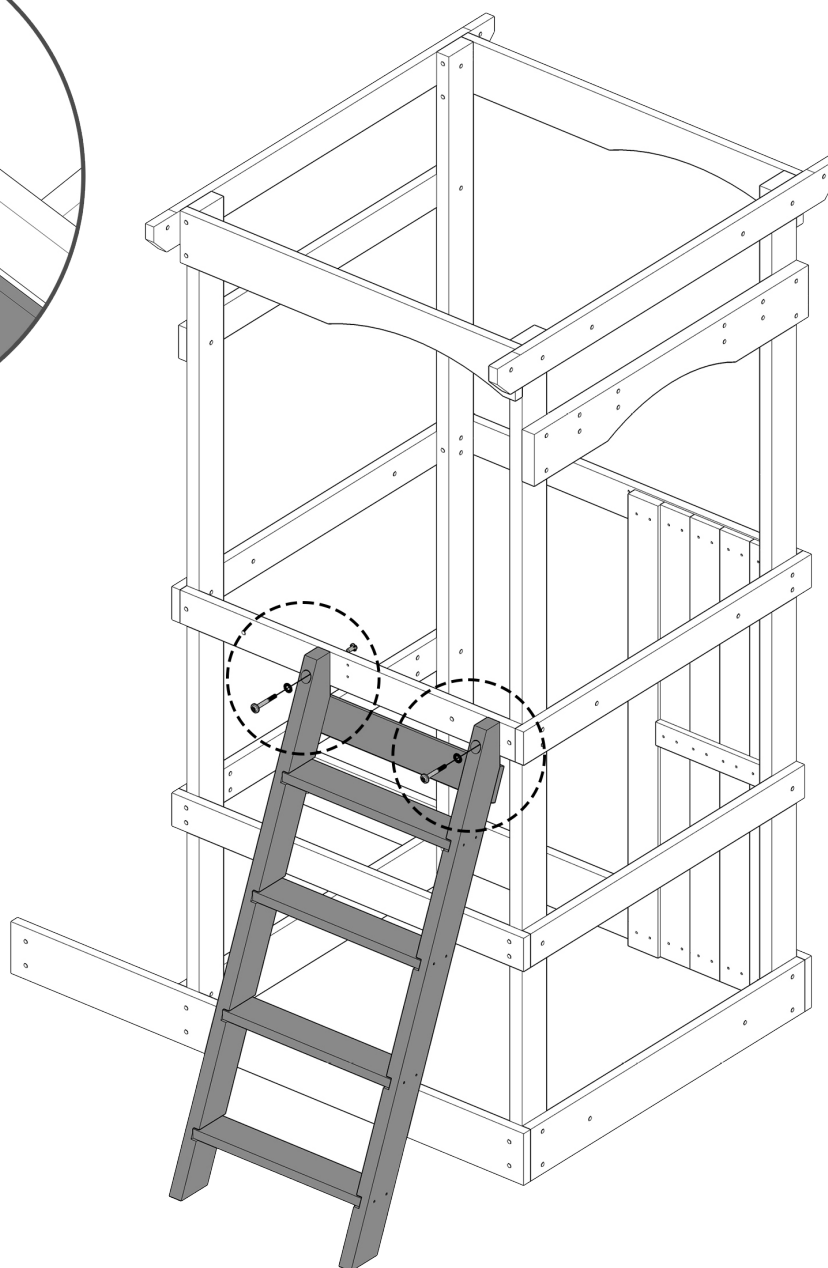


List	
Part NO.	Qty
M855	2
N815	2
W10/18	2

STEP 9


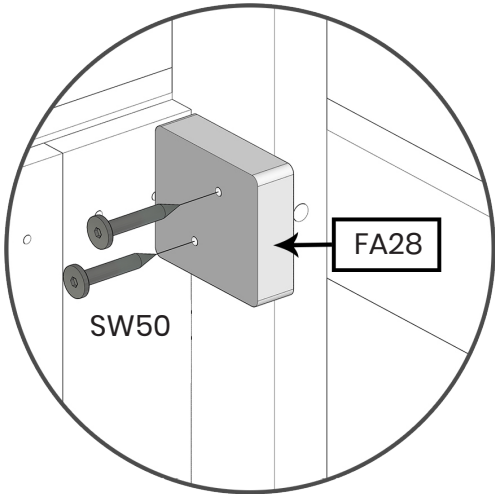


x4

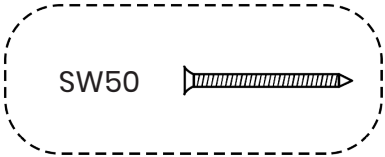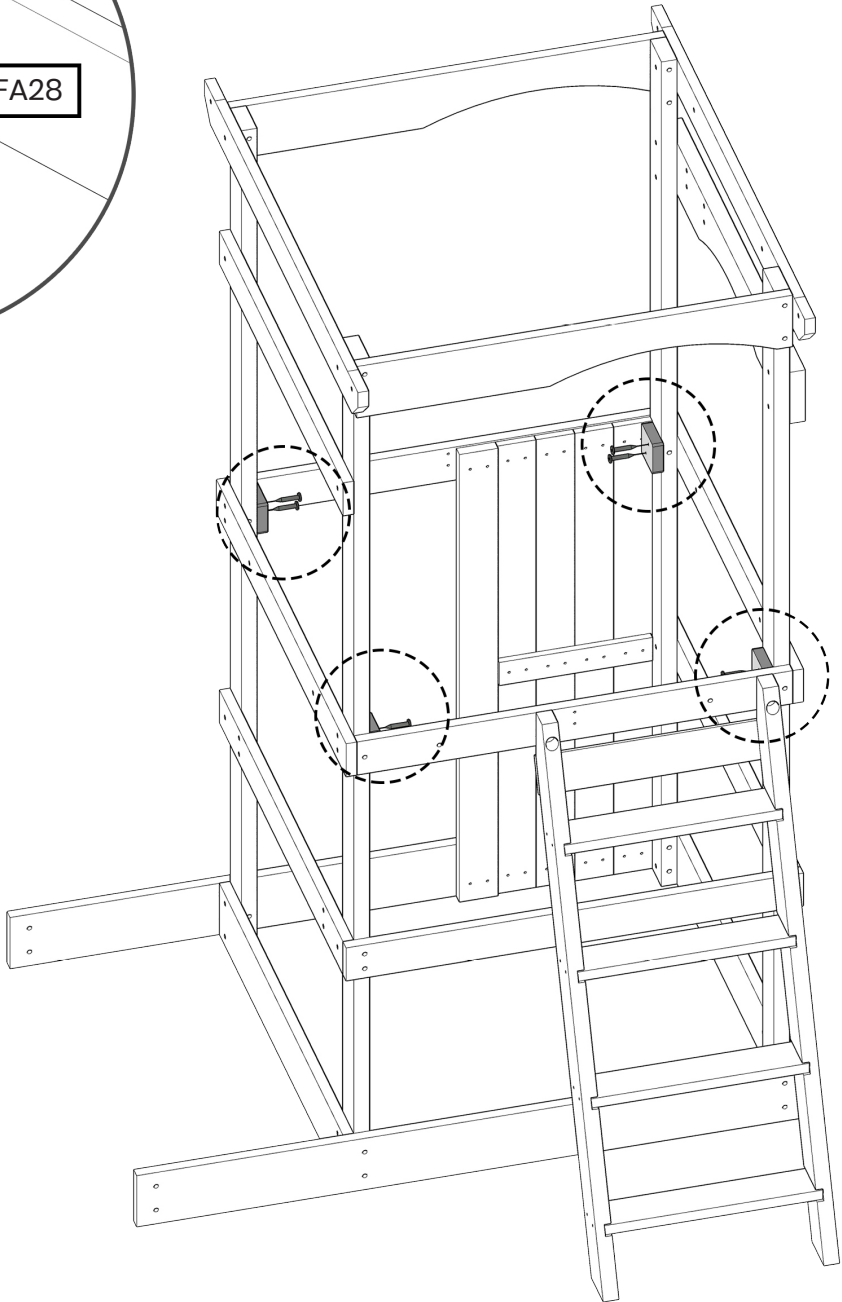

List	
Part NO.	Qty
FA28	4
SW50	8

STEP 10

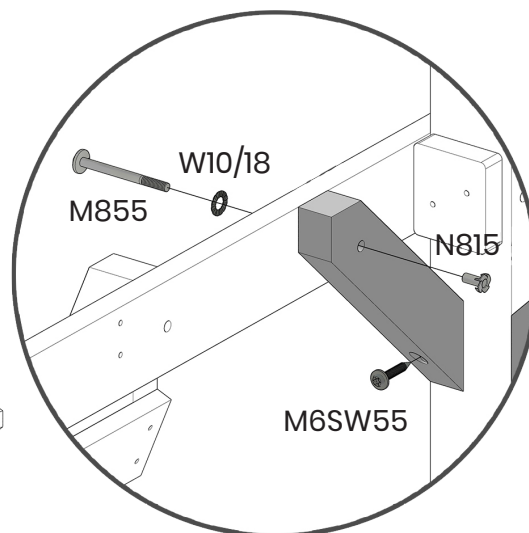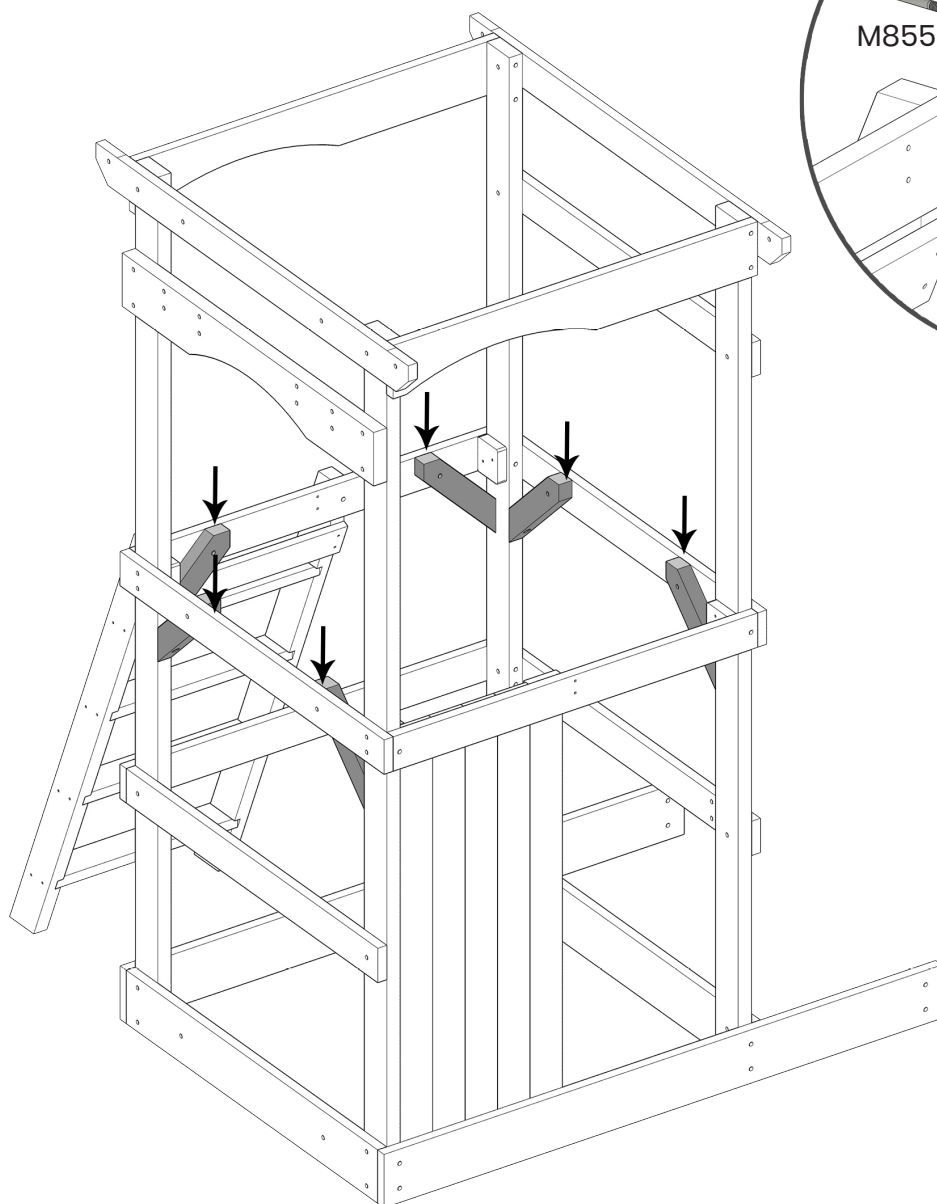

K30 x6


M6SW55



N815



M855




W10/18




List

Part NO.	Qty
K30	6
M855	6
N815	6
M6SW55	6
W10/18	6

STEP 11


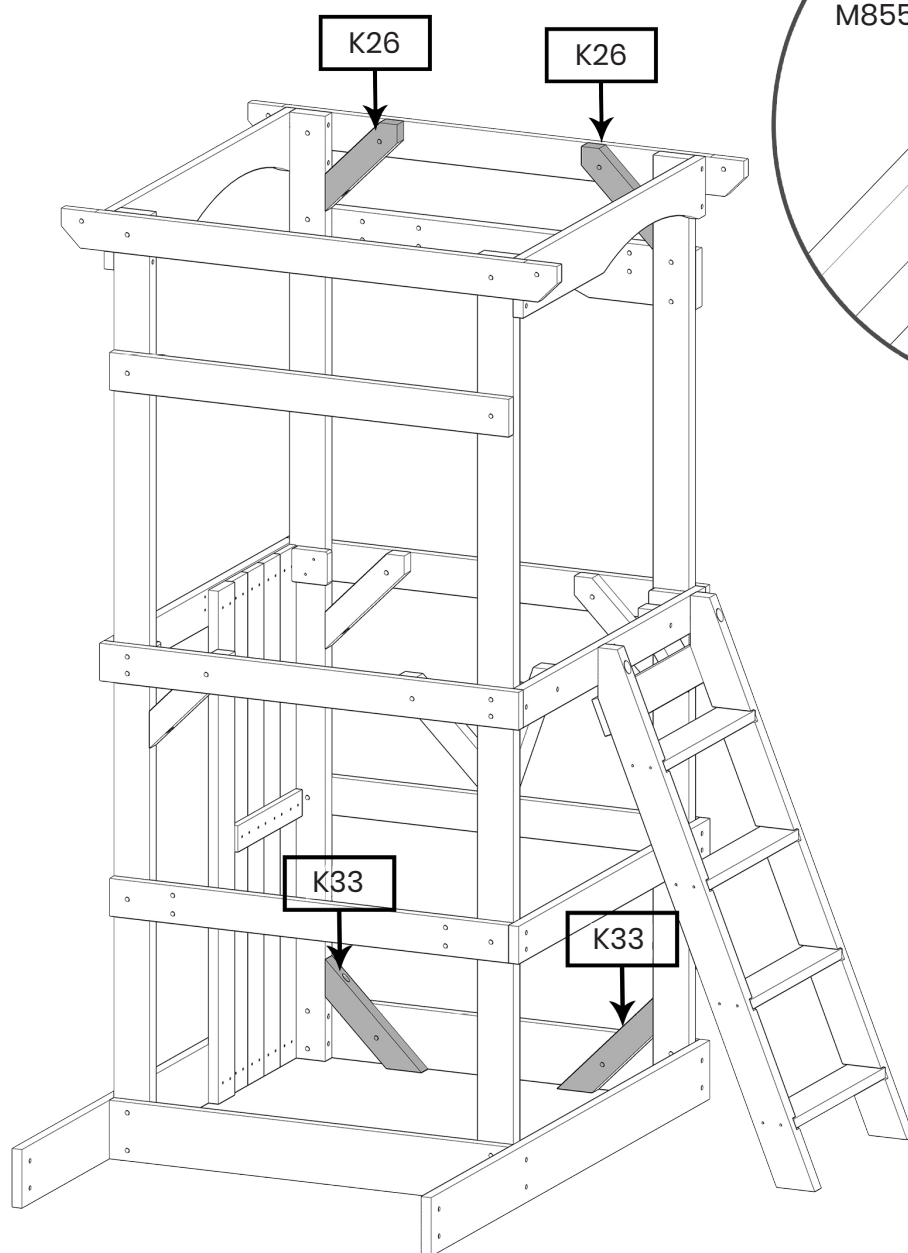


x4

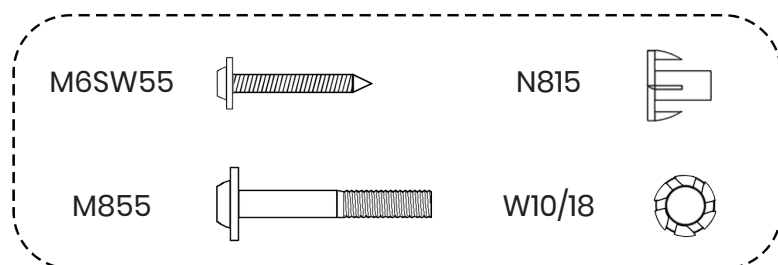


List	
Part NO.	Qty
K26	2
K33	2
M855	4
N815	4
M6SW55	4
W10/18	4

STEP 12

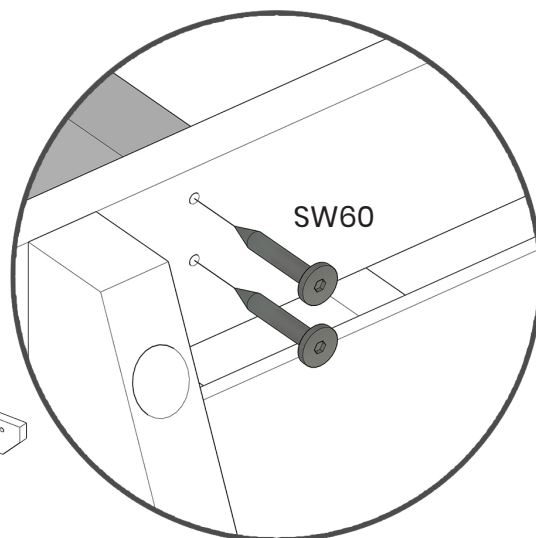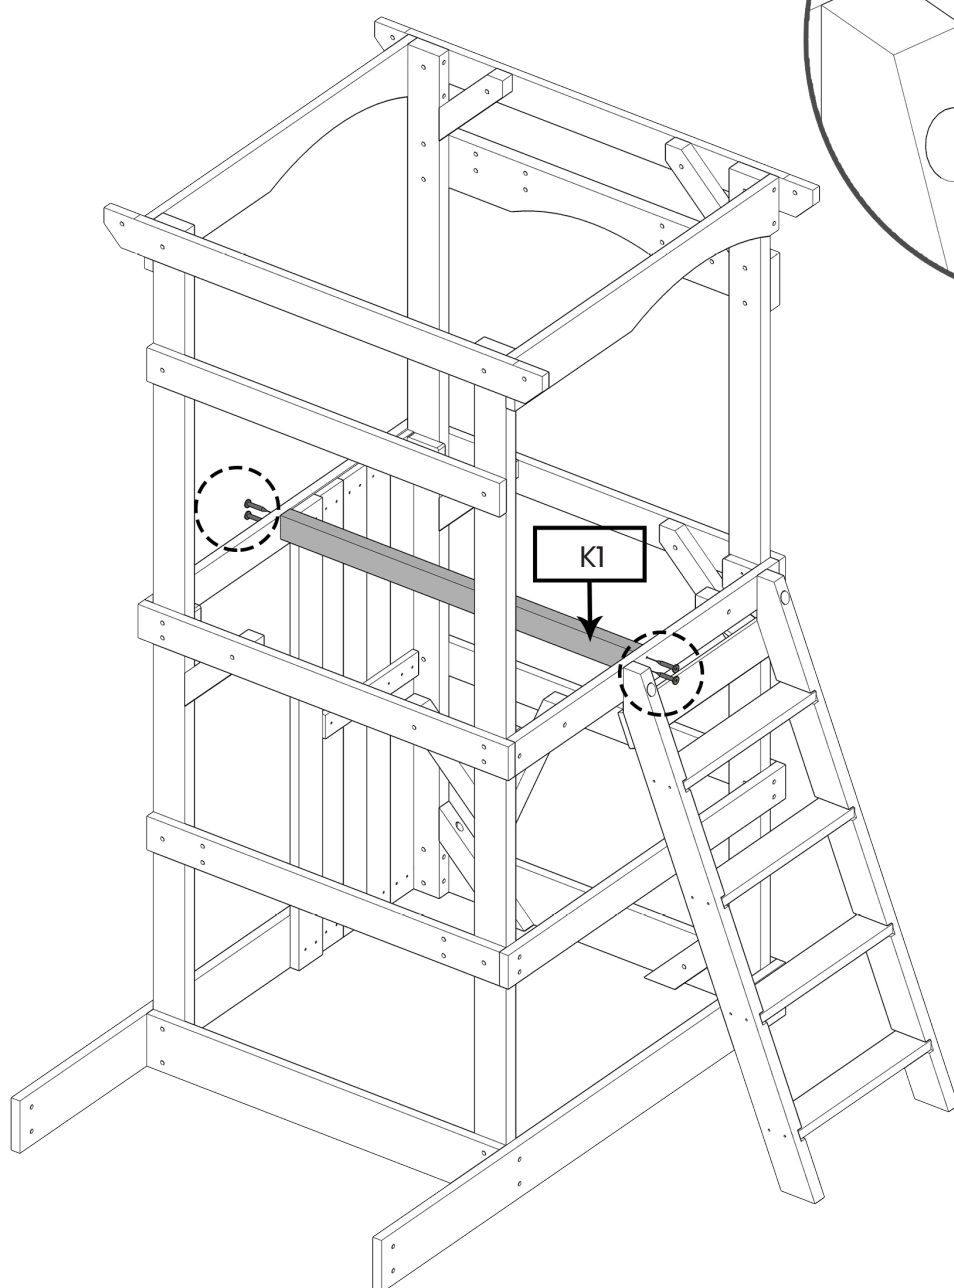


x2

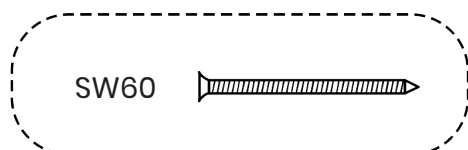


List	
Part NO.	Qty
K1	1
SW60	4

STEP 13

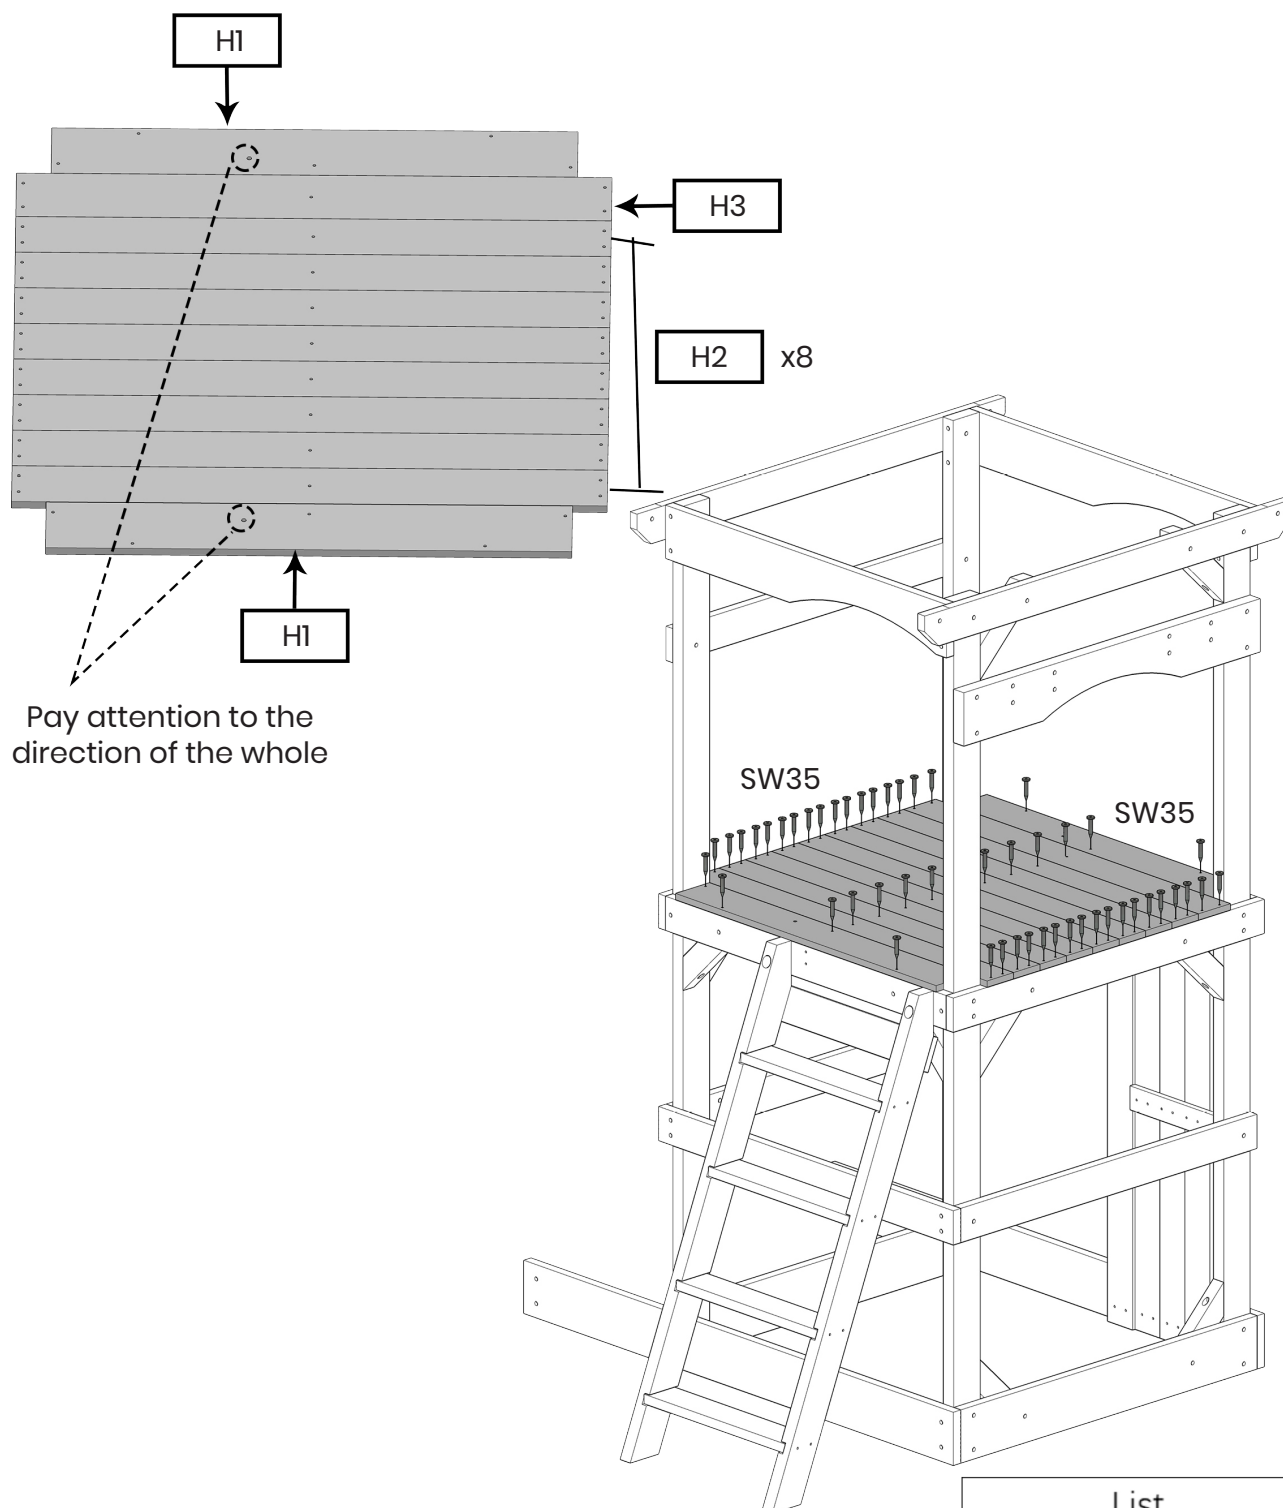



List	
Part NO.	Qty
H1	2
H2	8
H3	1
SW35	55

STEP 14

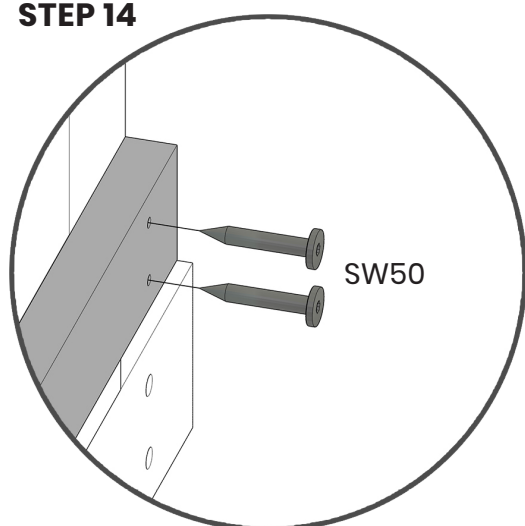




SW50

x4

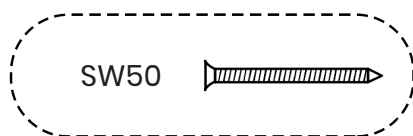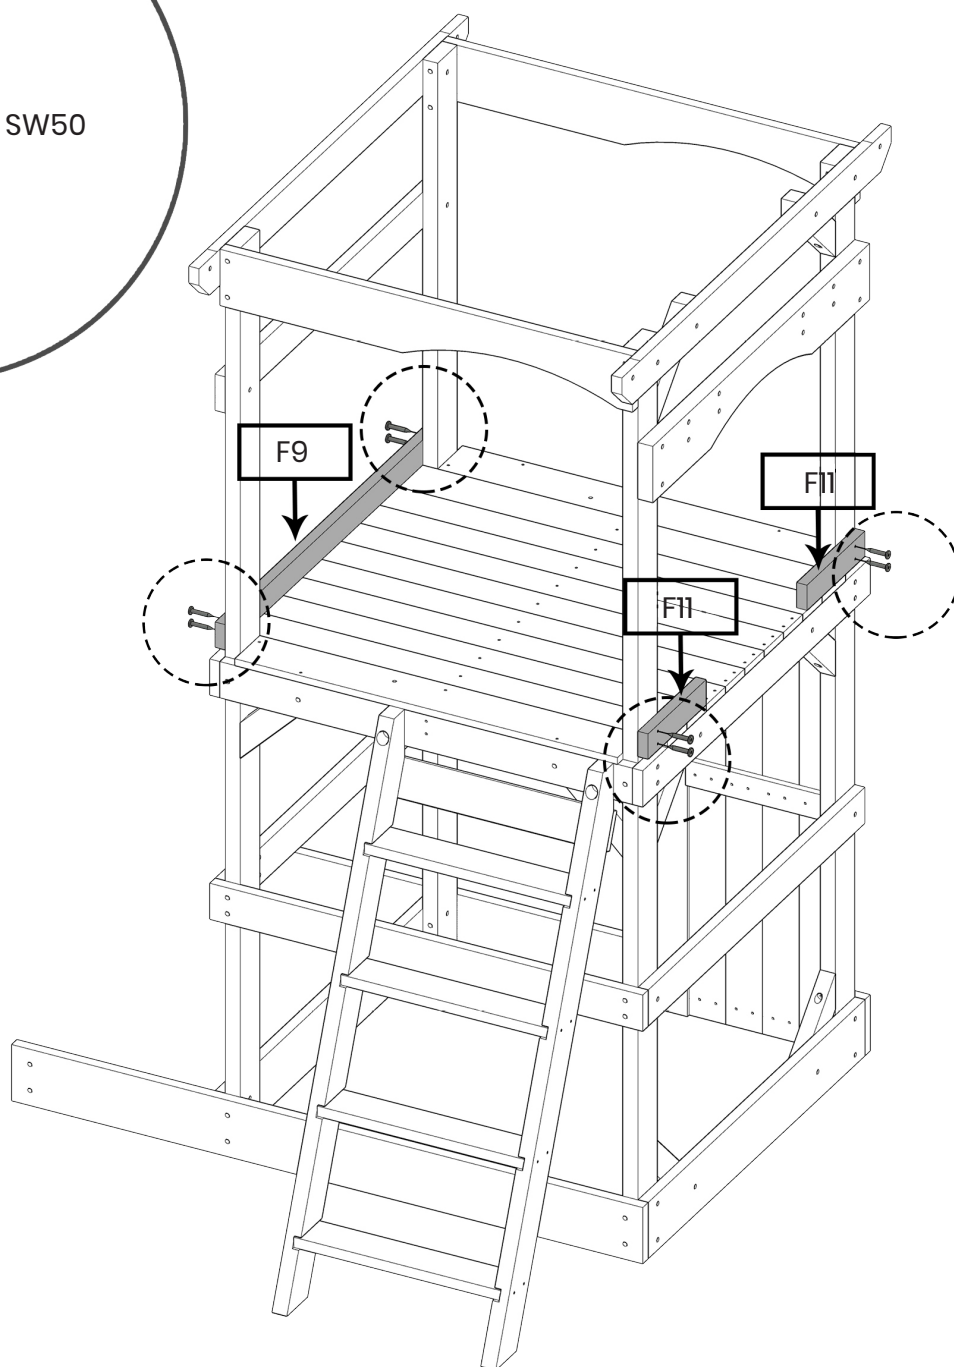


List	
Part NO.	Qty
F9	1
F11	2
SW50	8

STEP 15

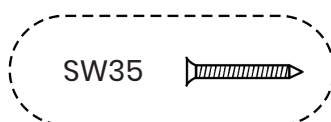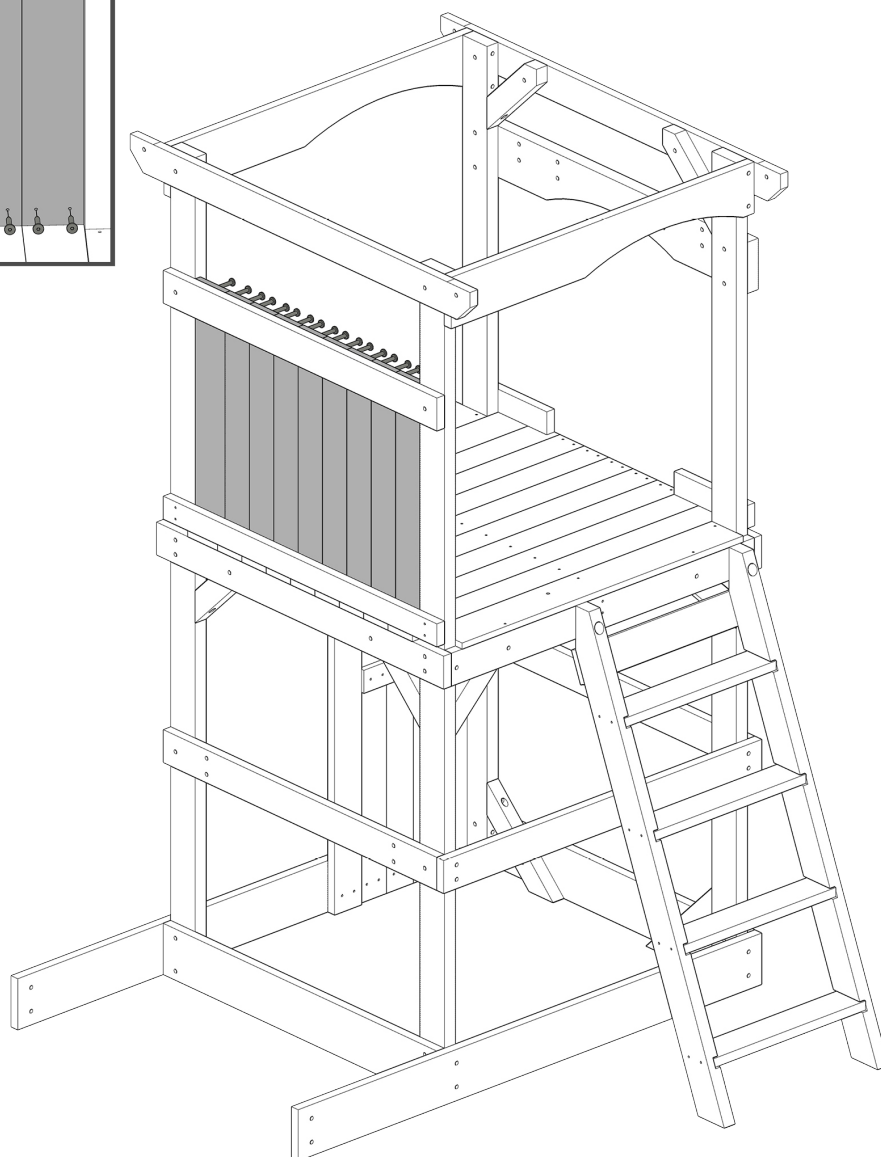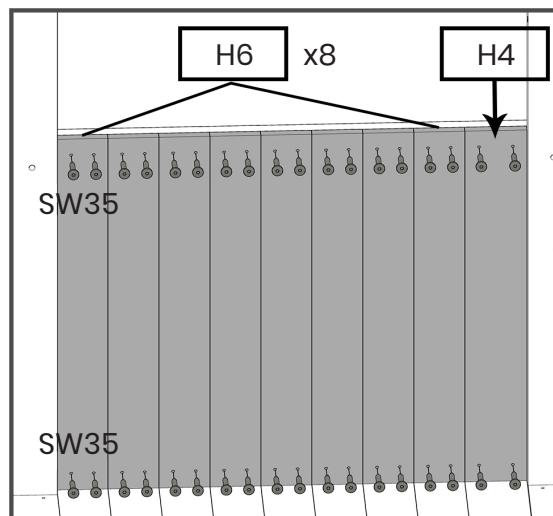



List	
Part NO.	Qty
H4	1
H6	8
SW35	36

STEP 16

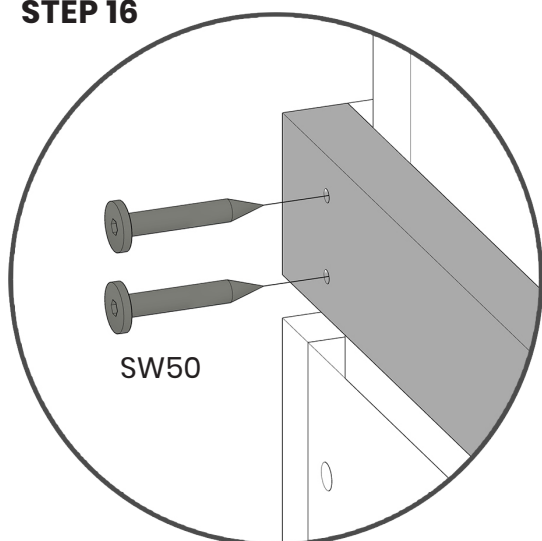



SW50

x2

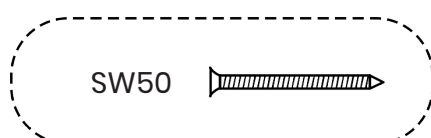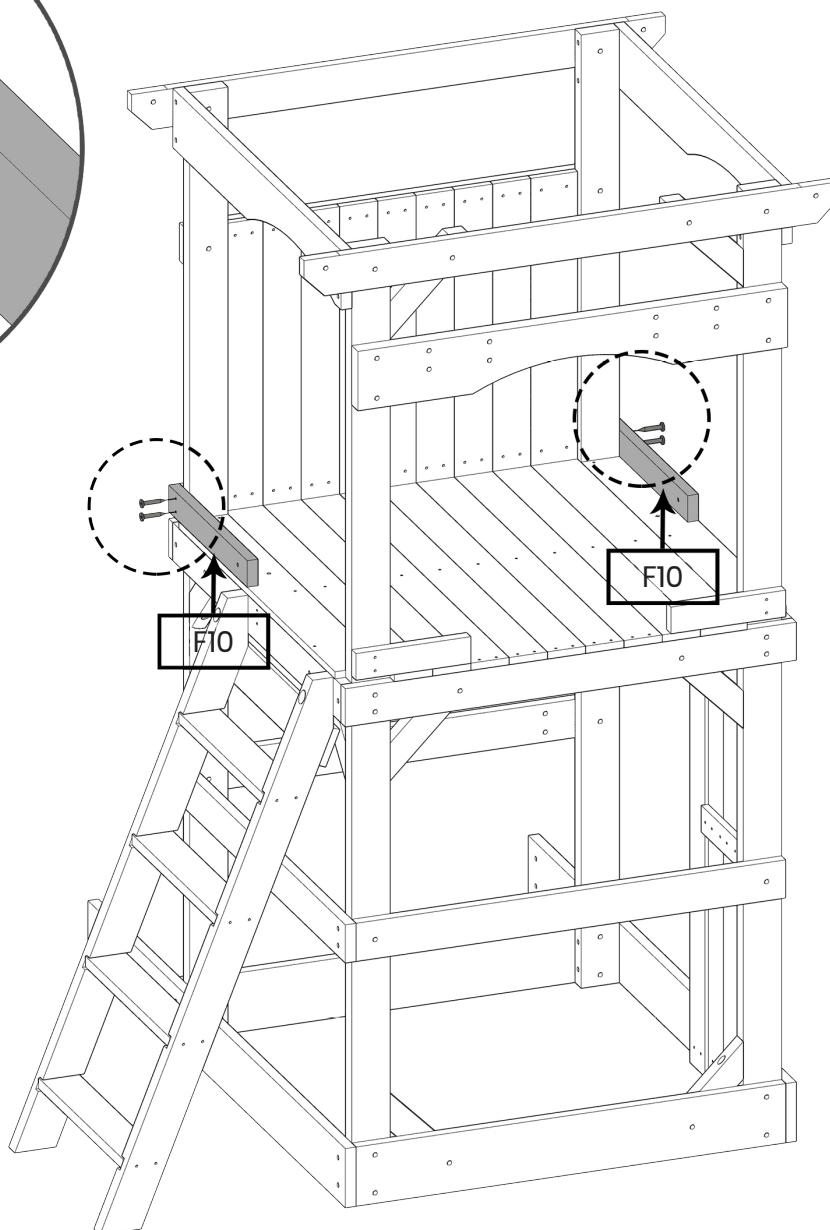


List	
Part NO.	Qty
F10	2
SW50	4

STEP 17

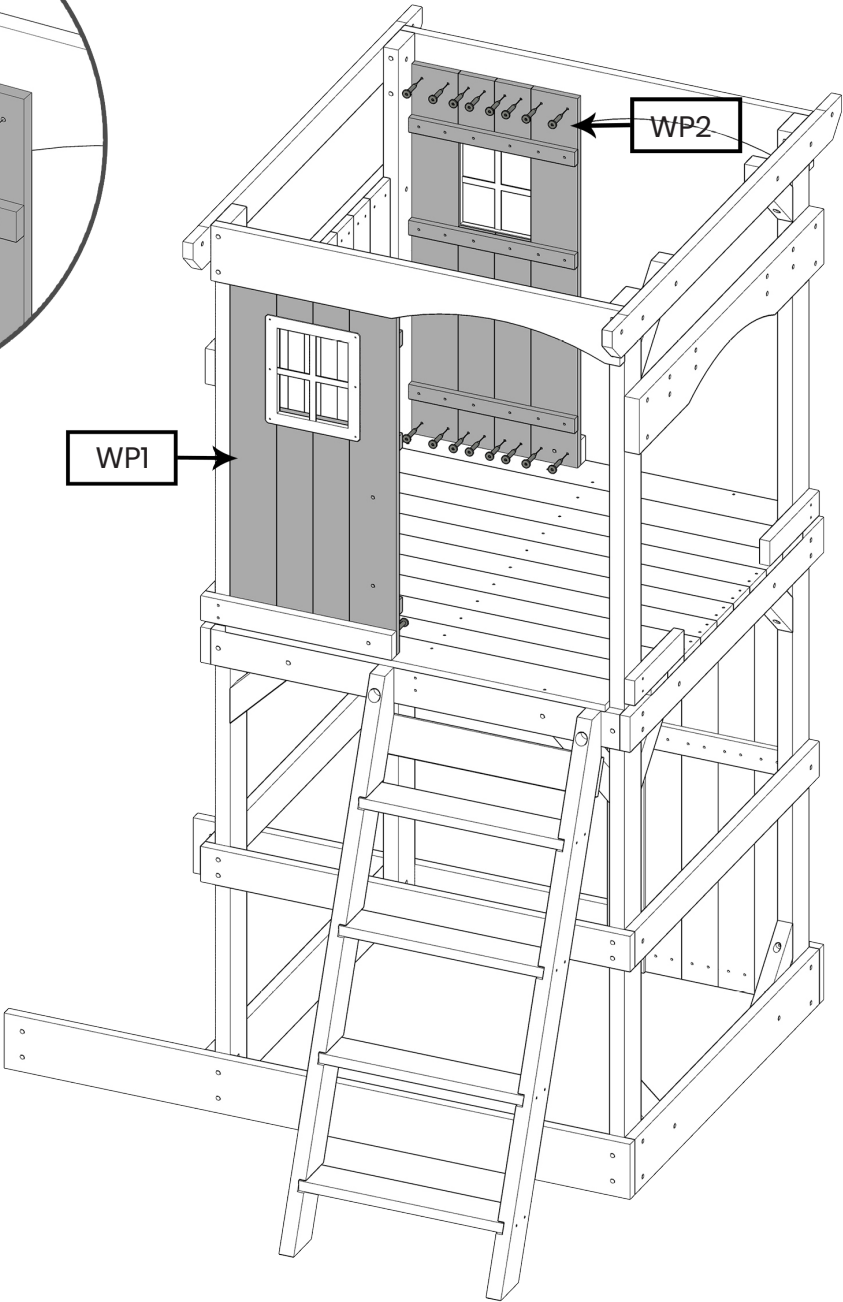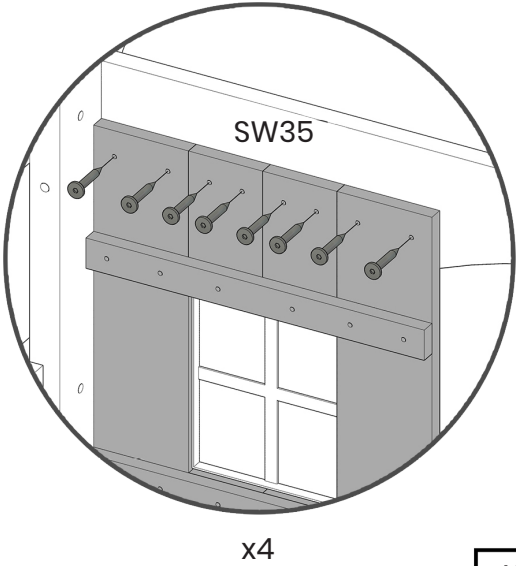


List	
Part NO.	Qty
WP1	1
WP2	1
SW35	32


STEP 18

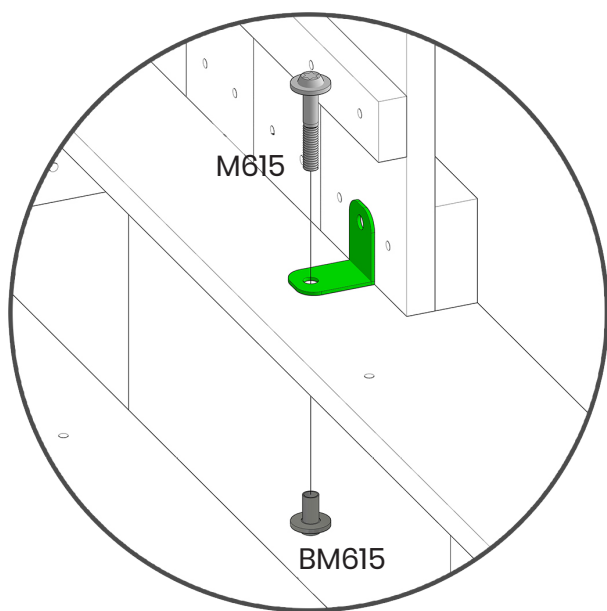


x2

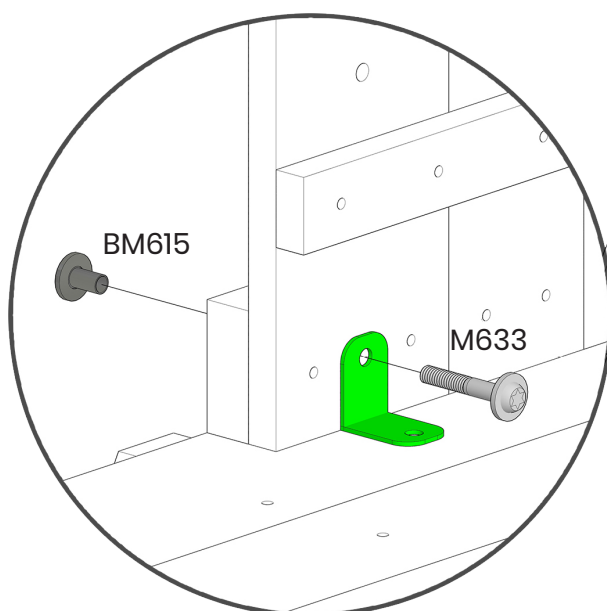

x2


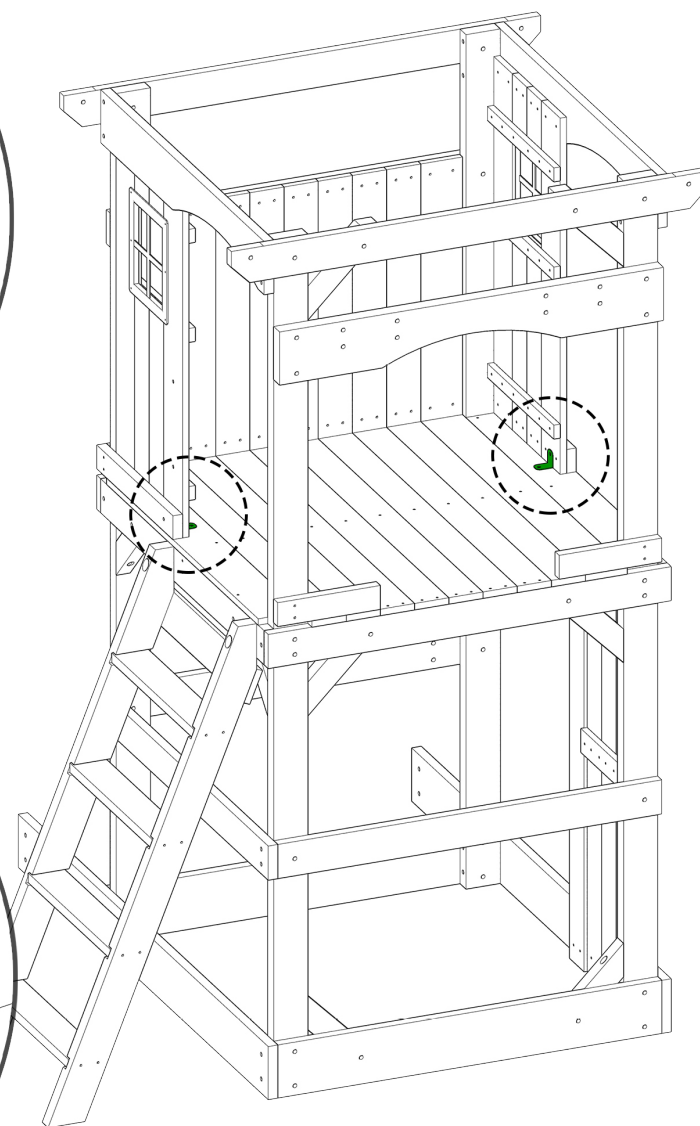


L651025 x 2

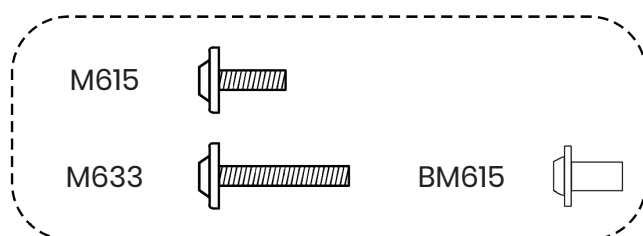

List	
Part NO.	Qty
L651025	2
M615	2
M633	2
BM615	4

STEP 19

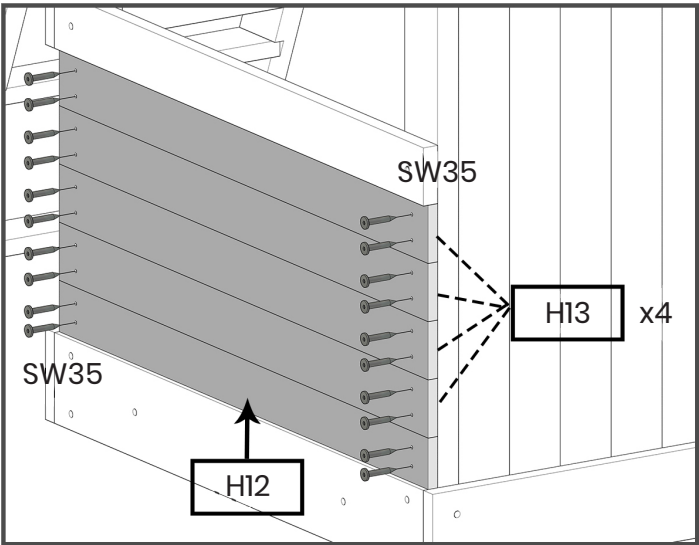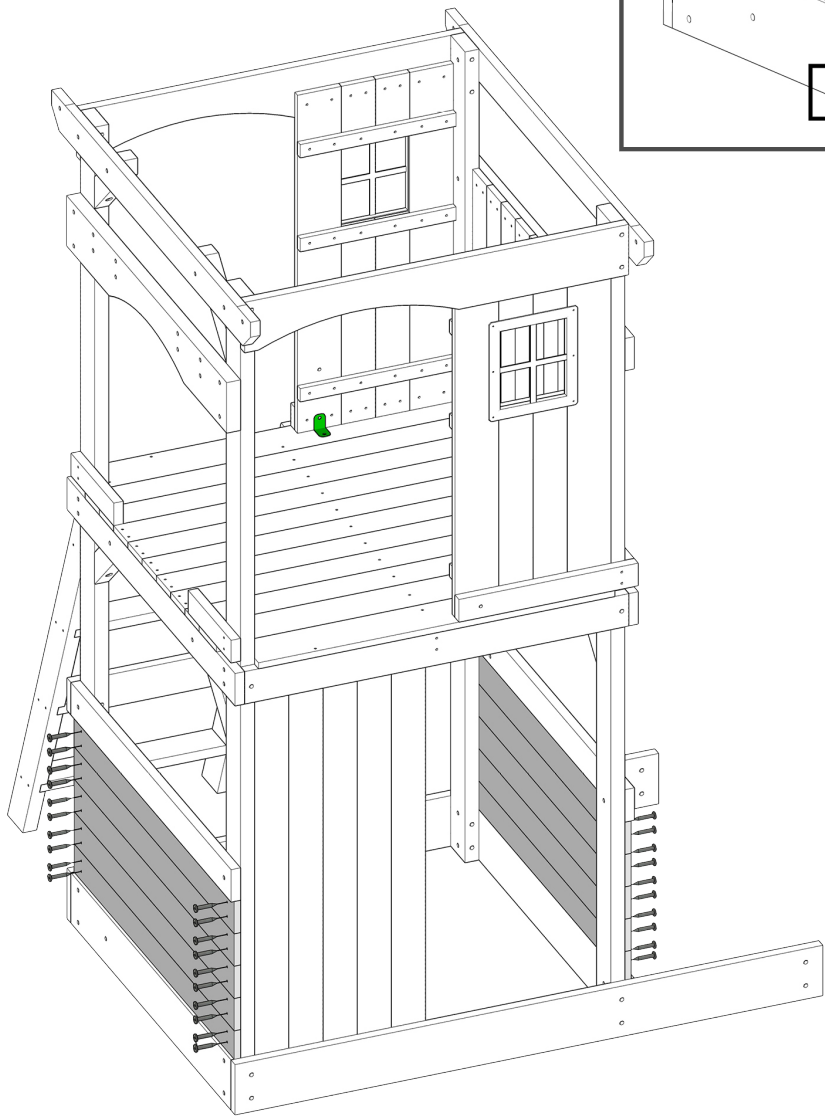


x2





List	
Part NO.	Qty
H12	2
H13	8
SW35	40

STEP 20

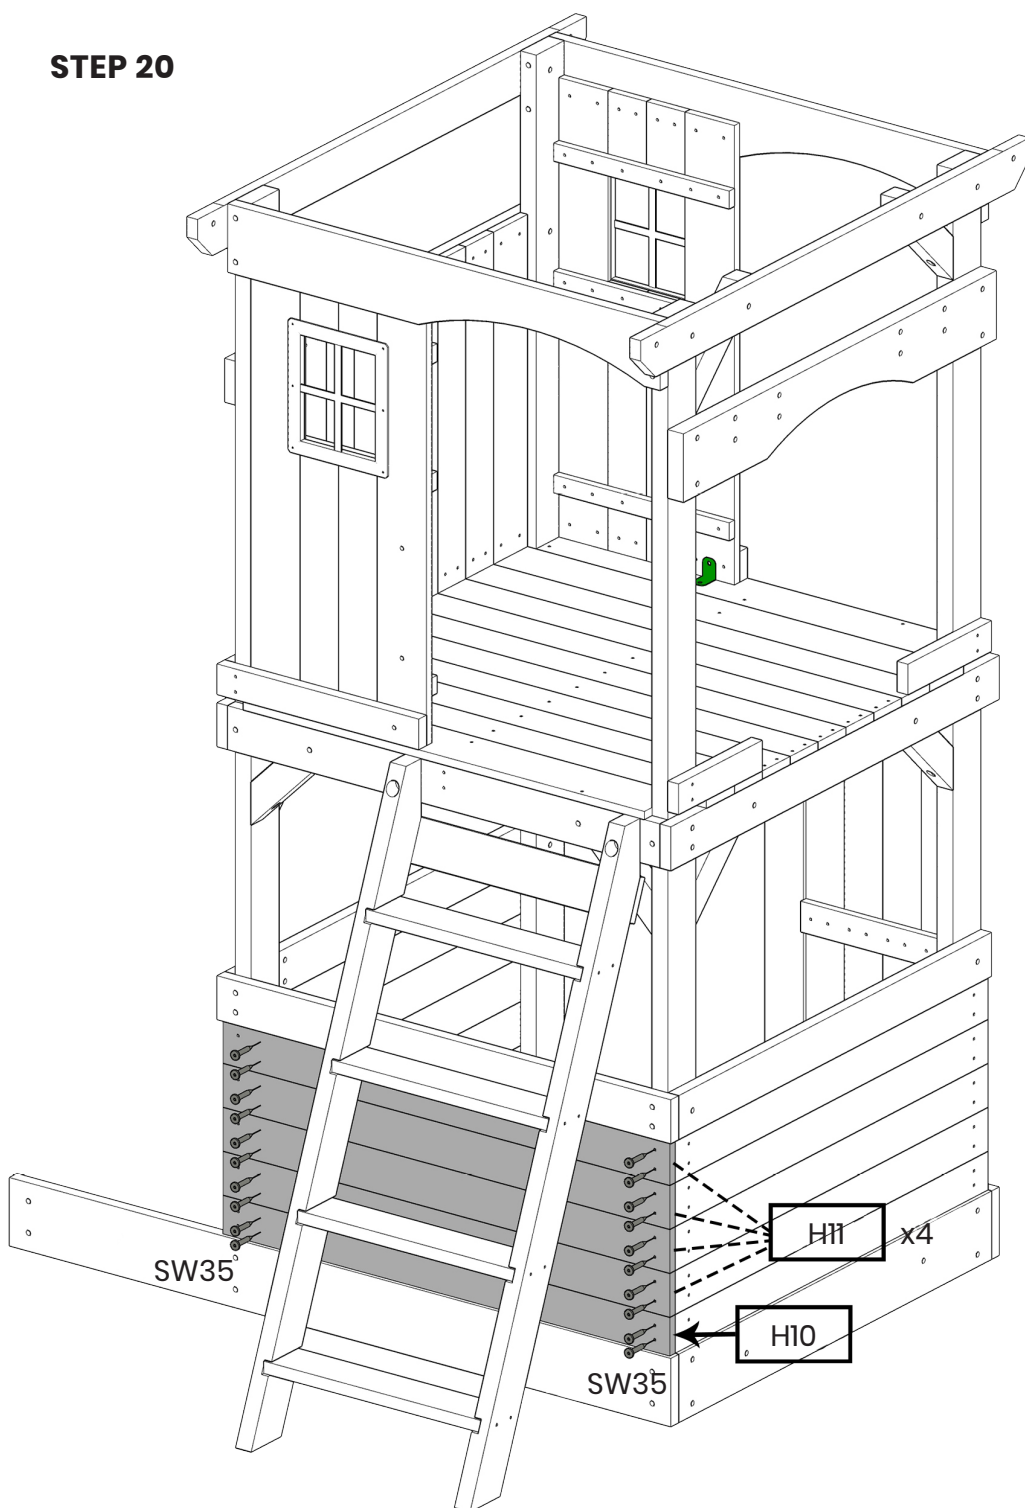



List	
Part NO.	Qty
H10	1
H11	4
SW35	20

STEP 21

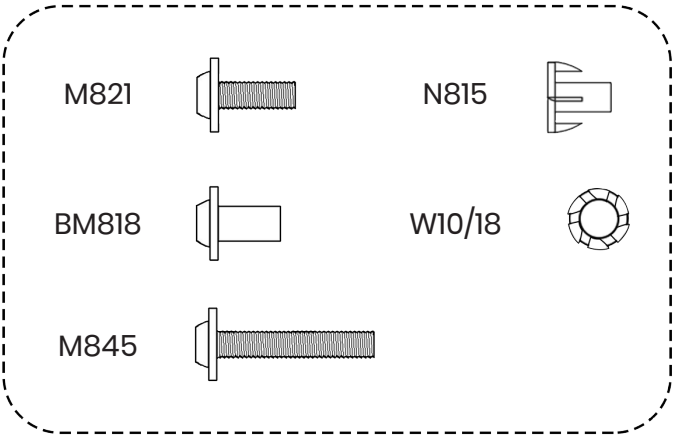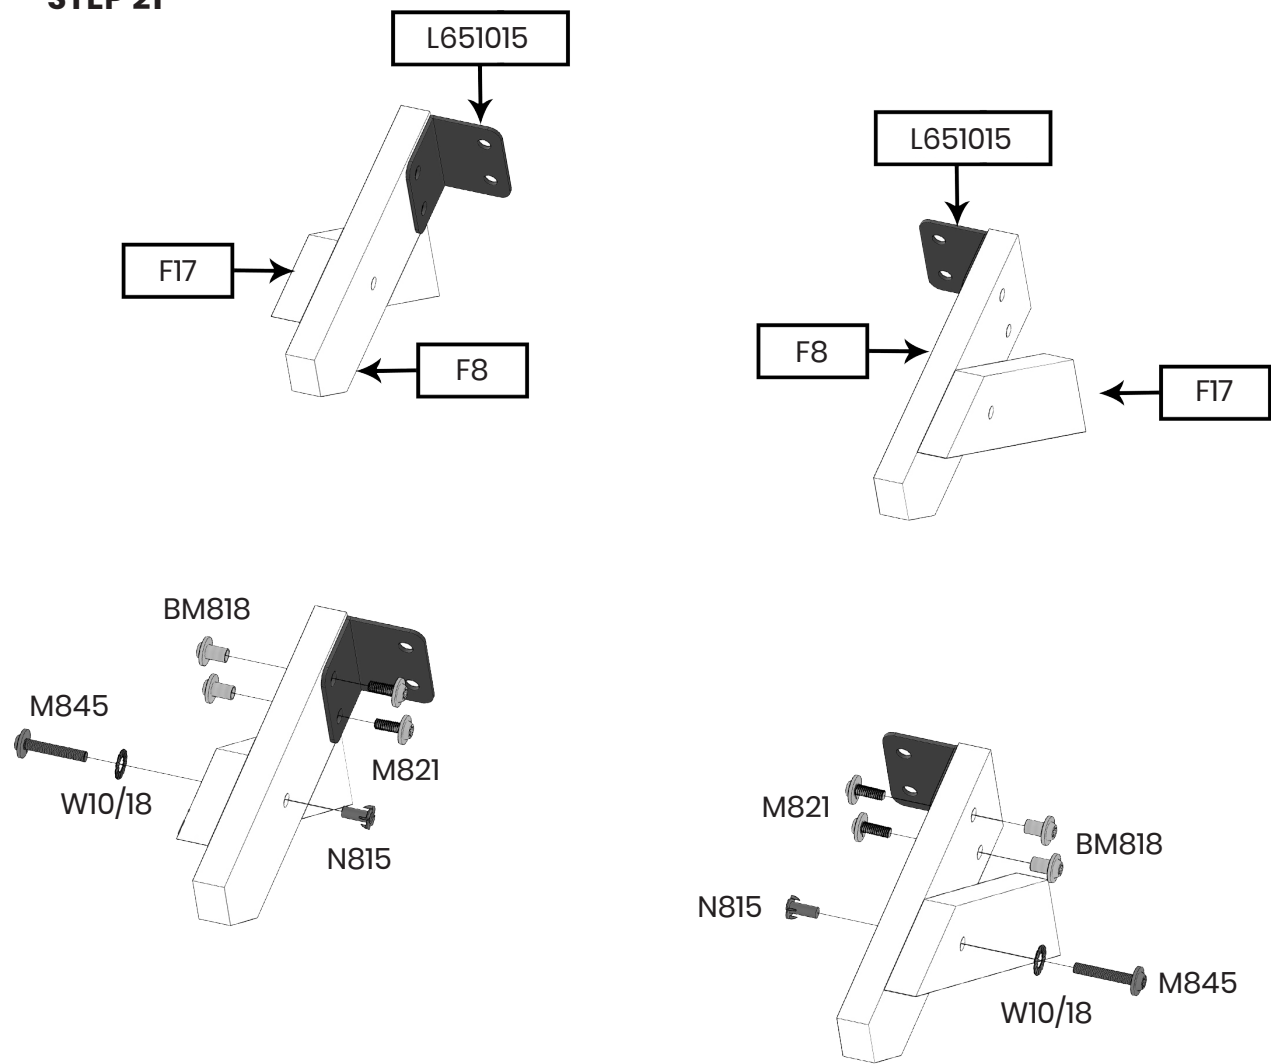


List	
Part NO.	Qty
L651015	2
F8	2
F17	2
M821	4
M845	2
BM818	4
N815	2
W10/18	2

STEP 22

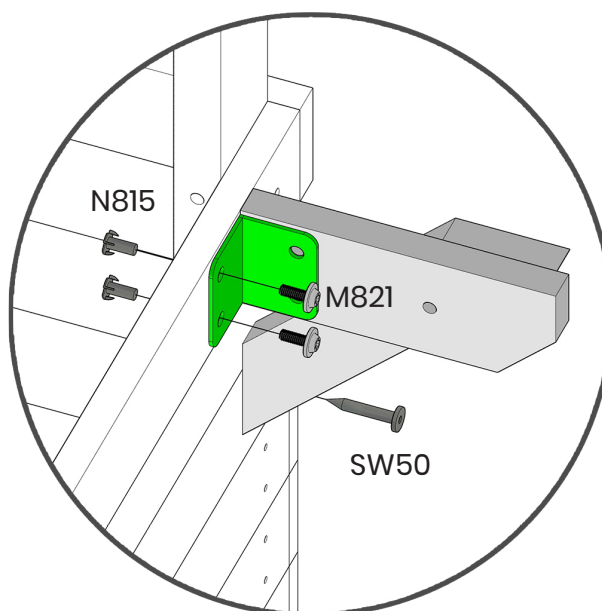
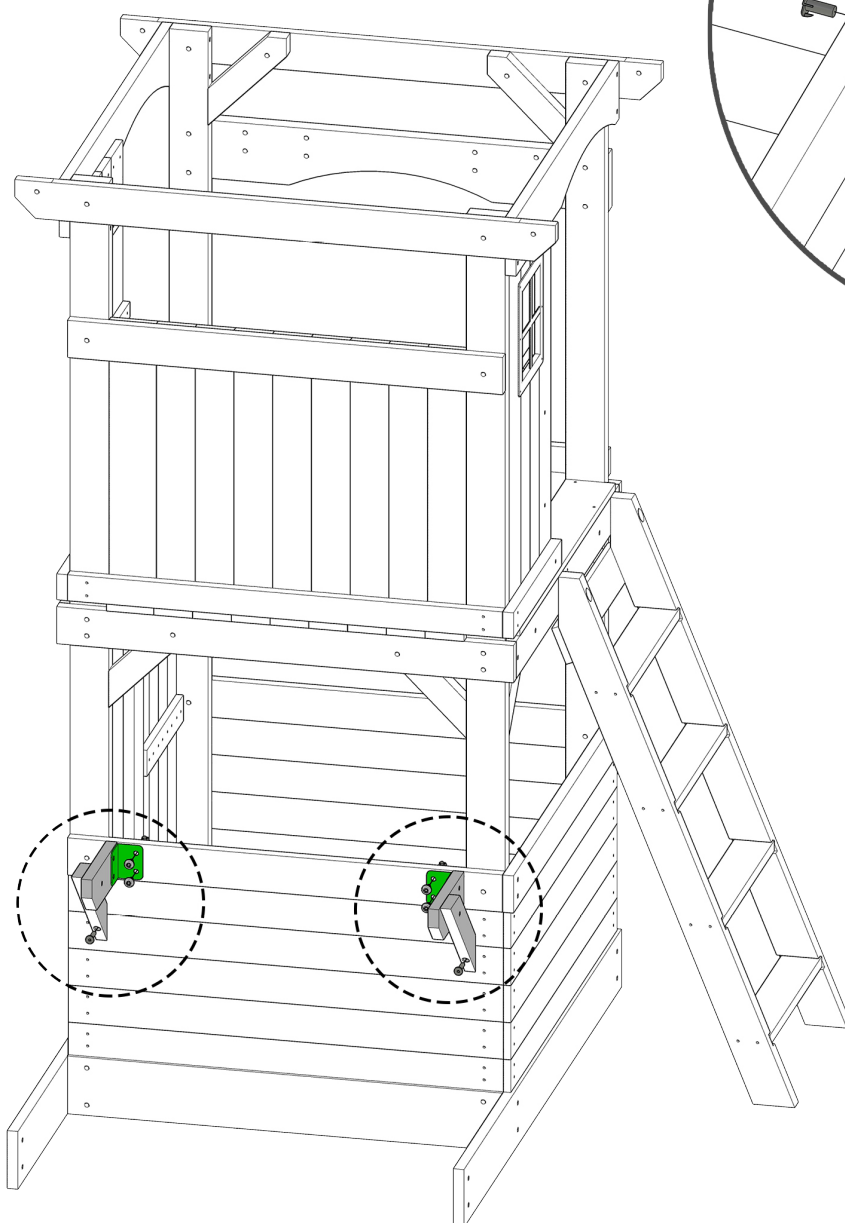


x2

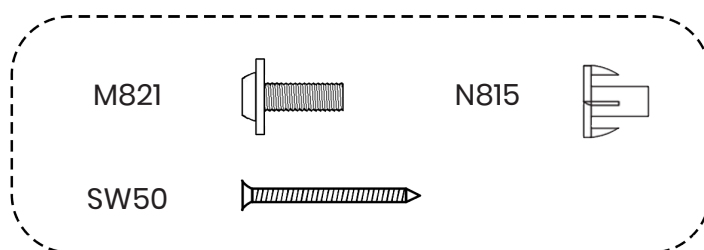


List	
Part NO.	Qty
M821	4
N815	4
SW50	2

STEP 23

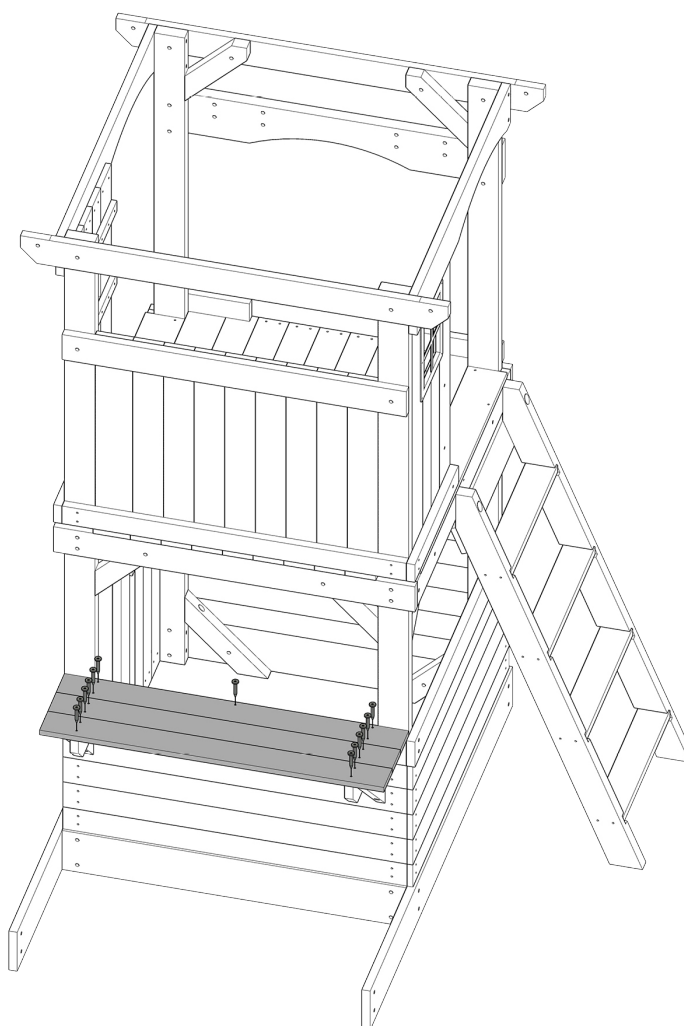
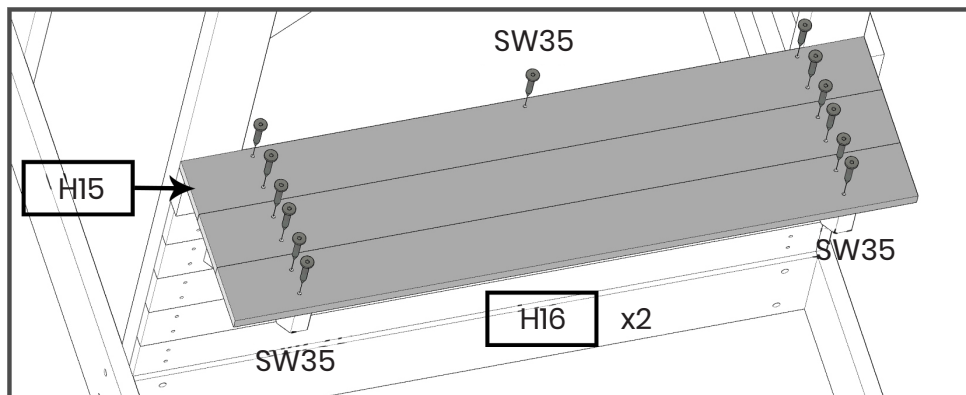


List	
Part NO.	Qty
H15	1
H16	2
SW35	13

STEP 24


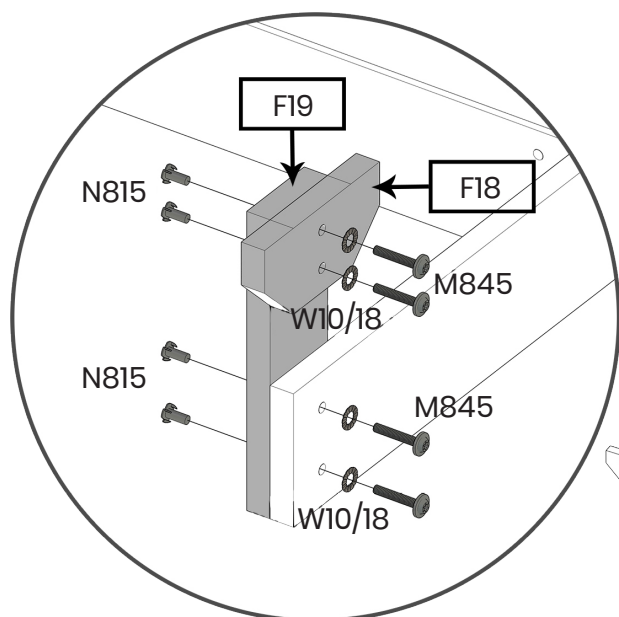


x2

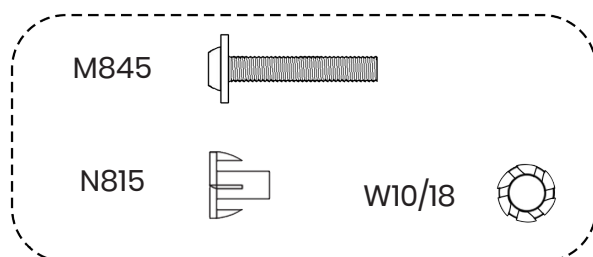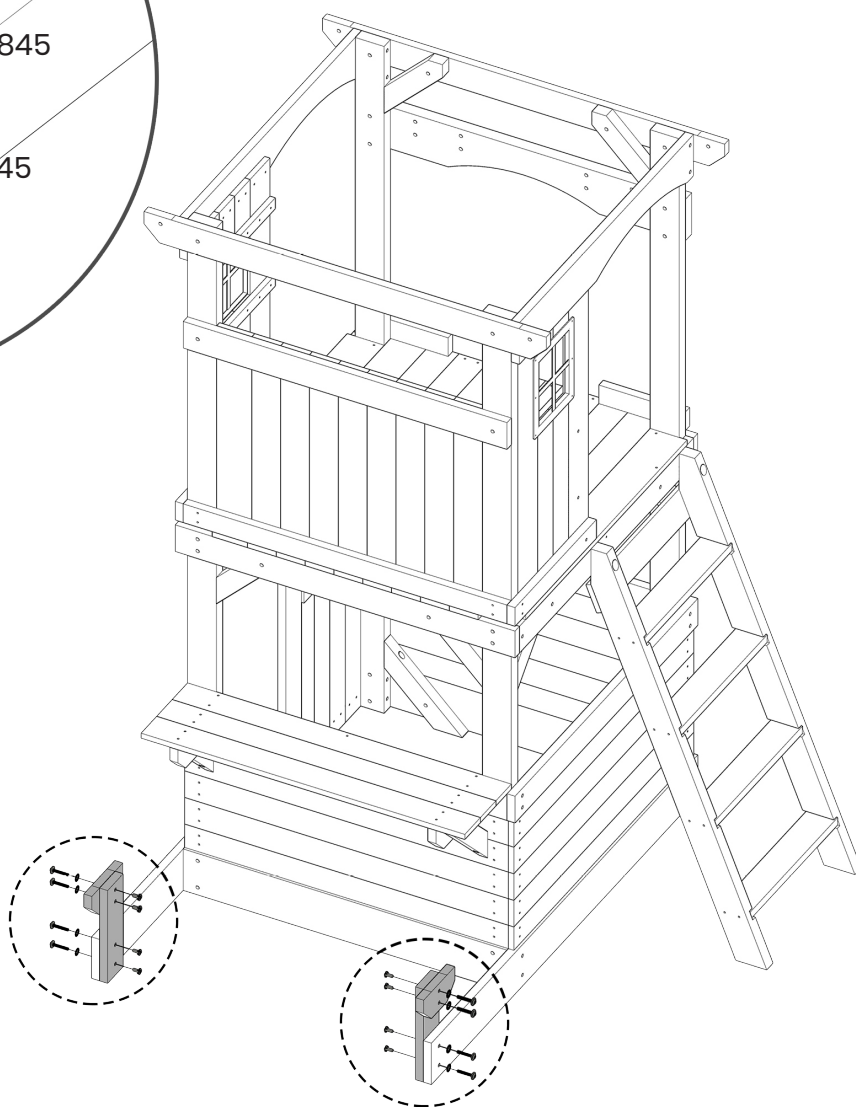





List	
Part NO.	Qty
F18	2
F19	2
M845	8
N815	8
W10/18	8

STEP 25

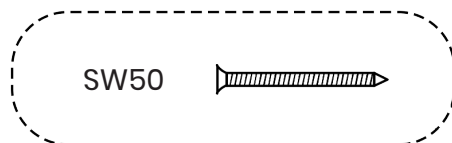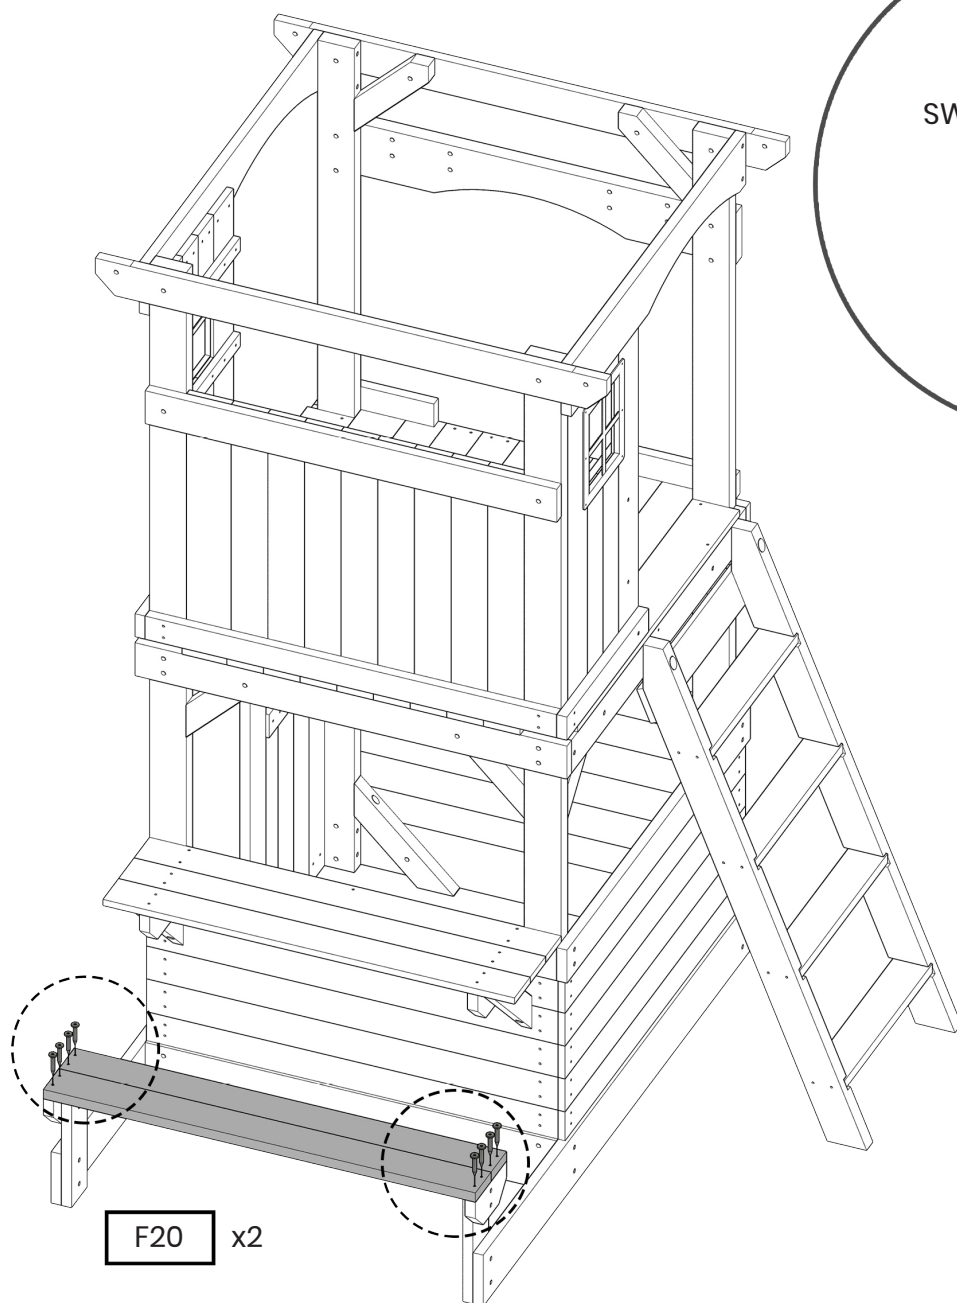



List	
Part NO.	Qty
F20	2
SW50	8

STEP 26

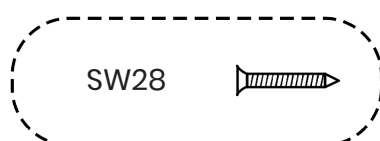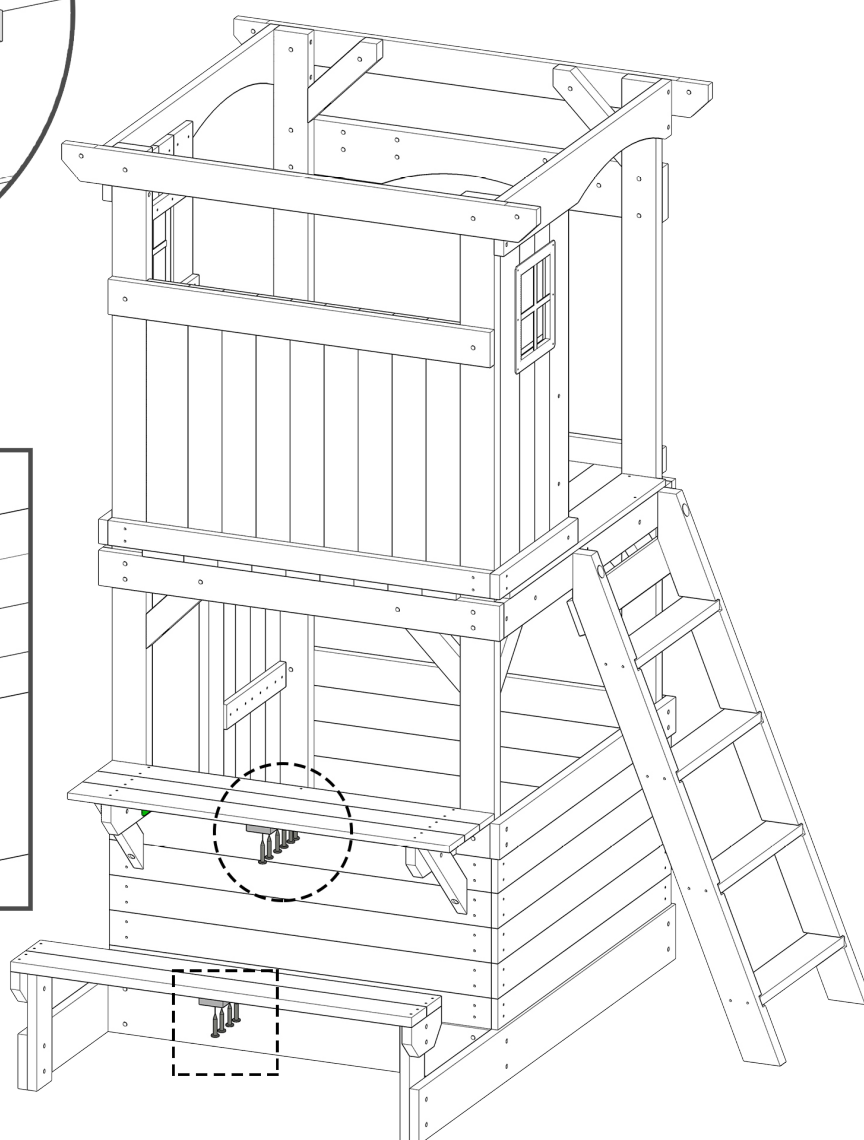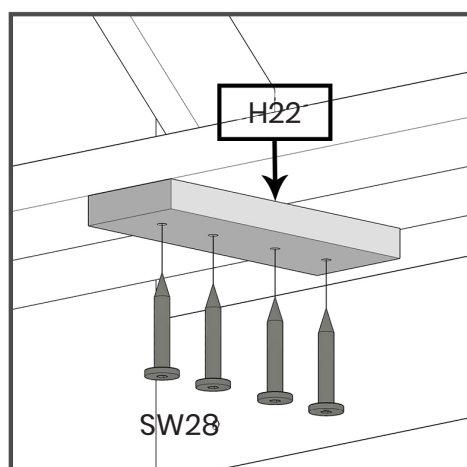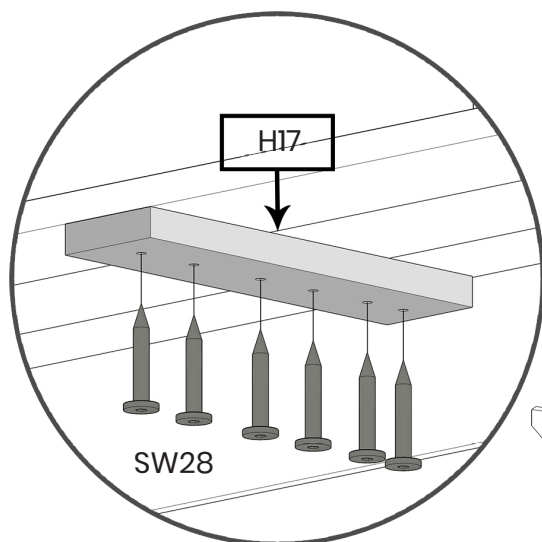


List	
Part NO.	Qty
H17	1
H22	1
SW28	10

STEP 27

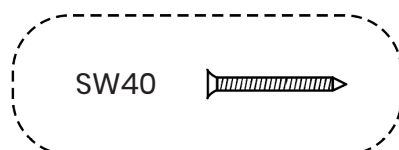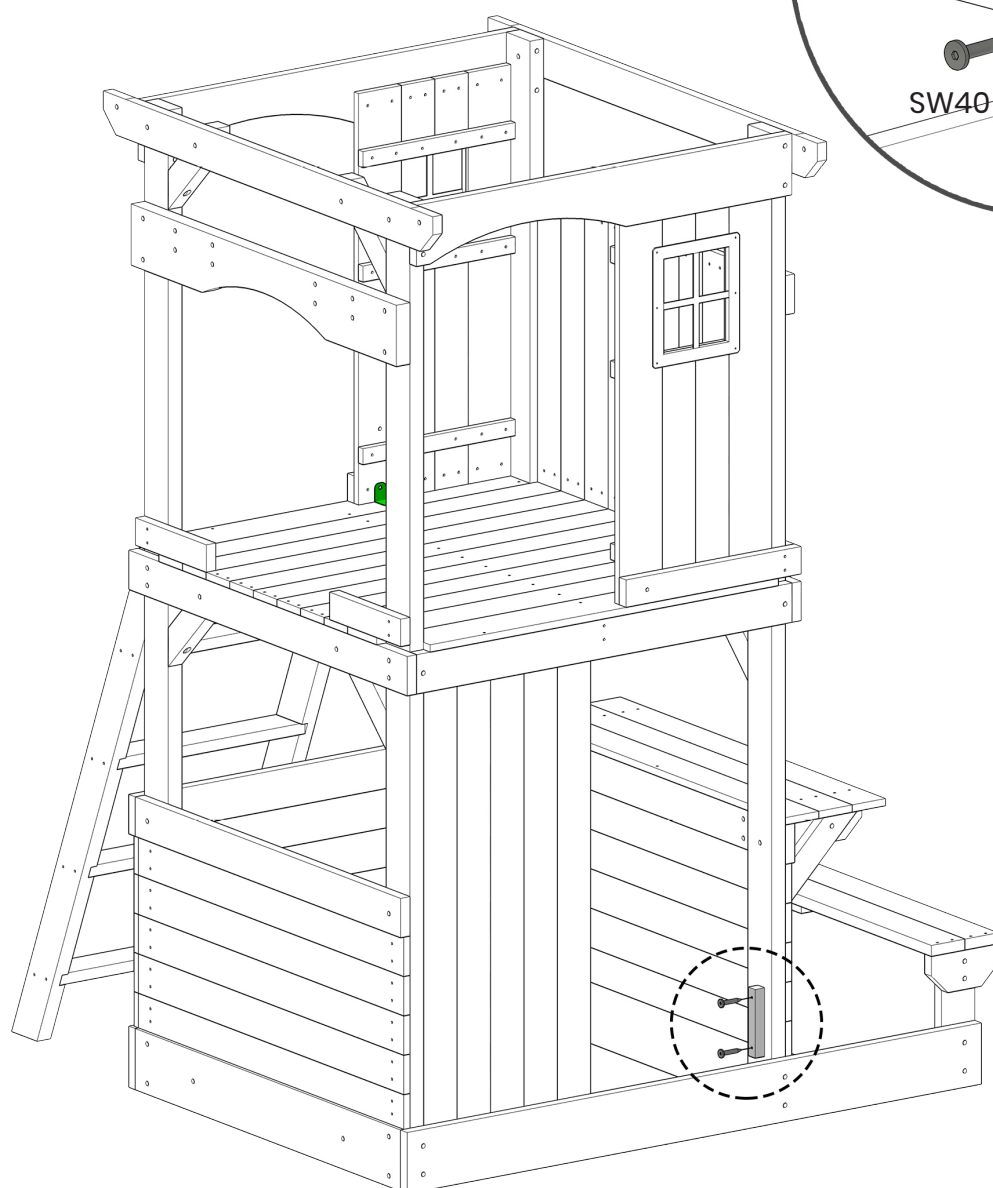



List	
Part NO.	Qty
F32	1
SW40	2

STEP 28


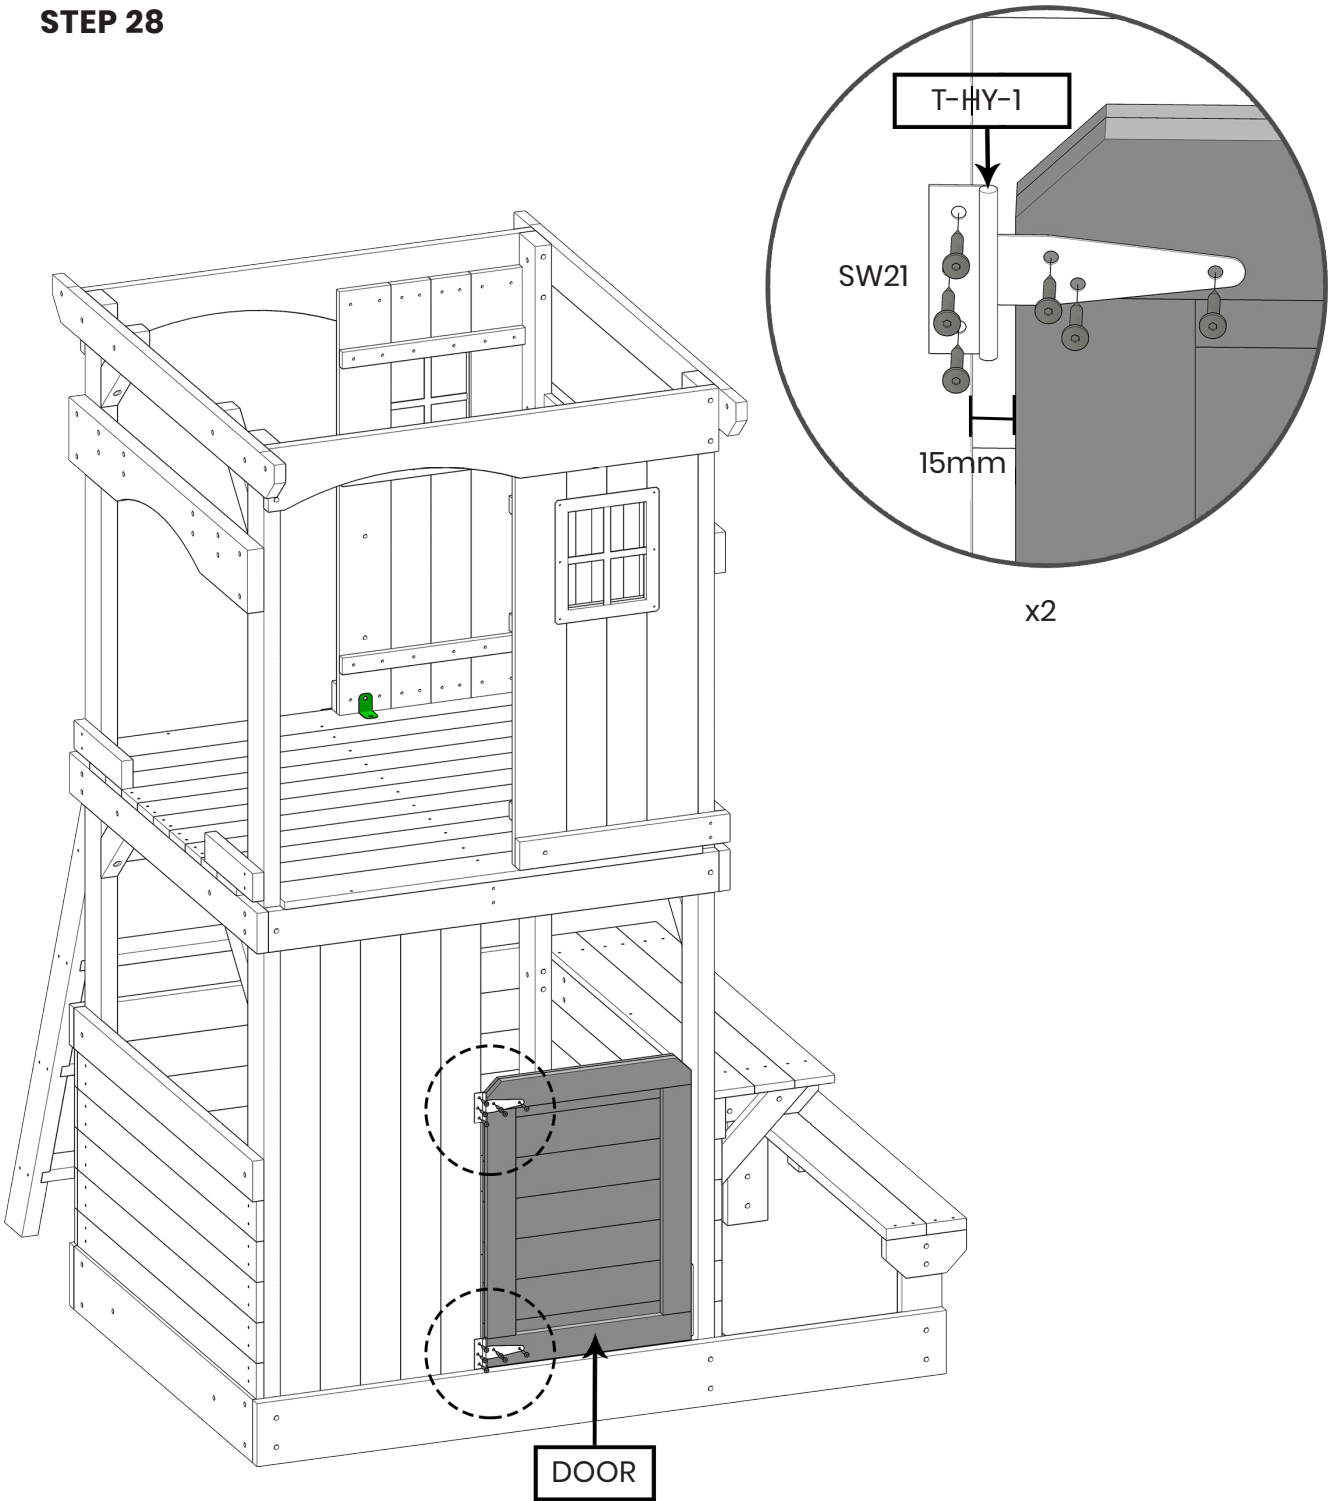


List	
Part NO.	Qty
DOOR	1
T-HY-1	2
SW21	12

STEP 29

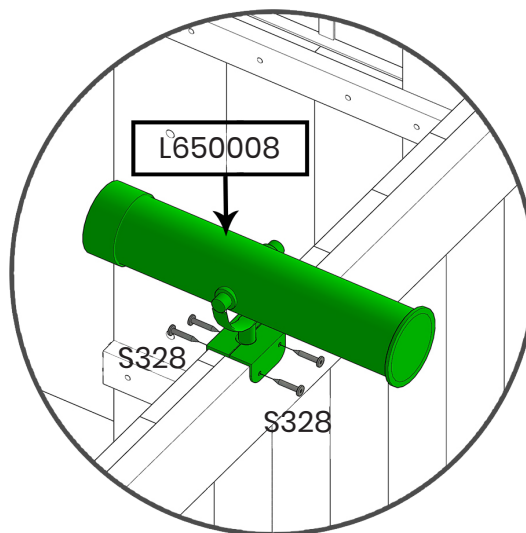
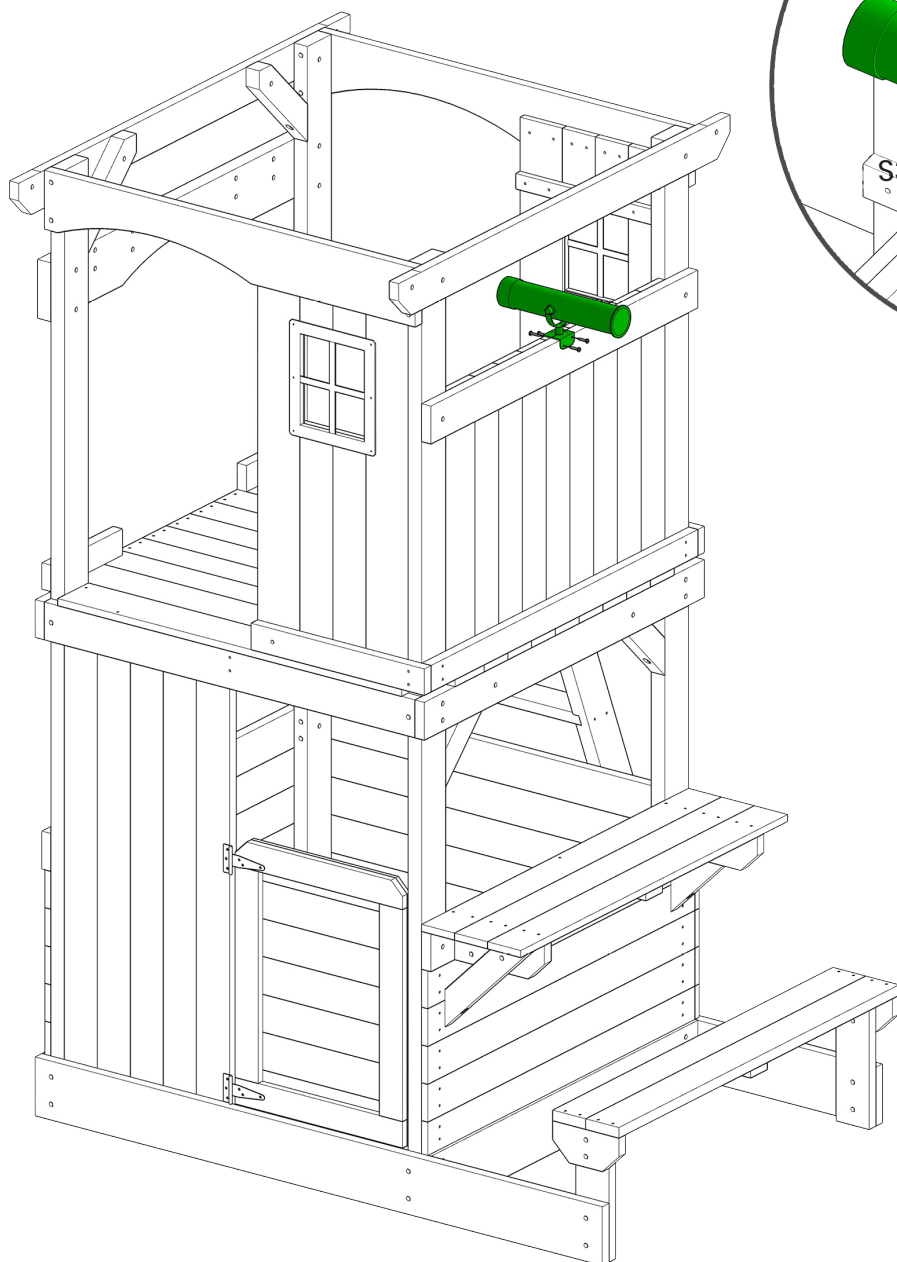


List	
Part NO.	Qty
L650008	1
S328	4

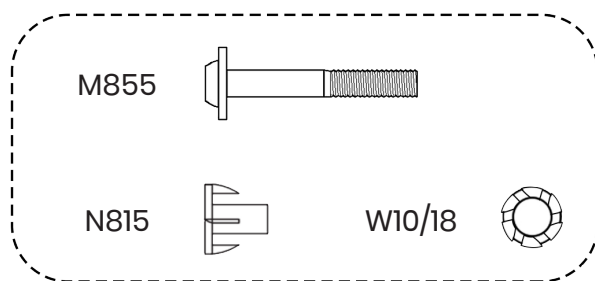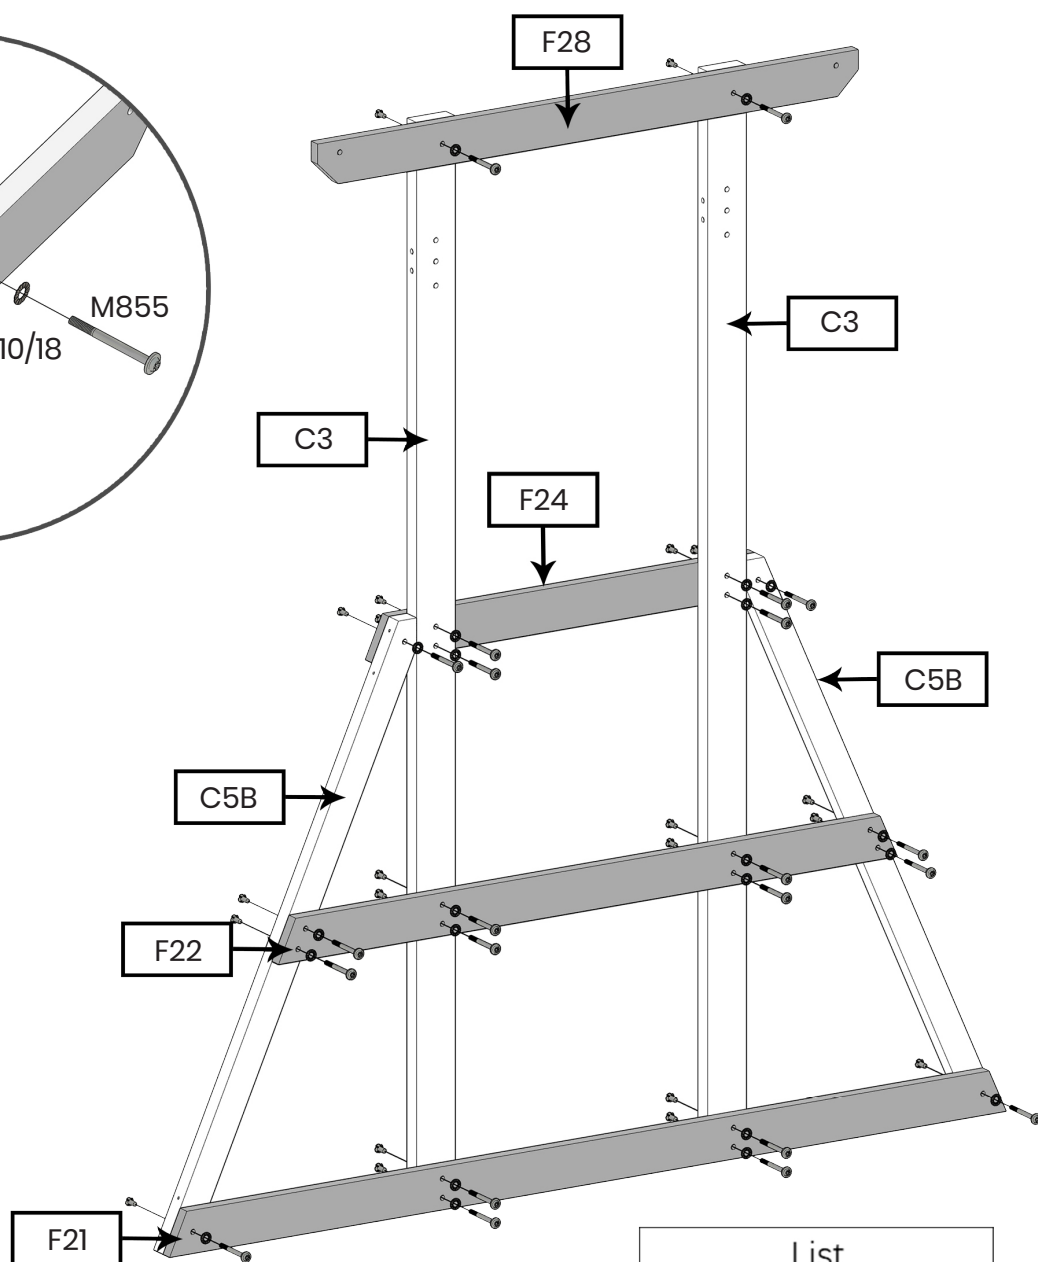


List	
Part NO.	Qty
C3	2
C5B	2
F21	1
F22	1
F24	1
F28	1
M855	22
N815	22
W10/18	22

STEP 31

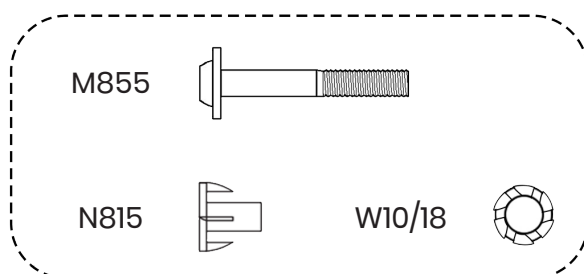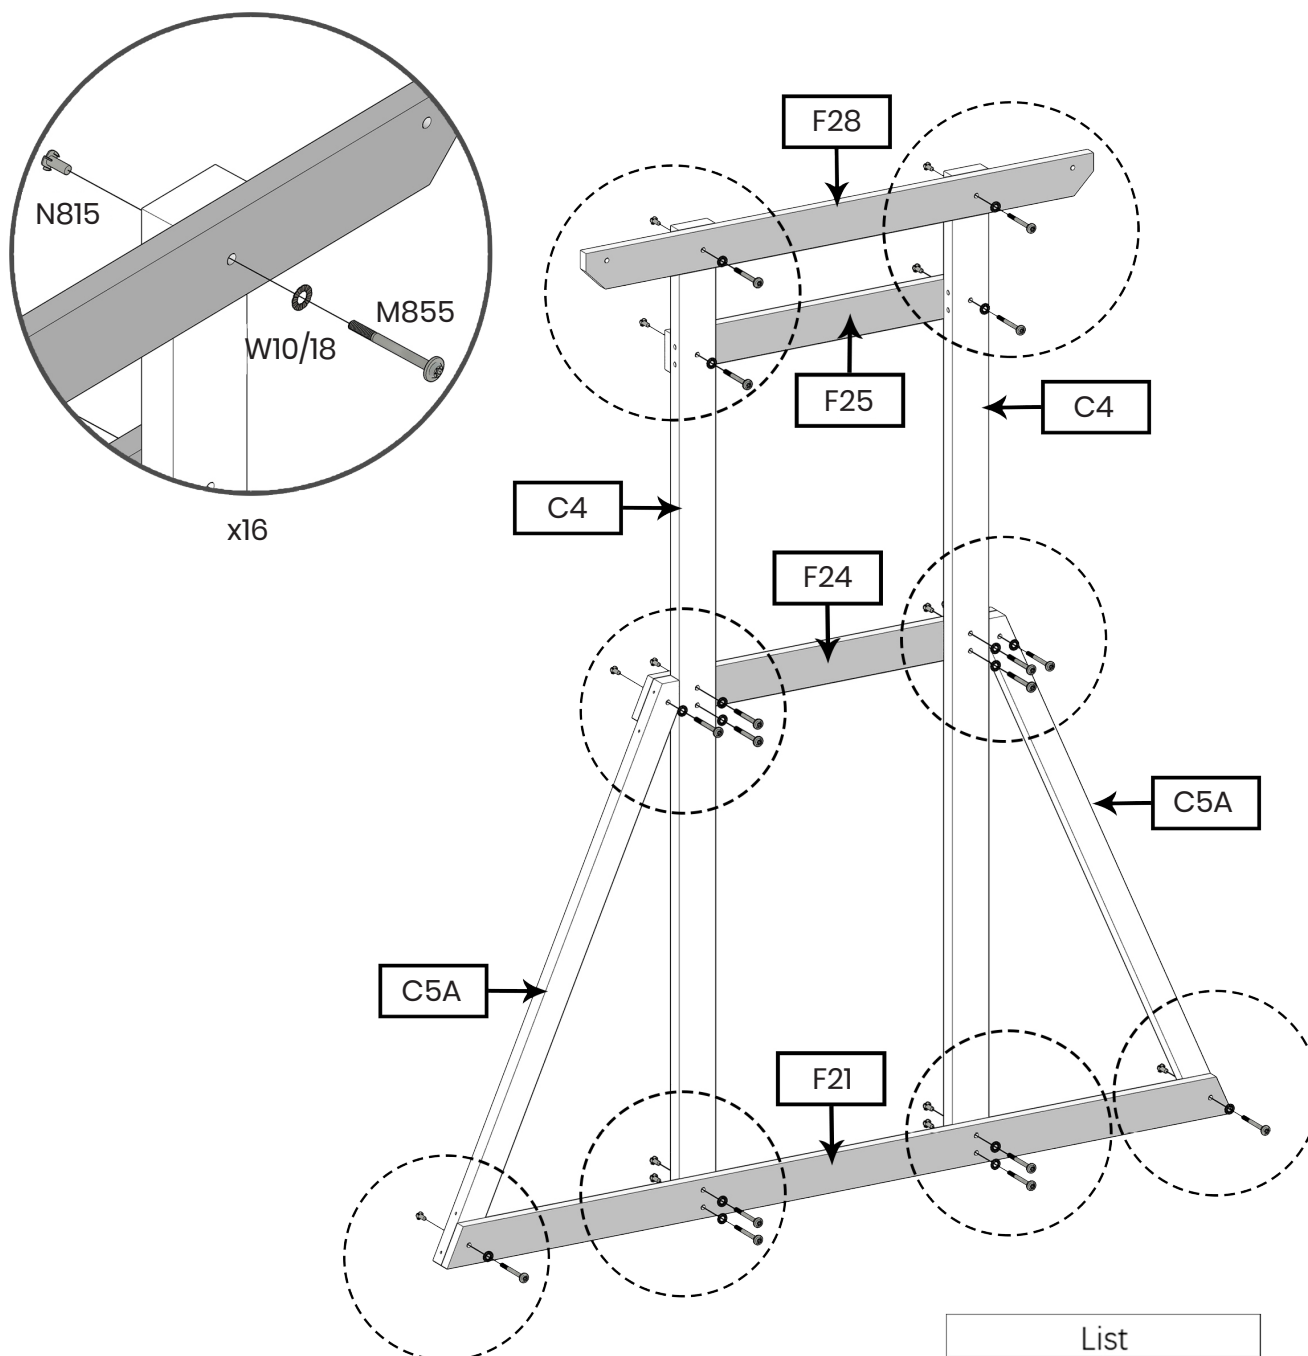


List	
Part NO.	Qty
C4	2
C5A	2
F21	1
F24	1
F25	1
F28	1
M855	16
N815	16
W10/18	16



STEP 32

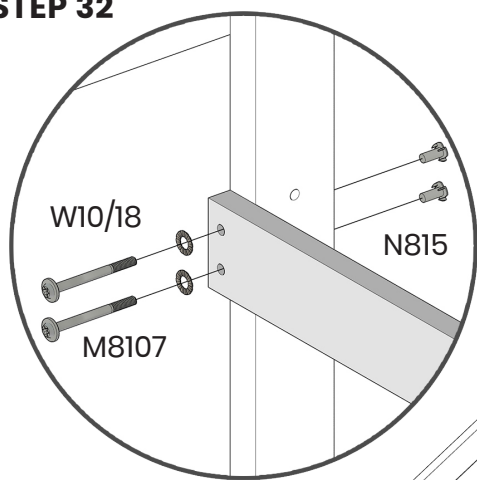

x2

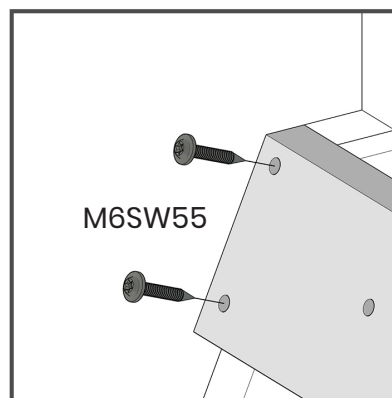


x4

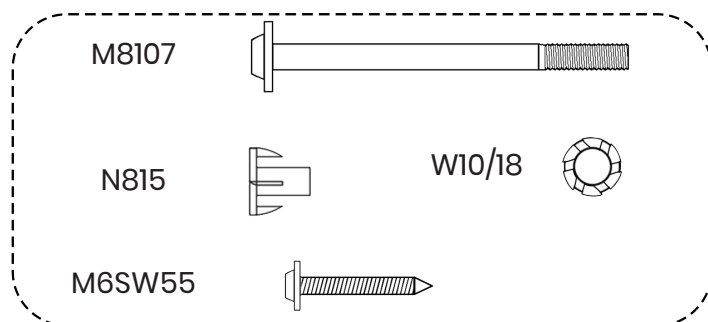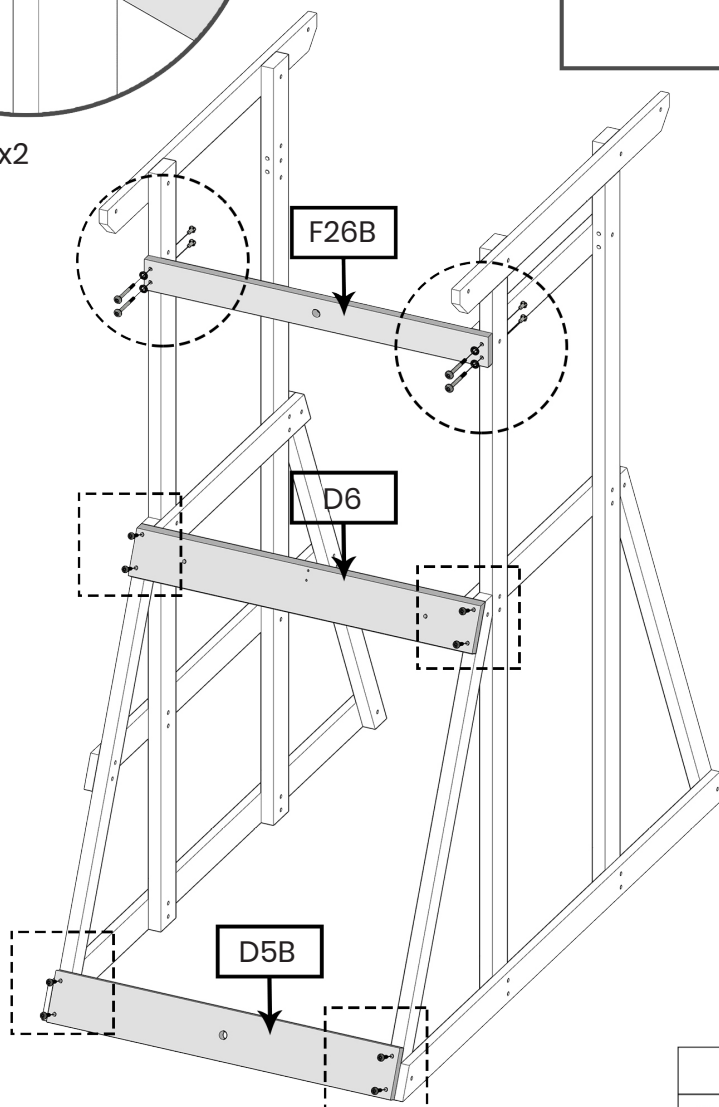


List	
Part NO.	Qty
D5B	1
D6	1
F26B	1
M8107	4
N815	4
M6SW55	8
W10/18	4



STEP 33

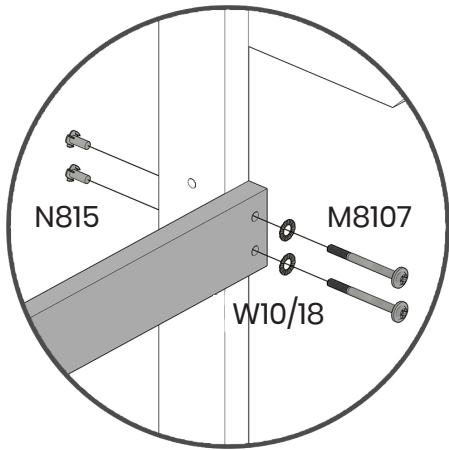

x2

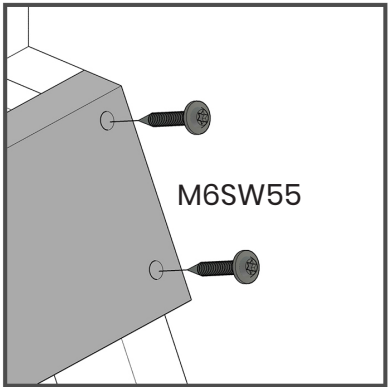


x4

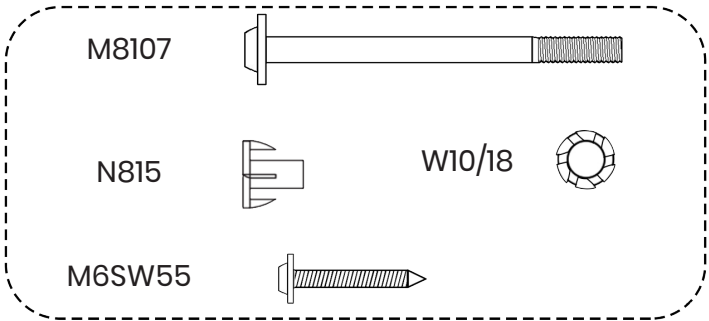
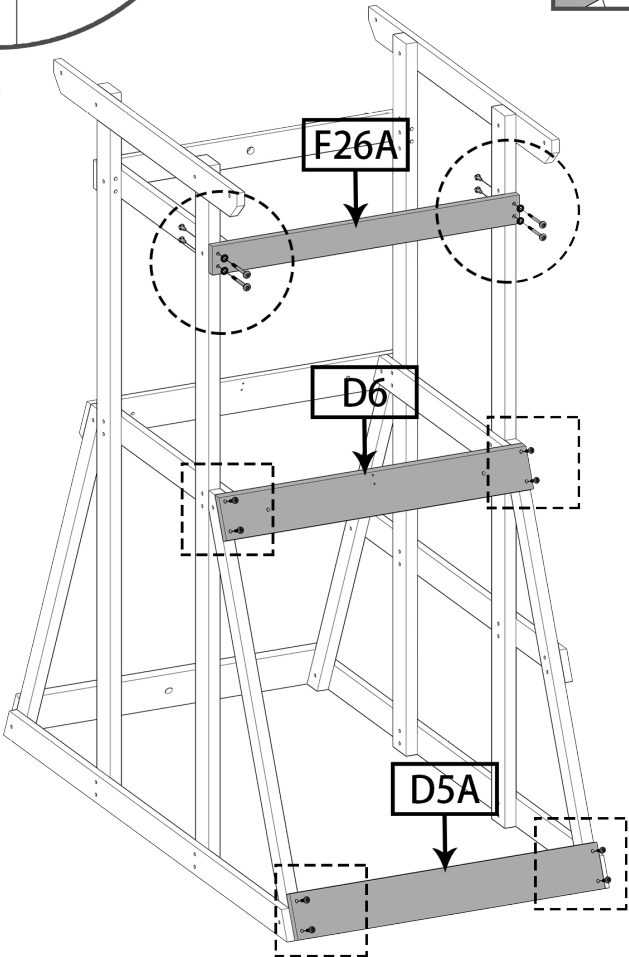


List	
Part NO.	Qty
D5A	1
D6	1
F26A	1
M8107	4
N815	4
M6SW55	8
W10/18	4

STEP 34

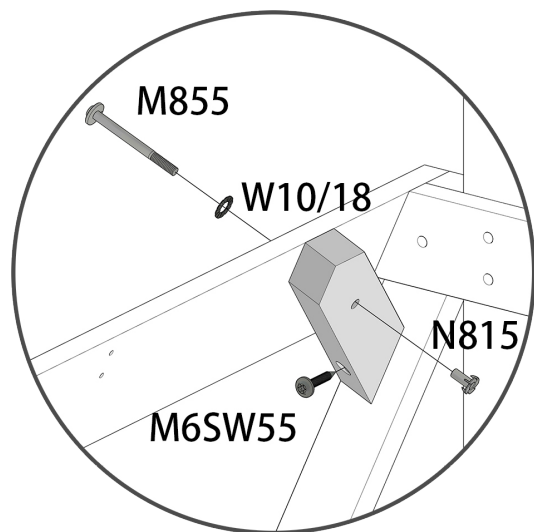


K27 x4

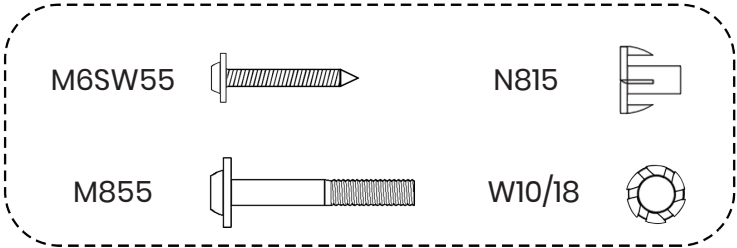
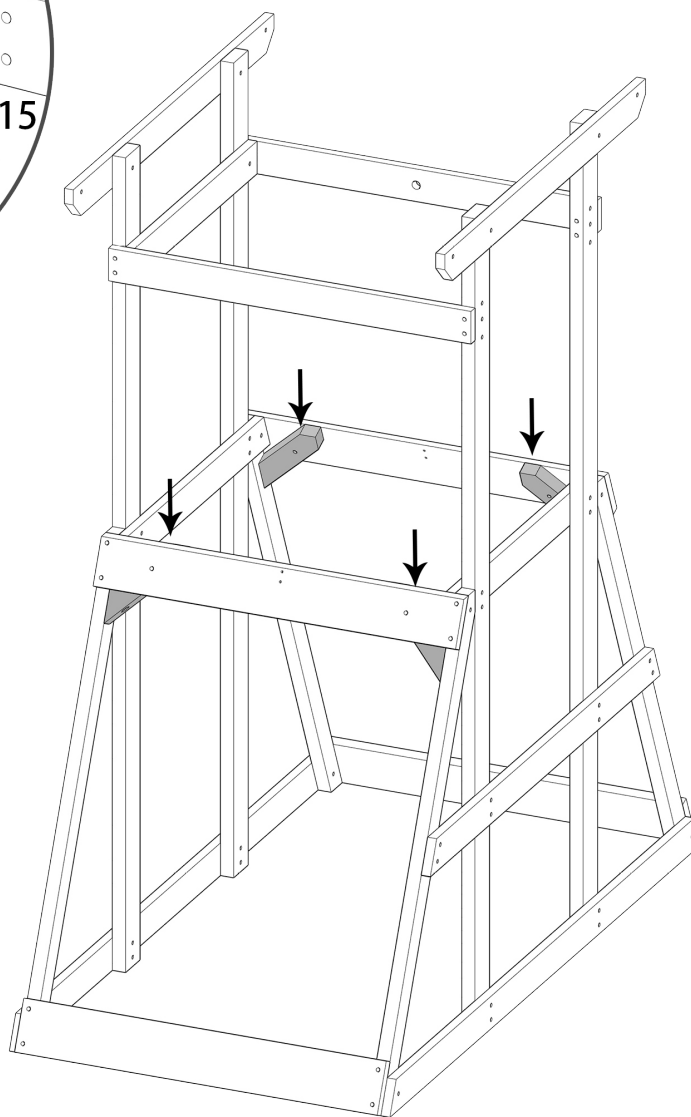


List	
Part NO.	Qty
K27	4
M855	4
N815	4
M6SW55	4
W10/18	4

STEP 35

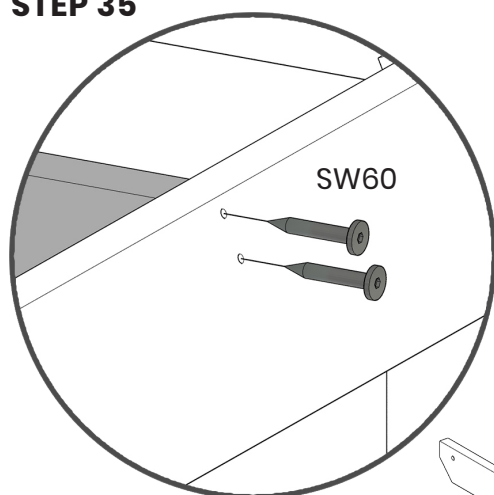


x2

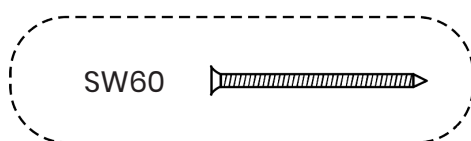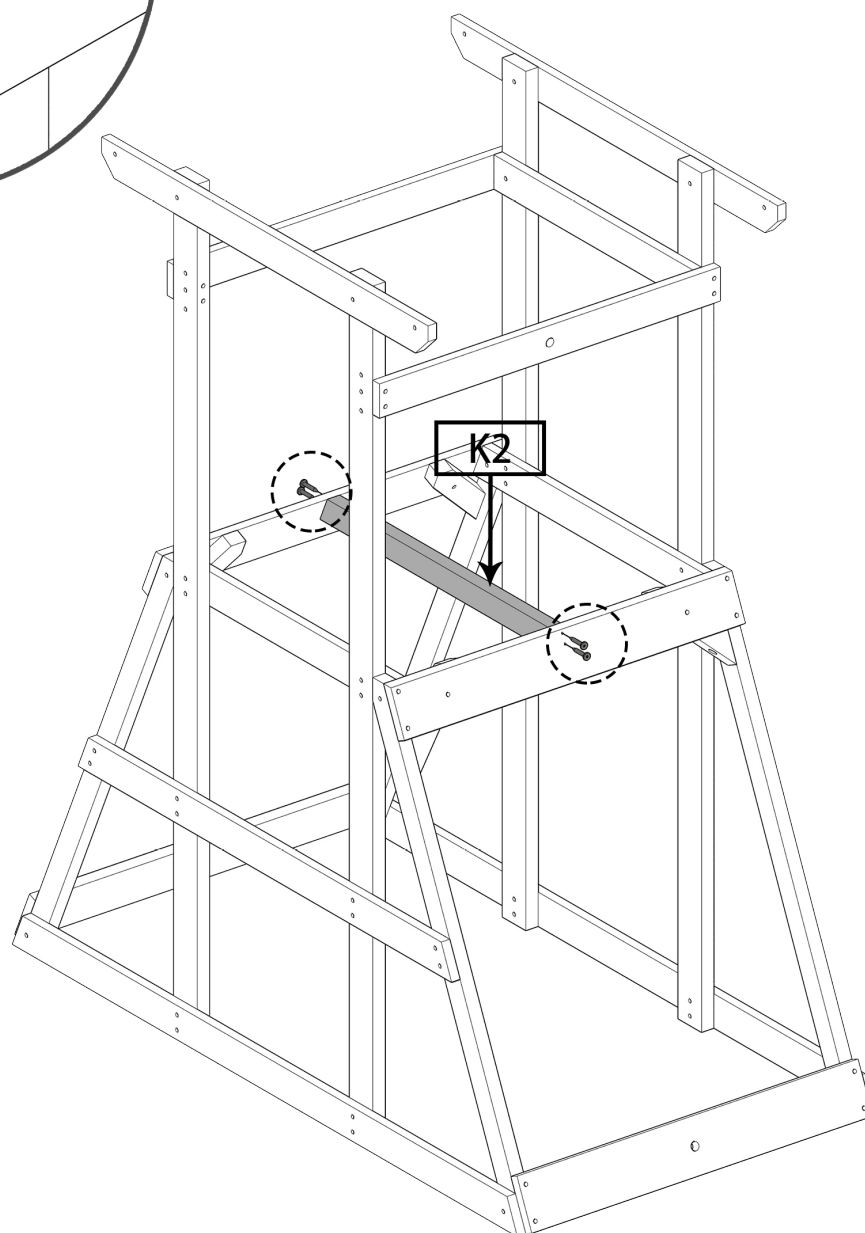




List	
Part NO.	Qty
K2	1
SW60	4

STEP 36

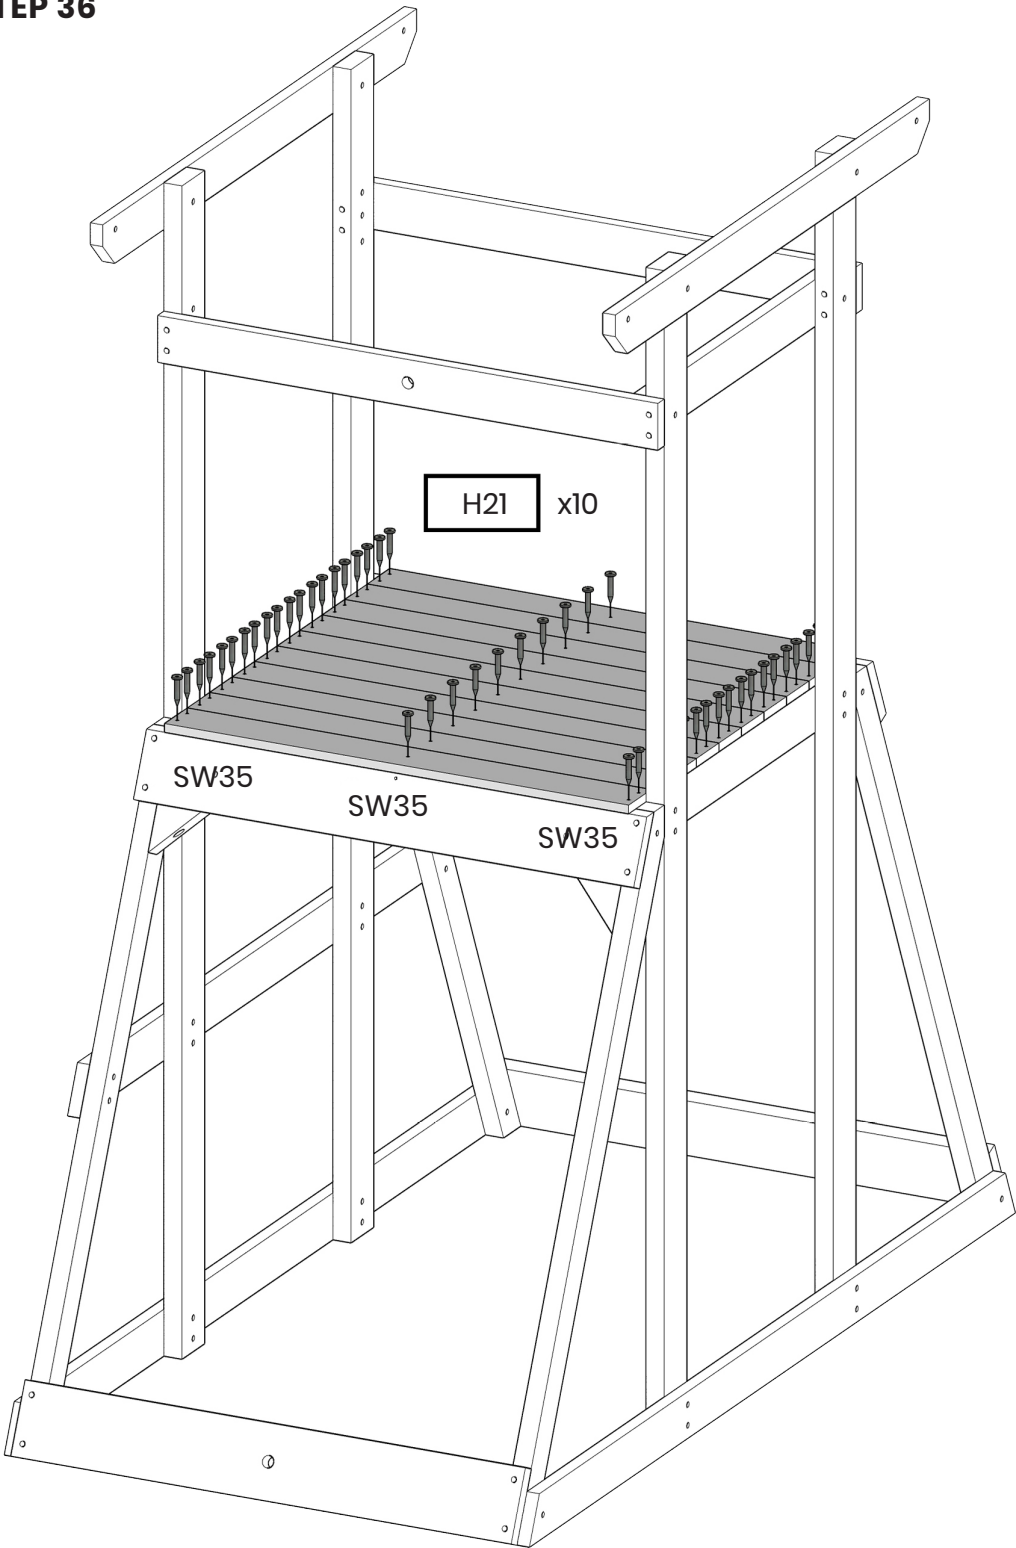


List	
Part NO.	Qty
H21	10
SW35	50

STEP 37

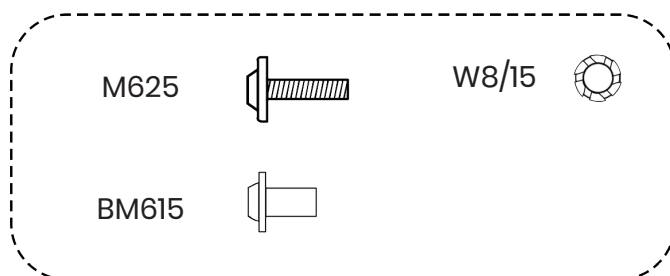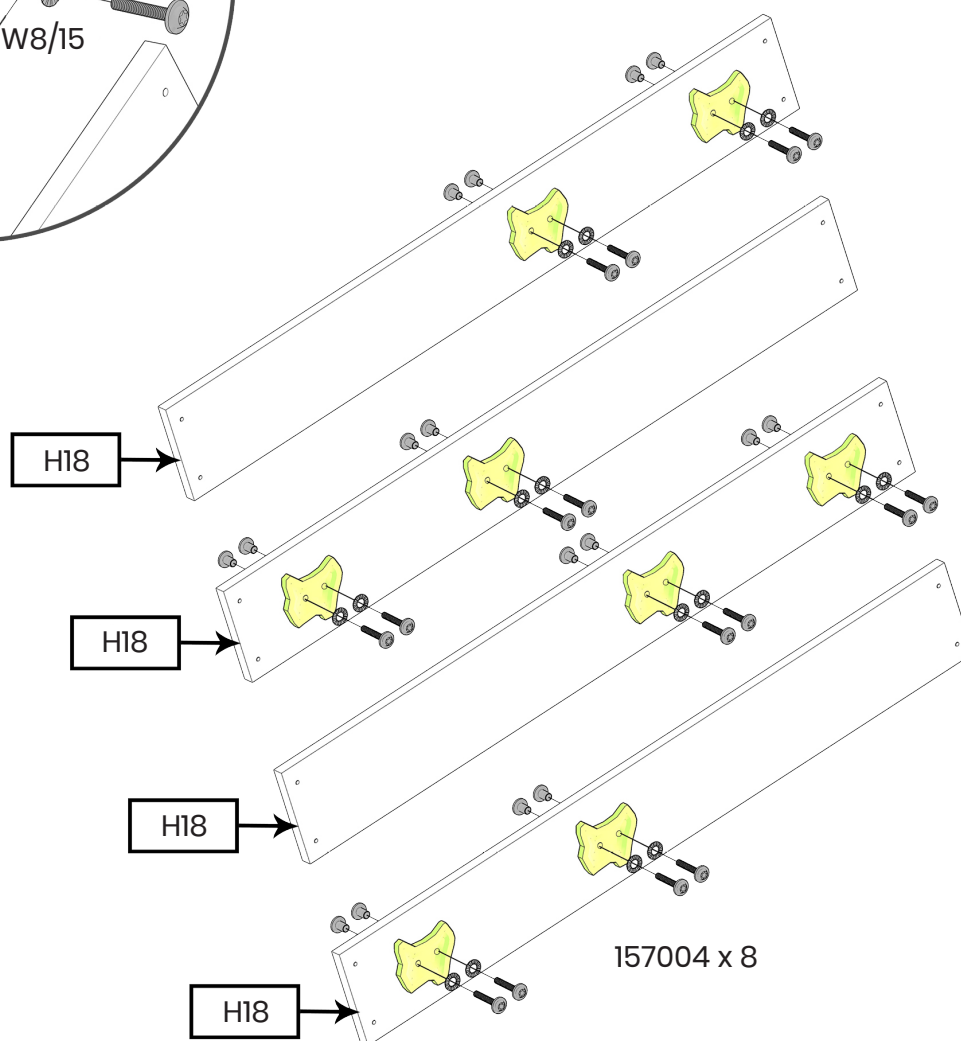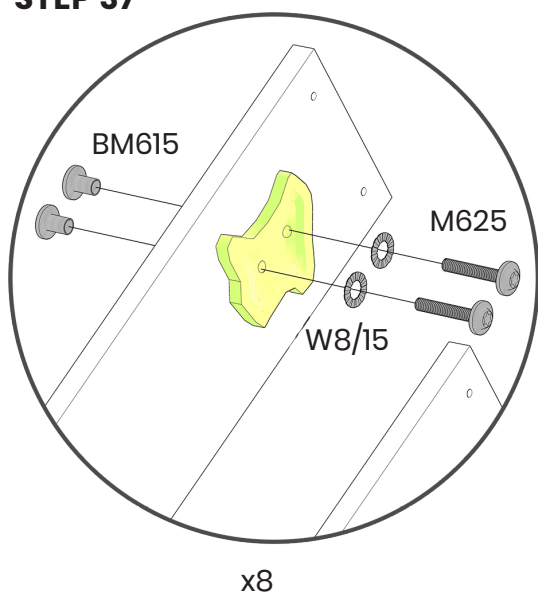


List	
Part NO.	Qty
H18	4
157004	8
M625	16
BM615	16
W8/15	16

STEP 38


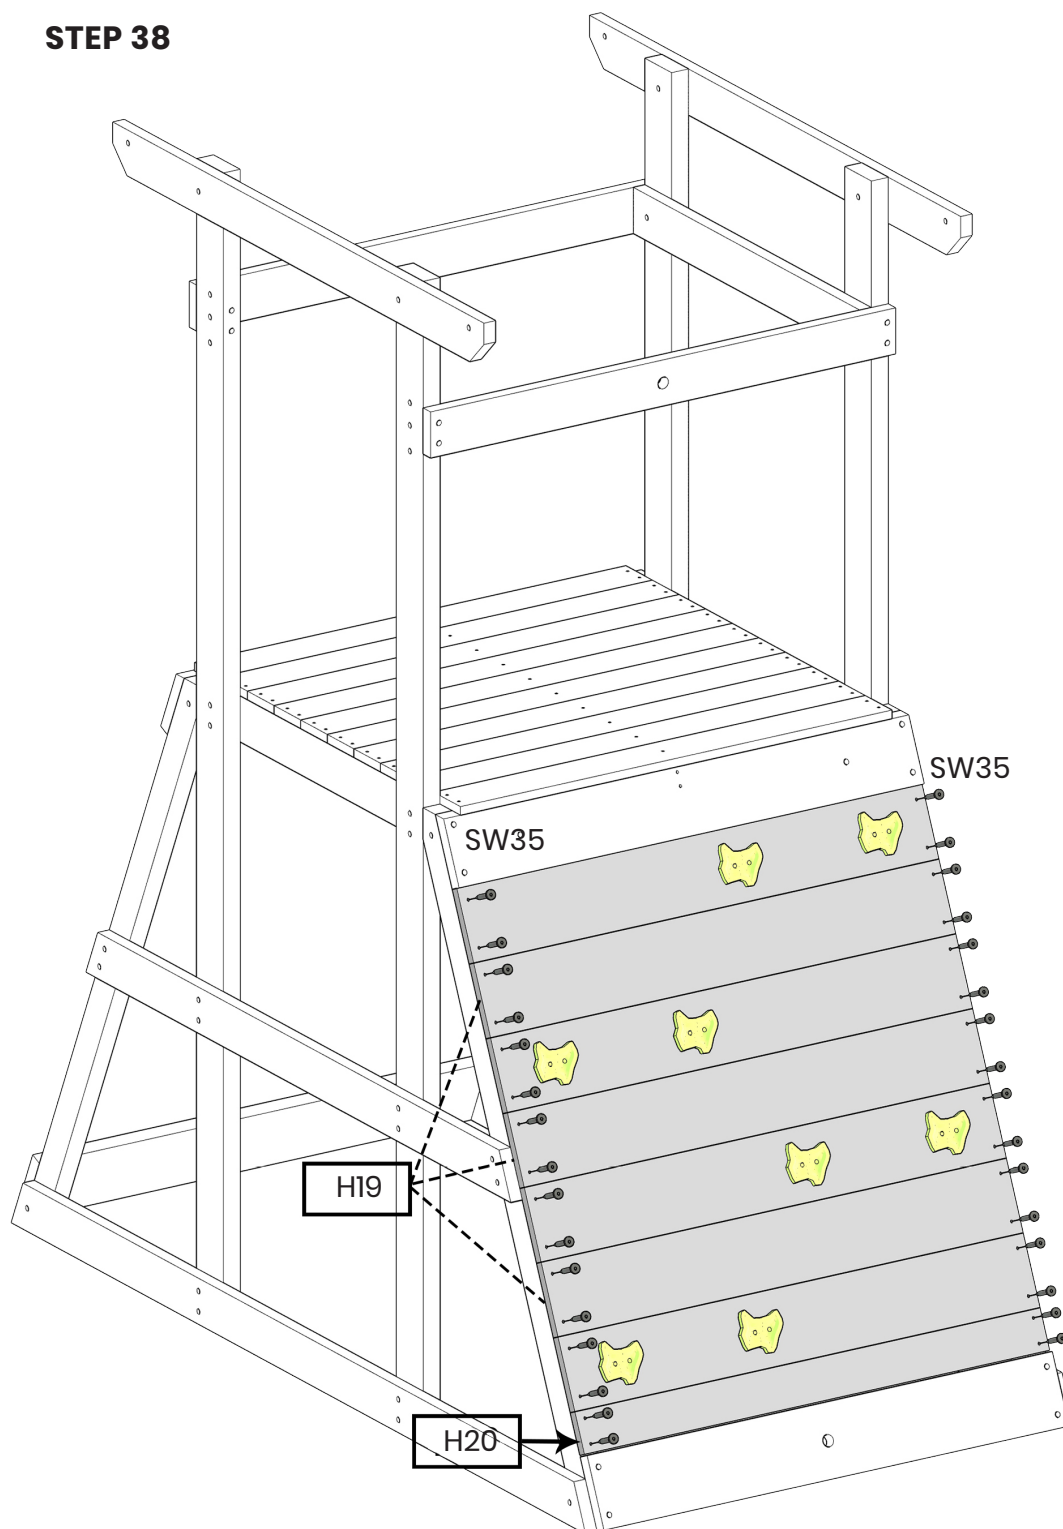


List	
Part NO.	Qty
H19	3
H20	1
SW35	32

STEP 39

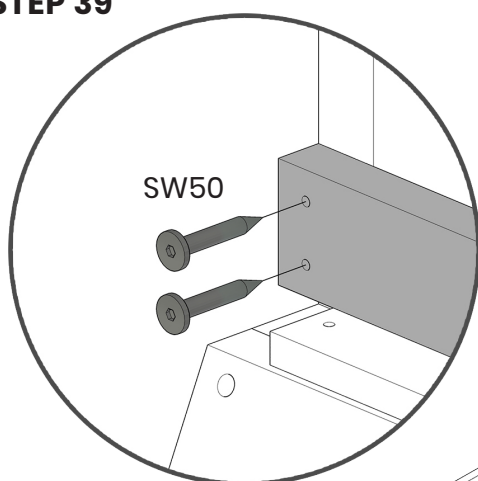


x2

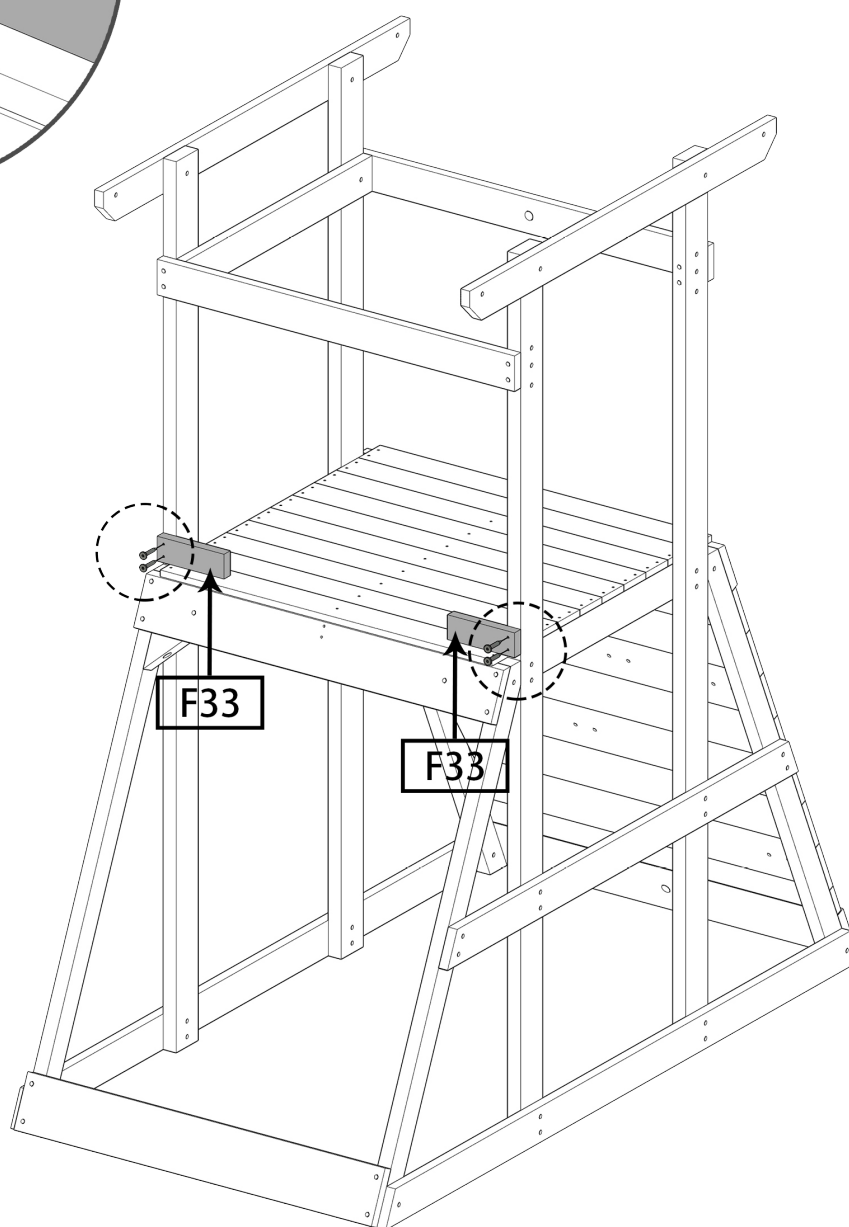


List	
Part NO.	Qty
F33	2
SW50	4

STEP 40


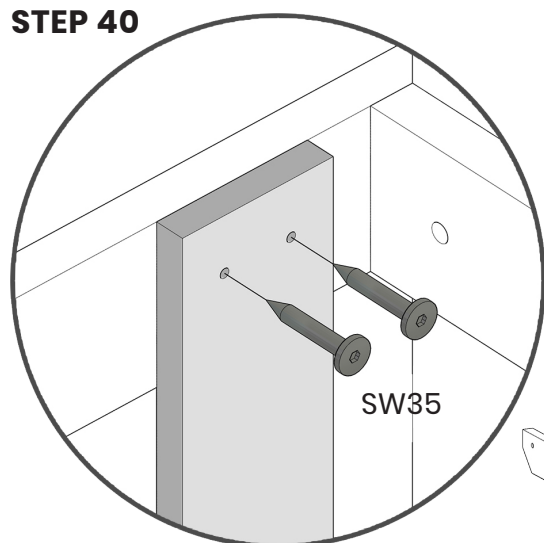


x4

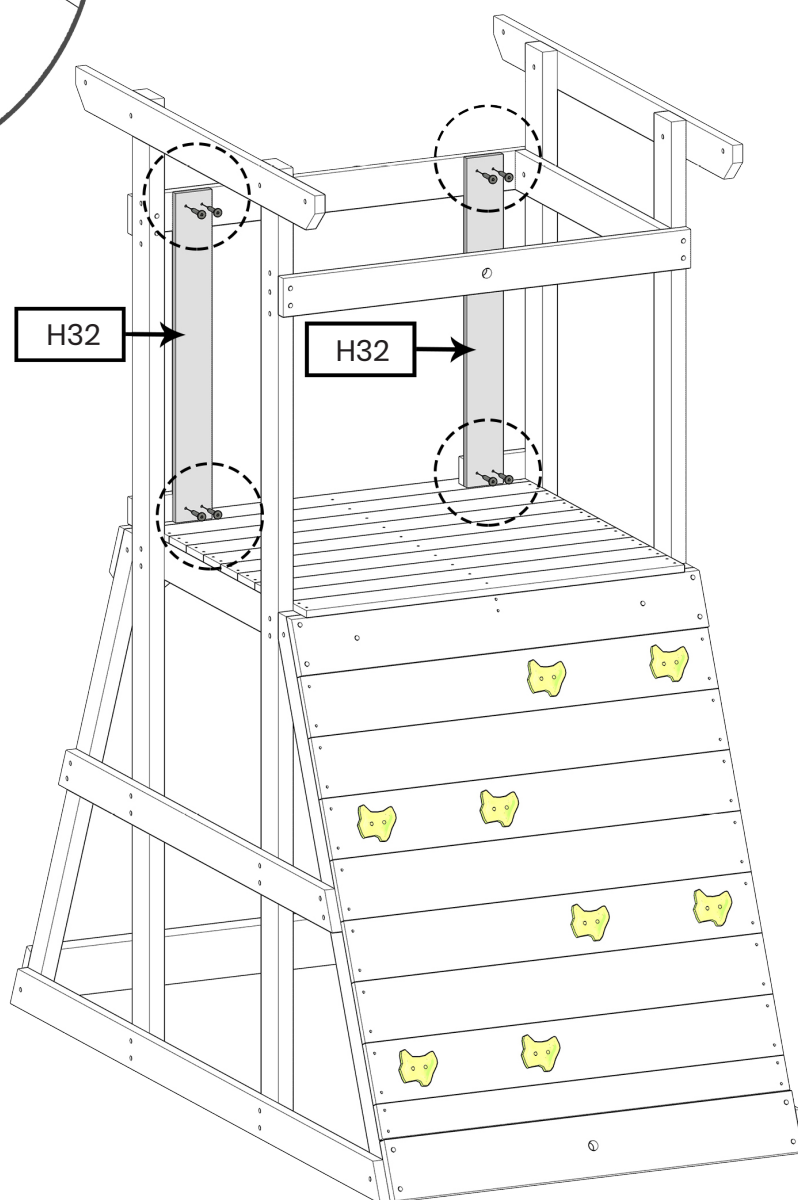


List	
Part NO.	Qty
H32	2
SW35	8

STEP 41

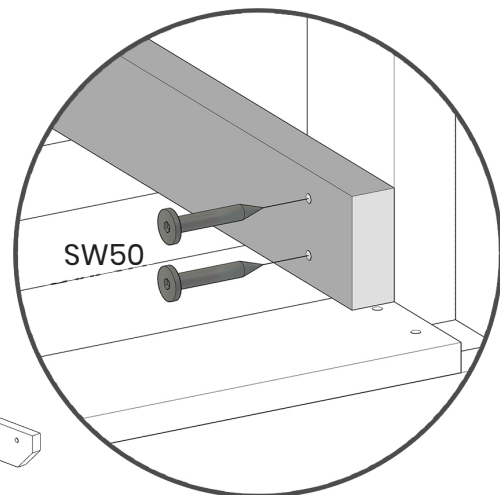
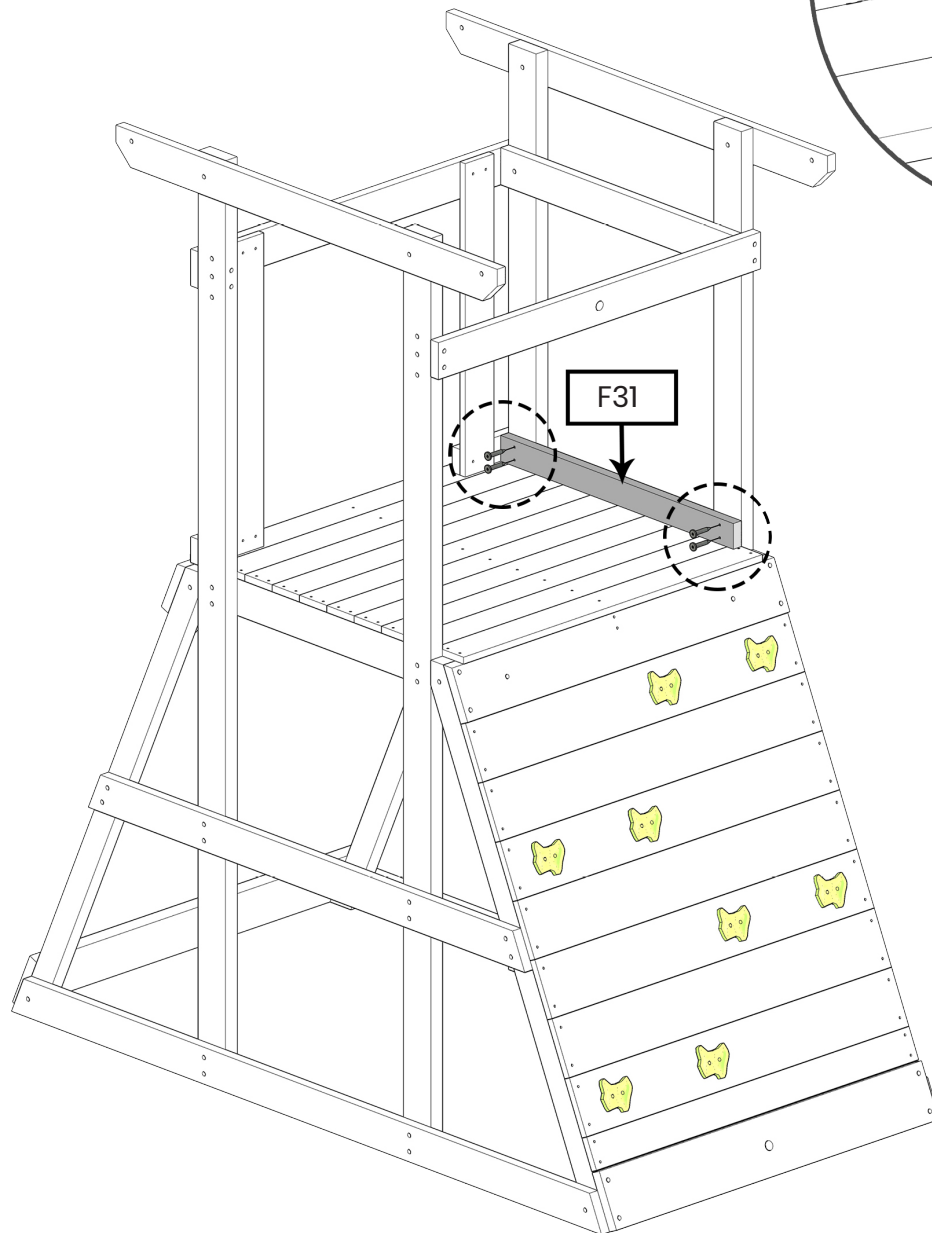


x2

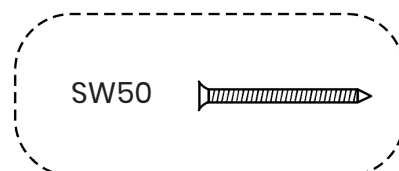



List	
Part NO.	Qty
F31	1
SW50	4

STEP 42

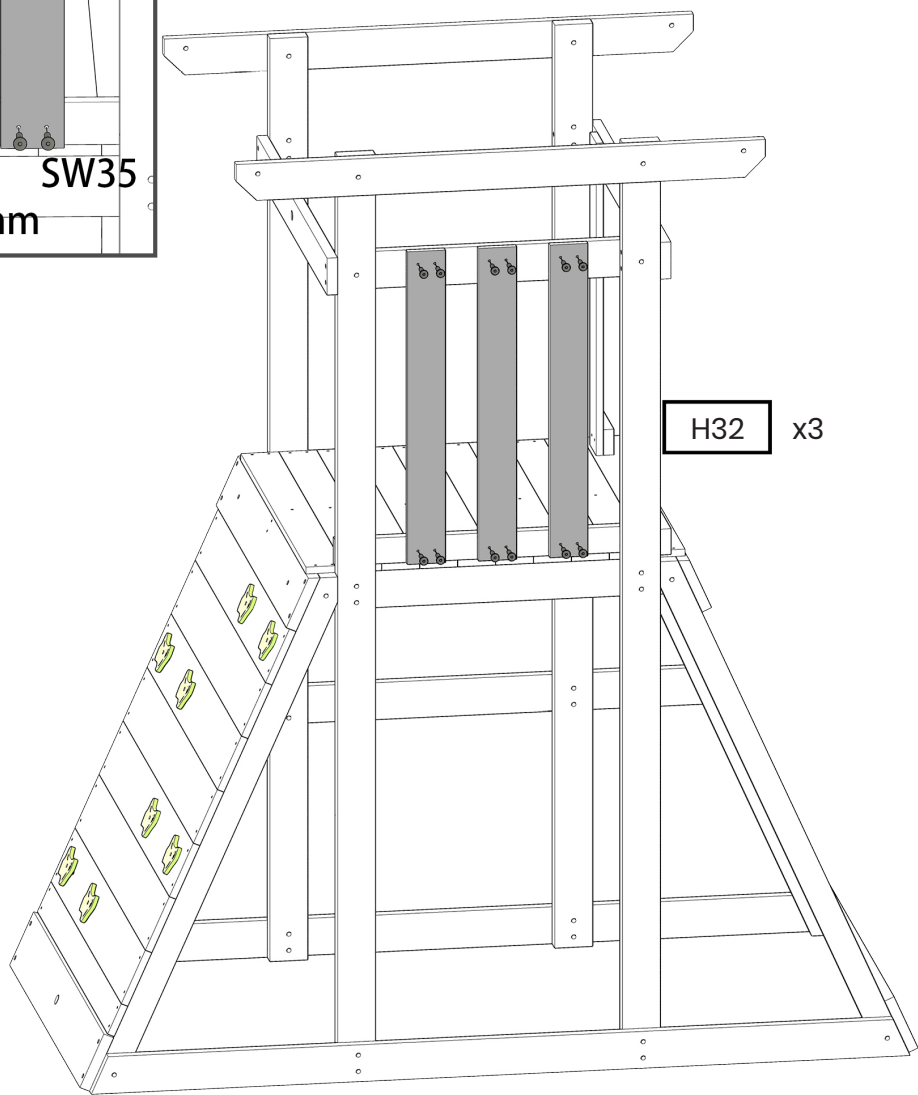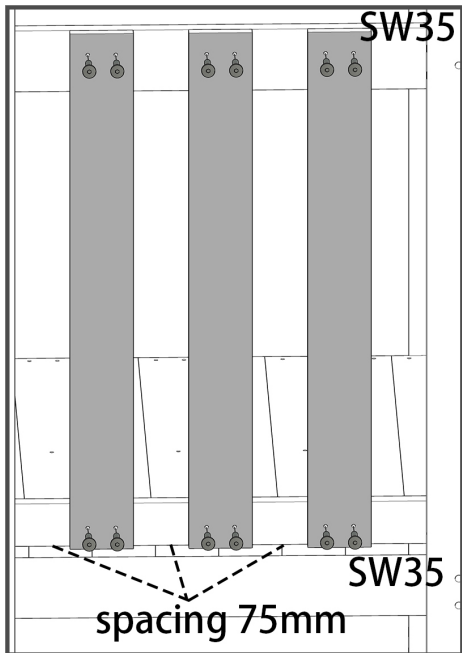


List	
Part NO.	Qty
H32	3
SW35	12

STEP 43

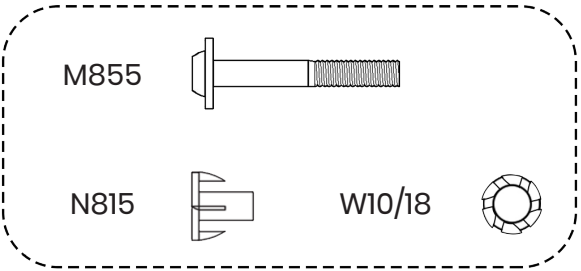
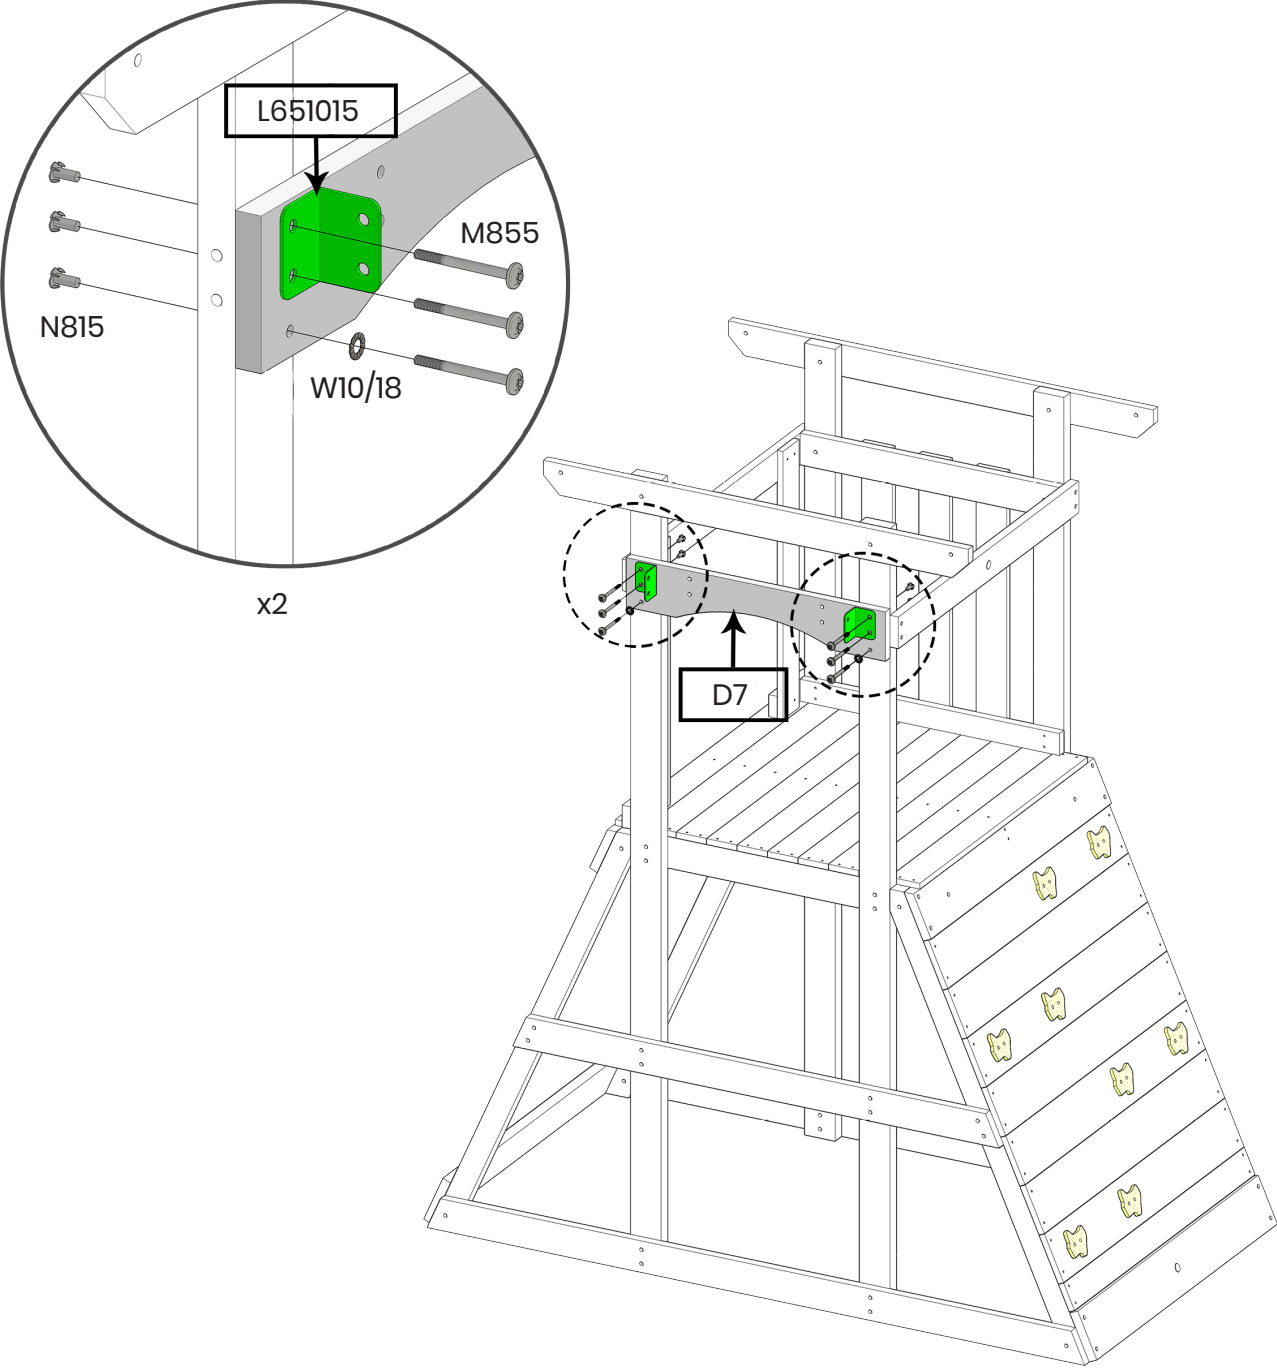


List	
Part NO.	Qty
D7	1
L651015	2
M855	6
N815	6
W10/18	2

STEP 44




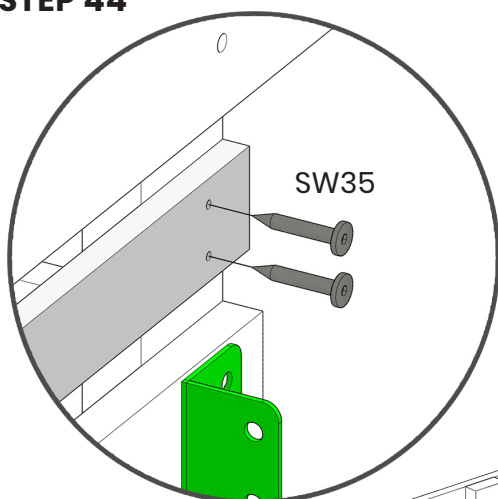


x2

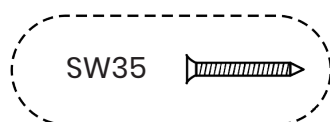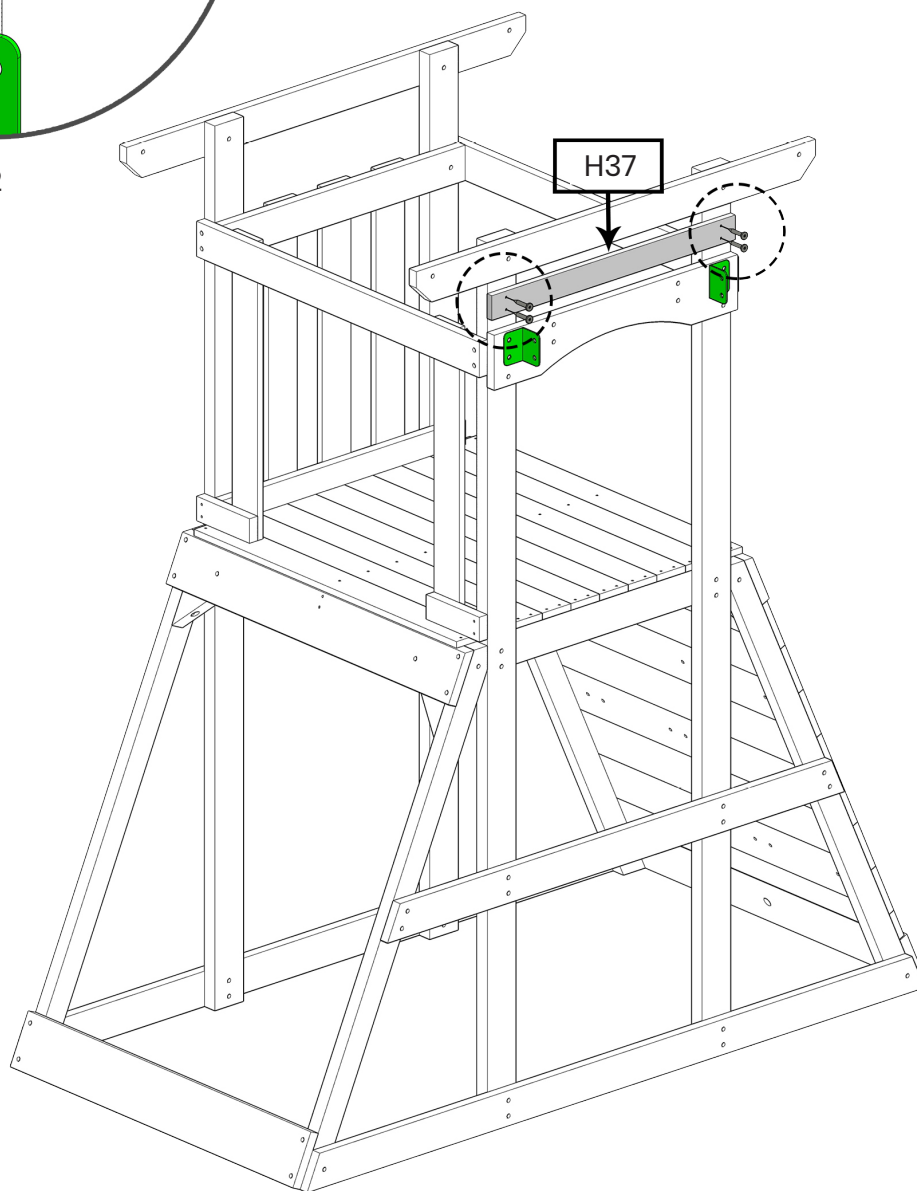



List	
Part NO.	Qty
H37	1
SW35	4

STEP 45

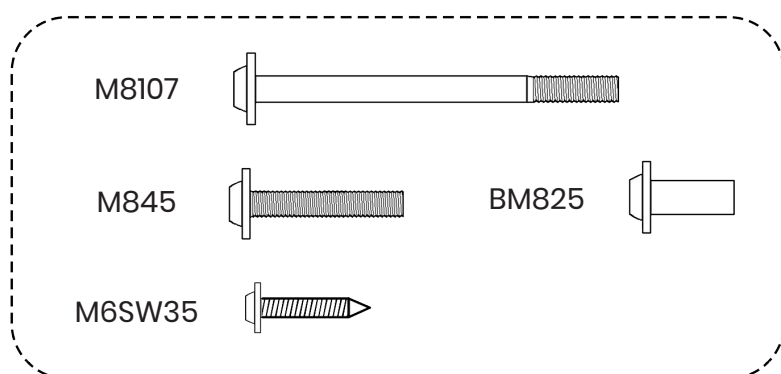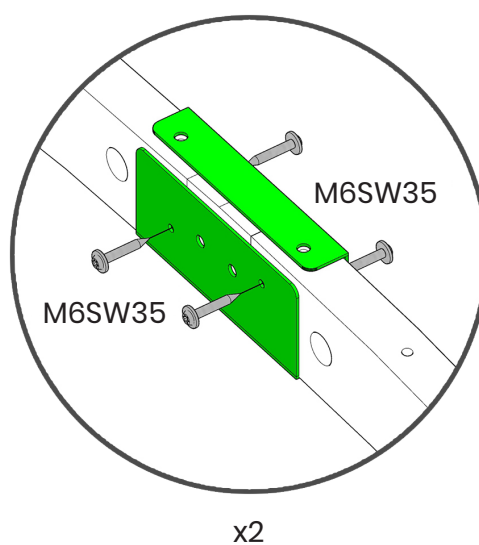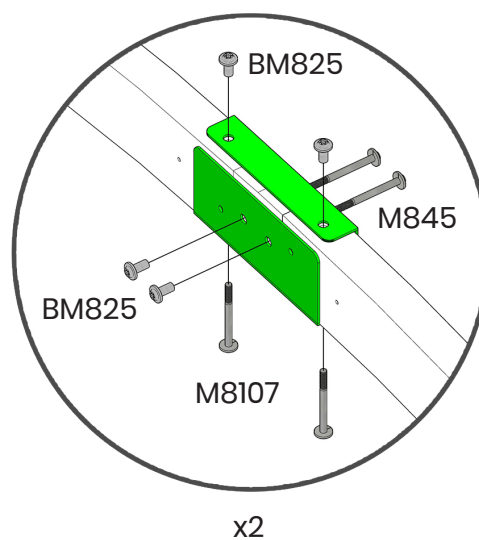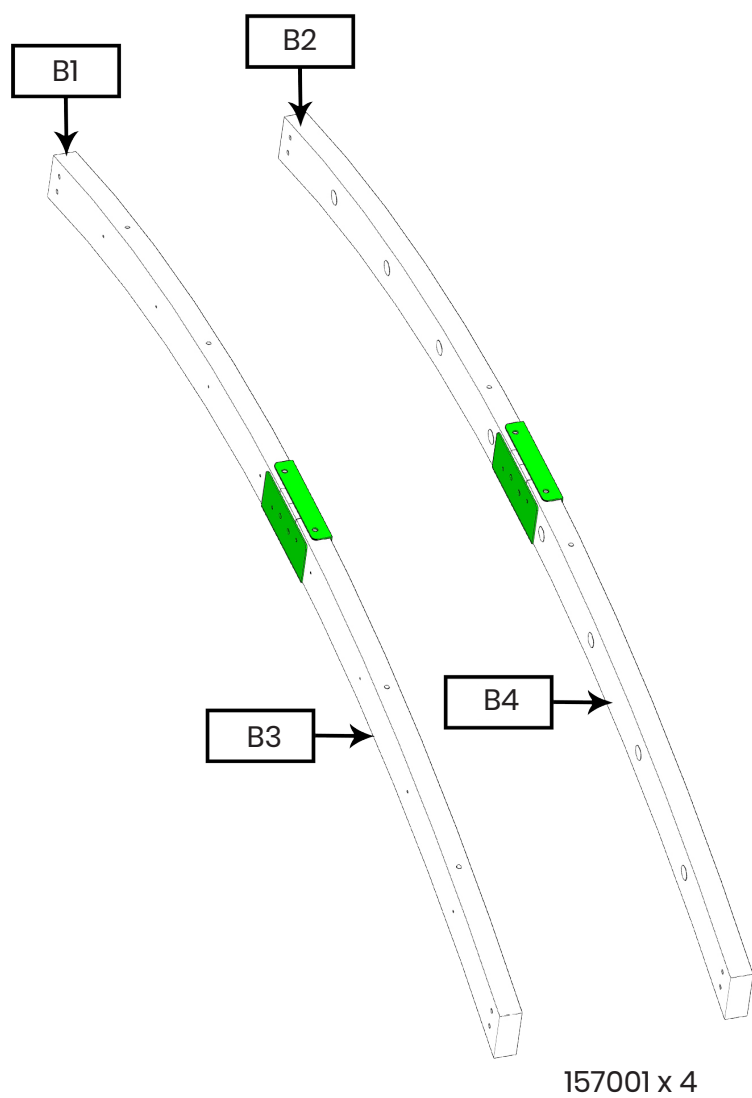


List	
Part NO.	Qty
B1	1
B2	1
B3	1
B4	1
157001	4
M8107	4
M845	4
BM825	8
M6SW35	8


STEP 46

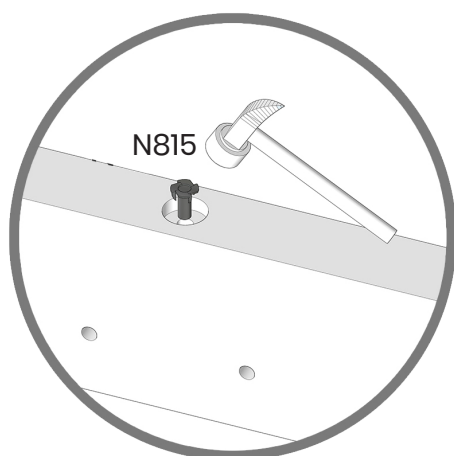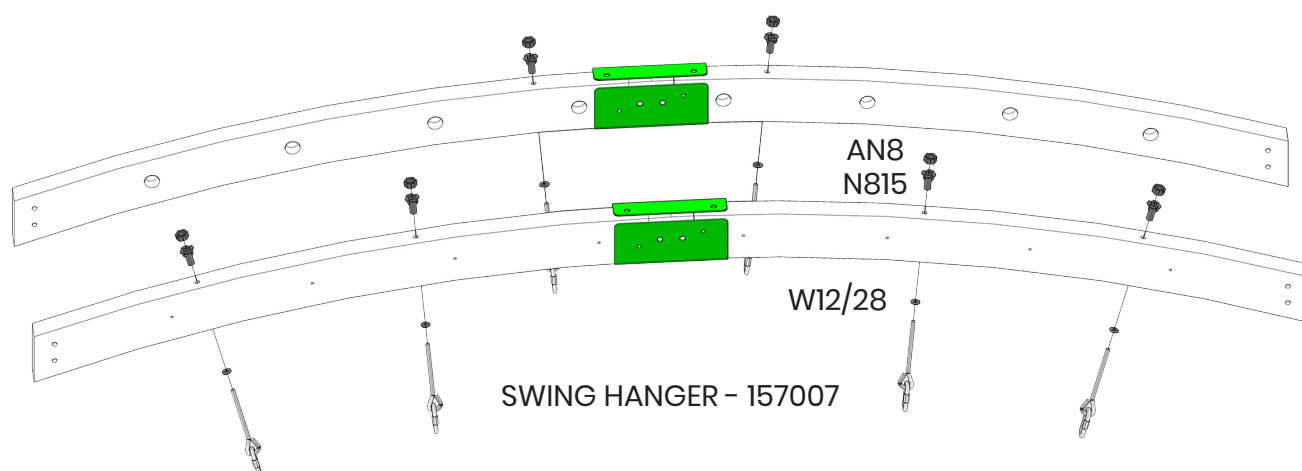

Insert the N815 into the beam by hammer

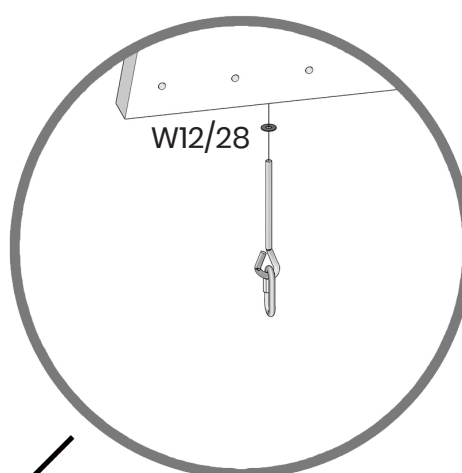

Insert the swing hanger into the beam and fix them with nuts N815 as tightly as possible


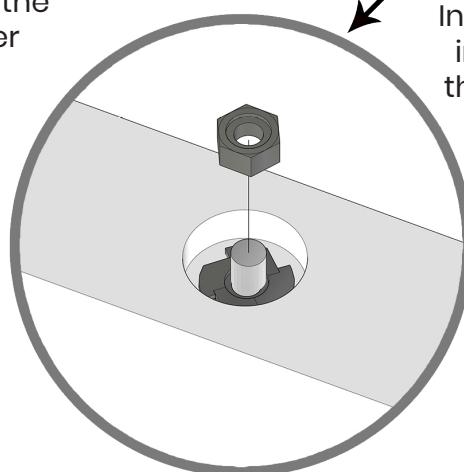


Fix the AN8 as tightly as possible





List	
Part NO.	Qty
157007	6
N815	6
AN8	6
W12/18	6

STEP 47

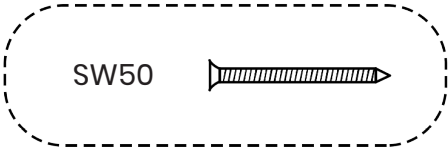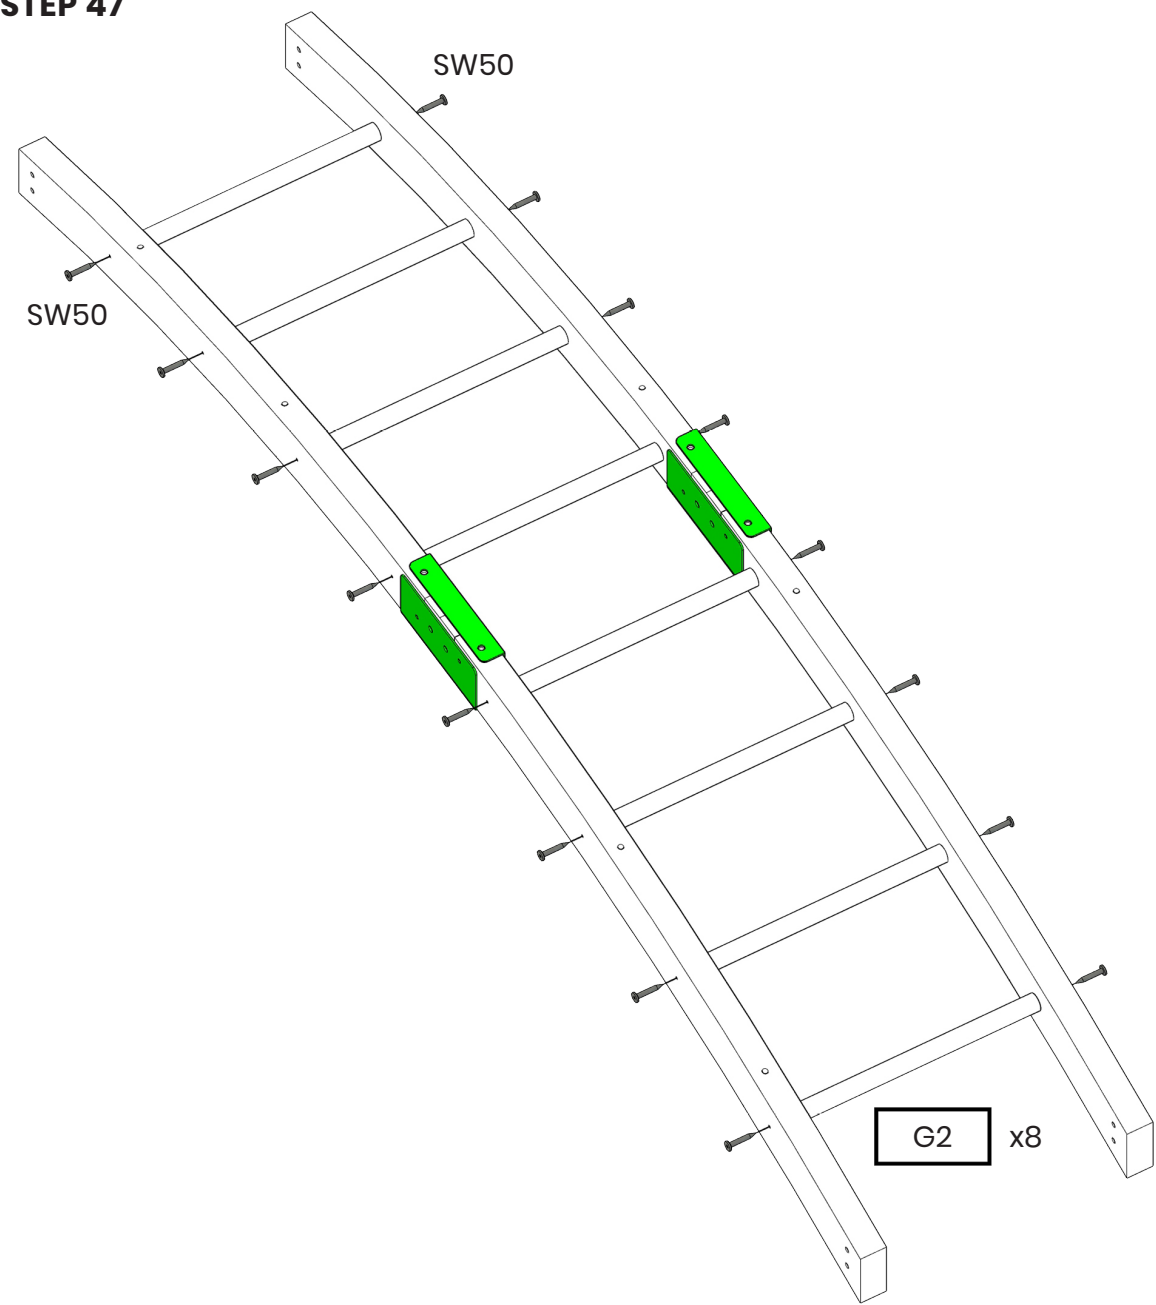


List	
Part NO.	Qty
G2	8
SW50	16

STEP 48

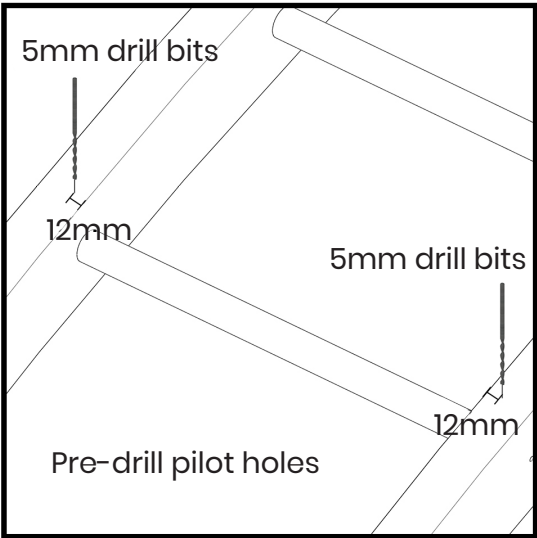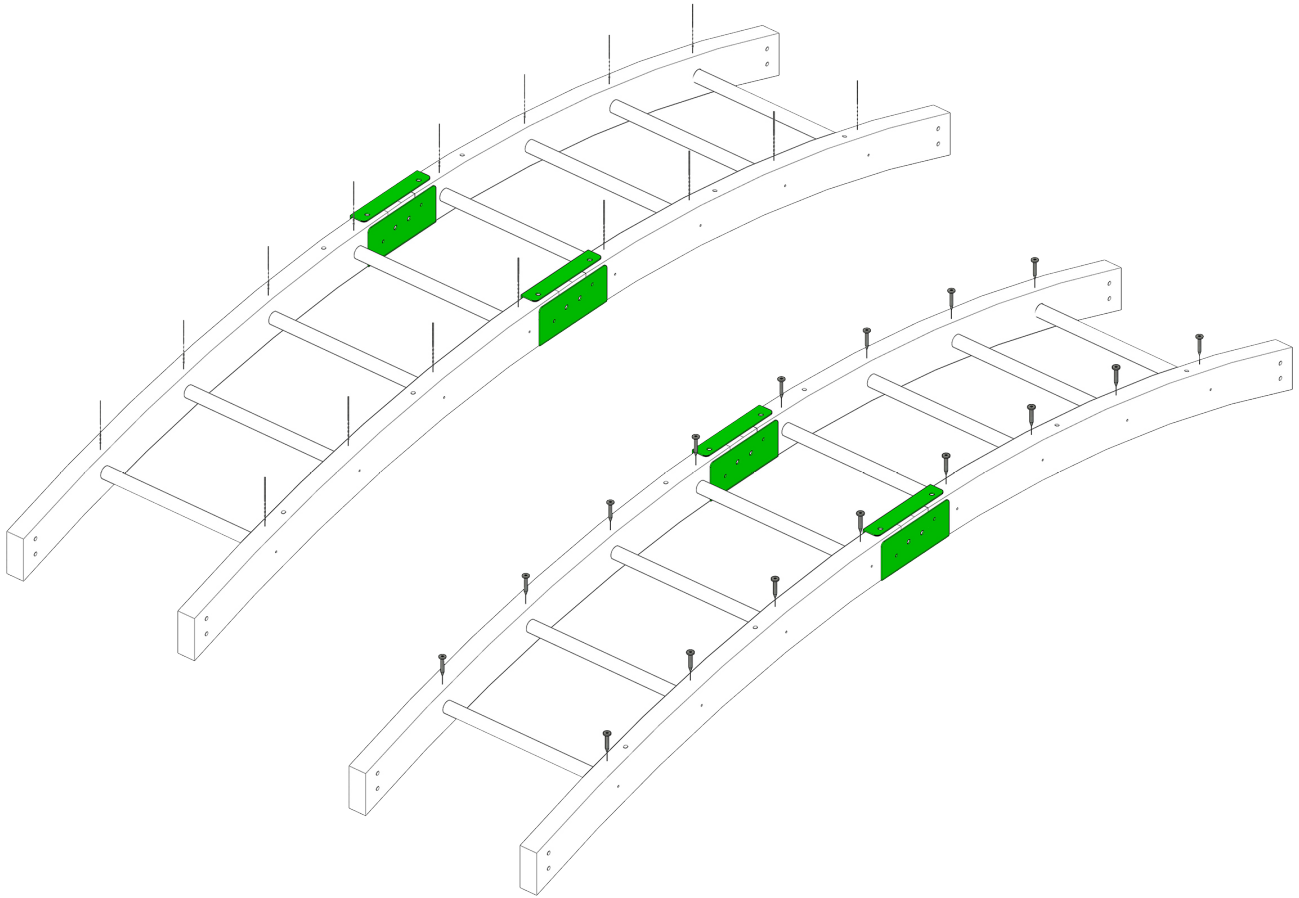

x8


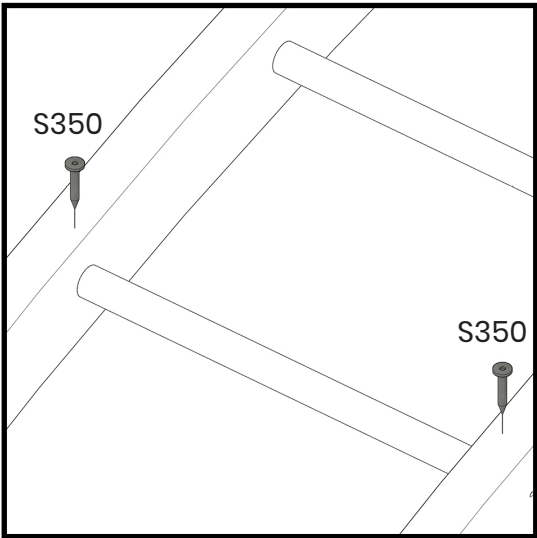


x8





List	
Part NO.	Qty
S350	16

STEP 49

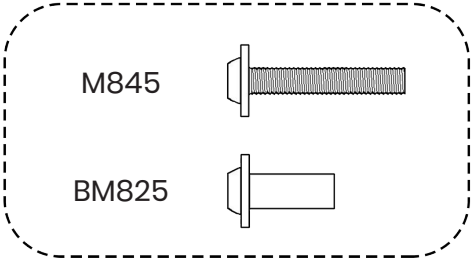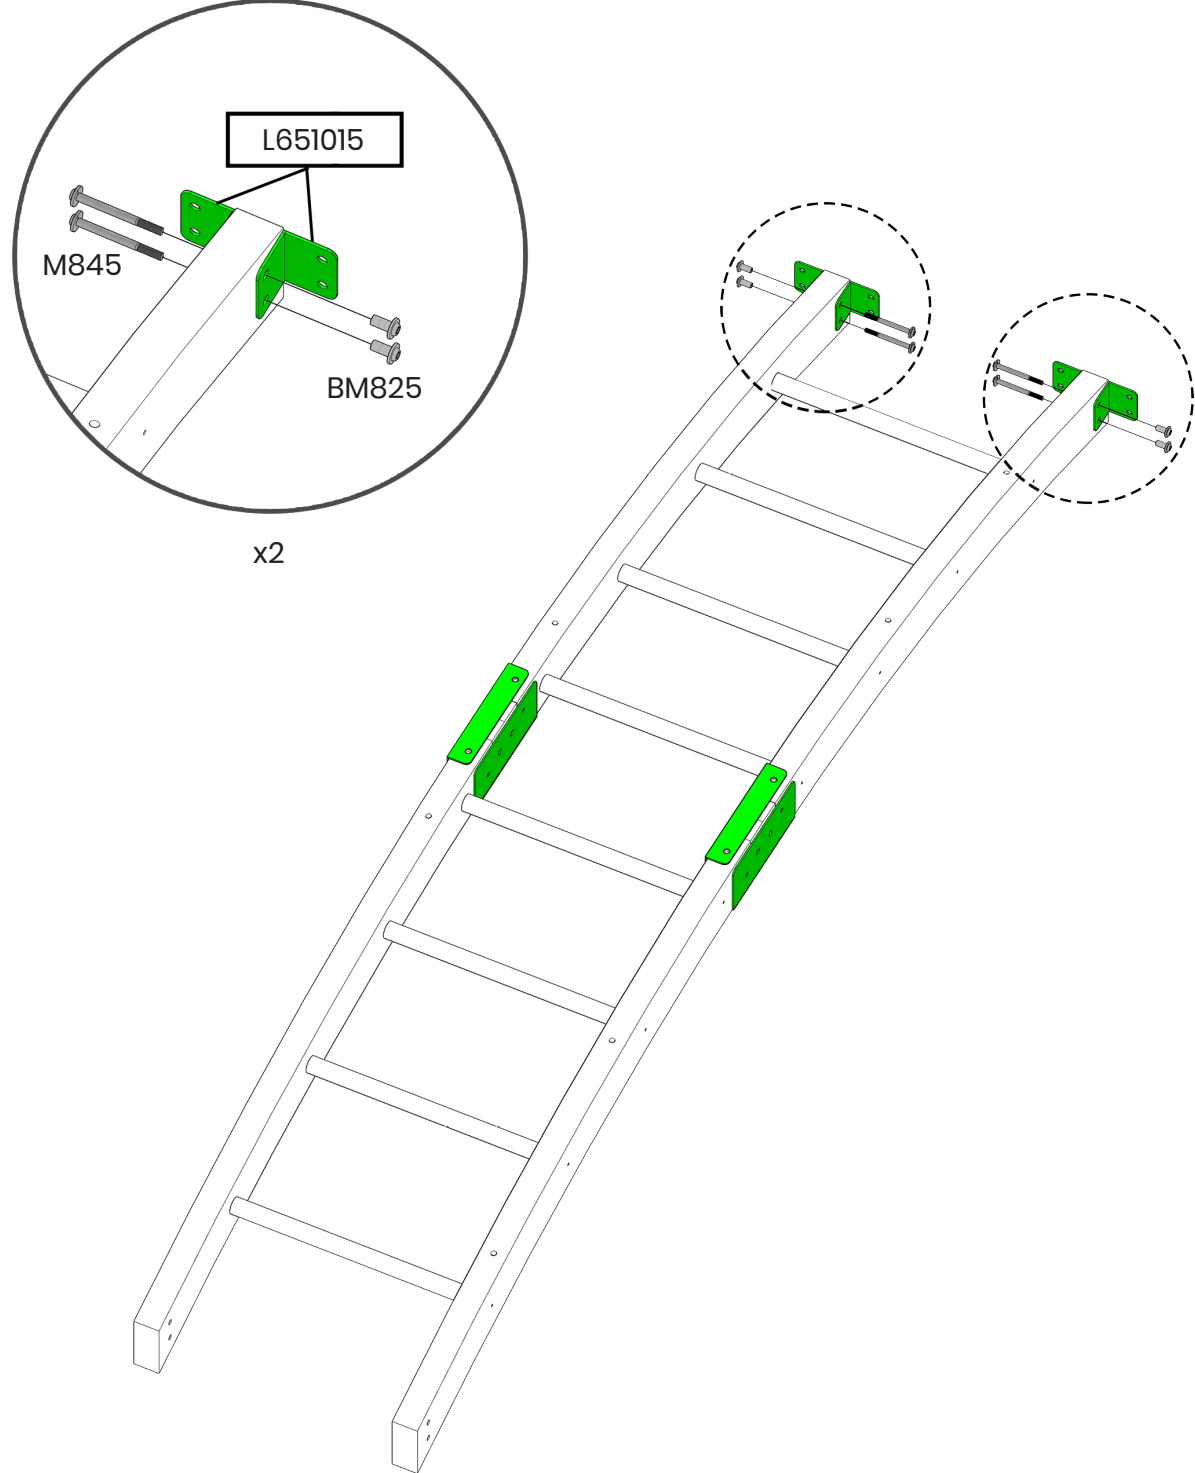


List	
Part NO.	Qty
L651015	4
M845	4
BM825	4

STEP 50

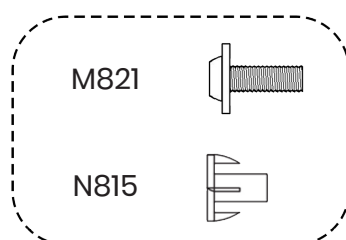
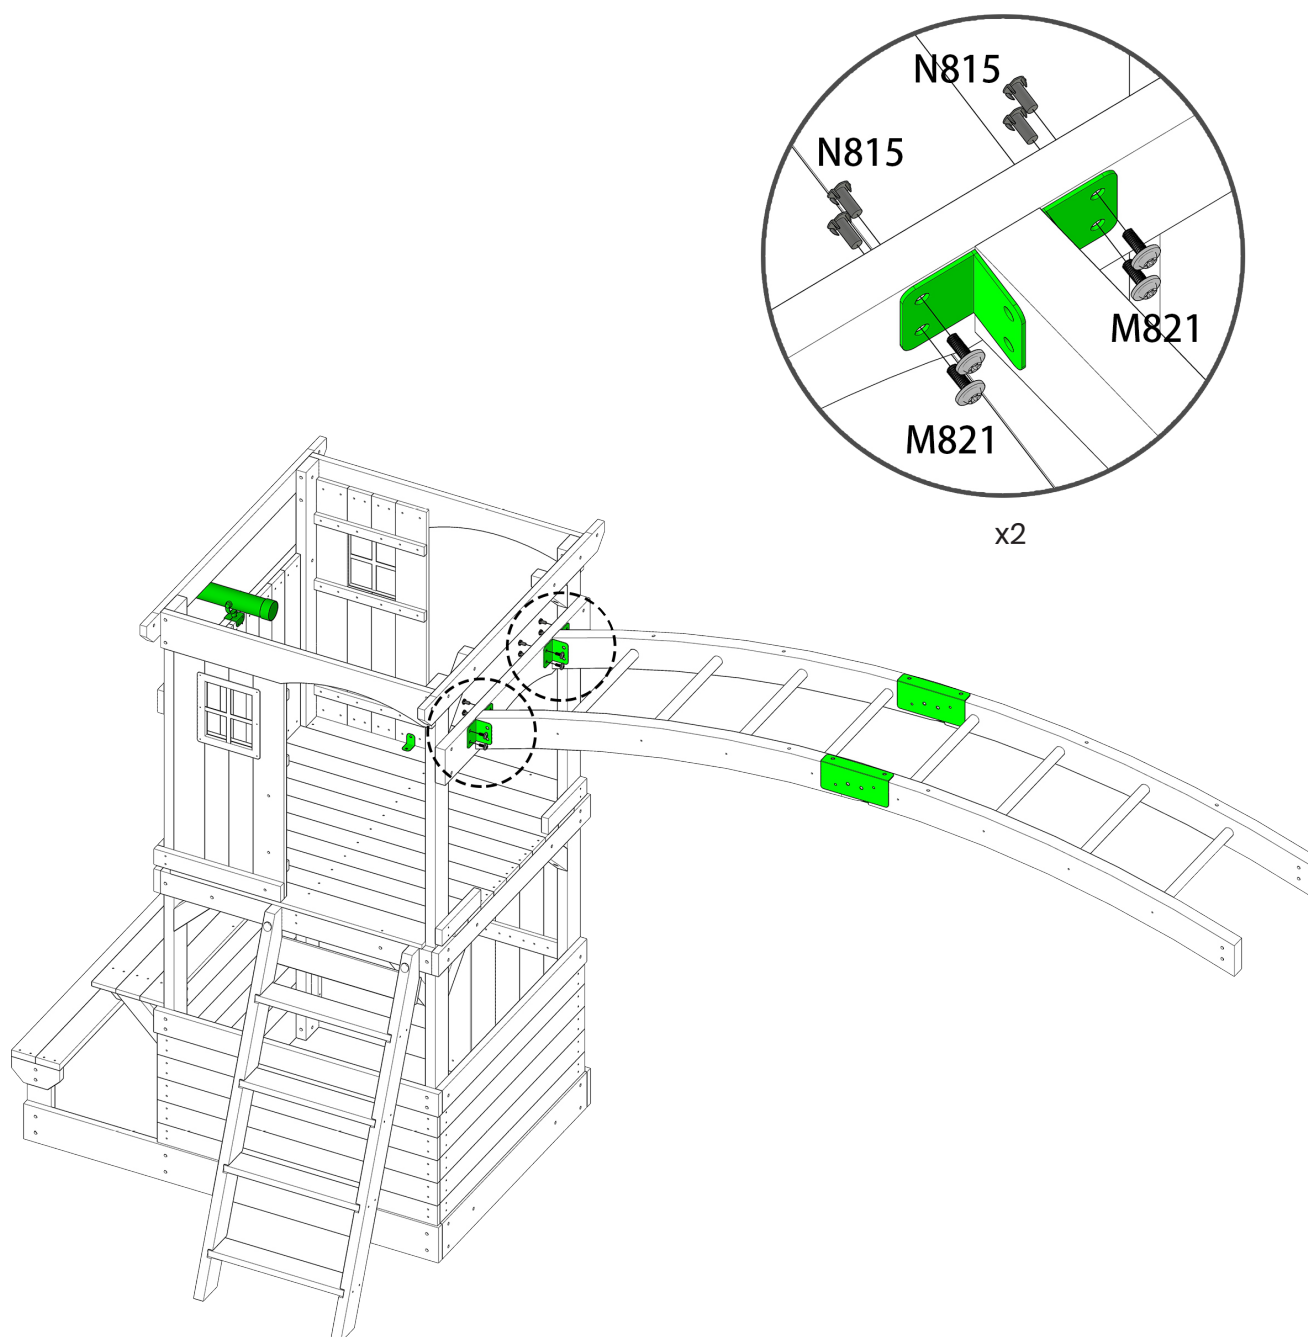


List	
Part NO.	Qty
M821	8
N815	8

STEP 51

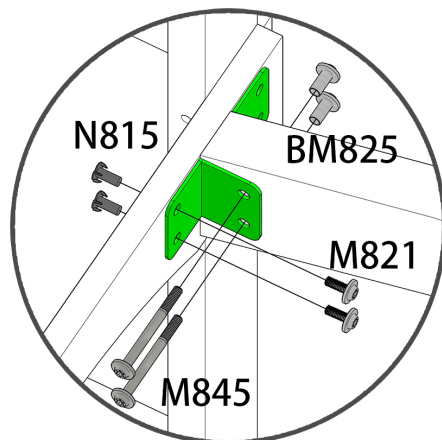

L651015 x2

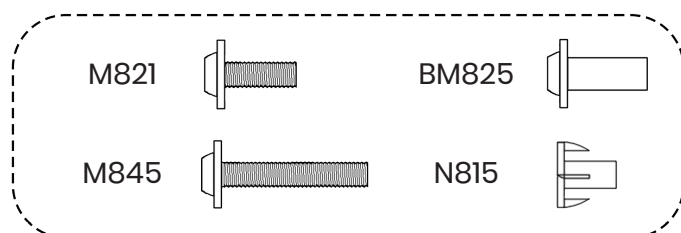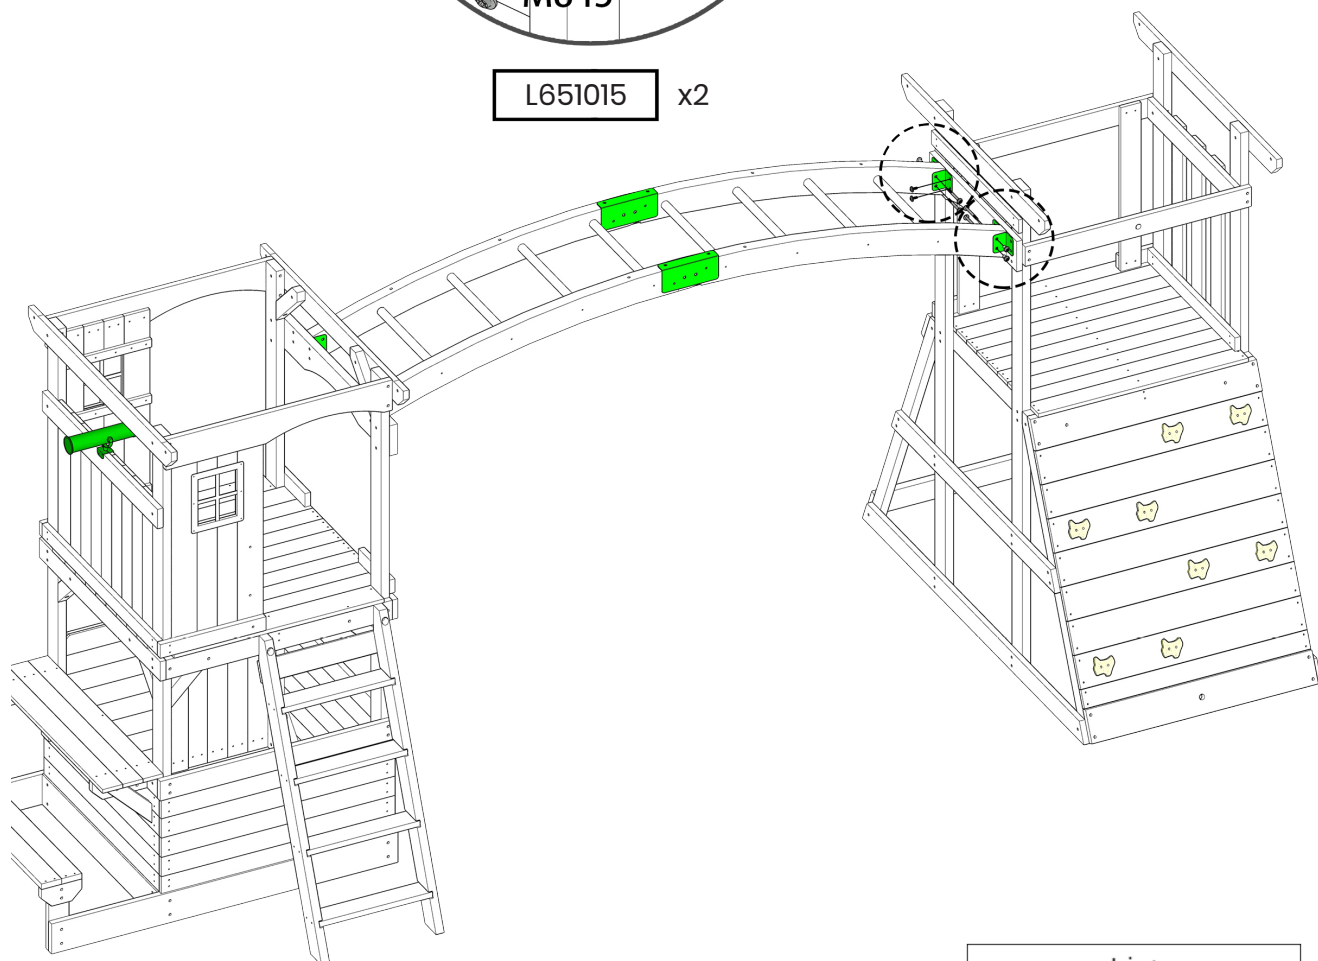


List	
Part NO.	Qty
L651015	2
M821	4
M845	4
BM825	4
N815	4

STEP 52





Hang the swing

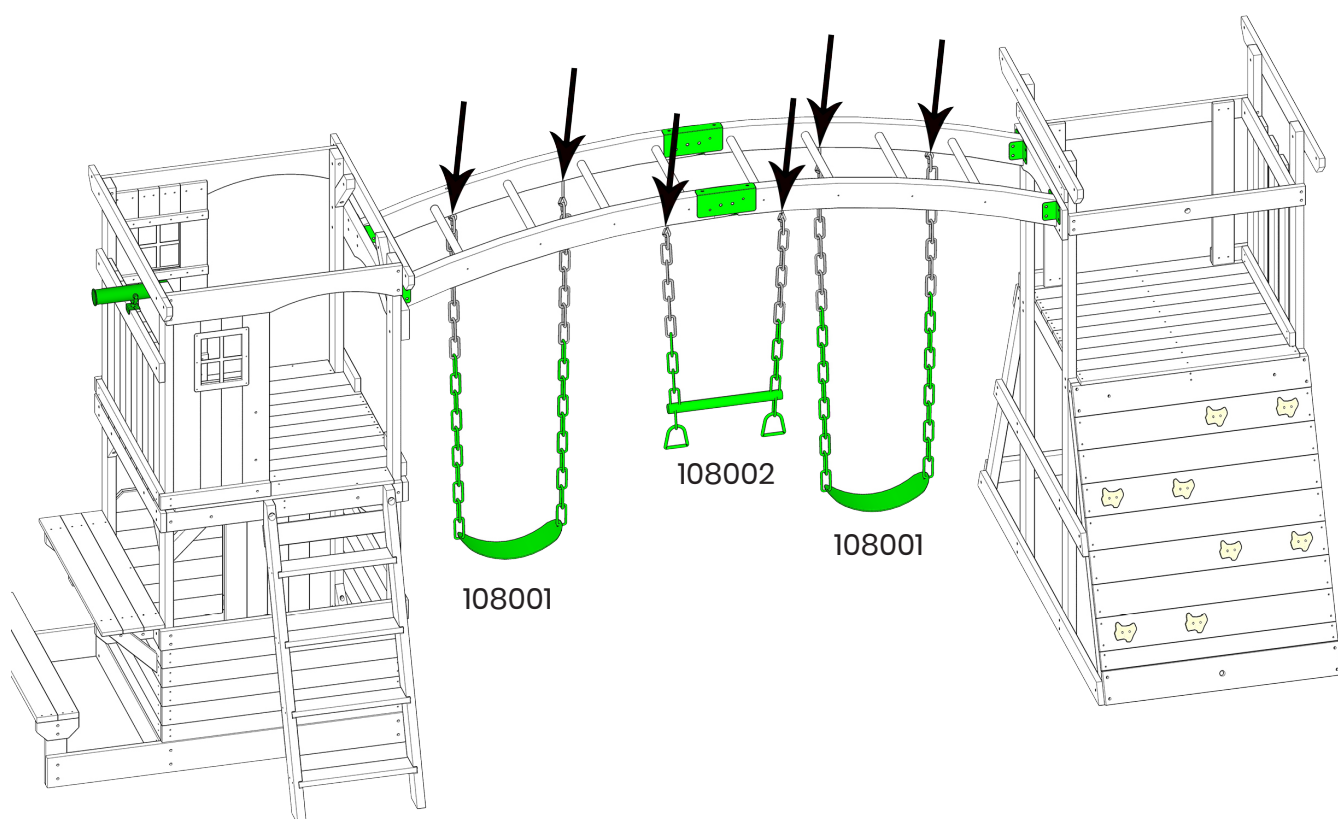


List	
Part NO.	Qty
108002	1
108001	2

STEP 53

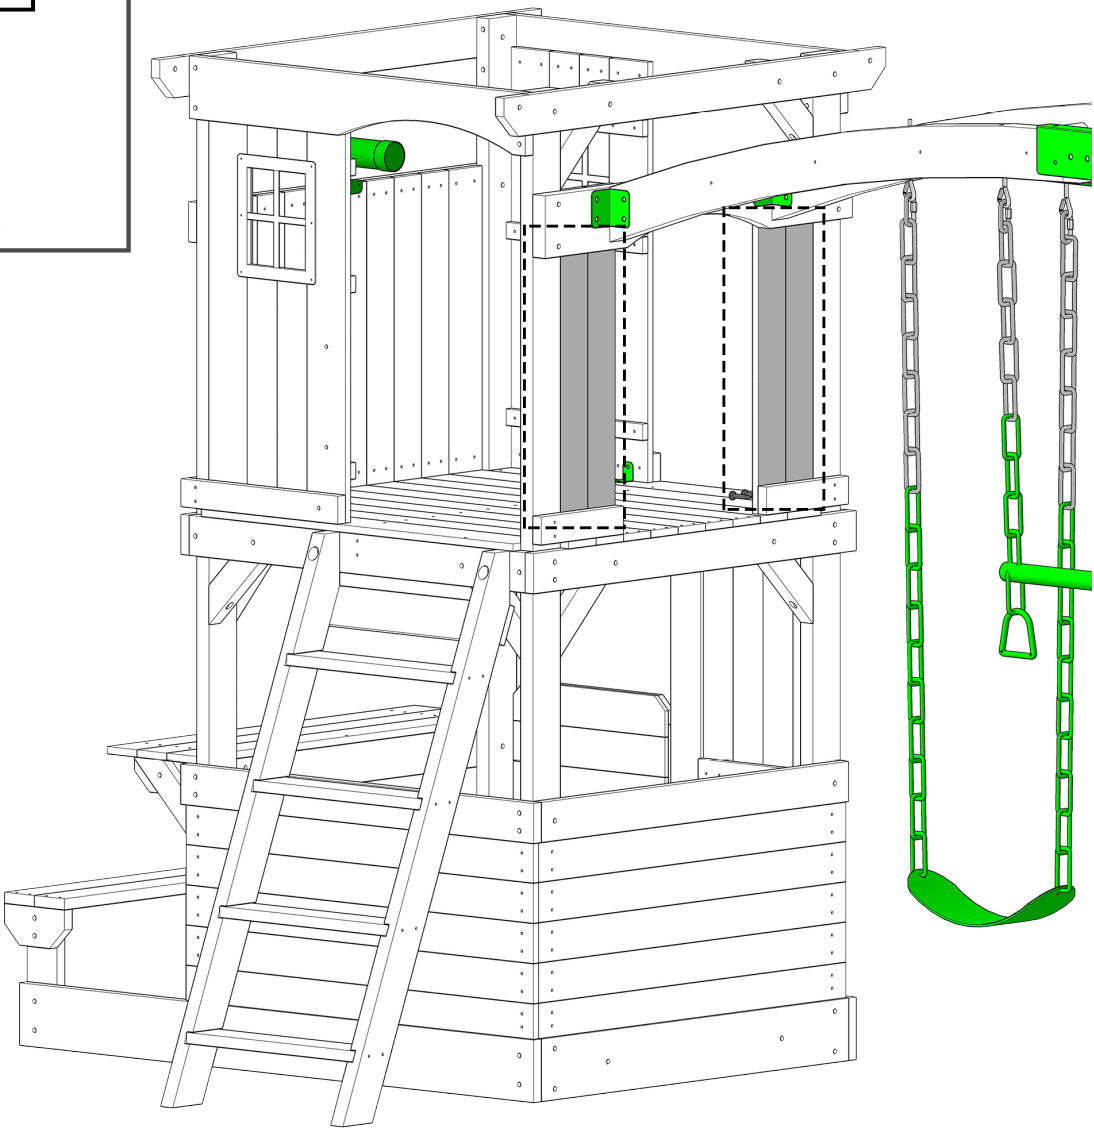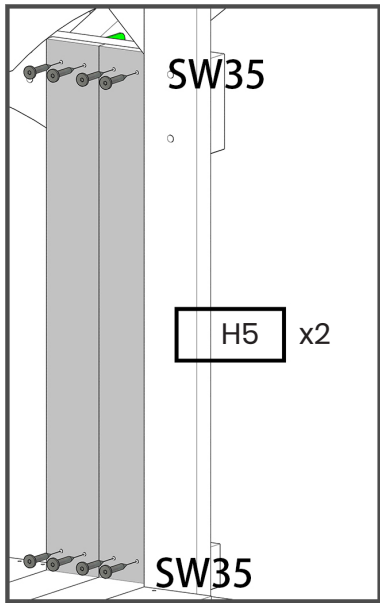




List	
Part NO.	Qty
H5	4
SW35	16

STEP 54

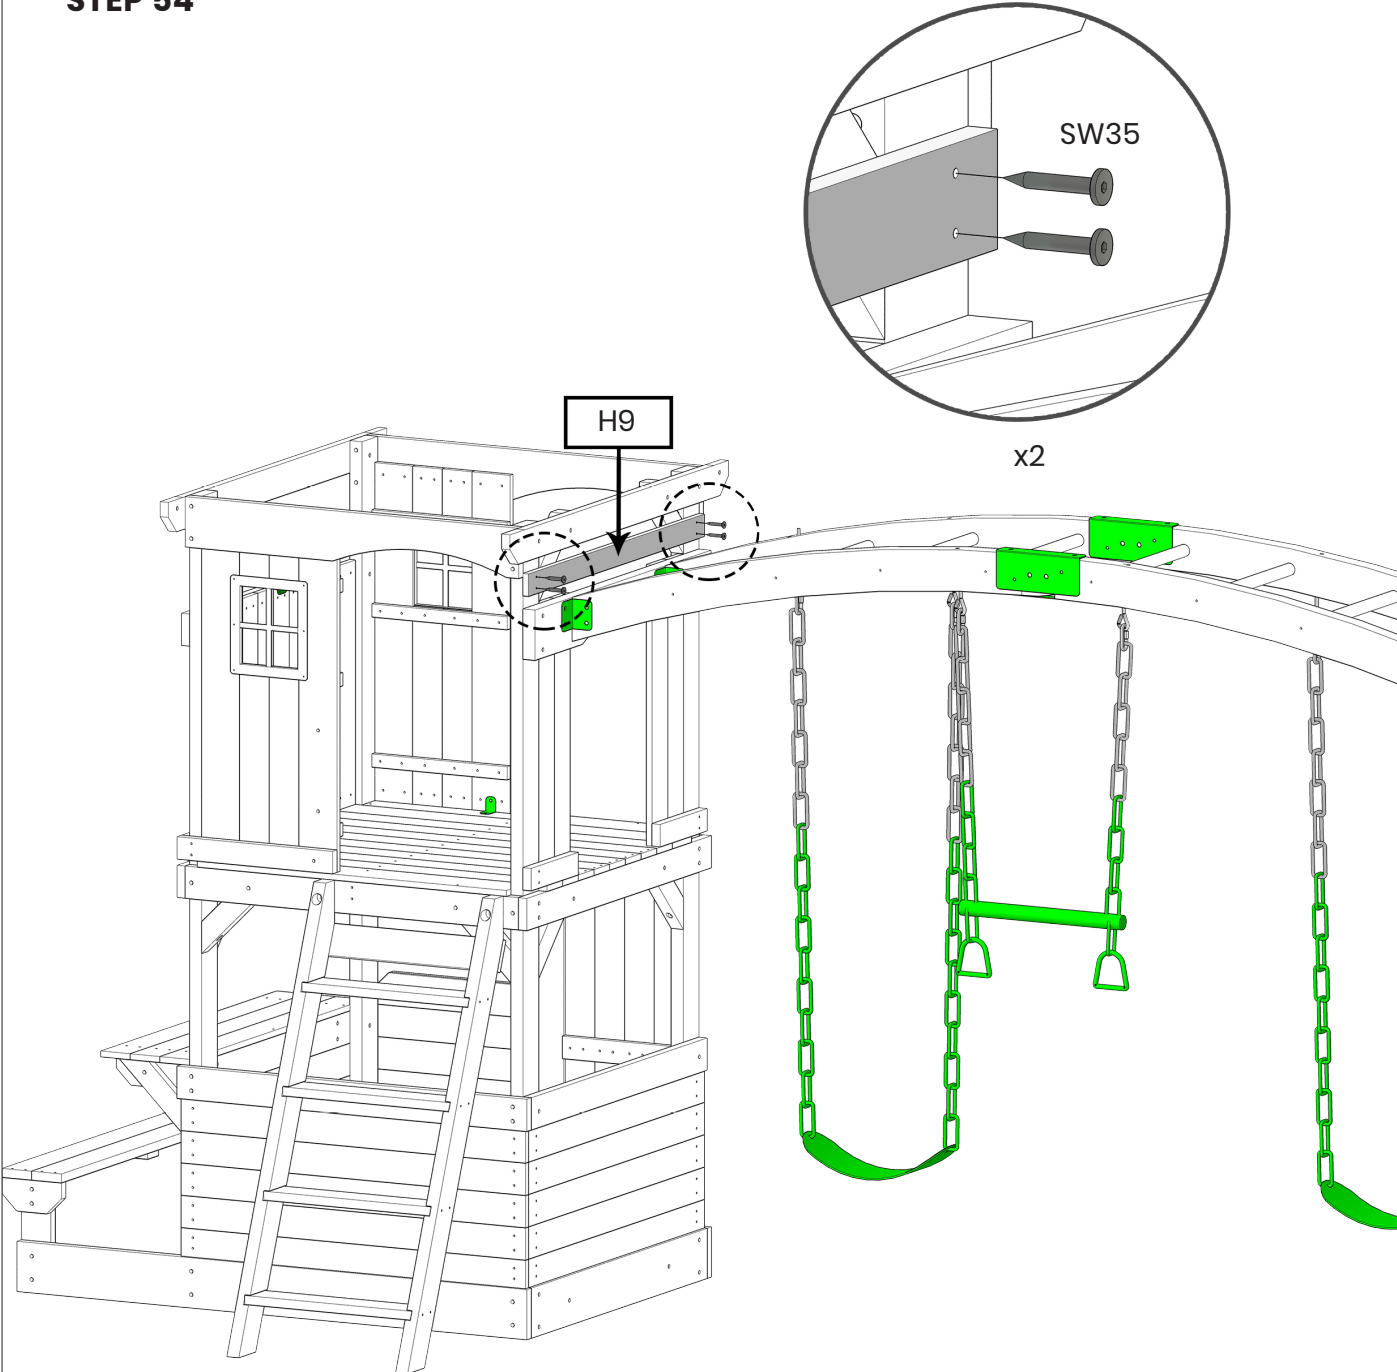



List	
Part NO.	Qty
H9	1
SW35	4

STEP 55

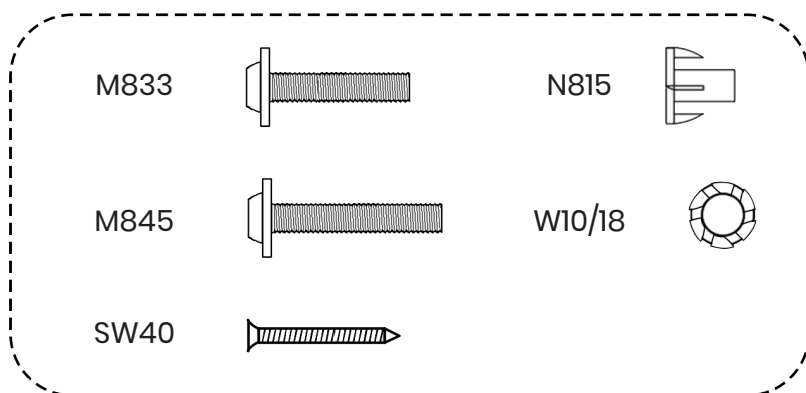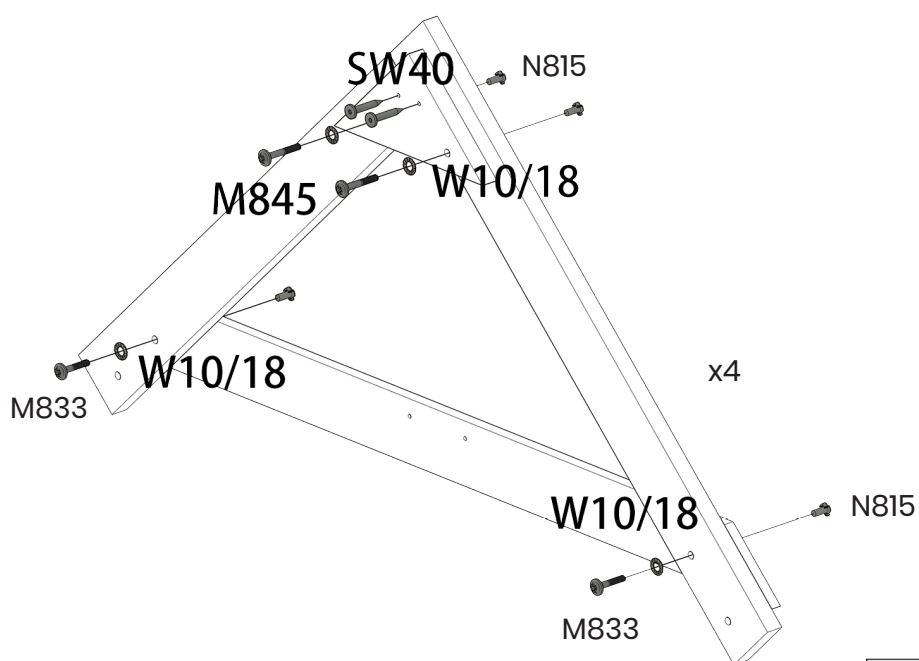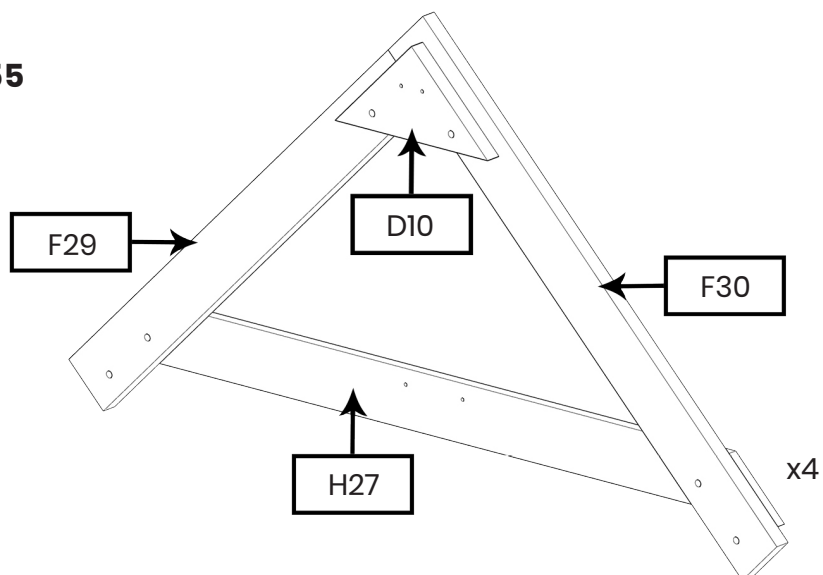


List	
Part NO.	Qty
D10	4
F29	4
F30	4
H27	4
M833	8
M845	8
N815	16
SW40	8
W10/18	16

STEP 56

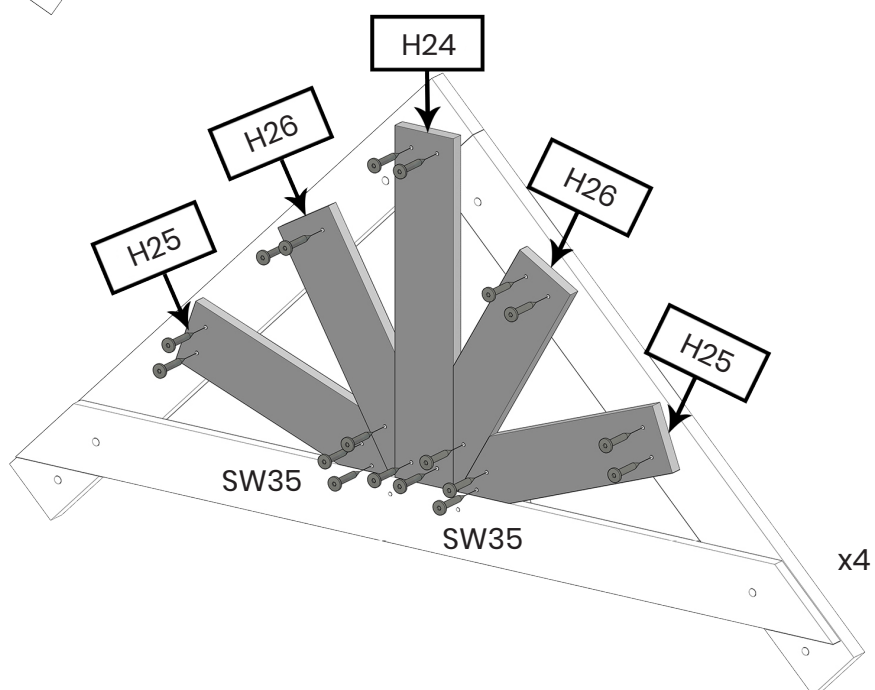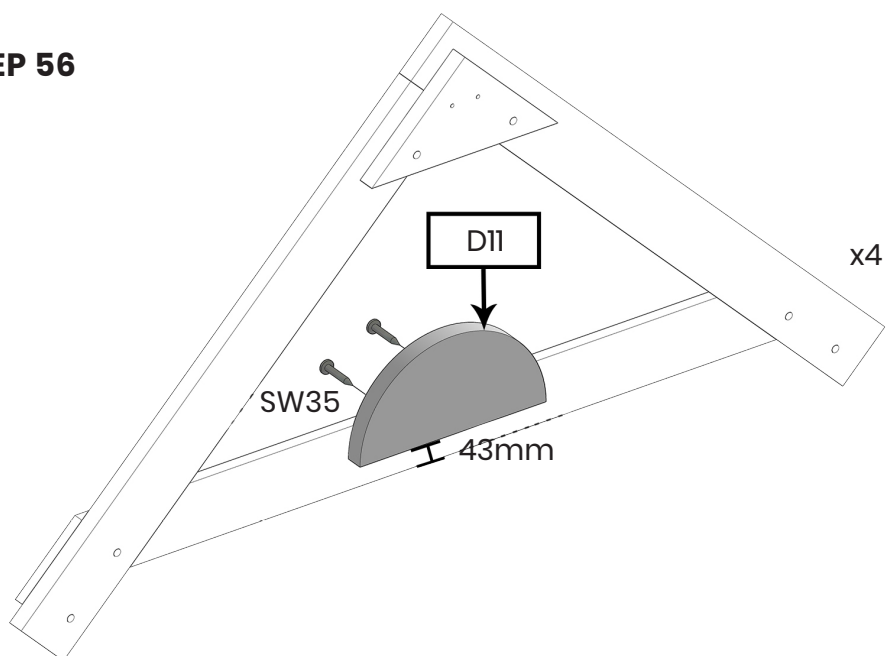


List	
Part NO.	Qty
D11	4
H24	4
H25	8
H26	8
SW35	80


STEP 57

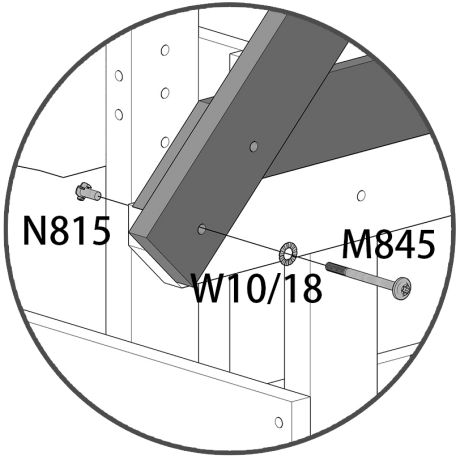


x8

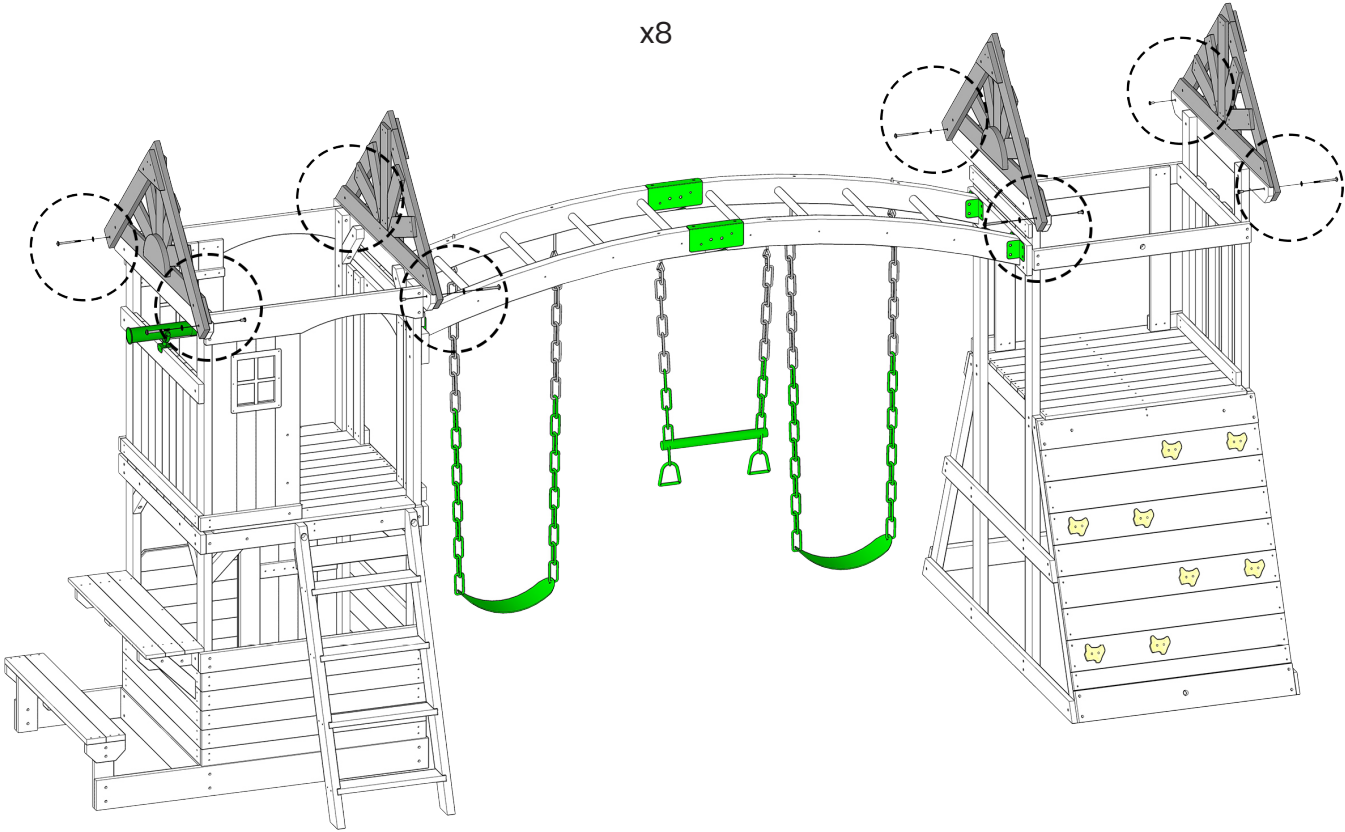


M845



W10/18





N815






List	
Part NO.	Qty
M845	8
N815	8
W10/18	8

STEP 58

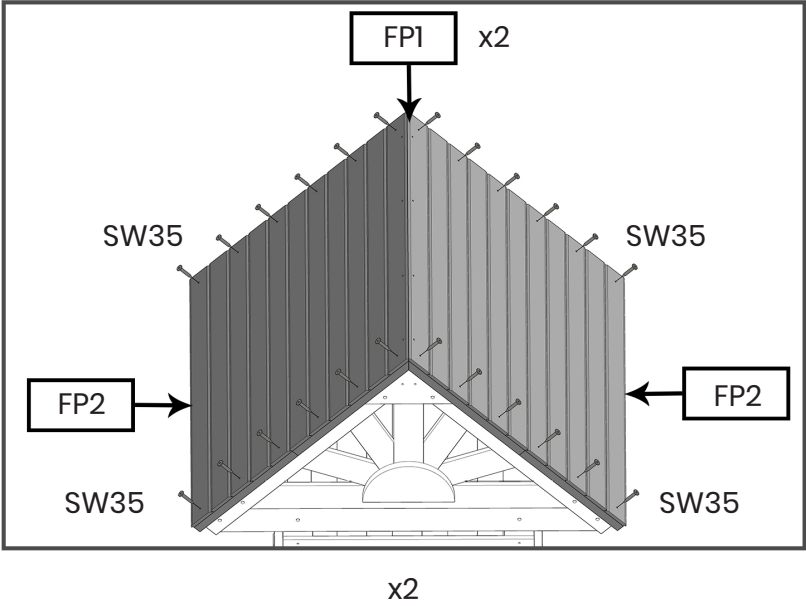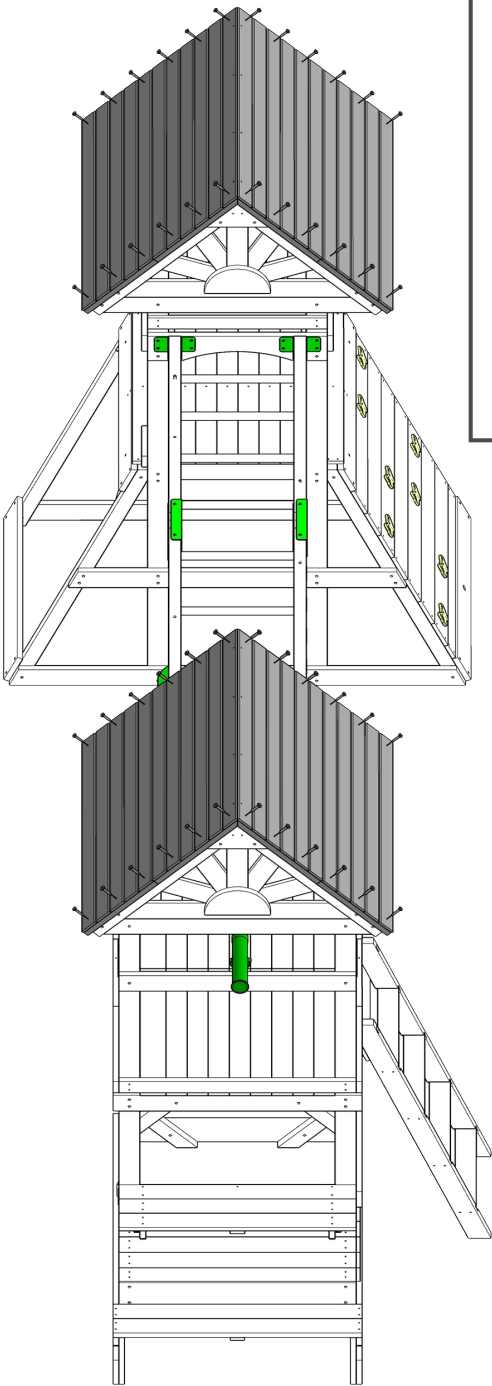


List	
Part NO.	Qty
FP1	4
FP2	4
SW35	48

STEP 59

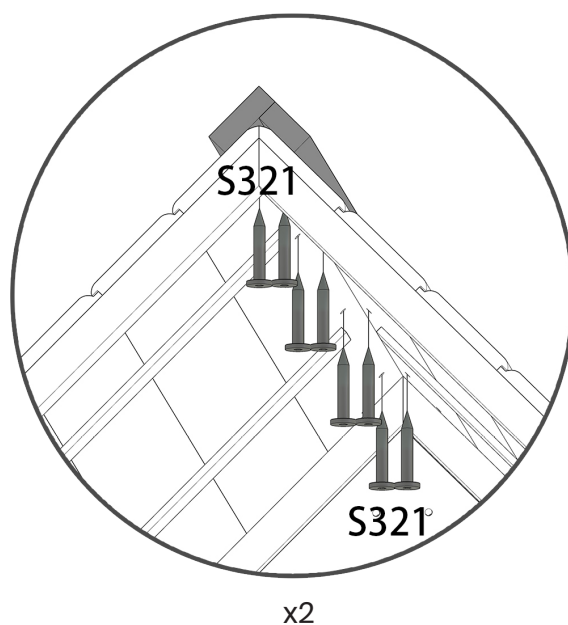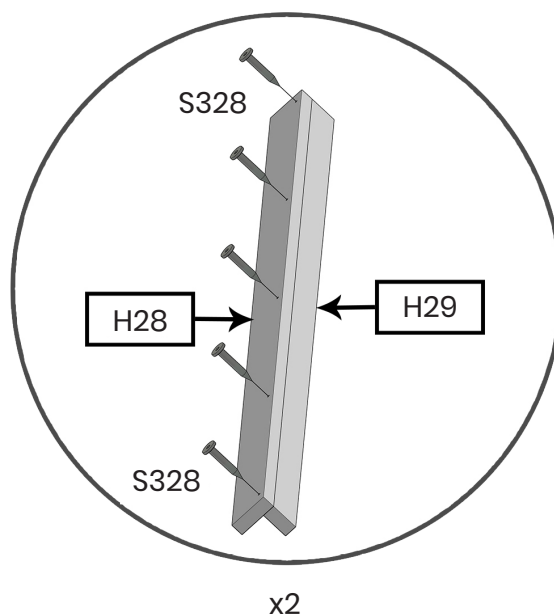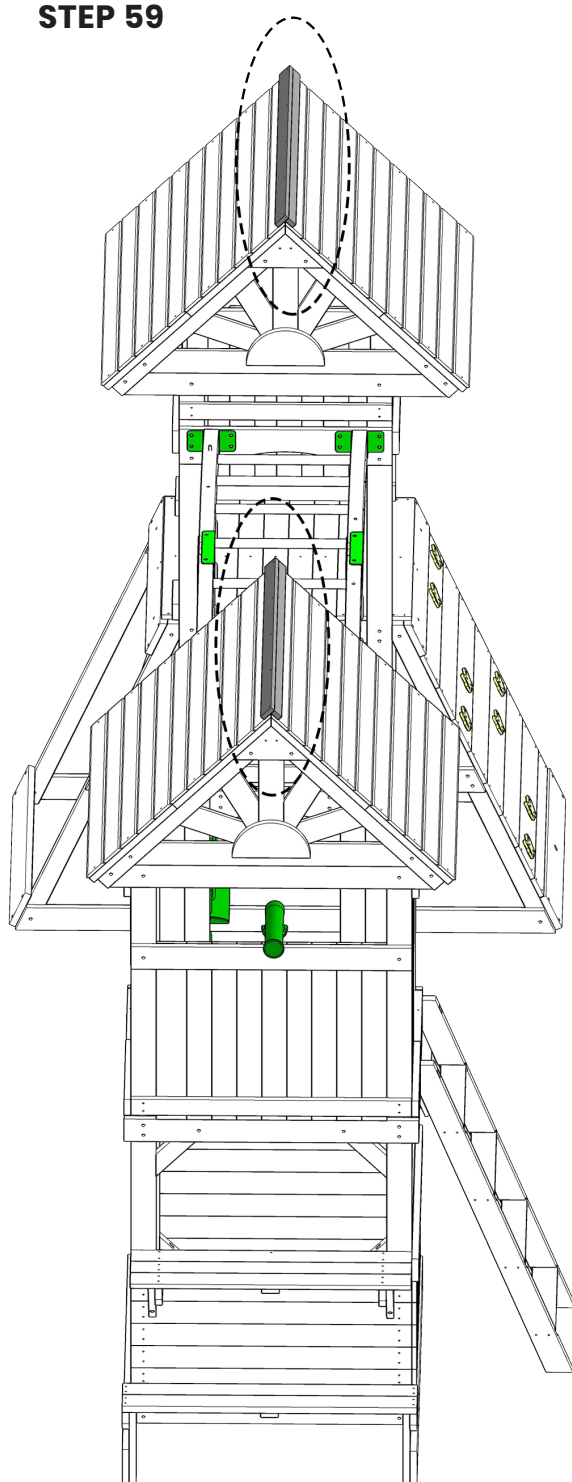


Screws lock from the bottom of the roof


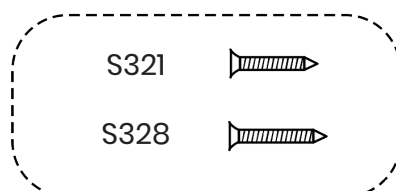


List	
Part NO.	Qty
H28	2
H29	2
S321	16
S328	10

STEP 60

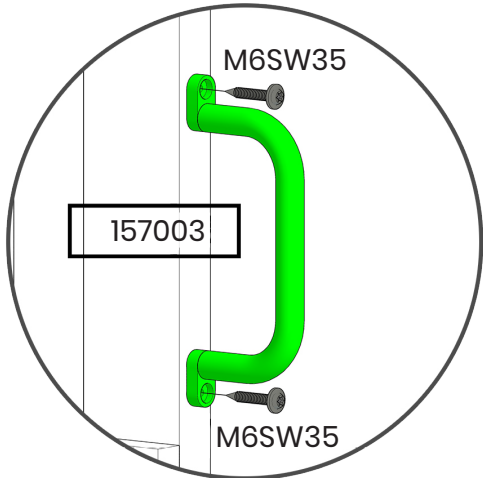


x3

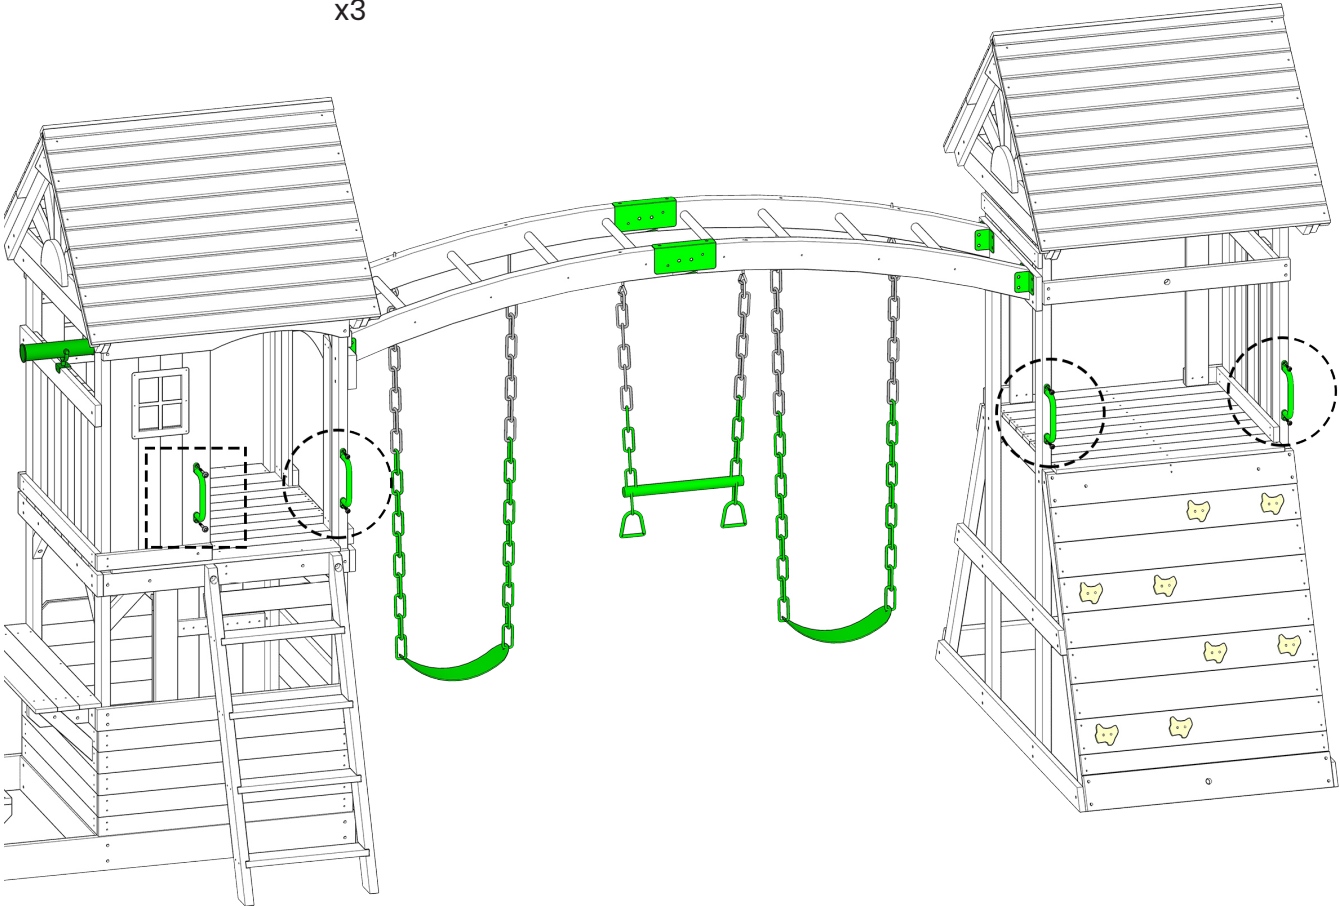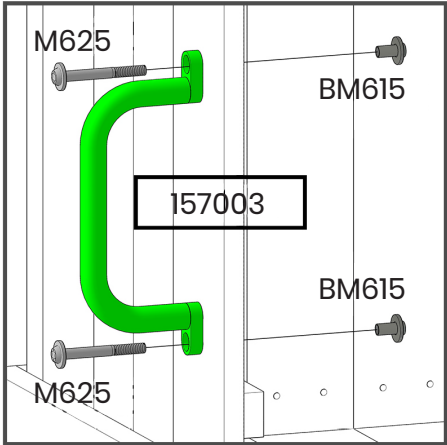

List	
Part NO.	Qty
157003	4
M625	2
BM615	2
M6SW35	6

STEP 61

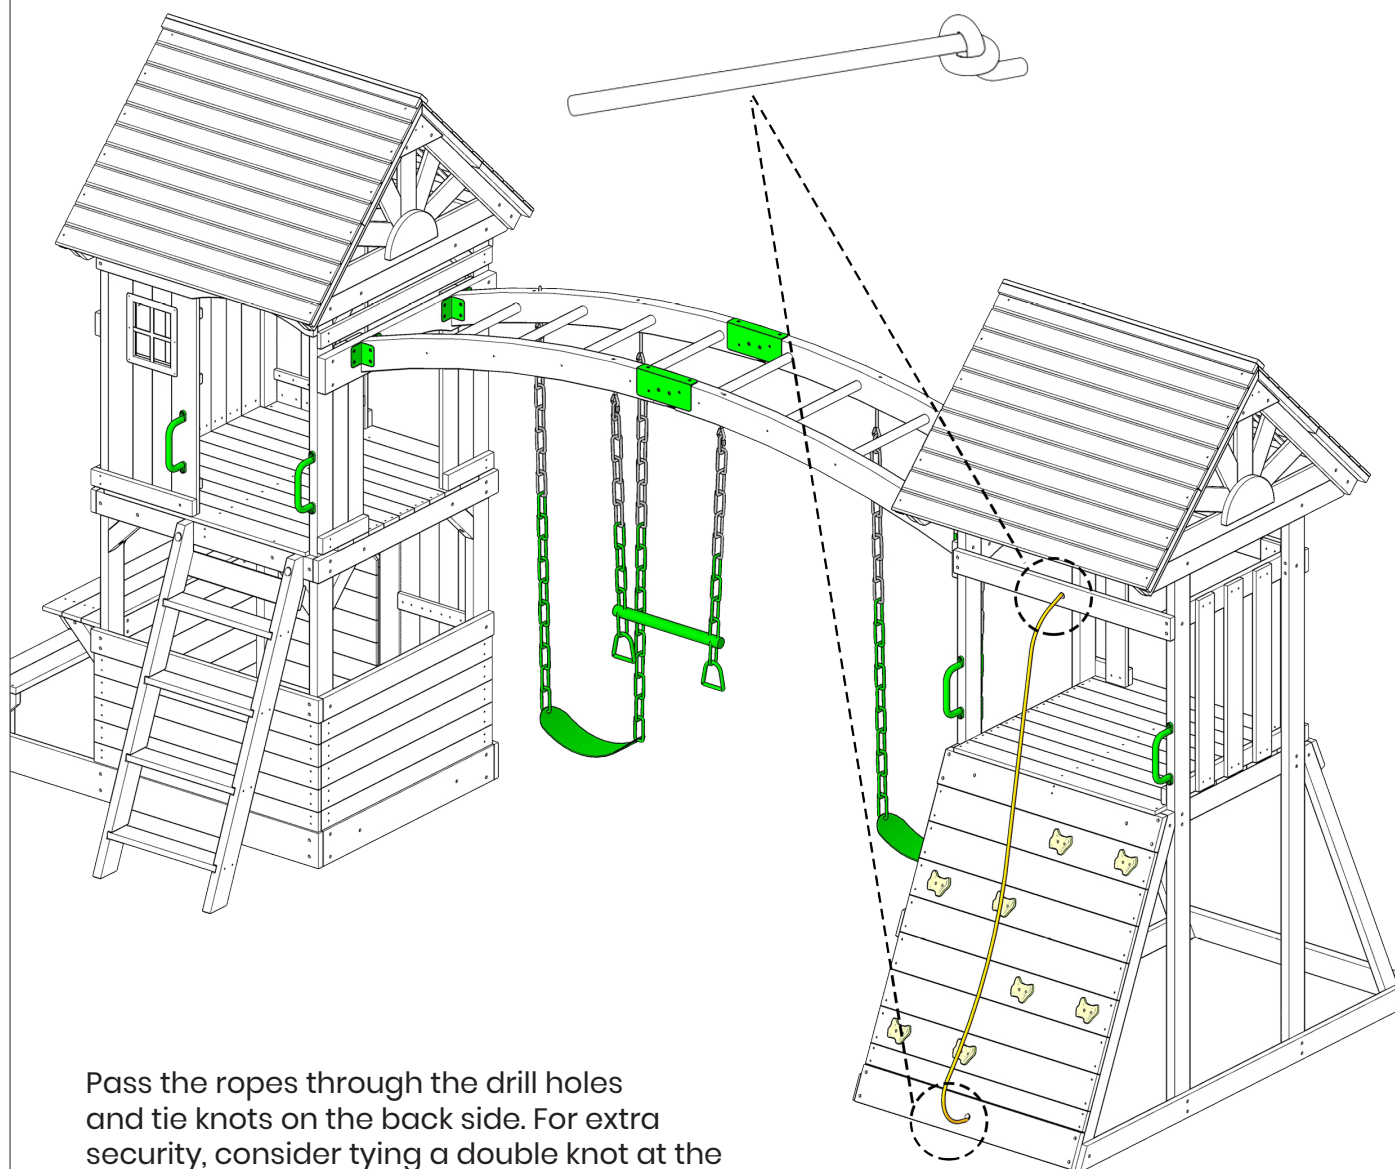


Pass the ropes through the drill holes and tie knots on the back side. For extra security, consider tying a double knot at the back. Make sure the knots are strong and secure, so they won't easily come undone. If the rope length allows, you can also add additional knots in the middle sections.




IMPORTANT: Before use, check the knots are still secured tightly. Children should only use the rope to help climb the wall and not for any other use.

List	
Part NO.	Qty
Z650009	1

STEP 62

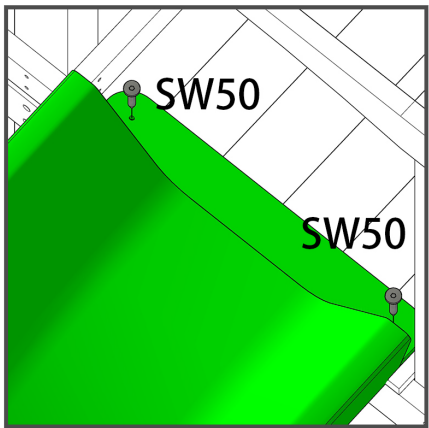


x2

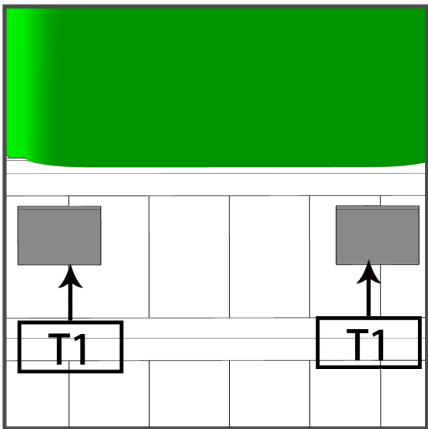


x2

Put the slide braces T1 under the floor boards and fix the slide with floor and slide braces together.

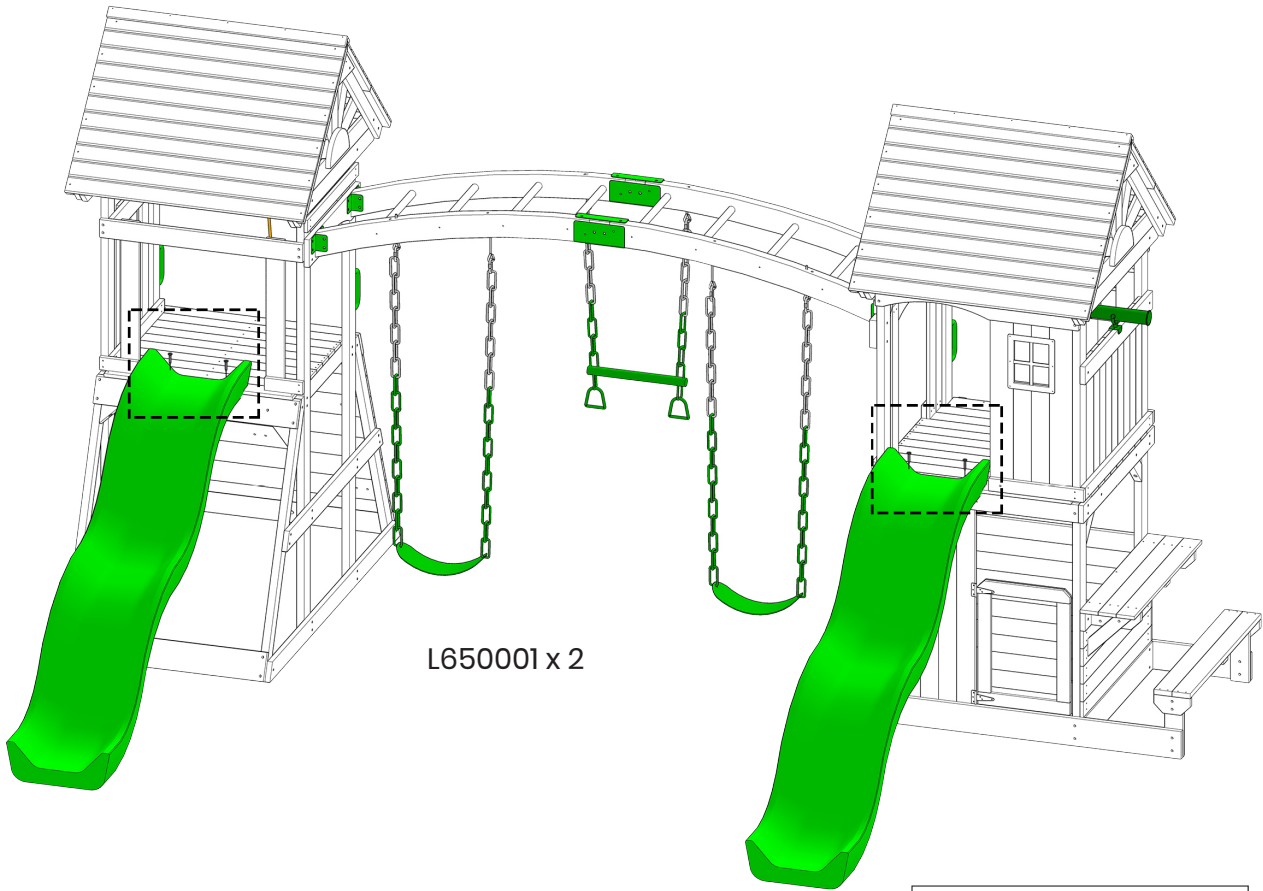


L650001 x 2




List	
Part NO.	Qty
T1	4
L650001	2
SW50	4

STEP 63

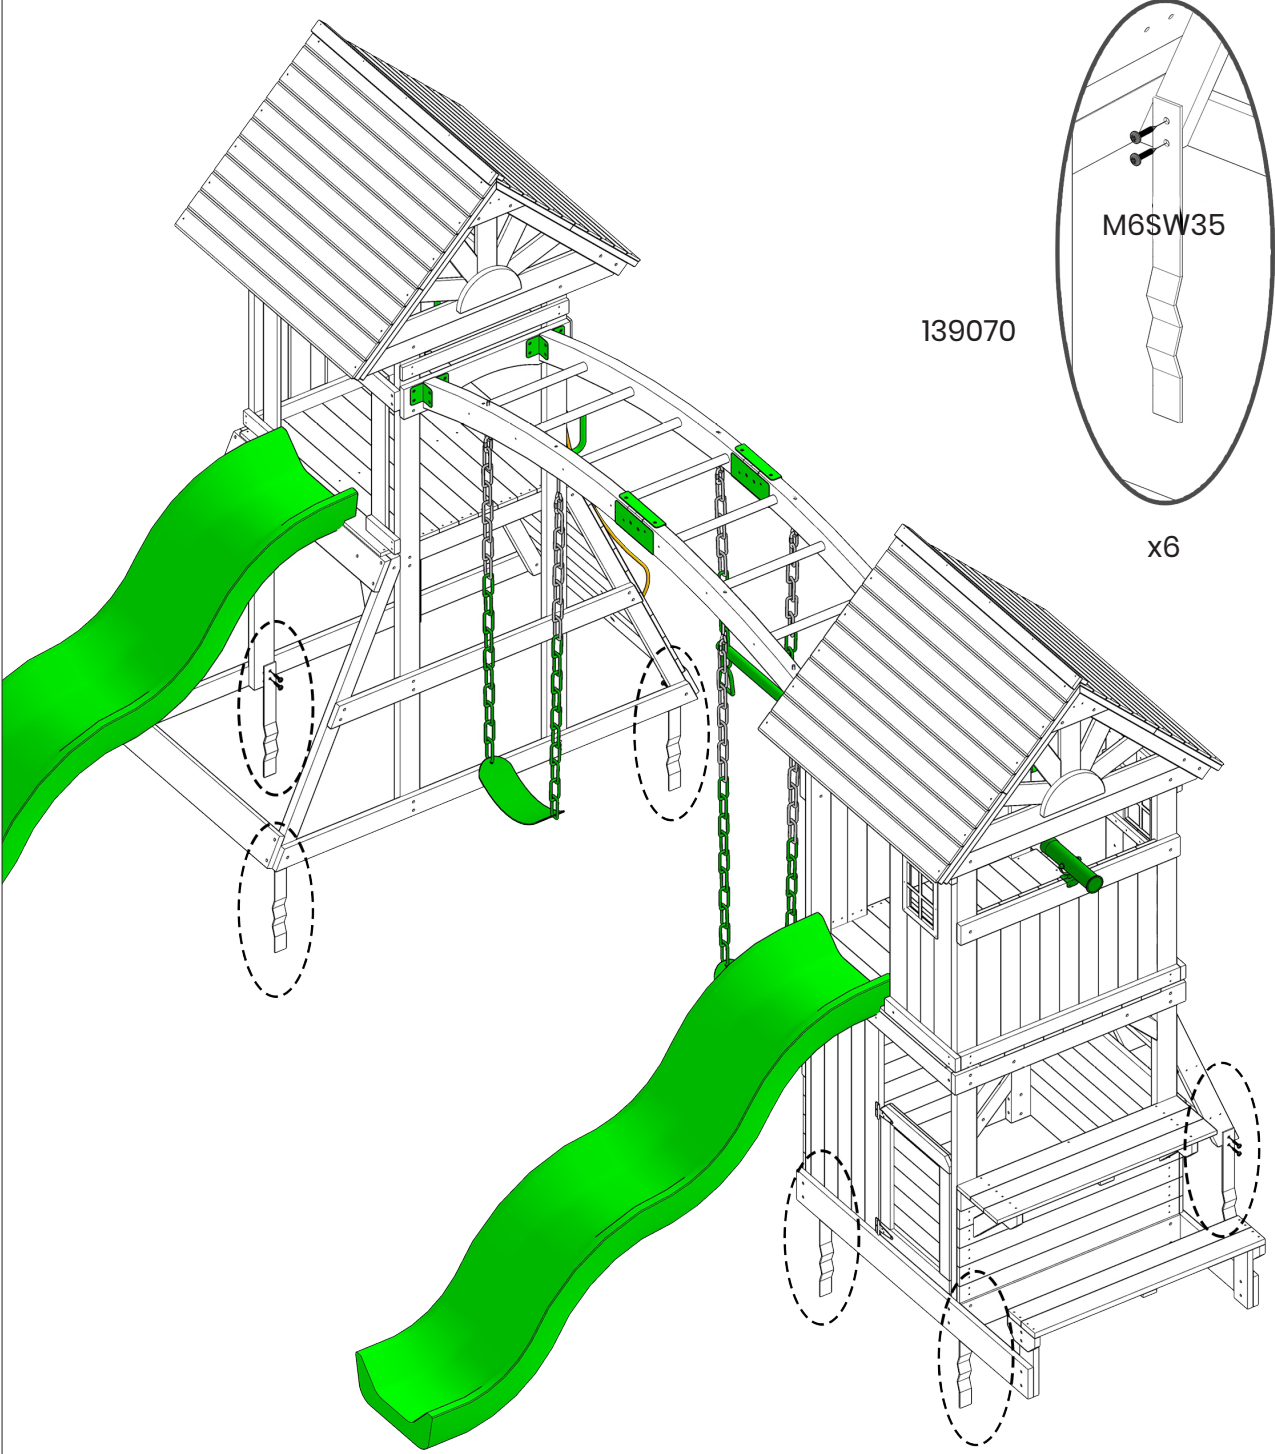

List	
Part NO.	Qty
139070	6
M6SW35	12


STEP 64

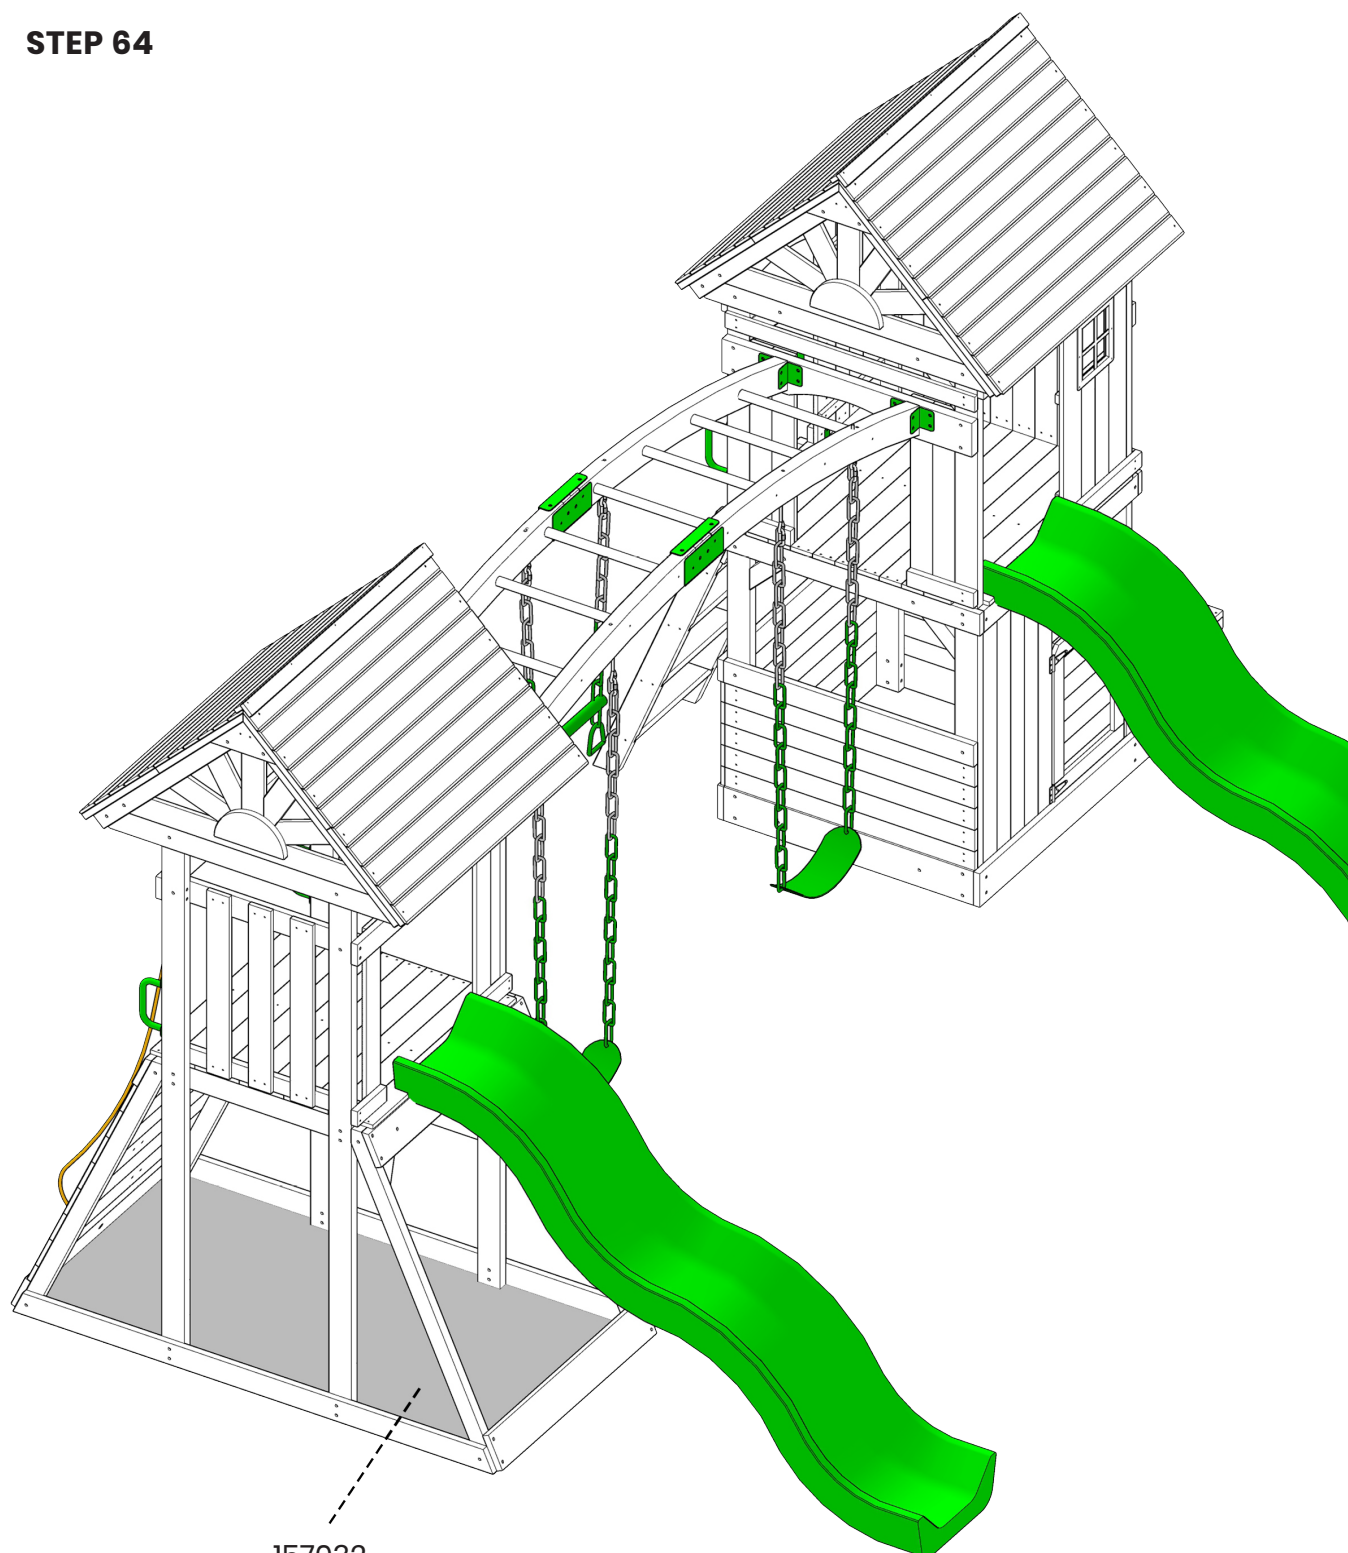


157032
Put on a base cloth

List	
Part NO.	Qty
157032	1

STEP 65

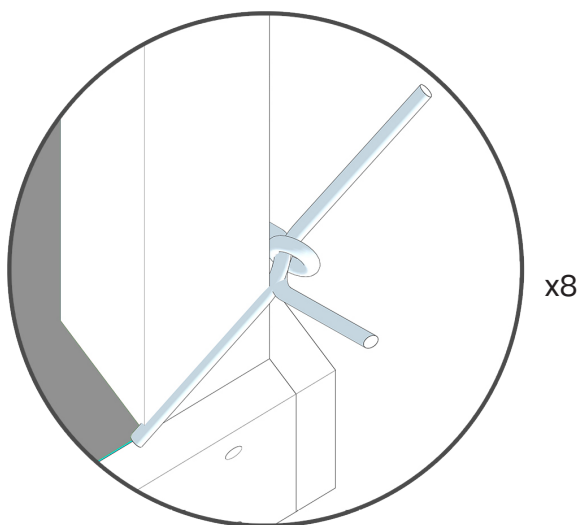

Tie the rope tightly

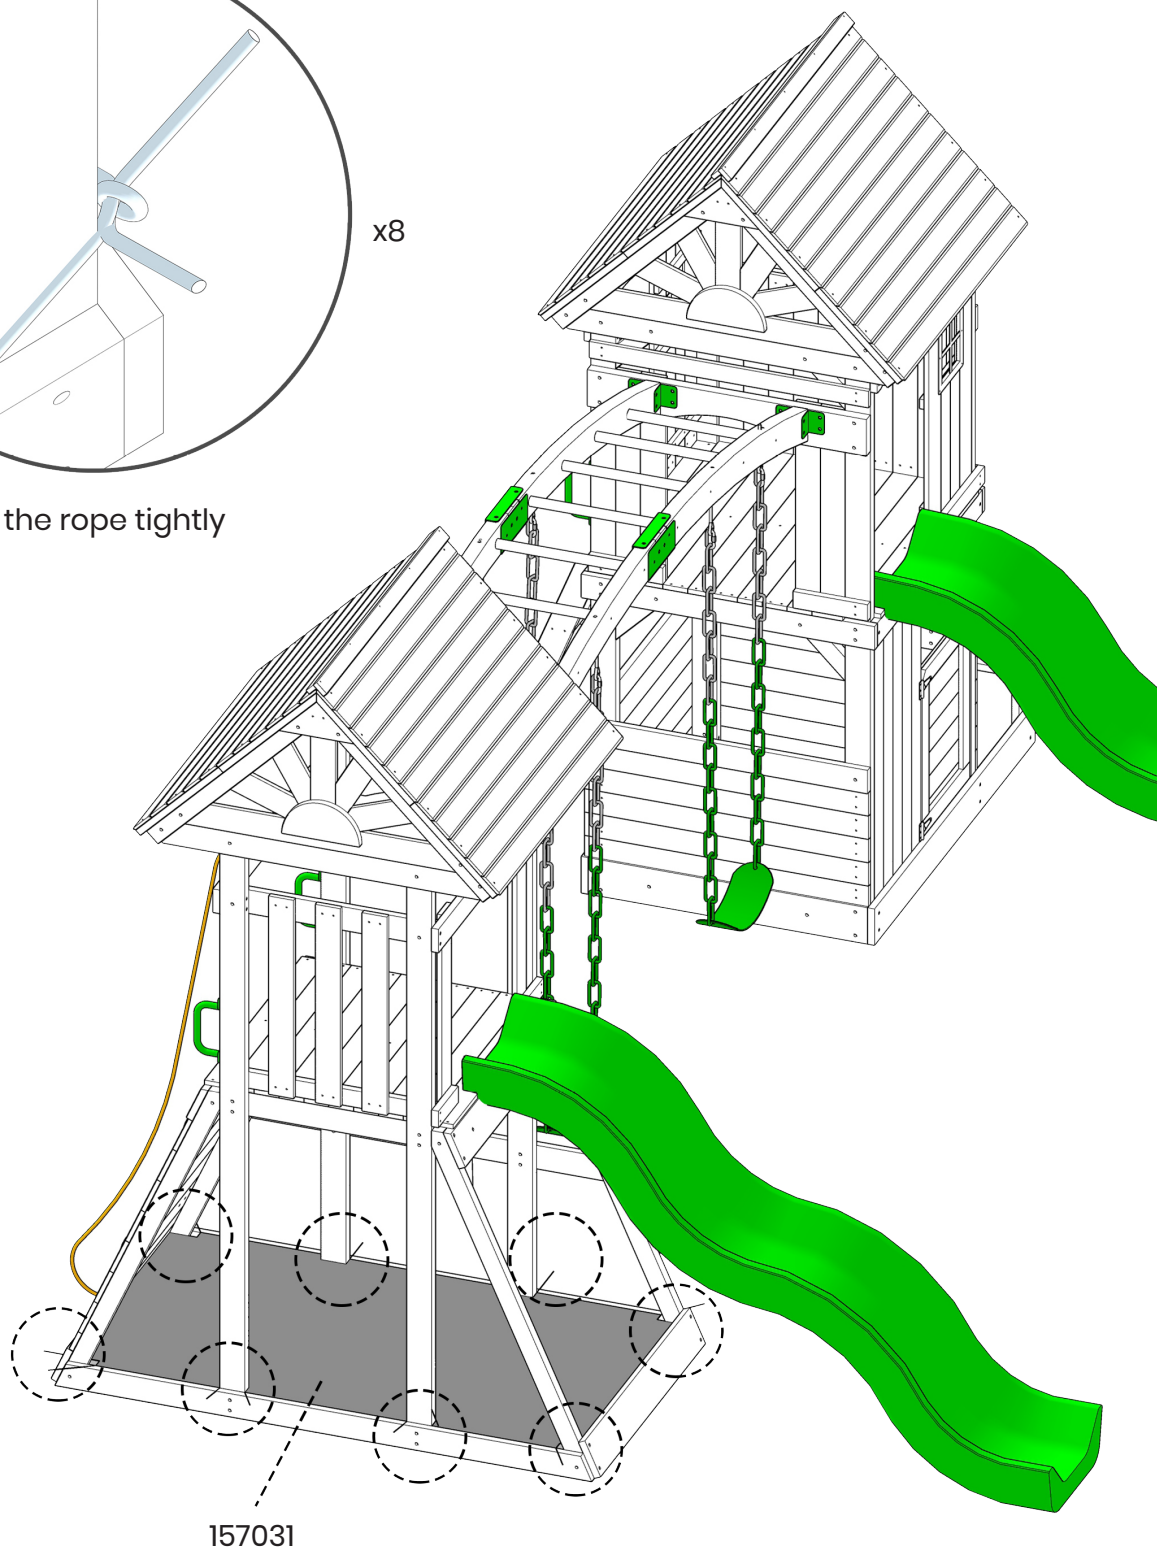

157031

List	
Part NO.	Qty
157031	1

IV. MAINTENANCE



WARNING: Please keep for future reference.

We recommend regular maintenance to be conducted at the beginning of each season as well as at regular intervals during the usage session for your play equipment to ensure all main parts/fixings are tightly secured, well-oiled and intact to avoid failure, injury or hazards.

GENERAL ADVICE

It is of particular importance that this is followed at the beginning of each season as well as at regular intervals during the usage season.

- Check the accessories monthly as well as the play equipment's structure to prevent falling risks.
- Check and retighten screws, bolts, and all other hardware elements as necessary.
 - a. Do not over tighten to avoid damaging the thread or cracking the surrounding wood.
- Check all coverings and bolts for sharp edges and replace when required.
- Lubricate all moving metallic parts.
- Equipment situated in a high moisture or high salt content locations are more likely to oxidant and rust. Regular checks should be done more often. When signs of oxidation and / or rust appear on various metallic parts of your equipment, sand rusted areas and tubular members and repaint using a non-lead-based paint when required.
- Where applicable: check swing seats, chains, ropes, and other means of attachment for evidence of deterioration.
- Replace when required in accordance with the owner's manual.

If your play structure is disassembled, be sure to clearly mark any attached metal plates to prevent accidents. Check all bolt covers and sharp edges and replace them if necessary.

For longer accessory life, we suggest storing them during the winter.

V. PLAY SET ASSEMBLY MANUAL FAQs:

1. Does the area for the playset need to be level?

Yes. We recommend the playset be positioned on a flat level area for maximum safety and durability. The stakes provided should be used to secure it firmly to the ground.

2. What age range is appropriate for the playsets?

The playsets are recommended for children ages 3 – 10 years.

3. Is the wood treated with chemicals?

We use 100% Chinese Cedar wood which is naturally bug resistant, decay and rot resistant. To help ensure your child's safety, our wood is completely chemical free and we do not use pressure-treated wood. The stain we use is a top coat using a waterbased product that is for appearance only.

4. How often should the playset be stained?

We recommend the playset be stained once each year. A water or oil based stain can be used at the customer's discretion.

5. Why does it seem that my swing set is developing cracks?

Wood is a natural material; no two pieces are exactly alike. Each piece has its own characteristics and personality and reacts differently to climate changes. When any wood product is exposed to the elements, it develops "wood checks". A check is the radial separation of the wood fibers running with the grain of the wood. These are caused by the varying temperature and moisture conditions. A check is not a crack – it does not affect the strength or durability of the wood or structural integrity of the play set.

6. Do the playsets come with a warranty?

Yes. All Lifespan Kids products carry replacement warranty on all parts for manufacturer's defect. Please see warranty details for more information.

7. What is the best way to get started assembling the playset?

We recommend taking all the parts out of the boxes and arranging them by part number before you begin any assembly. This will not only allow faster assembly, but will also identify any parts that may be missing or damaged so they can be replaced before assembly.

8. The playset seems to rock or sway too much. What's wrong?

Rocking is caused by uneven ground or obstructions such as rocks, roots, etc. under the ground rails. These should be removed and the ground underneath re-leveled to prevent rocking. Also ensure the playset is securely staked to the ground using the anchors provided.

9. The end beam is not straight up and down. Why not?

This is normal. Lifespan Kids designs playsets this way to ensure the strongest structure possible. The slight angle adds strength and reduces rocking and twisting.

VI. WOOD ADVICE

Our products are manufactured from premium timber. Great care is taken in selecting, machining, and treating the timber before it is sold to you.

1. Inspect wood parts monthly. The grain of the wood sometimes will lift in dry periods causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/splitting and other weather damage.

2. The wood is treated via high temperature drying, degreasing and is stained against wood rot and insect damage (Termites not included). This is not a permanent treatment as weather conditions can wear it down. We recommend once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your set. **Please note this is a requirement of your warranty.**

Bear in mind that timber is a natural product and may experience changes throughout the course of its life. It may:


- Develop openings/checks (gaps, slits, apertures, cracks) along the line of the grain.
- Fade as the timber reacts with sunlight.

All woods are hygroscopic, that is, it will absorb or discharge moisture to attain equilibrium with the surrounding atmosphere. Timber openings/checks occur due to the moisture content between internal and outer surfaces of the timber. No two pieces of wood are exactly alike. Each piece has its own characteristics and personality and reacts differently to climate changes. When any wood products are exposed to the elements, it develops 'wood checks'. A check is the radial separation of the wood fibres running with the grain of the wood. These are caused by the varying temperature and moisture conditions. A check does not affect the strength or durability of the wood or structural integrity of the play set.

WHEN SHOULD WOOD CRACKS BE A CONCERN?

Most of the wood splits will never become large enough to affect the reliability and strength of our products, however, there can be rare cases where splits can occur. This happens when a crack develops past the halfway point from the timber, splitting it into two separate pieces.

Feel free to contact us with detailed pictures of your product so we can assess and ensure that your playground remains safe.

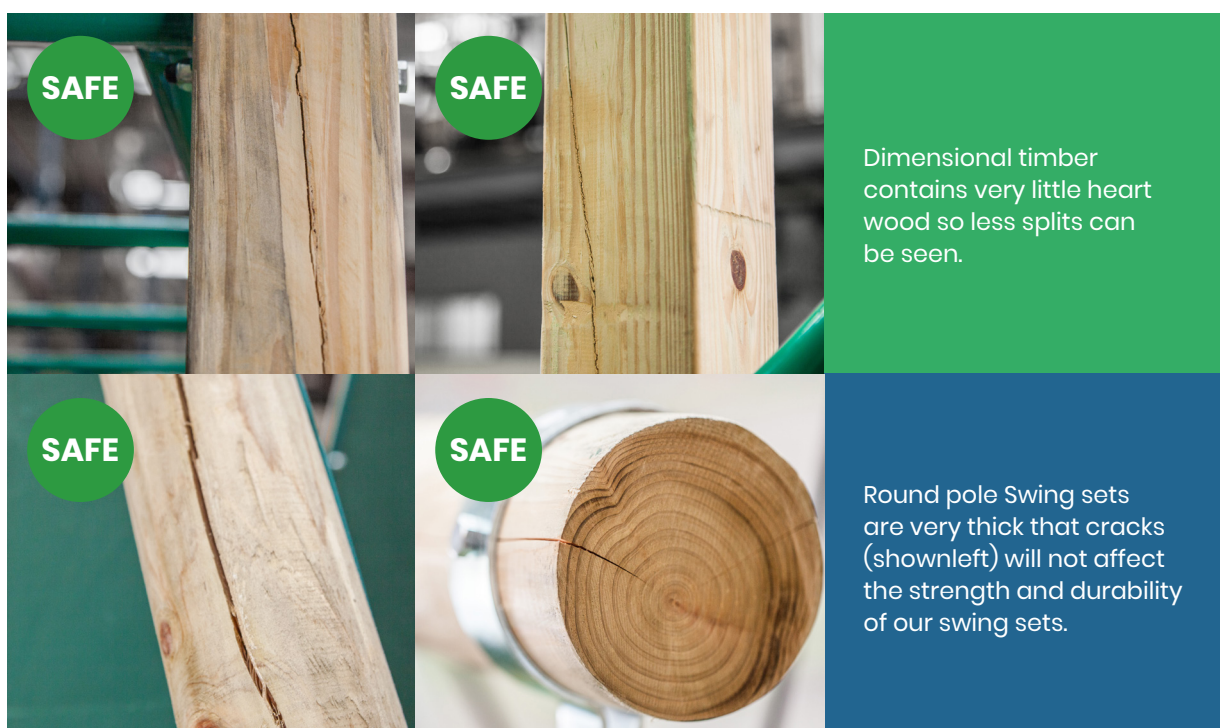

3. Mould and Mildew

Protecting against mould and mildew on your outdoor equipment is an important step in maintaining your backyard. Mould may develop for several reasons, such as certain weather conditions, improper drainage or infrequent usage. Here we'll share our tips for keeping your outdoor areas free of mould and mildew so that you can enjoy your backyard with peace of mind.

Once you spot mould on your equipment, it's important to start clearing it up straight away. The first step is to scrub it off with soap and water, until all the visible signs of mould are removed. It's important to remember however, that just because you can't see it anymore doesn't mean it's gone.

The next step is to kill off the remaining mould so that it doesn't grow back. Here are a few options, but keep in mind these should be used independently. Don't mix or combine these methods at the same time.

Mould Killer or Removal Spray

You can purchase off-the-shelf removal sprays that destroy mould either indoors or outdoors. For these products, make sure to follow the product instructions as well as wearing protective gloves to avoid contact with skin.

Bleach

A solution of bleach and water can also be highly effective in killing mould. For this method, mix the water and bleach on a 1 to 1 ratio, then use a sponge or brush to scrub the affected area. You can also use a higher concentration of bleach for spot treating. After bleach treatment, make sure to rinse off your equipment and allow to dry.

Vinegar

If mould is still lingers after applying bleach or a mould spray, vinegar will be an effective option for removing stubborn remnants. Vinegar will kill most types of mould and is best for nonporous materials like hard plastics or metal. The best method is to fill a spray-bottle with undiluted white vinegar of at least 5% acetic acid. Spray the affected area, then let sit for around an hour. Make sure to thoroughly rinse off afterwards.

For wooden equipment, you can add a coat of paint or stain after it has thoroughly dried.

Some people may find that mould keeps resurfacing after cleaning on certain areas. This can be due to a few reasons, such as poor sunlight. Areas without direct sun are more likely to become damp and take longer to dry off after rain. Consider removing obstacles or rearranging your equipment so that it receives more sunlight, which will also help to kill the mould once it develops.

VII. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:

www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit **www.lifespankids.com.au/warranty-form**

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit **www.lifespankids.com.au/warranty-form** and fill in our Repair/Service Request Form or Parts Purchase Form.

