


PTX-100 OWNER'S MANUAL

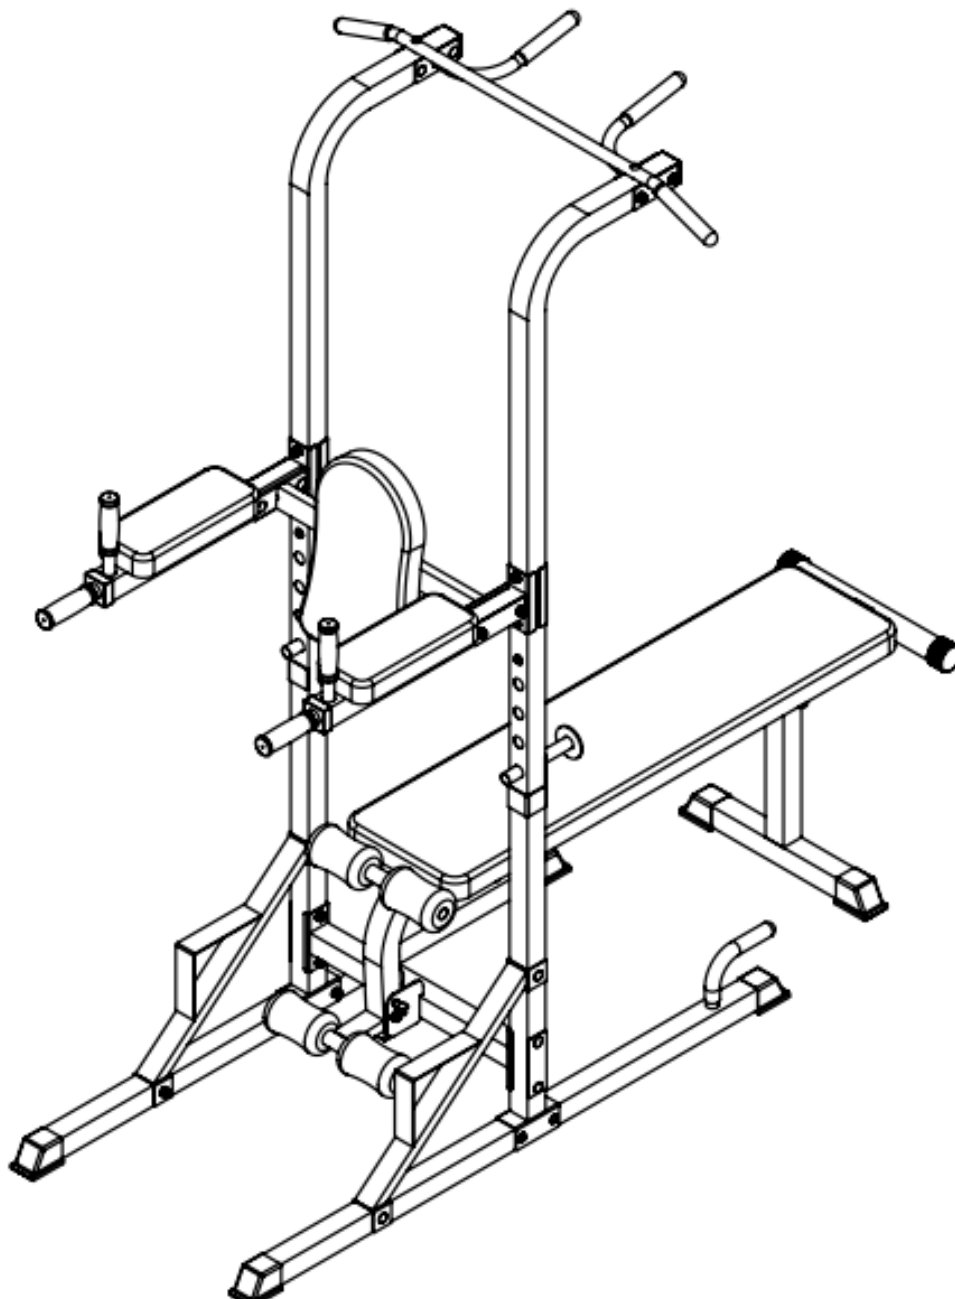

Product may vary slightly from the item pictured due to model upgrades

Read all instructions carefully before using this product. Retain this owner's manual for future reference.

TABLE OF CONTENTS

1.	IMPORTANT SAFETY INSTRUCTIONS	3
2.	PARTS LIST	4
3.	ASSEMBLY INSTRUCTIONS	6
4.	WARRANTY	12

1. IMPORTANT SAFETY INSTRUCTIONS













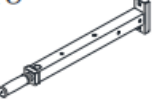






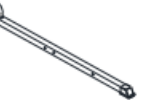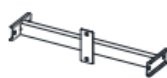



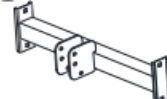










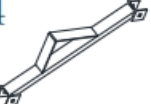








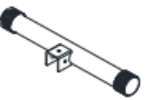

WARNING - Read all instructions before using this machine.

Please keep this manual with you at all times

- a. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained and used properly.
Please note: It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.
- b. Before starting any exercise program you should consult your doctor to determine if you have any medical or physical conditions that could put your health and safety at risk, or prevent you from using the equipment properly. Your doctor's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
- c. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, and extreme shortness of breath, lightheadedness, dizziness or feelings of nausea. If you do experience any of these symptoms, you should consult your doctor before continuing with your exercise program.
- d. Keep children and pets away from the equipment. This equipment is designed for adult use only.
- e. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 2 meters of free space around it.
- f. Before using the equipment, check that the nuts and bolts are securely tightened. If you hear any unusual noises coming from the equipment during use and assembly, stop immediately. Do not use the equipment until the problem has been rectified.
- g. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may get caught in the equipment or that may restrict or prevent movement.
- h. This equipment is designed for indoor and family use only
- i. Care must be taken when lifting or moving the equipment so as not to injure your back.

- j. Always keep this instruction manual and assembly tools at hand for reference.
- k. The equipment is not suitable for therapeutic use.

2. PARTS LIST


1 	2 	3 	4 	5 
6 	7 	8 	9 	10 
11 	12 	13 	14 	15 
16 	17 	18 	19 	20 
21 	22 	23 	24 	25 
26 	27 	28 	29 	30 
31 	32 	33 	34 	35 
36 	37 	38 	39 	40 
41 	42 	43 	44 	45 

NO.	Name	Model	Quantity
1	High pulling bar		1
2	Upright tube A		1
3	Upright tube B		1
4	Tube		2
5	Tube		2
6	Connection tube		1
7	Handles		2
8	Pad		2
9	Tube plug	Φ50	2
10	Plugs		2
11	Welding tube		1
12	Back pad		1
13	Welding tube		2
14	Connection sheet	110mm	4
15	U parts		2
16	Weight tube A		1
17	Weight tube B		1
18	Small bar A		1
19	Small bar B		1
20	Connection sheet	90mm	2
21	Main tube		1
22	Sit up board		1
23	Upright tube		1
24	Foot plates		2
25	Grip A		2
26	Grip	Φ25	2
27	Grip B		4
28	Grip C		2
29	Foam		4
30	Pipe plug	Φ50	6
31	Tube plug	Φ50	2
32	Carriage bolt	M10x70	18
33	Washers	Φ10	47
34	Nuts	M10	26
35	Washers	Φ8	12
36	Hex bolt	M10x70	6
37	Hex bolt	M10x90	2
38	Hex bolt	M10x20	15
39	Hex bolt	M8x15	8
40	Hex bolt	M8x65	4
41	Foam		4
42	Tube plug	Φ25	4
43	Pin		2
44	Welding tube		1

3. ASSEMBLY INSTRUCTIONS


STEP 1:

1. Secure the tube (#4) to the tube (#5) with hex bolt M10x70 (#36), washer $\Phi 10$ (#33) and nut M10 (#34).
2. Attach the tube (#24) to the upright tube (#4) and tube (#5), use carriage bolt M10x70 (#32), washer $\Phi 10$ (#33) and nut M10 (#34).

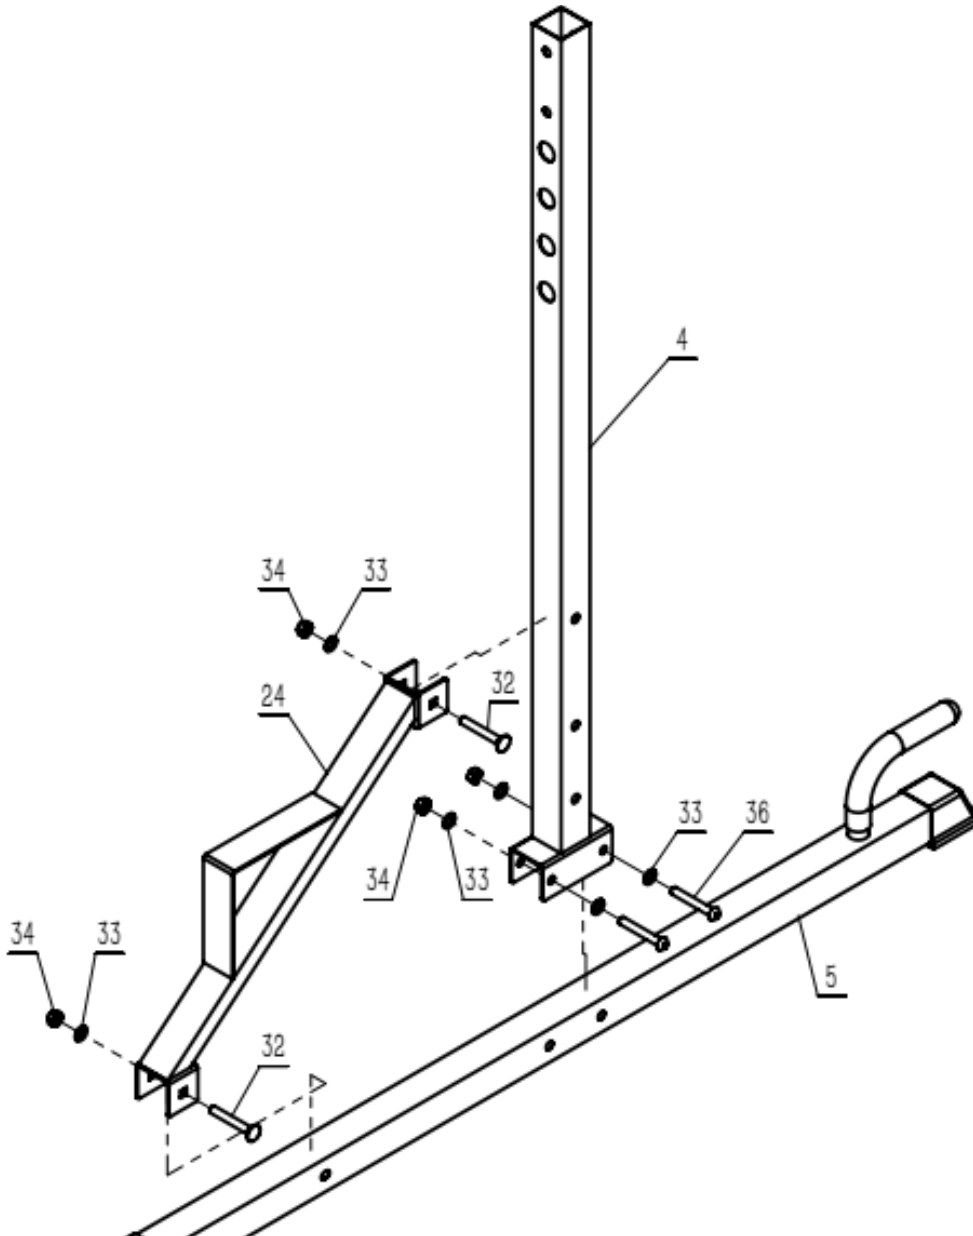


STEP 2:

1. Insert the tube (#2) to the tube (#4), attach the tube (#13) to the both tubes. Secure with carriage bolt M10x70 (#32), hex bolt M10x20 (#38), $\Phi 10$ washer (#33) and M10 nut (#34) and bracket (#15).
2. Connect the bar (#7) to the tube (#13). Secure with hex bolt M10x20 (#38), washer $\Phi 10$ (#33).

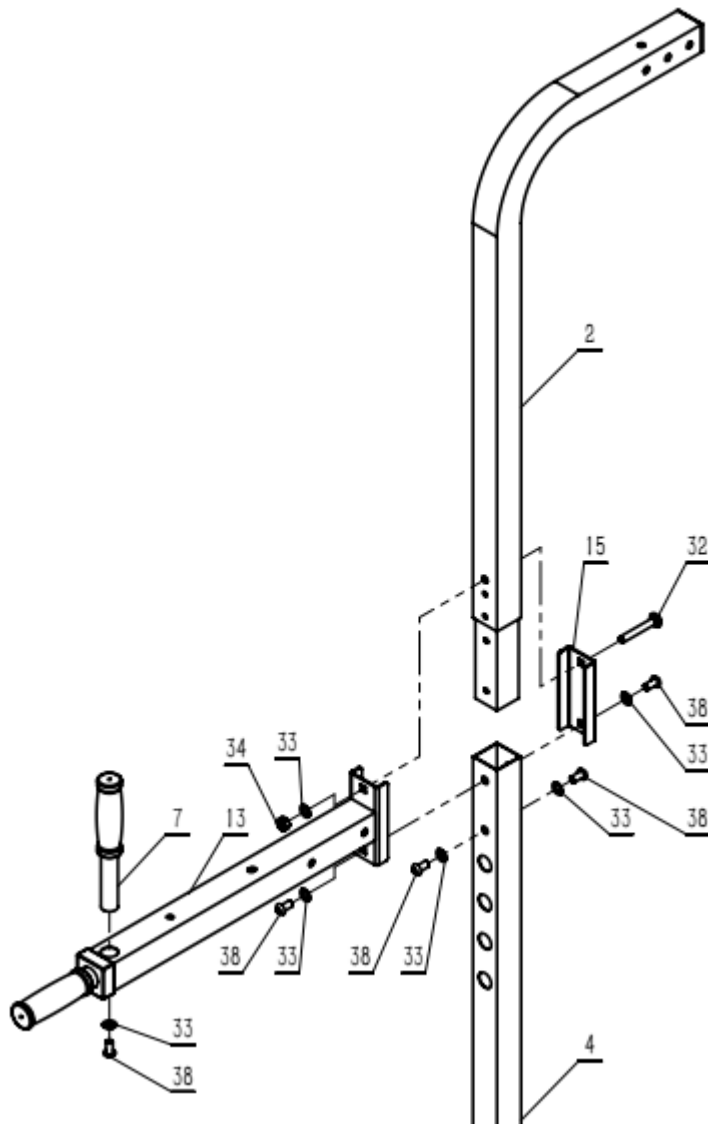


STEP 3:

1. Attach the bars (#18) and (#19) to the upright tube (#2) and (#3). Secure with carriage bolt M10x70 (#32), washer $\Phi 10$ (#33), and M10 nut (#34), hex bolt M10x20 (#38) and bracket (#20).
2. Attach the bar (#1) to the upright tube (#2) and (#3). Secure with hex bolt M10x90 (#37), washer $\Phi 10$ (#33), and M10 nut (#34).
3. Attach the connection tube (#6) to the tube (#13). Secure with carriage bolt M10x70 (#32), washer $\Phi 10$ (#33), M10 nut (#34) and bracket (#14).
4. Attach the connection tube (#11) to the tube (#4). Secure with carriage bolt M10x70 (#32), washer $\Phi 10$ (#33), M10 nut (#34) and bracket (#14).

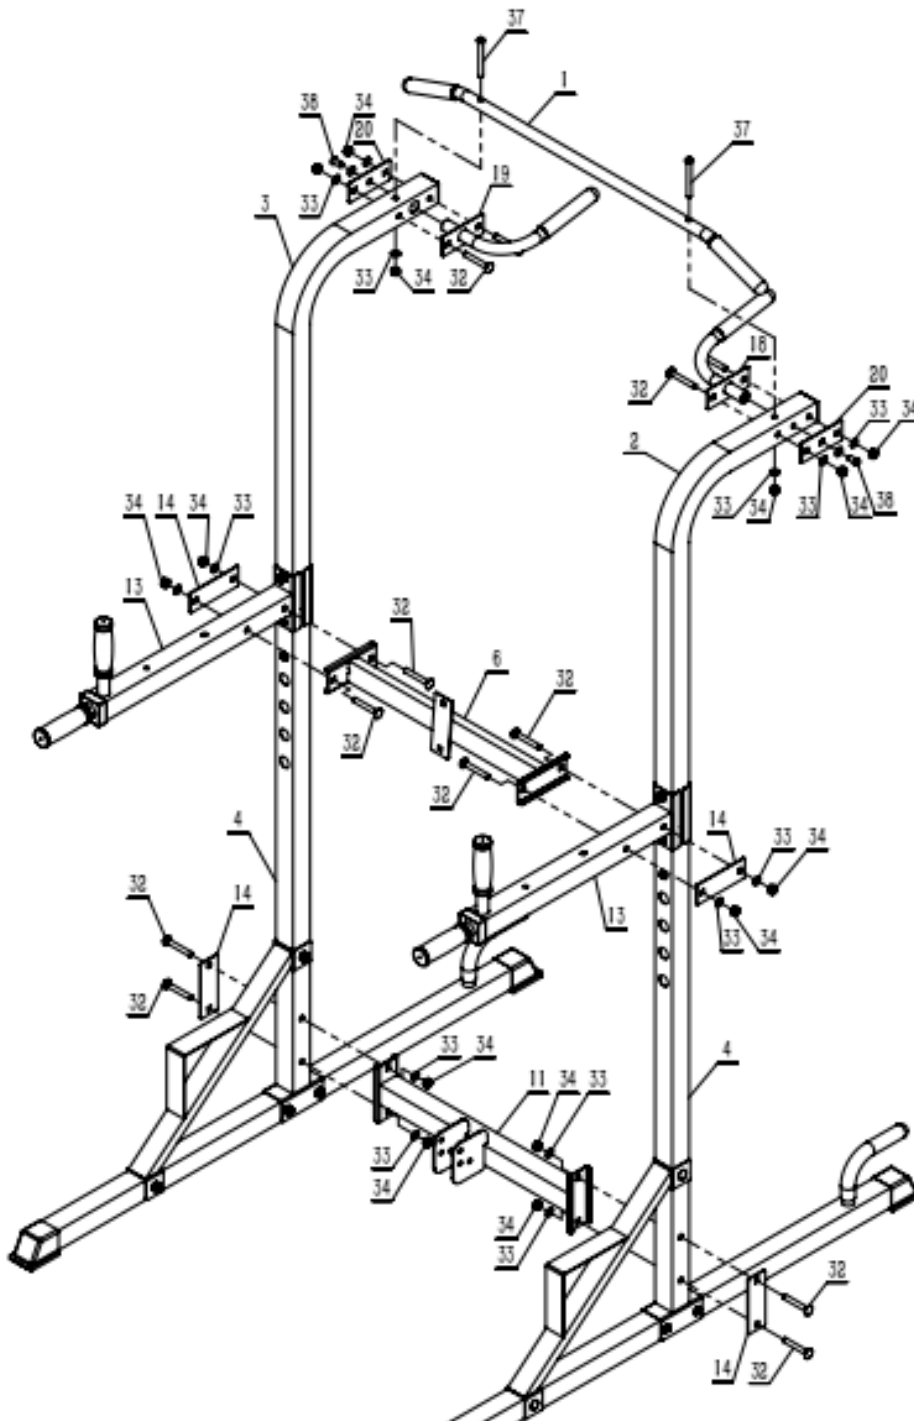


STEP 4:

1. Attach the elbow pad (#8) to the machine, secure with hex bolt M8x65 (#40), washers (#35).
2. Attach the back pad (#12) to the machine, secure with hex bolt M8x15 (#39), washers (#35).

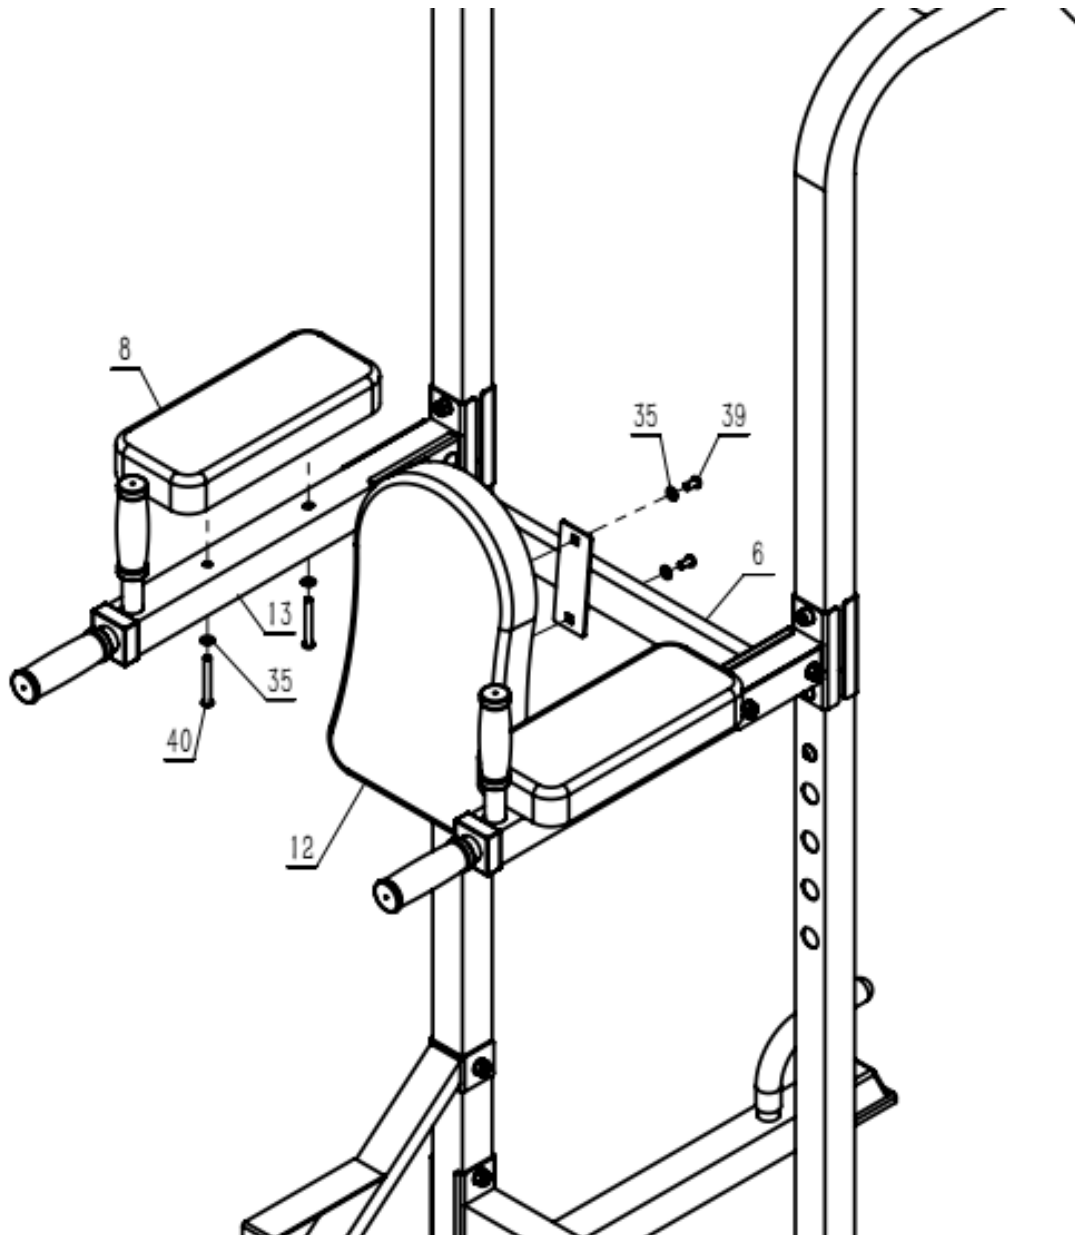


STEP 5

1. Attach the weight bench welded tube (#21) to connection welding tube (#11). Secure with bolt M10X70 (#36), nut (#34), washer $\Phi 10$ (#33) and lock with pin (#43).
2. Attach the support tube (#23) to weight bench welded tube (#21). Secure with bolt M10X70 (#36), $\Phi 10$ washer (#33), nut (#34) and lock with pin (#43).
3. Attach the welding tube (#44) to the weight bench welded tube (#21), secure with 3 M10x20 hex Bolts (#38) and washer $\Phi 10$ (#33).
4. Insert the foam tube (#29) to the tube (#21) with foams.

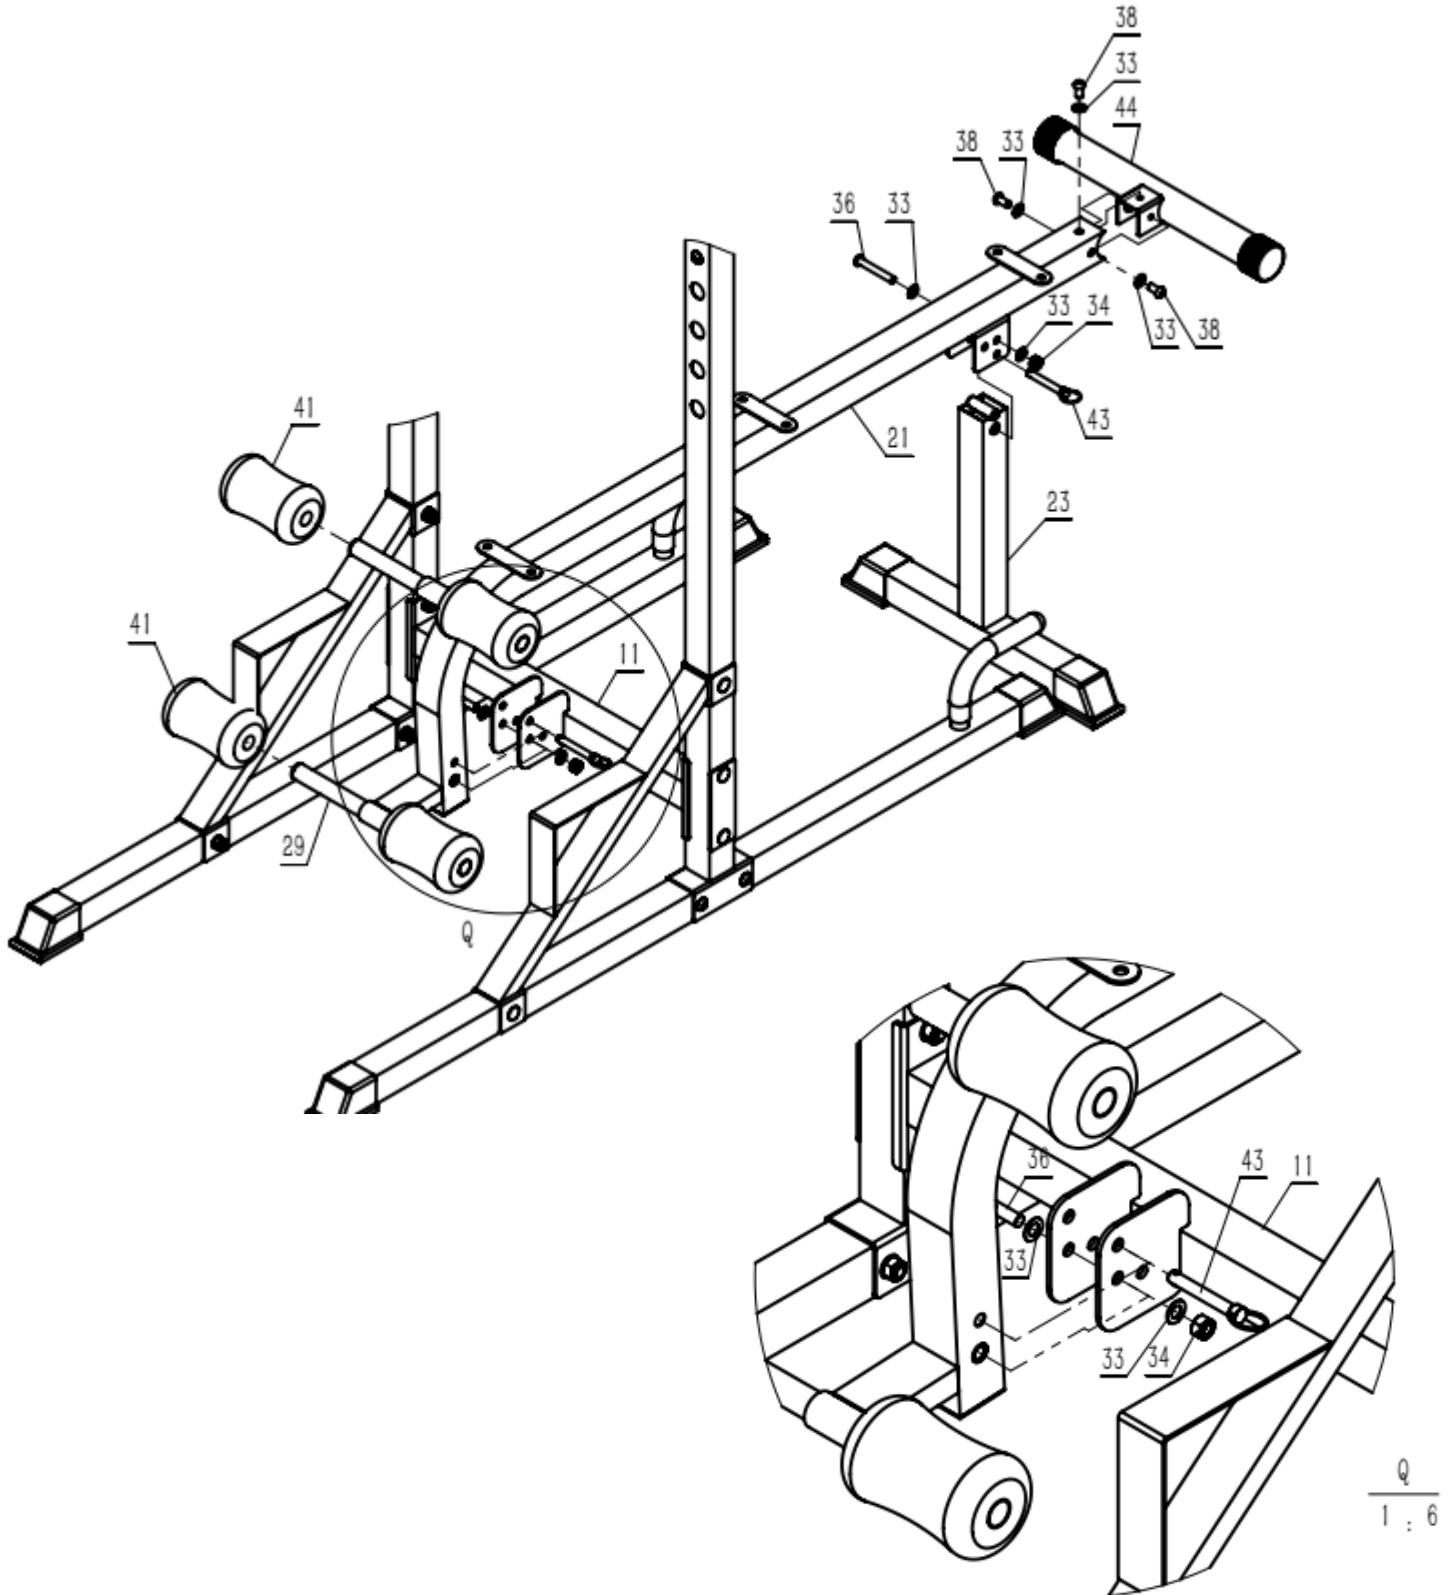

STEP 6:

1. Connect the weight tube (#16) to the upright tube (#4).
2. Attach the board (#22) to the weight bench tube (#21), secure with 6 hex bolts M8x15 (#39) and $\Phi 8$ washer (#35).

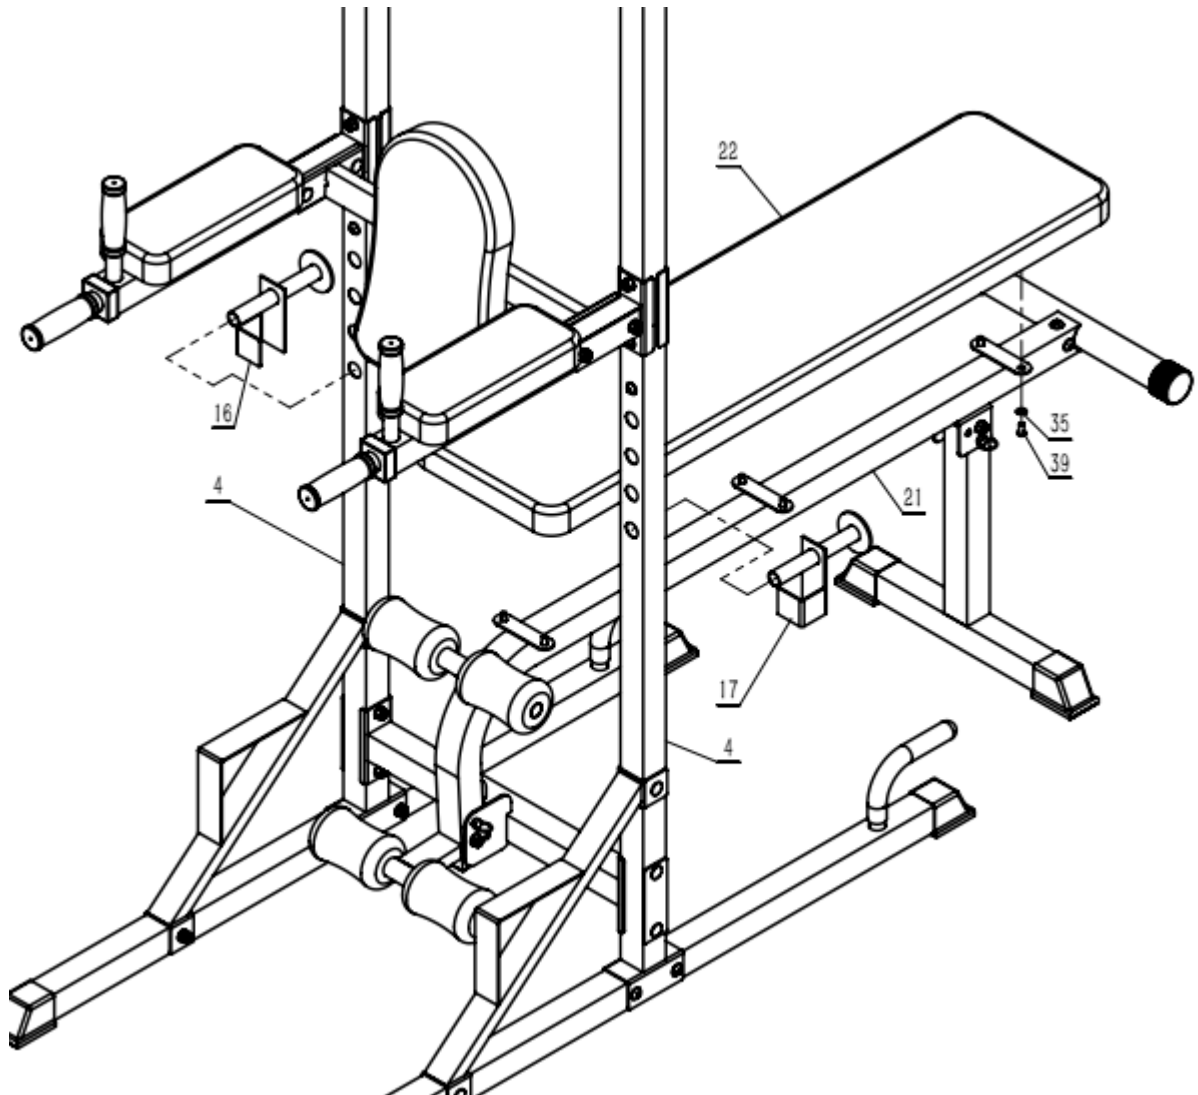

4. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au

Please visit our website to view our full warranty terms and conditions:

<http://www.lifespanfitness.com.au/warranty-repairs>

Warranty and Support:

Please email us at support@lifespanfitness.com.au for all warranty or support issues.

For all warranty or support related enquiries an email must be sent before contacting us via any other means.