


X-25 OWNER'S MANUAL

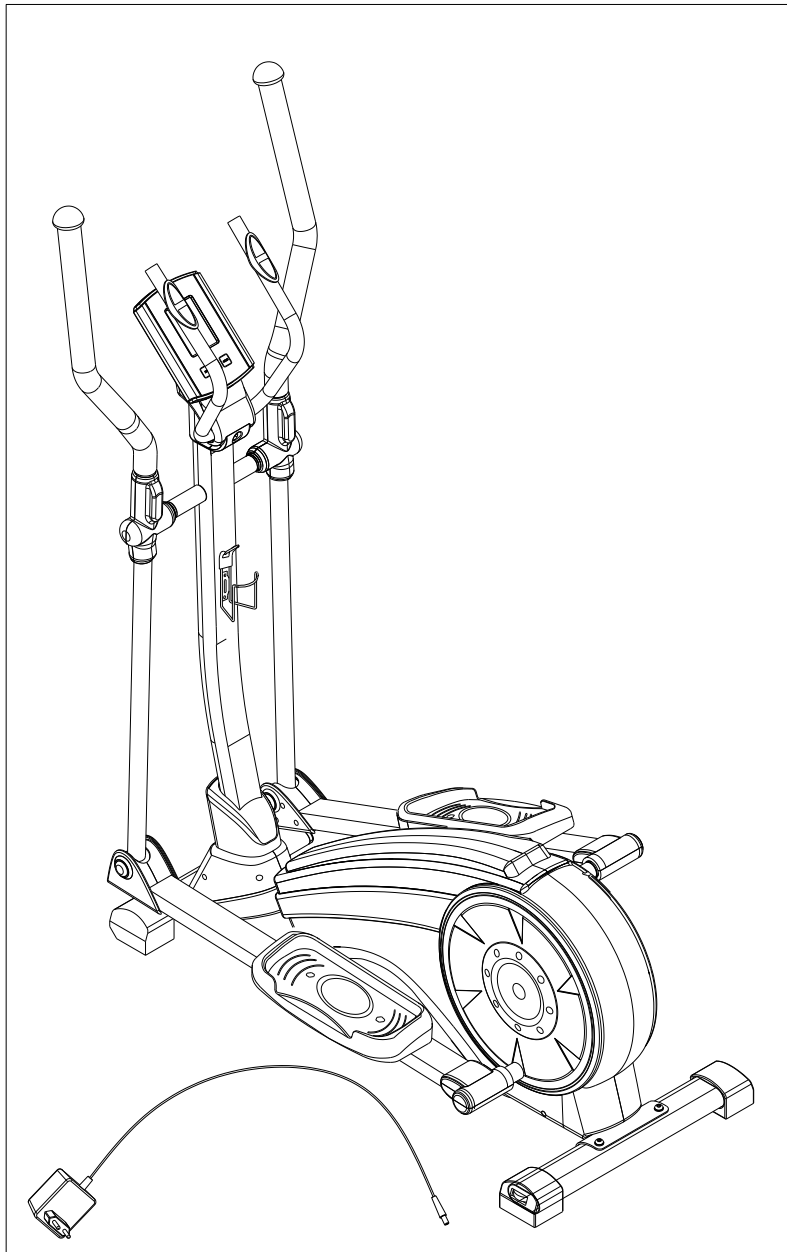

Product may vary slightly from the item pictured due to model upgrades

Read all instructions carefully before using this product. Retain this owner's manual for future reference.

TABLE OF CONTENTS

1.	IMPORTANT SAFETY INSTRUCTIONS_____	3
2.	ASSEMBLY INSTRUCTIONS_____	5
3.	PROGRAM OPERATION_____	13
4.	EXERCISE GUIDE_____	31
5.	EXPLODED DIAGRAM_____	35
6.	PARTS LIST_____	36
7.	WARRANTY_____	37

1. IMPORTANT SAFETY INSTRUCTIONS

WARNING - Read all instructions before using this machine.

It is important your machine receives regular maintenance to prolong its useful life. Failing to regularly maintain your machine may void your warranty.

Please keep this manual with you at all times

- a. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained and used properly.

Please note: It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

- b. Before starting any exercise program you should consult your doctor to determine if you have any medical or physical conditions that could put your health and safety at risk, or prevent you from using the equipment properly. Your doctor's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
- c. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, and extreme shortness of breath, lightheadedness, dizziness or feelings of nausea. If you do experience any of these symptoms, you should consult your doctor before continuing with your exercise program.
- d. Keep children and pets away from the equipment. This equipment is designed for adult use only.
- e. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 0.5 meters of free space all around it.
- f. Before using the equipment, check that the nuts and bolts are securely tightened. If you hear any unusual noises coming from the equipment during use and assemble, stop immediately. Do not use the equipment until the problem has been rectified.


- g. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may get caught in the equipment or that may restrict or prevent movement.
- h. This equipment is designed for indoor and family use only.
- i. Care must be taken when lifting or moving the equipment so as not to injure your back.
- j. Always keep this instruction manual and assembly tools at hand for quick reference.
- k. The equipment is not suitable for therapeutic use.
- l. There are many functions of the computer, which value will show when using the equipment according the amount of exercise, here warmly remind you that the value of heart pulse just give you some reference.

2. ASSEMBLY INSTRUCTIONS

No.	Description	Qty
1	Computer	1
2	Sponge tube $\Phi 23*5*500$	2
3	Bolt ST4.0*19	2
4	Washer $d6*\Phi 12* 1$	2
5	Mid-handlebar	1
6	Round end cap $\Phi 25$	2
7	Pulse pad	2
8	Bushing	1
9	Spring washer d8	4
10	Bolt M8*25	2
11	End cap $\Phi 32$	2
12L/R	Handlebar L/R	2
13	Sponge tube $\Phi 30*5*630$	2
14	Bolt M8*16	2
15	Washer $d8*\Phi 32* 2$	2
16	Bushing 2	8
17L/R	Right swing pole cover L/R	2
18	Square neck bolt M8*43	4
19	Arc washer $d8*\Phi 20*2.0*R16$	4
20	Nylon nut M8	8
21L/R	Swing pole post L/R	2
22	Bushing 1	4
23	Spacer $\Phi 14*\Phi 8.3*59$	2
24L/R	Left swing pole cover L/R	2
25L/R	Front/rear neck cover	2
26	Bolt ST4.2*19	2
27	Bolt ST4.2*25	1
28	Bolt M5*10	2
29	Long plastic spacer	2
30	Upright post	1
31	Washer $d8*\Phi 16* 1.5$	14
32	Bolt M8*15	4
33	Upright cover	1
34	Front stabilizer	1


No.	Description	Qty
35	Mid-sensor wire 1	2
36L/R	End cap with wheel PT80*40	2
37	Mid-sensor wire 2	1
38	Adjusted end cap PT80*40	2
39	Washer $d5*\Phi 10*1.0$	
40	Bolt ST4.2* $\Phi 16*\Phi 8$	4
41	Bolt M8*50	4
42	Main frame	1
43	Plastic short spacer $\Phi 32*\Phi 19.2*30$	2
44	Rear stabilizer	1
45	Bolt ST4*16	10
46	Bolt M8*75	2
47L/R	Left front connecting pole cover L/R	2
48	Bolt M8*45	4
49	Pedal	2
50L/R	Left rear connecting pole cover cover L/R	2
51L/R	Connecting pole post L/R	2
52	Nylon nut M10*1.25	2
53	Washer $d10*\Phi 32* 2$	2
54L/R	Right front connecting pole cover L/R	2
55L/R	Right rear connecting pole cover L/R	2
56	Spring washer $d19*\Phi 25*0.3$	4
57	Adaptor	1
58L/R	Chain cover L/R	2
59	Pulse wire	1
60	Bottle holder	1
61	Washer $d5*\Phi 10*1$	2
62	Bolt M4*12* $\Phi 6$	2
63	Wrench S13-14-15	1
64	Wrench S13-14	1
65	Wrench S17-19	1
66	Wrench S5	1
67	Wrench S6	1

STEP 1:

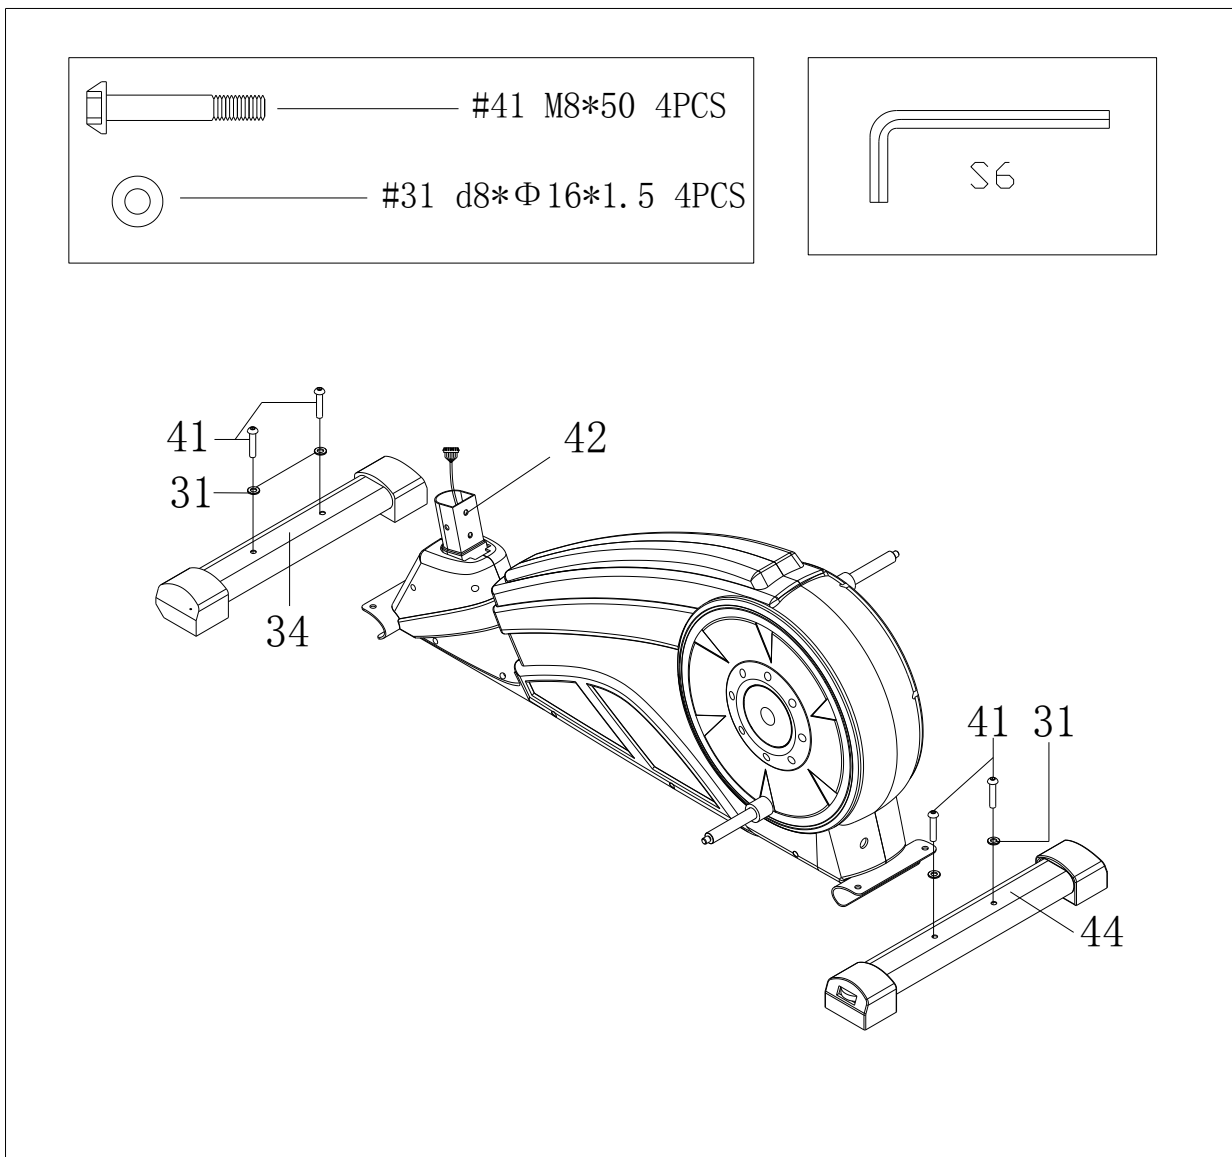


1. Use bolt (41) and washer (31) to lock the front stabiliser (34) and rear stabiliser (44) on the frame (42).

STEP 2:

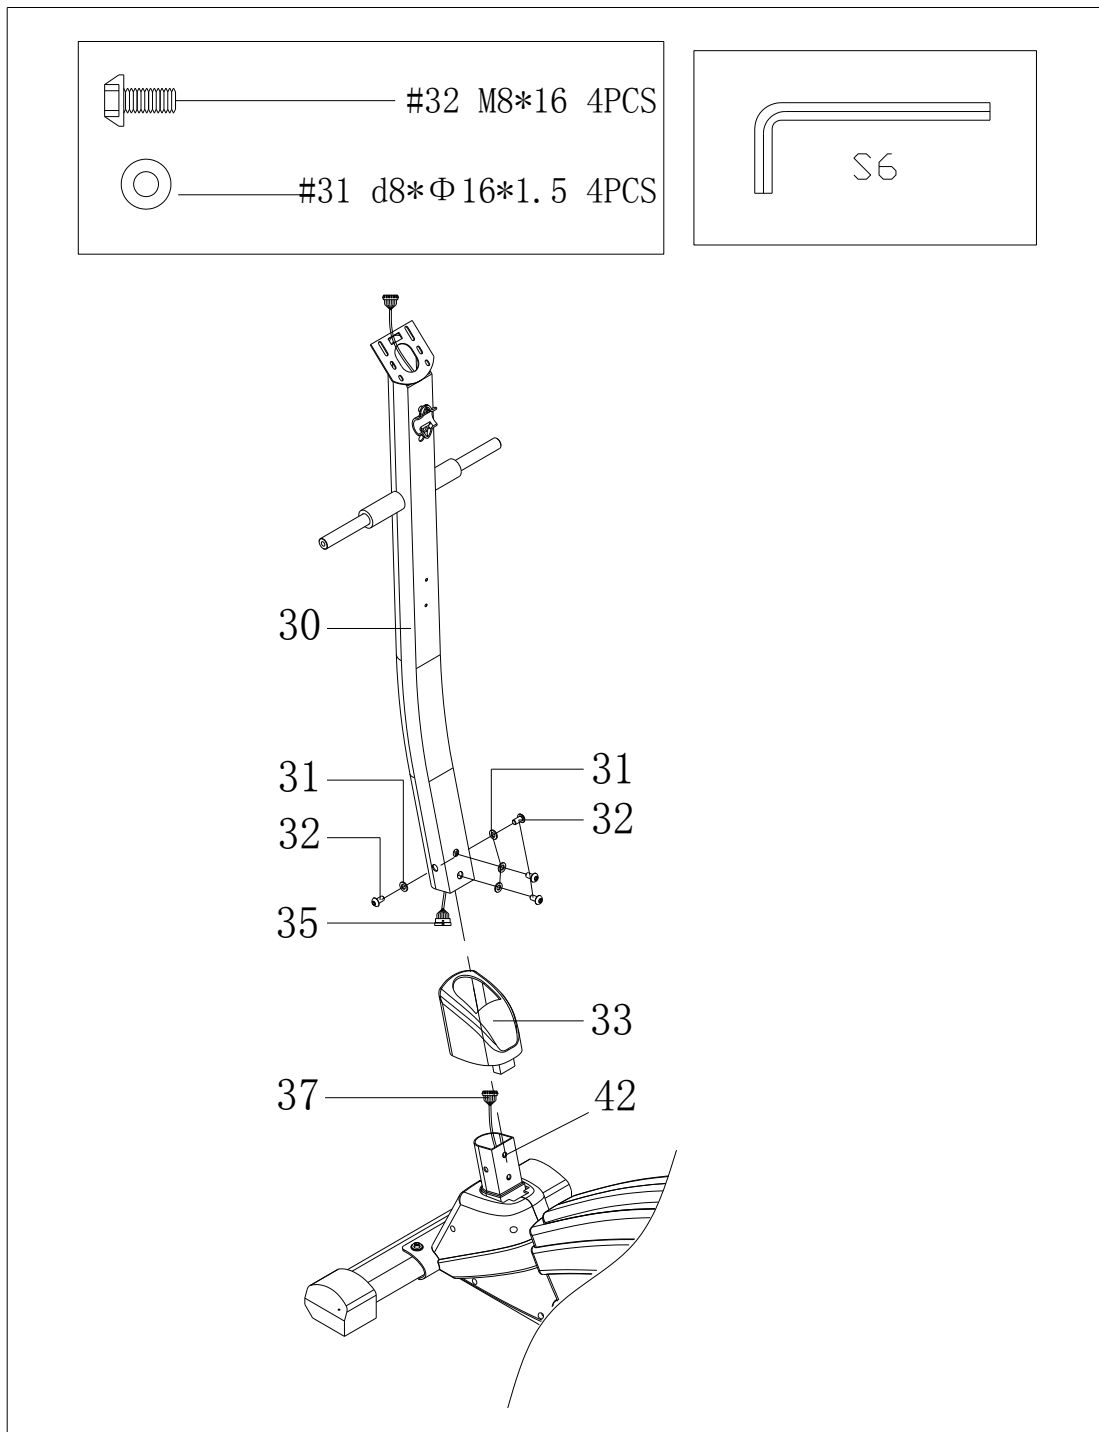


1. Attach the plastic cover (33) to the handlebar post (30).
2. Connect mid-sensor wire 1 (35) and mid-sensor wire 2 (37)
3. Use the bolt (32) and washer (31) lock the upright post (30) on the main frame (42) and then cover the upright post (33) on the main frame (42)

STEP 3:

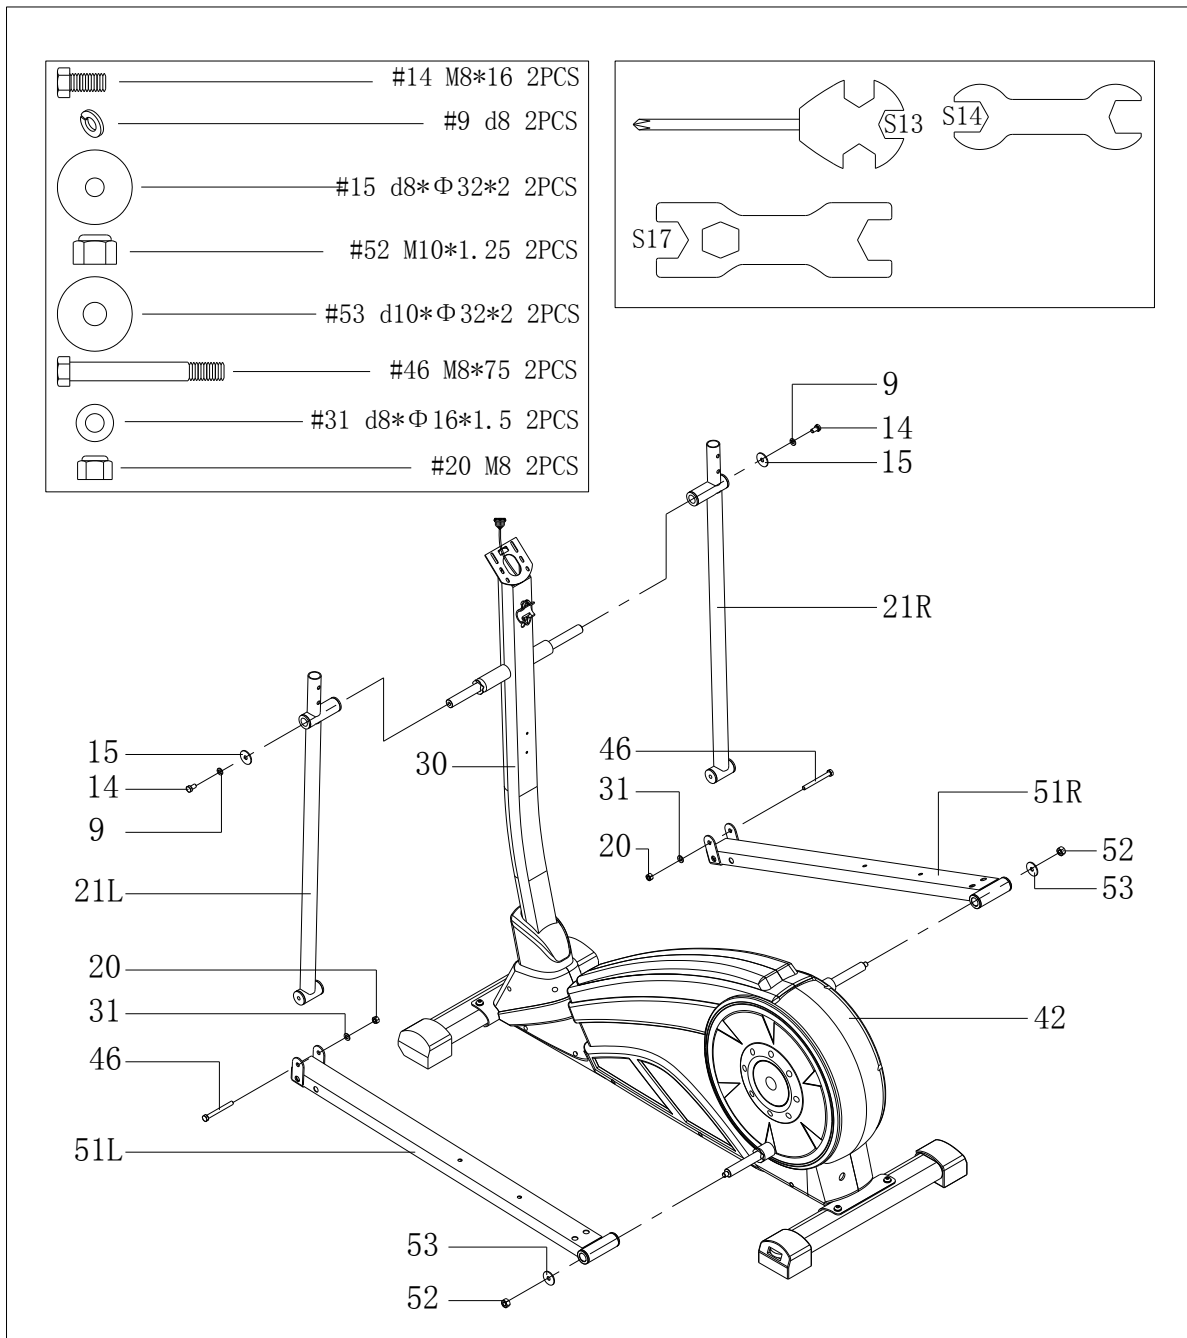


1. Assemble the swing pole post (21 L/R) to each swing axle of the upright post (30) and lock it by the bolt (14), spring washer (19) and washer (15)
2. Using the nylon nut (52), washer (53) lock the connecting pole post (51L/R) to each crank axle of main frame (42).
3. Using the bolt (46), washer (31) and the nylon nut (20) lock the swing pole post and the pedal pole post.

STEP 4:

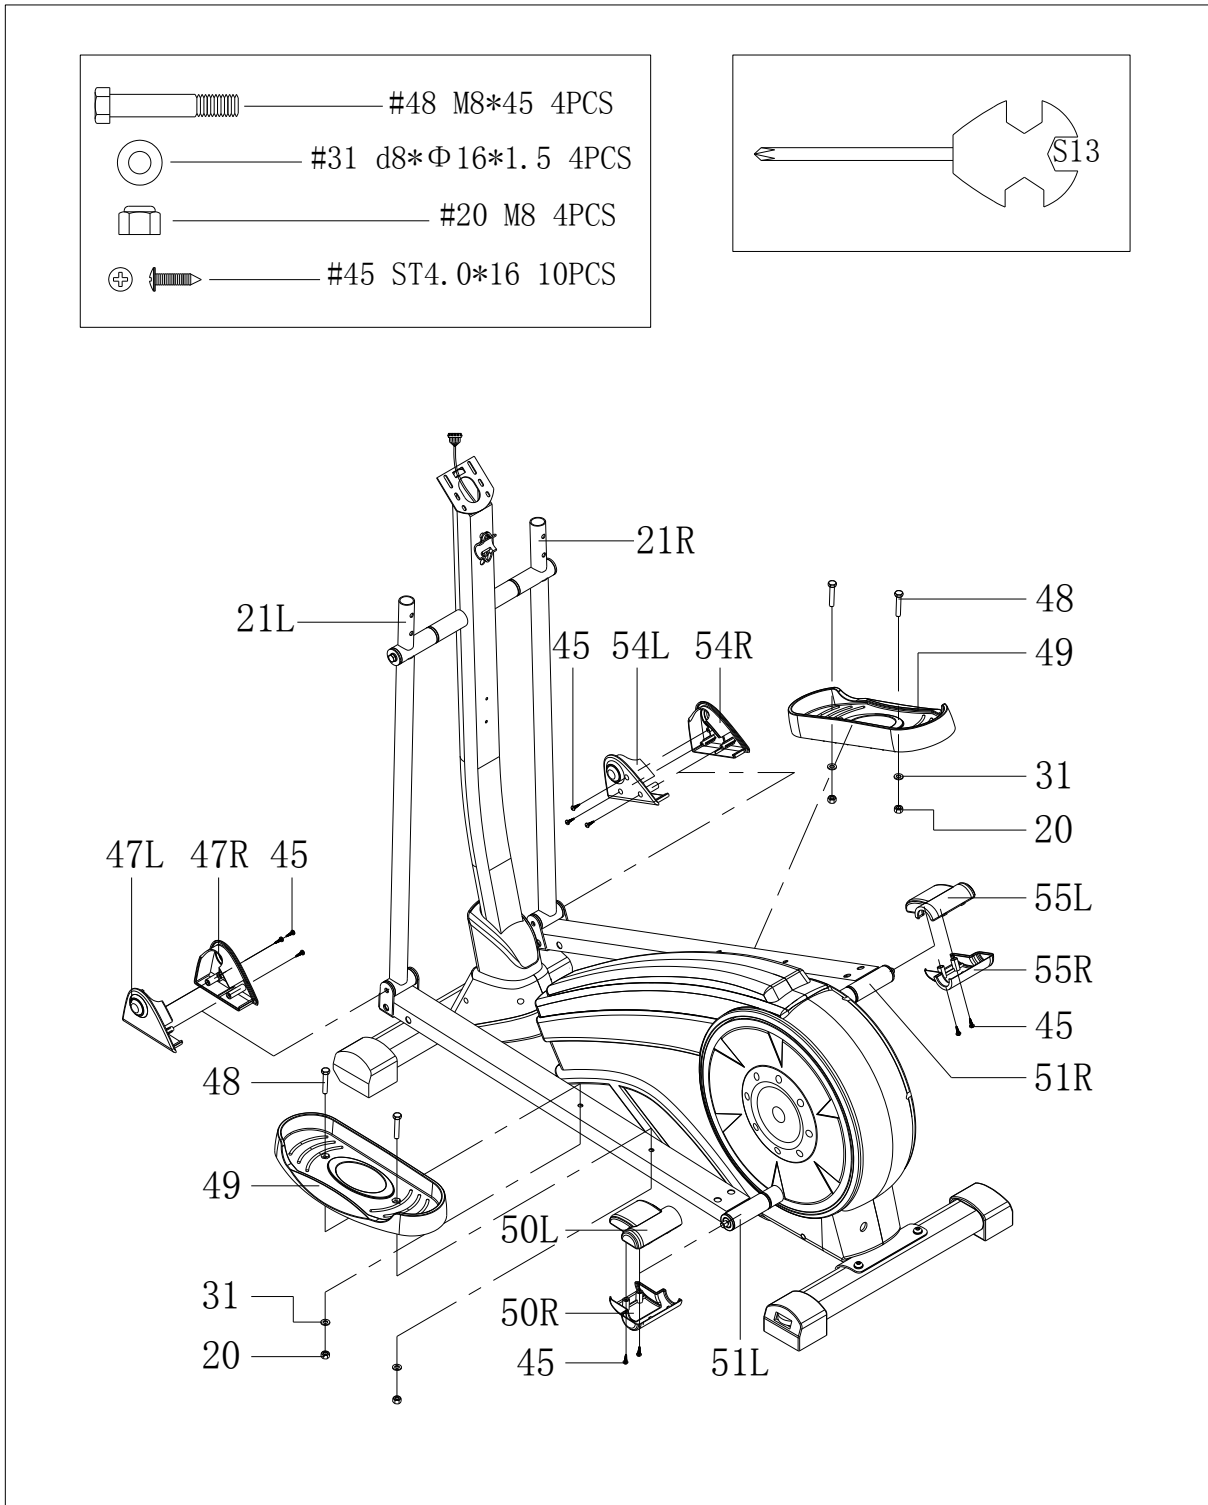


1. Lock the pedal (49) on each connecting pole post (51 L/R) by the bolt (48), washer (31) and the nylon nut (20)
2. Cover the front connecting pole cover (47L/R, 54L/R) and rear connecting pole cover (50L/R 55L/R) to each connecting pole(51L/R) and lock it by the bolt (45)

STEP 5:

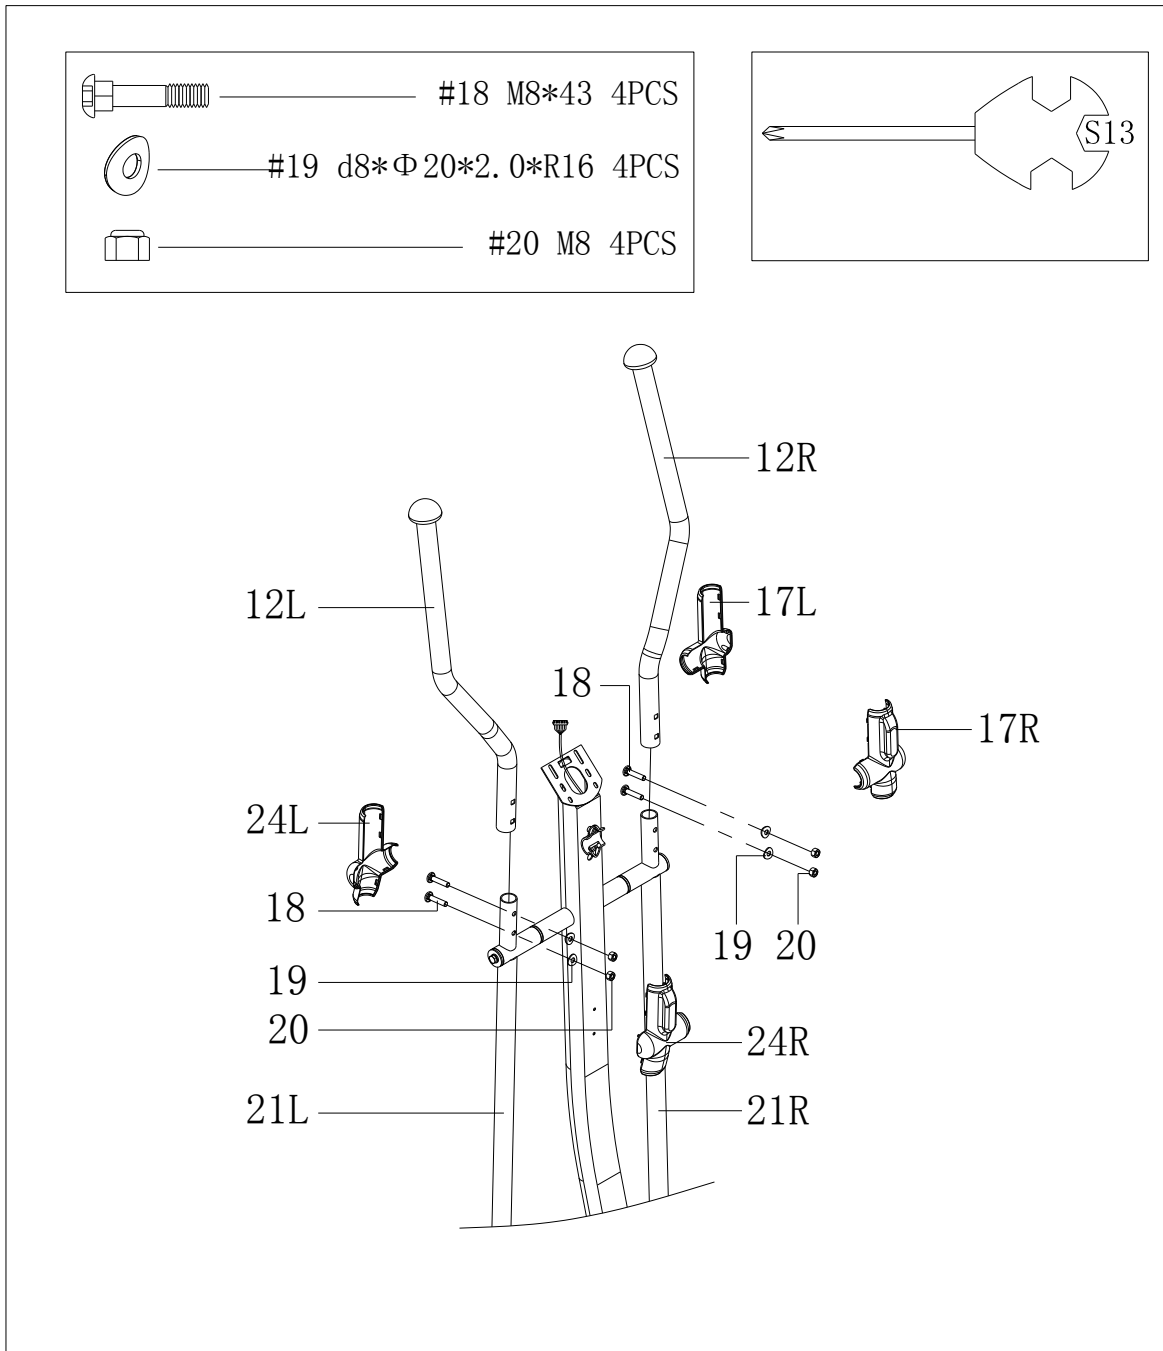




1. Use the square neck bolt (18), arc washer (19), nylon nut (20) lock the handlebar (12L/R) to each connecting pole post (21 L/R)
2. Attach the swing pole cover (24 L/R, 17L/R) to each swing pole post (21L/R)

STEP 6:

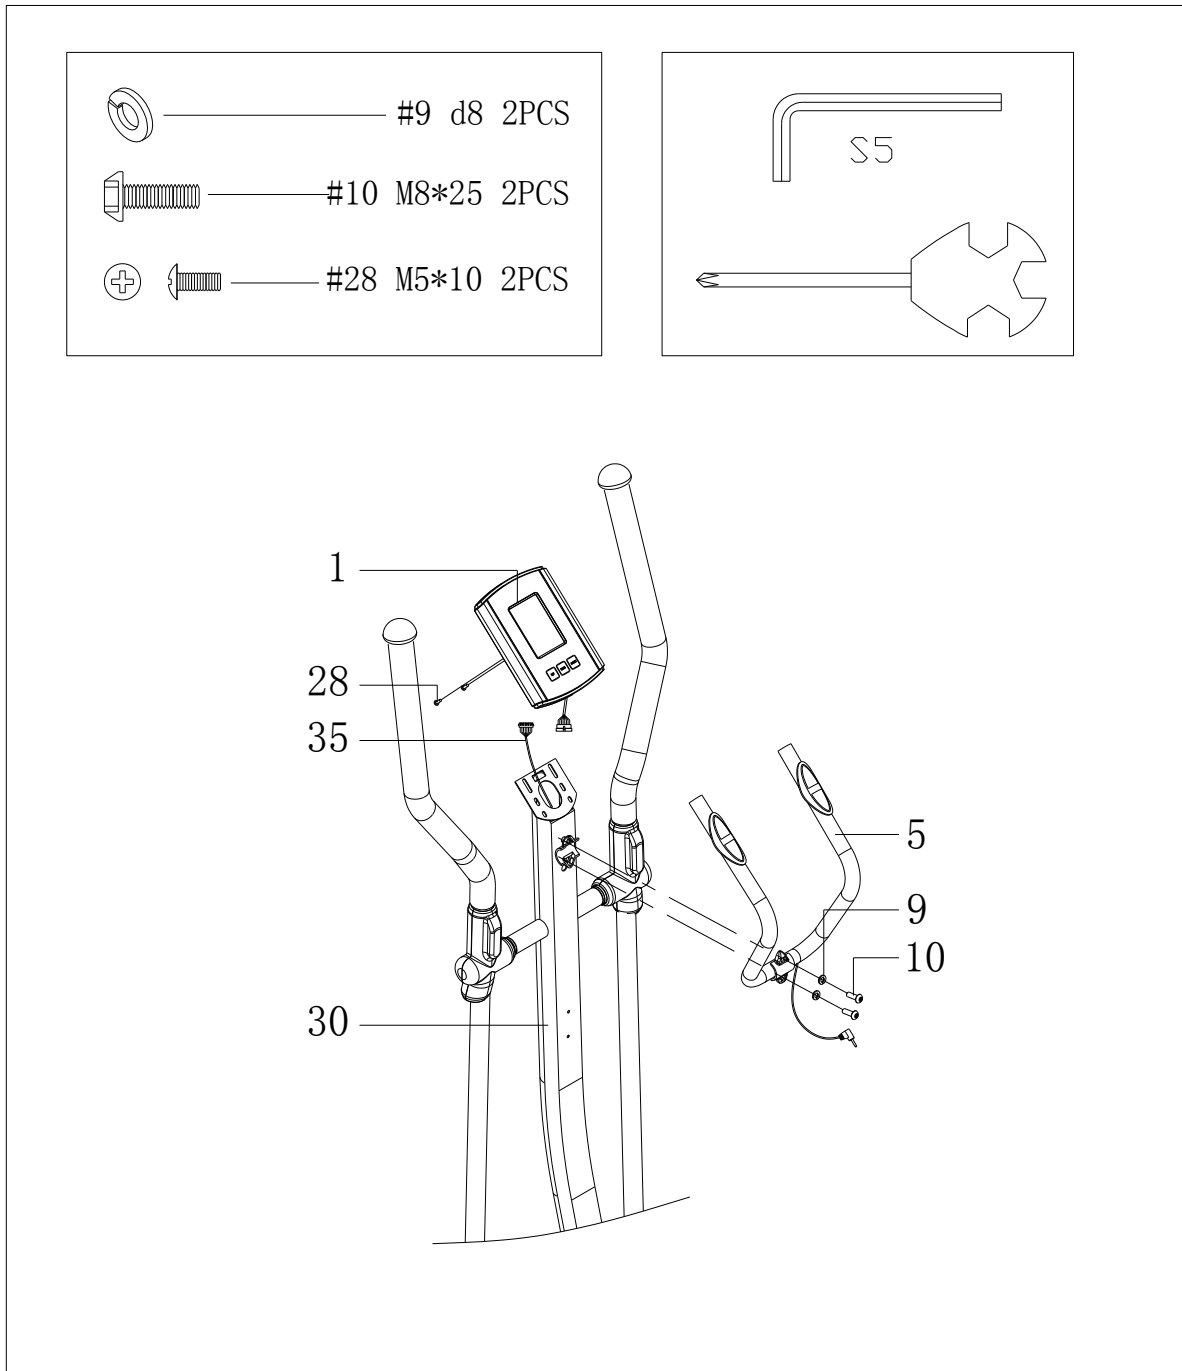

1. Use the bolt (10), spring washer (9) to lock the mid-handlebar (5) onto the upright post (30)
2. Connect the computer wire (1) to the mid sensor wire1 (35), and then lock the computer (1) on the upright post (30) using the bolt(28)

STEP 7:

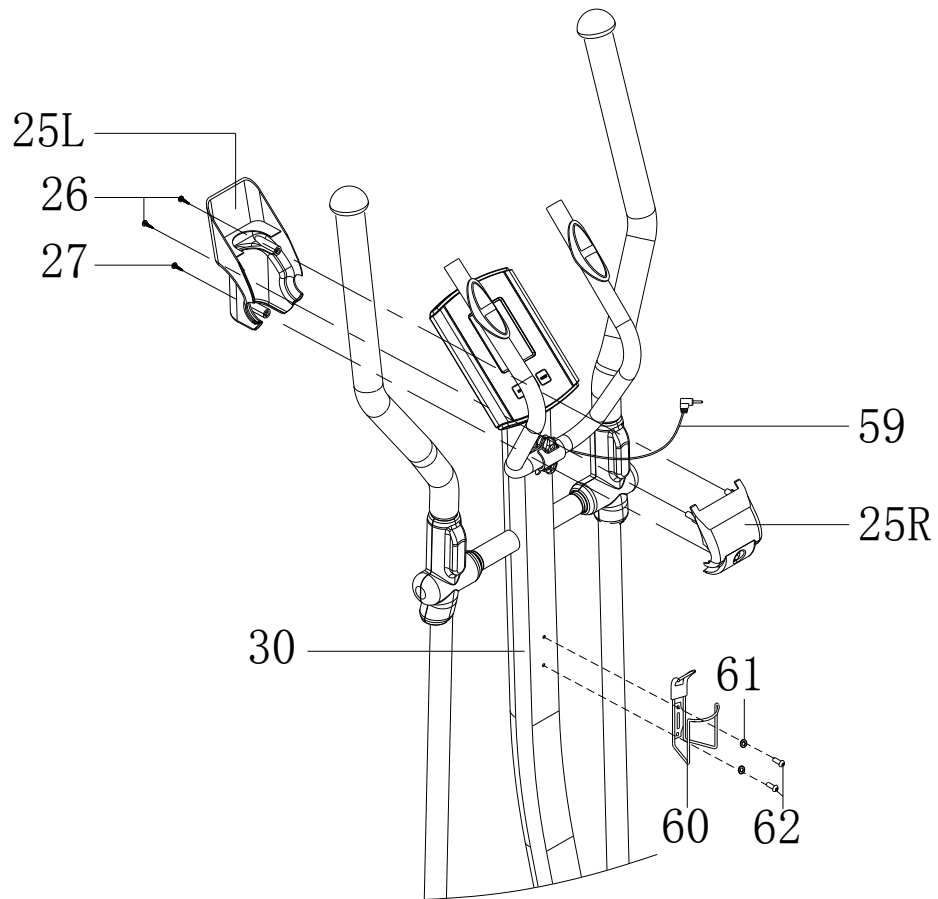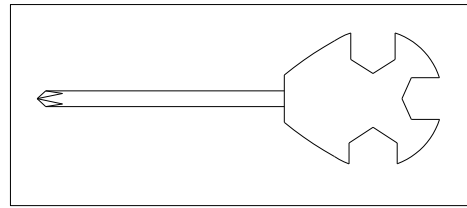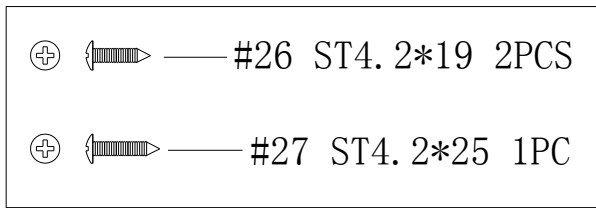

1. Place the front/rear neck cover (25L/R) onto the upright post (30), and the lock it into place with bolt (26 ,27)
2. Using the washer (61) and bolt (62), lock the bottle holder (60) onto the upright post(30)
3. Insert the pulse pad wire(59) into the back of the computer (1)

3. PROGRAM OPERATION

Function

Programs: there are 21 programs as follows

1. 1 Manual Program



2. 10 Pre-set Program Profiles

P1	Rolling	P6	Interval
P2	Valley	P7	Cardio
P3	Fatburn	P8	Endurance
P4	Ramp	P9	Slope
P5	Mountain	P10	Rally





3. Watt Control Program




4. Heart Rate Control Programs

55% H.R
75% H.R
90% H.R
TARGET H.R



5. User Setting Programs

CUSTOM 1 to CUSTOM 4

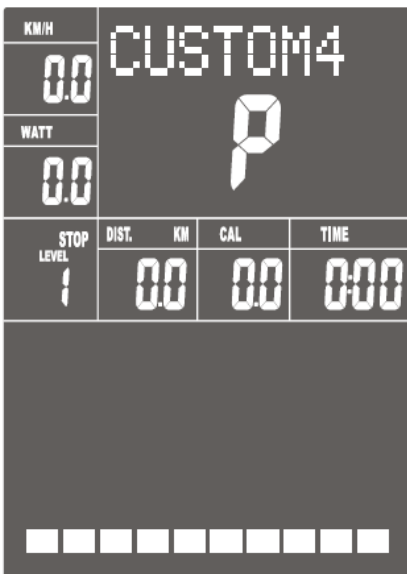

6. Body Fat Measuring Program

- Record the user's data of GENDER, HEIGHT, WEIGHT and AGE
- The dot matrix display will show your current status
- Simulative ECG (pulse sensors) will measure your heart rate
- The machine will store your current exercise data and turn the loading resistance to the minimum.



Buttons

1. ENTER

In "stop" mode (display showing STOP), press the ENTER button to enter into program selection and setting value which flash in related window.

- A: When you choose the program, press Enter to confirm the one you like.
- B: When setting values, press ENTER to confirm the value that you would like to preset. During the start mode (display showing START), press ENTER to choose to display speed RPM, or switch automatically. During any mode, hold down this button for 2 seconds to totally reset the computer.

2. START/STOP

Press START/STOP button to start or stop the programs. During any mode, hold down this button for 2 seconds to totally reset the computer.

3. UP

In stop mode, press this button to cycle through programs. During the start mode (display showing START), press this button to increase the training resistance.

4. DOWN

In stop mode and the dot matrix character flash, press this button to select the program down. If the related window value flash, press this button to decrease the value. During the start mode (display START), press this button to decrease the training resistance.

5. PULSE RECOVERY

First test your current heart rate and show your heart rate value, press this button to enter into pulse recovery testing. When you are in pulse recovery mode, press this button to exit.


NOTE: It is suggested to completely cover the buttons with your finger when pressing to ensure the correct functioning of the button.

Operation

1. Turn on the computer

Plug in one end of the adaptor to the AC electrical source and connect the other end to the computer.

The computer will beep and enter into initial mode

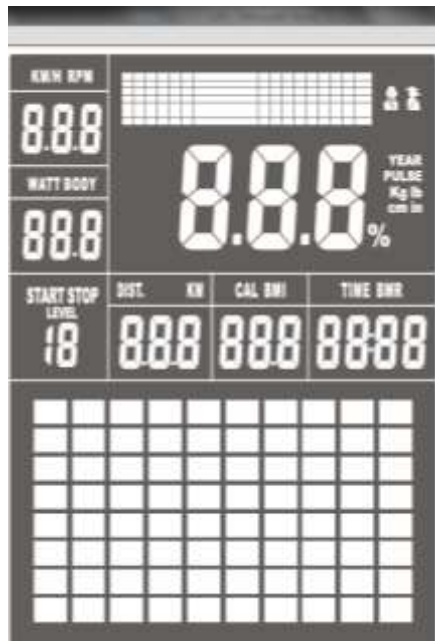

2. Program selection and value setting

Manual Program and Preset Programs (P1-P10)

- a) Press UP and DOWN buttons to select the desired program.



- b) Press the ENTER button to confirm the selected program and enter time into the display
- c) The time will flash, and then press UP and DOWN buttons to set up your desired time. Press ENTER to confirm the value



- d) The distance field will be flashing. Press UP and DOWN buttons to set up the desired distance value. Press ENTER to confirm the value



- e) The calories will flash, and then press UP, DOWN to set up the desired calories to be used.
Press ENTER to confirm the value



- f) Press START/ STOP to begin exercise



Watt Control Program

- Press UP, DOWN to select the watt control program
- Press ENTER to confirm the selected watt control program, and enter into time setting window.
- Time will flash, and then press UP/DOWN to set up the desired time,. Press ENTER to confirm the value.
- Distance will flash, and then press UP/DOWN to set up the desired distance value. Press ENTER to confirm the value.
- Calories will flash, and then press UP/DOWN to set up the desired calories to be burnt. Press ENTER to confirm the value.

- f) The watt display box will flash, press UP/DOWN to set up watt value to do the exercise. Press ENTER to confirm the value.



- g) Press START/ STOP to begin exercise. NOTE: The WATT value is calculated using TORQUE and RPM. In this program, the WATT value will keep at constant value. It means that if you peddle quickly, the load resistance will decrease and if you peddle slowly, the load resistance will increase to ensure you at the same watt value.

HEART RATE CONTROL PROGRAMS: 55% H.R, 75% H.R and 90% H.R

- The maximum heart rate depends on user age. Press UP/DOWN to choose the heart rate control program
- Press ENTER to confirm the heart rate control program, and enter into time setting window.
- Time will flash, press UP/DOWN buttons to set desired time. Press ENTER to confirm value.
- Distance will flash, and then press UP/DOWN to set desired distance value. Press ENTER to confirm the value.
- Calories will flash, and then press UP/DOWN to set up the desired calories to be used. Press ENTER to confirm the value.

- f) The age will flash, and then press UP/DOWN to set the user age. Press ENTER to confirm the value. See below



- g) When the target heart rate controls program flashes, the computer will display the user's target heart rate according to user's age.
- h) Press START/ STOP to begin exercise.

HEART RATE CONTROL PROGRAM: TARGET HEART RATE

- a) Press UP/DOWN to select TARGET HEART RATE program
- b) Press ENTER to confirm your choice and enter time setting window
- c) Time display will flash, and then press UP/DOWN to set the desired time to do the exercise. Press ENTER to confirm the value
- d) Distance will flash, and then press UP/DOWN to set up the desired distance value. Press ENTER to confirm the value
- e) Calories will flash, and then press UP/DOWN to set up the desired calories to be consumed. Press ENTER to confirm the value

- f) Target heart rate will flash; press UP/DOWN to set up your target heart rate. Press ENTER to confirm the value. See below



- g) Press START/ STOP to begin exercise

NOTE: During exercise, the user's heart rate value depends on resistance level and speed. The heart rate control program is to ensure your heart rate is within the preset value. When the computer detects your current heart rate is higher than preset, it will decrease the resistance level automatically or you may slow down exercise. If your current heart rate is lower than preset, it will increase resistance to increase workout difficulty.

User Profile Programs: (CUSTOM1 - CUSTOM4)

- a) Press UP/DOWN to select profile
- b) Press ENTER to confirm your choice, and enter values into time window.
- c) Time display will flash, and then press UP/DOWN to set up the desired time to do the exercise. Press ENTER to confirm the value.
- d) Distance will flash, and then press UP/DOWN to set up the desired distance value. Press ENTER to confirm the value.
- e) Calories will to confirm the value.

- f) The first resistance level will flash; press UP/ DOWN to set the desired workout resistance.
Press ENTER to confirm. Then repeat above operation to set the resistance from 1 to 16



- g) Press START/ STOP to begin exercise

Body Fat Measurement Program

- a) Press UP, DOWN to select BODY FAT TEST program see below:



- b) Press ENTER to confirm your choice, and enter into height setting model

- c) The height display will flash, and then press UP, DOWN to set up your height. Press ENTER to confirm the value. See below:



- d) The weight display will flash, and then press UP, DOWN to set up your weight. Press ENTER to confirm the value. See below:



- e) The age display will flash, and then press UP, DOWN to set up your age. Press ENTER to confirm the value. See below:



- f) The gender display will flash, and then press UP, DOWN to set up your gender. Press ENTER to confirm. See below:



- g) Press START/STOP to begin testing your body fat. See below:



NOTE:

- a) During the body fat measurement, place both your palms on the contact pads (pulse sensors). The test results are: FAT%, BMR (Basal Metabolic Rate), BMI (Body Mass Index), BODY and body shape. See below:



FAT%: The total body fat measured by percentage

BMR Basal Metabolic Rate (metabolism) is the energy (measured in calories) expended by the body at rest to maintain normal bodily function

BMI: means Body Mass Index, which is used for body shape building

- b) During the body fat measurement, if your palms are not completely in contact with the pulse sensors, the computer will not receive a signal and will display ERROR2. Press START/STOP to try again.
- c) During the test, you cannot exit the test by press any button. After the test finishes, press UP/DOWN to exit the body fat measurement program and switch to another program.
- d) Comparison sheet of Body fat and Obese

Body Shape Age/ Gender		FAT%				
		Slim	Healthy	Fleshy	Over WT	Obese
		BODY1	BODY2	BODY3	BODY4	BODY5
Male/	≤ 30 years old	< 14%	14%~20%	20.1%~25%	25.1%~35%	> 35%
Male/	> 30 years old	< 17%	17%~23%	23.1%~28%	28.1%~38%	> 38%
Female/	≤ 30 years old	< 17%	17%~24%	24.1%~30%	30.1%~40%	> 40%
Female/	> 30 years old	< 20%	20%~27%	27.1%~33%	33.1%~43%	> 43%

Pulse Recovery Test

The pulse recovery test is to compare your heart rate before and after exercise. It is target to determine your heart strength via the measuring. Please do the test as follows

- a) Place both your hands hold the pulse sensor, the computer will display your current pulse value.
- b) Press RECOVERY to enter the pulse recovery test and the computer program will enter the stop status
- c) Hold the pulse sensors for 60 seconds
- d) When time counts down to 0, the test result (ranging from F1 - F6) appears on the display.

F1	Excellent	F4	Below Average
F2	Good	F5	Not good
F3	Fair	F6	Poor



- e) If the computer does not detect your current heart rate first in step (a), pressing RECOVERY will not enter into pulse recovery test. During the pulse recovery test, press RECOVERY to exit the test and return to the stop status.

Pulse Measurement

Place both palms onto the contact pads and the computer will show your current heart rate in beats per minute (BPM) on the LCD after 3~4 seconds. During the measurement, the heart icon will flash with simulative ECG showing.

During the process of pulse measurement the initial value may not be stable after immediate activation of the pulse sensor. However it will shortly return to normal functioning. The measurement value cannot be regarded as the basis of medical treatment.

Operation

- Speed KM/H: your current speed. Range: 0.0 - 99.9 KM/H.
- RPM: showing the current rotations per minute. Range: 0 - 999.
- TIME: the accumulative exercise time, range: 0:00- 99min59sec. Preset time range is 5:00 99min00sec. The computer will start to count down from preset time to 0:00 with average time for each resistance level. When time reaches 0 the program will stop and computer emit a sound.
- DIST: the exercise accumulative distance. Range: 0.0 - 99.9 999km the preset distance range is 1.0 - 99.0 999. When the distance reaches 0, the program will stop and the computer will emit a sound.
- CALORIE: the exercise accumulative calories burnt. Range: 0.0 -99.9 999 the preset calorie range is 10.0 - 90.0 990. When the calorie reaches 0, the program will stop and the computer will alarm.
- PULSE: Range: 30 - 240 BPM(beats per minute)
- RESISTANCE LEVEL: Range:1 - 16
- WATT: exercise watt

Display Troubleshooting

Error Code	Description
ERROR1	Please ensure that the motor is in good working condition and that all wires are connected and not damaged
ERROR2	Please ensure that your hands are in correct contact with the pulse sensors

Adapter

INPUT: AC (varies with country)

OUTPUT: 8VDC 500mA

4. EXERCISE GUIDE

How you begin your exercise program depends on your physical condition. If you have been inactive for several years or are severely overweight, start slowly and increase your workout time gradually. Increase your workout intensity gradually by monitoring your heart rate while you exercise.

Remember to follow these essentials:

- Have your doctor review your training and diet programs.
- Begin your training program slowly with realistic goals that have been set by you and your physician.
- Warm up before you exercise and cool down after you work out.
- Take your pulse periodically during your workout and strive to stay within a range of 60% (lower intensity) to 90% (higher intensity) of your maximum heart rate zone. Start at the lower intensity, and build up to higher intensity as you become more aerobically fit.
- If you feel dizzy or lightheaded you should slow down or stop exercising.

Initially you may only be able to exercise within your target zone for a few minutes; however, your aerobic capacity will improve over the next six to eight weeks. It is important to pace yourself while you exercise so you don't tire too quickly.

To determine if you are working out at the correct intensity, use a heart rate monitor or use the table below. For effective aerobic exercise, your heart rate should be maintained at a level between 60% and 90% of your maximum heart rate. If just starting an exercise program, work out at the low end of your target heart rate zone. As your aerobic capacity improves, gradually increase the intensity of your workout by increasing your heart rate.

Measure your heart rate periodically during your workout by stopping the exercise but continuing to move your legs or walk around. Place two or three fingers on your wrist and take a six second heartbeat count. Multiply the results by ten to find your heart rate. For example, if your six second heartbeat count is 14, your heart rate is 140 beats per minute. A six second count is used because your heart rate will drop rapidly when you stop exercising. Adjust the intensity of your exercise until your heart rate is at the proper level.

Target Heart Rate Zone Estimated by Age*

Age	Target Heart Rate Zone (55%-90% of Maximum Heart Rate)	Average Maximum Heart Rate 100%
20 years	110-180 beats per minute	200 beats per minute
25 years	107-175 beats per minute	195 beats per minute
30 years	105-171 beats per minute	190 beats per minute
35 years	102-166 beats per minute	185 beats per minute
40 years	99-162 beats per minute	180 beats per minute
45 years	97-157 beats per minute	175 beats per minute
50 years	94-153 beats per minute	170 beats per minute
55 years	91-148 beats per minute	165 beats per minute
60 years	88-144 beats per minute	160 beats per minute
65 years	85-139 beats per minute	155 beats per minute
70 years	83-135 beats per minute	150 beats per minute

* For cardiorespiratory training benefits, the American College of Sports Medicine recommends working out within a heart rate range of 55% to 90% of maximum heart rate. To predict the maximum heart rate, the following formula was used: $220 - \text{Age} = \text{predicted maximum heart rate}$


Warm-Up: The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm-up for two to five minutes before strength training or aerobic exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope and running on the spot.

Stretching: Stretching while your muscles are warm after a proper warm-up and again after your strength or aerobic training session is very important. Muscles stretch more easily at these times because of their elevated temperature, which greatly reduces the risk of injury. Stretches should be held for 15 to 30 seconds. Do not bounce.



Lower Body Stretch:


Place feet shoulder-width apart and lean forward. Maintain this position for 30 seconds using the body as a natural weight to stretch the backs of the legs. DO NOT BOUNCE! When the pull on the back of the legs lessens, gradually try a lower position.

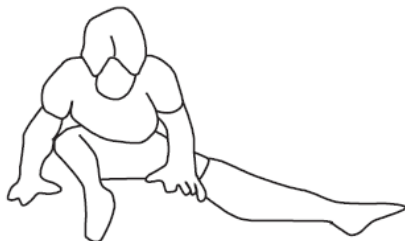

Bent Torso Pulls:

While sitting on the floor have legs apart, one leg straight and one knee bent. Pull the chest down to touch the thigh on the leg that is bent, and twist at the waist. Hold this position at least 10 seconds. Repeat 10 times on each side.



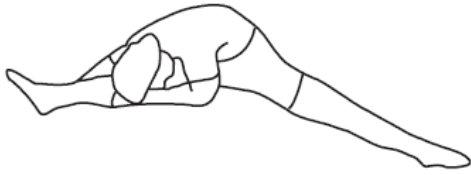

Floor Stretch:

While sitting on the floor open your legs as wide as possible. Stretch the upper body toward the knee on the right leg by using your arms to pull your chest to your thighs. Hold this stretch 10 to 30 seconds. **DO NOT BOUNCE!** Do this stretch 10 times.


Bent Over Leg Stretch:

Stand with feet shoulder width apart and lean forward as illustrated. Using the arms, gently pull the upper body towards the right leg. Let the head hang down. **DO NOT BOUNCE!** Hold the position a minimum of 10 seconds. Repeat pulling the upper body to the

Cool-Down: The purpose of cooling down is to return the body to its normal or near normal, resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart. Your cool-down should include the stretches listed above and should be completed after each strength training session.

Remember to always check with your physician before starting any exercise program.

5. EXPLODED DIAGRAM

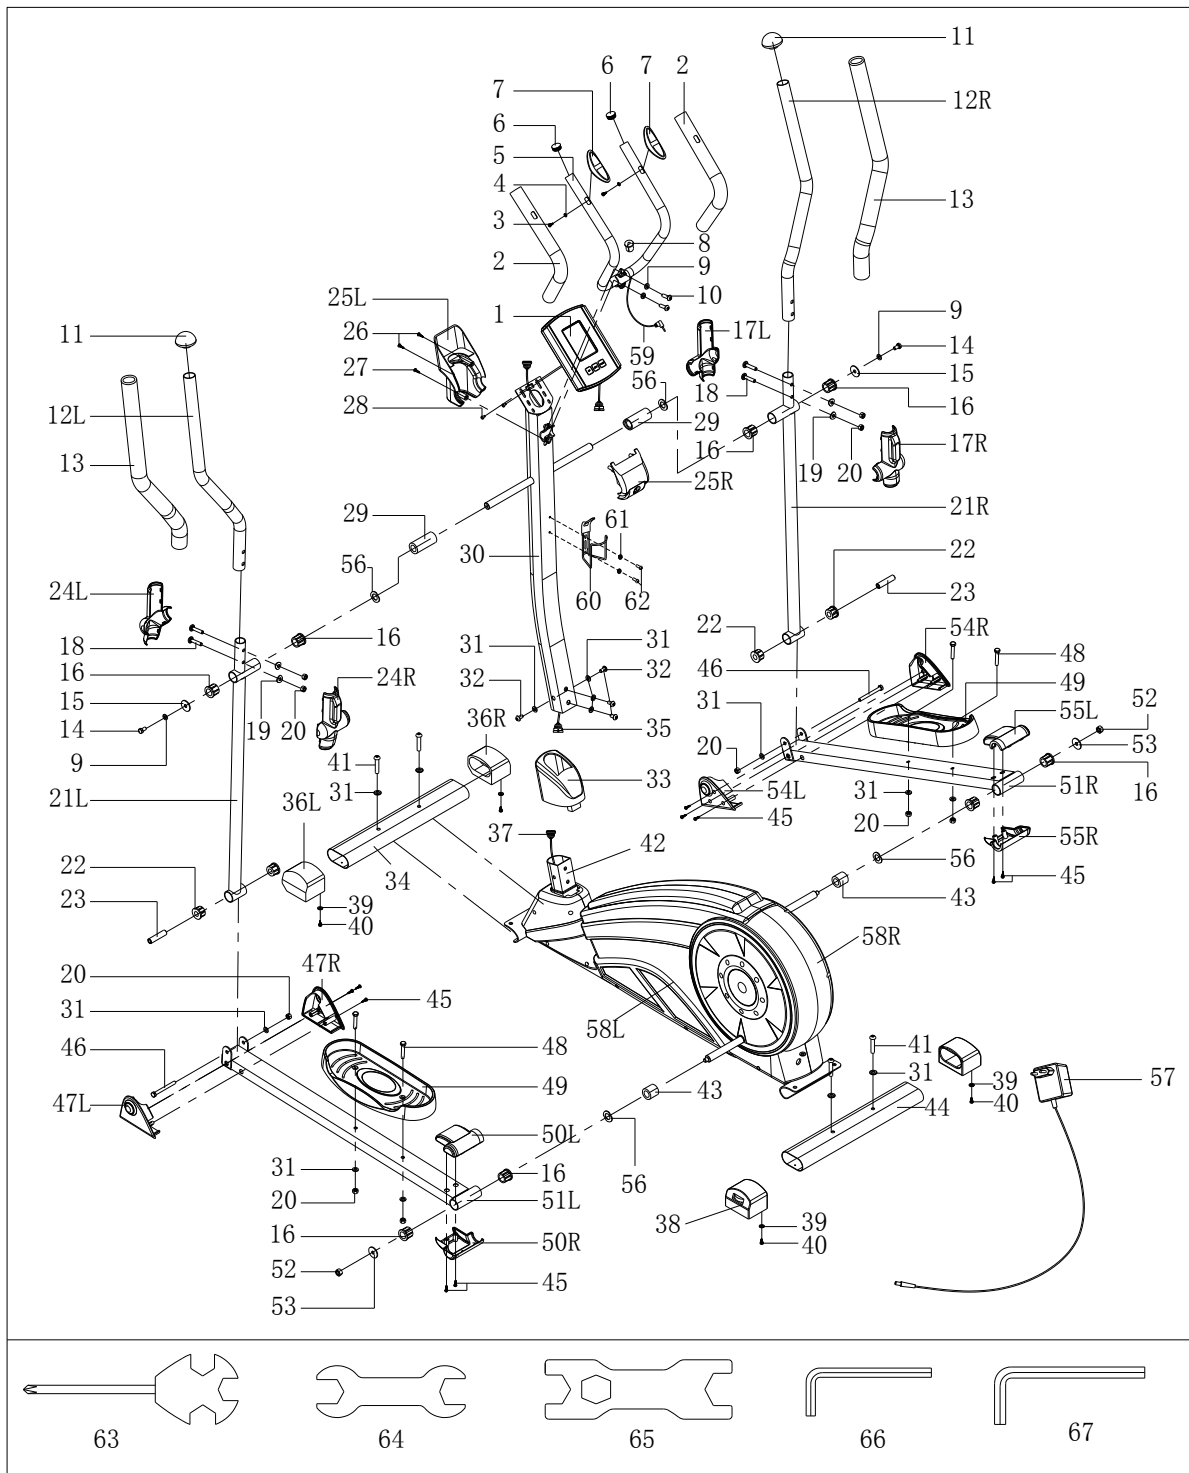

6. PARTS LIST

NO.	Description	Qty
1	Computer	1
1a	Computer wire	1
2	Bolt M5*10	4
3	End cap ϕ 25*16	2
4	Mid-handbar	1
5	Washer d6* Φ 12*1.0	2
6	Bolt ST4.0*19	2
7	Pulse pad 配 Φ 25 管	2
8	Sponge tube Φ 23*5*500	2
9	过线孔塞 Φ 12*11* Φ 3	1
10	Spring washer d8	4
11	Bolt M8*25	2
12	End cap ϕ 32*22* ϕ 50	2
13L/R	Handlebar L/R	各 1
14	Bolt M8*43	4
15	Sponge tube Φ 30*5*630	2
16	Spring washer d8* Φ 20*2*R16	4
17	Nylon nut M8	6
18	Front tube	1
19	Bushing 2 Φ 32*3* Φ 28*21* Φ 19.4	8
20	Spring washer d19* Φ 25*0.3	4
21	Bushing Φ 31.8* Φ 19.2*54	2
22	Bolt M8*16	2

No.	Description	Qty
32	Square end cap J60*30*15	2
33L/R	Front connect pole cover R	1
34	Bolt ST4.2*16	10
35	Bolt M8*75	2
36L/R	Connect pole	1
37L/R	Pedal L/R	1
38	Bolt M8*45	4
39	Nut M8	4
40	Bushing Φ 31.8* Φ 19.2*30	2
41	Washer d10* Φ 32*2.0	2
42	Nylon nut M10	2
43	Bolt ST3*16	6
44L/R	Rear connect pole cover R	1
45L/R	Rear connect pole cover L	1
46L/R	Front connect pole cover L	1
47L/R	Cover L/R	1
48L/R	End cap with wheel L/R PT80*40*71.5*90*65	1
49	Washer d5* Φ 13*1.0	4
50	Computer wire 1	1
51	Bolt M8*50	4
52	Rear tube	2
53	Adjusted end cap PT80*40*71.5*90*65	2
54	Bolt ST4.2*19	2

23	Washer d8*Φ32*2.0	2	55	Bolt ST4.2*25	1
24	Bushing 1 Φ32*3*Φ28*16*Φ14.3	4	56L/R	Nick cover L/R	1
25L/R	Swing pole L/R	1	57	Plastic cover	1
26L/R	Left swing pole cover	1	58	Bushing Φ14*Φ8.3*59	2
27L/R	Right swing pole cover	1	59	Computer wire 2	1
28	Handlebar post	1	60	Frame	1
29	Bolt M8*16	4	61	Pulse wire	1
30	washer d8*Φ16*1.5	10			
31	Spring washer d8*Φ20*2*R30	2			

7. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au

Please visit our website to view our full warranty terms and conditions:

<http://www.lifespanonline.com.au/Warranty-Policy>